
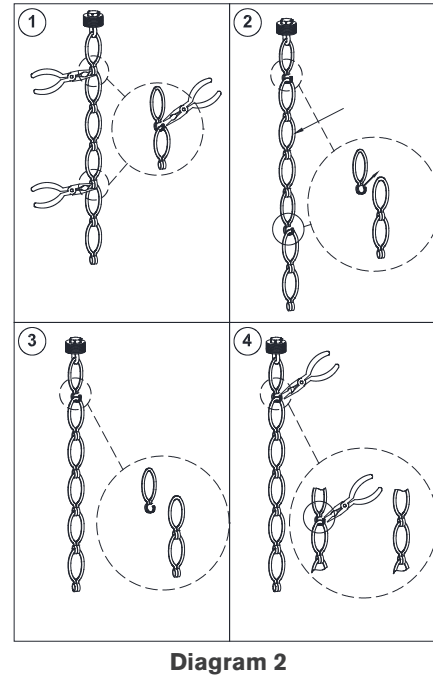


ASSEMBLY INSTRUCTIONS

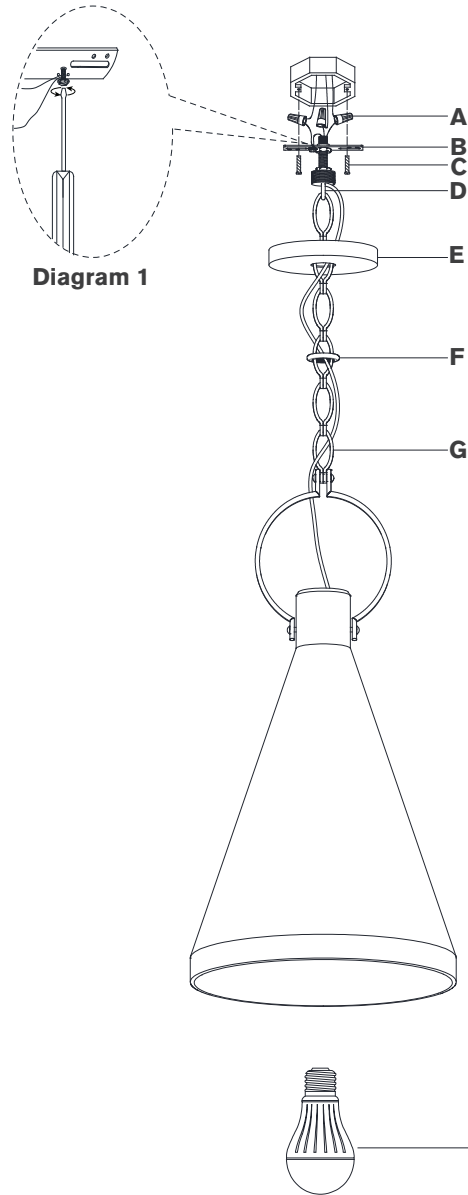

Limoges Tall Pendant

Item # SK 5371

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Slip Joint Pliers	Adjustable Wrench	Measuring Tape
Wire Cutters	Needle-nose pliers	

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Determine desired overall length, and amount of chain (**G**) needed. Shorten chain using needle-nose pliers (see diagram 2). (Keep extra chain)
3. Remove mounting plate (**B**) from collar loop (**D**).
4. Thread fixture wire and ground wire through chain (**G**), collar ring (**F**) and canopy (**E**).
NOTE: When you reach the collar loop (**D**), ensure there is no tension on the wires. Cut excess wires, being sure to leave about **12"** to reach the junction box.
5. Separate two sides of molded wire, and strip insulation on each 5/8".
6. Twist all fixture wires together. Slip through center hole of collar loop (**D**).
NOTE: Untwist wires and separate to prepare for connection.
7. Attach mounting plate (**B**) to collar loop (**D**) and secure using pliers to tighten locknut.
8. Install fixture by securing mounting plate (**B**) to the junction box using mounting screws (**C**).

ASSEMBLY INSTRUCTIONS

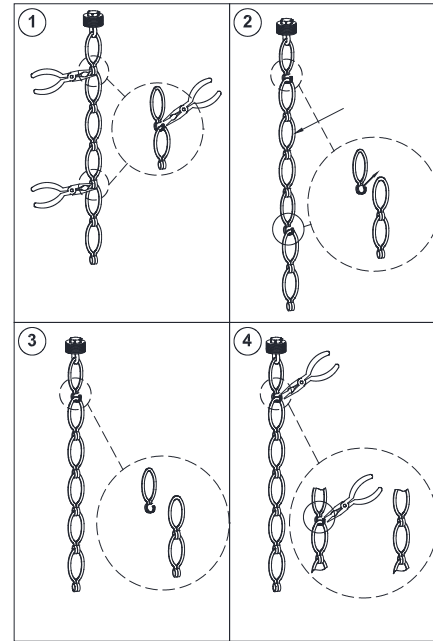
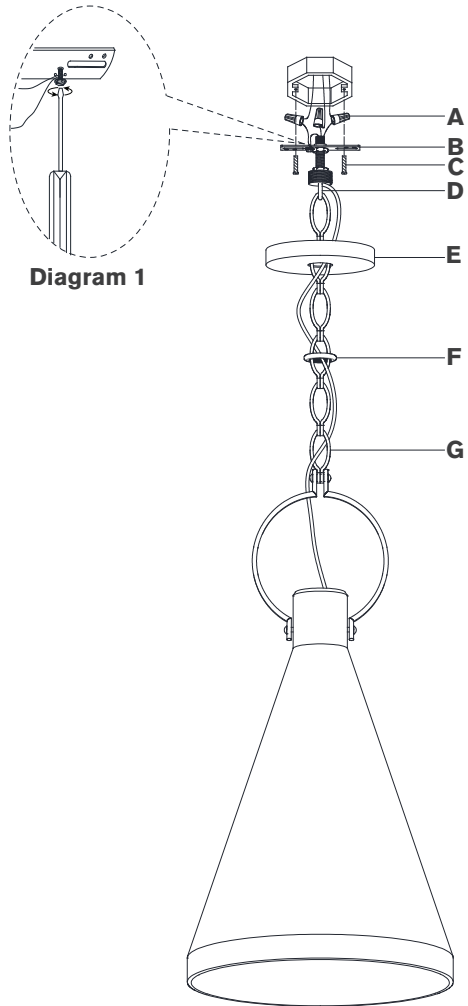


Diagram 2

Limoges Tall Pendant

Item # SK 5371

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(A)**.

NOTE: It is imperative that the fixture is grounded.

10. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(A)**.
11. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(A)**.

CAUTION: Do not reverse the hot and neutral connections.

12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install canopy **(E)** to collar loop **(D)** by securing with collar ring **(F)**.
14. Install light bulb into the socket.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.