

## Jeep JK 3 Link Frame Bracket Kit Installation Instructions

Thank you for purchasing our JK 3 link frame mount kit!

### Installation Notes:

- This product is designed to fit a 2007-2018 Jeep Wrangler JK or JKU.
- This kit is designed to replace all of the factory frame control arm mounts, and convert your front and rear suspension to a 3 link system.
- This kit only includes the frame side mounting brackets for a 3 link suspension. The rear axle upper control arm mount, suspension links, and other modifications will be the responsibility of the installer.
- Removal of the factory frame rear lower control arm mounts, the right side frame front upper control arm mount, and the front lower frame control arm mount is recommended.
- Installation of a truss on the front axle is required to add reinforcement to the axle upper control arm mount.
- 2012-2018 models will require an exhaust loop delete be installed

### Tools required:


- Welder with the capability to weld at least ¼" thick steel
- Cutting torch, plasma cutter, or other appropriate cutting tool
- Grinder for the removal of paint

### Step 1:

Support the transmission, remove the factory crossmember, and install the provided crossmember.

### Step 2:

The front upper control arm mount will now need to be installed. Place the main body of the bracket on the inside of the right frame rail. Move the bracket down the frame until the hole and the slot in the bottom of the bracket aligns with the hole and slot in the bottom of the frame. Mark all locations where the bracket contacts the frame. Remove the bracket and use a grinder to remove the paint from the marked areas in preparation for welding.

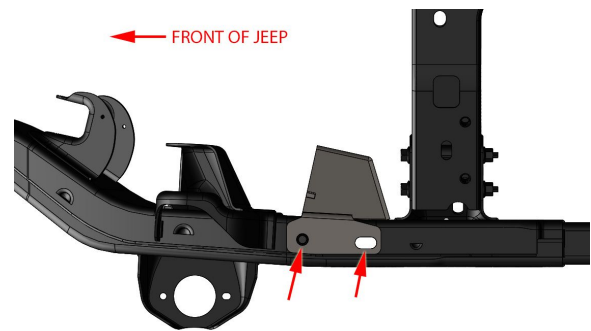


### Step 3:

Cut the factory upper and lower control arm mounts off the front right side of the frame, and grind smooth. The left side frame brackets can also be removed if desired.


**Step 4:**

Place the provided tab inside the bracket that was welded to the frame in the previous step. The tab will locate in slots in the main bracket. Install a suspension joint and the provided bolt to align all components. Tack weld the tab in place, remove the joint and hardware and finish welding the tab.

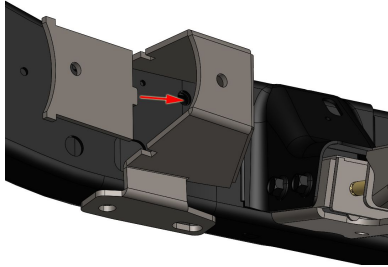

**Step 5:**

It is now time to move to the rear of the Jeep and install the rear upper control arm mount on the frame. Place the provided bracket on the bottom of the two crossmembers in the rear of the Jeep. Align the holes in the crossmember with the holes in the bracket, the larger hole should go towards the front of the Jeep. Mark the locations where the bracket contacts the crossmembers. Remove the bracket and grind the paint off from the crossmembers where marked.

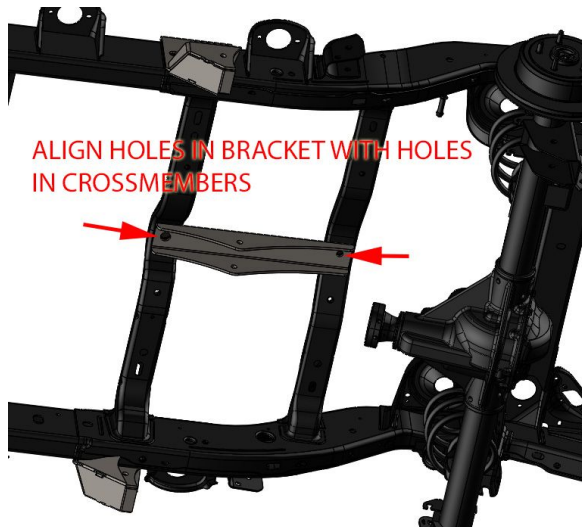


**Step 6:**

Place the bracket back into position and weld in place.


**Step 7:**

The rear lower control arm mounts now need to be installed. Place the outer part of the bracket on the provided side plate. Install the provided hardware and a suspension joint to ensure proper alignment. Weld the two pieces together. Use care to ensure that the bend in the side plate is facing away from the installed bracket.

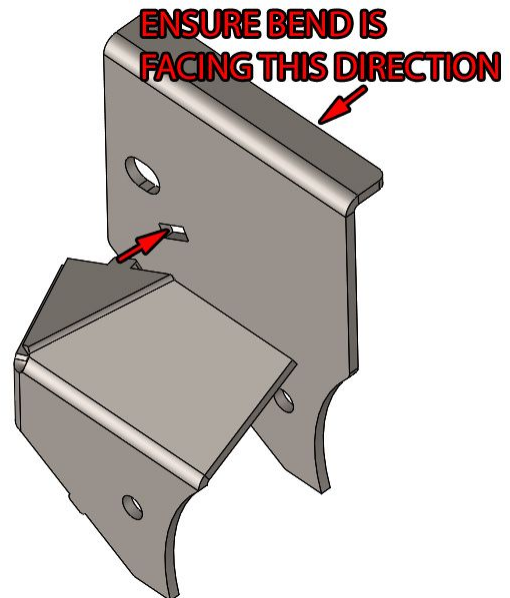


### Step 8:

Place the bracket assembly on the outside of the frame rail in front of the rear body mount. The assembly will cap the top of the frame and need to be aligned with a matching slot in the side of the frame. Mark the contact points of the bracket on the frame. Remove the bracket and grind the paint off from the frame at the marked locations. Place the bracket back in position on the frame and weld in place.

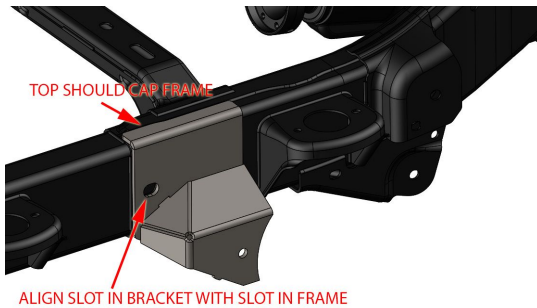

### Step 9:

Place the lower skid on the bracket assembly, mark the location where the skid contacts the frame. Remove the skid and grind the paint off from the frame. Place skid back on the bracket assembly and weld in place.

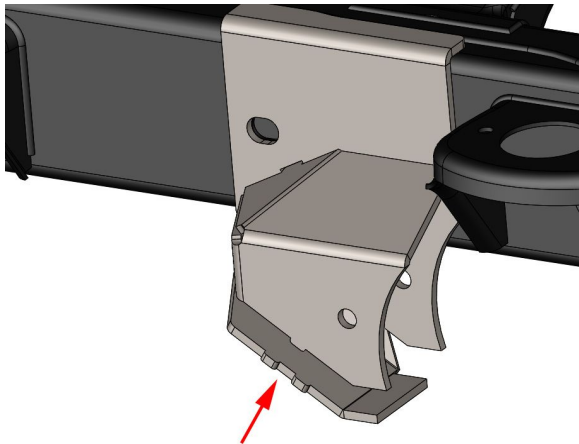

### Step 10:

Repeat steps 7-9 for the rear lower control arm mounting bracket on the opposite side of the Jeep. The factory lower control arm

brackets can be removed at this time if desired.

### Step 11:

Paint or apply another rust preventative coating to all bare metal surfaces.

Congratulations you have completed the installation of your 3 link frame bracket kit!

#### Professional Services Disclaimer:

The content of all pages of this website (collectively, the "Website"), such as text, graphics, images, information and other material (collectively, "Content") is for informational purposes only. Any information furnished on this Website is not intended nor implied to be automotive advice and is not intended to replace personal consultation with a qualified automotive service technician, mechanic, or similar automotive professional.

Barnes 4WD has not examined the Content for accuracy, timeliness, completeness, appropriateness, or helpfulness. Barnes 4WD does not endorse any specific tests, products, procedures, opinions, or other information that may be mentioned on this Website. Your reliance upon information and Content obtained by you at or through this Website is solely at your own risk. IN NO EVENT SHALL BARNES 4WD BE LIABLE OR OTHERWISE RESPONSIBLE FOR ANY DAMAGE OR INJURY (INCLUDING DEATH) TO YOU, OTHER PERSONS, OR PROPERTY ARISING FROM ANY USE OF ANY PRODUCT, INFORMATION, IDEA, OR INSTRUCTION CONTAINED IN THE CONTENT.

BARNES 4WD DOES NOT MAKE ANY REPRESENTATION OR WARRANTY, EXPRESS OR IMPLIED, AT LAW OR IN EQUITY, WITH RESPECT TO ANY PRODUCT FEATURED ON THE WEBSITE, INCLUDING WITHOUT LIMITATION WITH RESPECT TO MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, VALUE, VALIDITY, OR ENFORCEABILITY, AND ANY AND ALL SUCH OTHER REPRESENTATIONS OR WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED.