Fitting Instructions:

Venetian Blinds





spider mounting



bracket



2 pieces 4 pieces of of hold down 6 x 3/4" screw for hold down bracket



4 - 8 pieces of 6 x 3/4" screw



1 piece of wand tilter

TOOLS NEEDED:



Metal tape











blind/sty

Pencil

Step

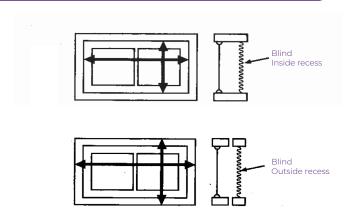

- 1. Measure where you require the blind to be hung. The blind may be fitted inside (A) or outside (B) the recess.
- 2. Position the spider mounting brackets for fixing either face or top ensuring that the spider mounting brackets are fixed approximately 5cm from the end of the blind. The centre spider mounting bracket (required for blinds exceeding 120cm width) may be positioned as required.
- NB. Make sure not to position the spider mounting brackets where they would interfere with the working mechanisms of the blinds.

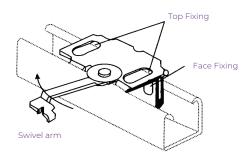

- 3. Now present the blind to the spider mounting bracket ensuring that the lugs position snugly under the front rim of the headrail. Then push the locking arm until it is pressed against the headrail.
- 4. Insert bottom rail into the pin of the hold down bracket. (Optional)

After mounting the blind, check the height of the blind to see if this should be adjusted. If this is the case, then act as follows:

Carefully observe how the bottom rail is clasped into position by the plastic button. Remove the button from the bottom rail and undo the knot in the lift cord. Remove the appropriate number of slats, reassemble the bottom rail and insert the button into position again.

Lowering:

Hold cord at eye level and move to the left, pulling down gently until cord lock releases. Allow cord to slip through fingers until blind reaches desired level. Move the lift cord to the right and release, blind will lock automatically.

Raising:


Pull cord downward until blind reaches desired height, release cord, the blind will lock automatically.

Tiltina:

Rotate 'wand' of blind to attain desired slat position. Do NOT over-rotate wand.

Important:

Always tilt blind horizontally before raising or lowering the blind, this increases the life of the blind.

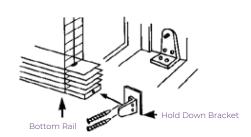

Hold down brackets: Using two small screws, screw hold down bracket to window facing or wall. Snap bracket pin ends into the hole at bottom rail end caps.

NOTE: The use of hold down brackets is recommended but is not a requirement for the normal functioning of the blind.

Fitting Instructions:

Venetian Blinds



SAFETY CLEAT FITTING INSTRUCTIONS

STEP 1.



Place safety cleat in the desired location on the wall and mark the position of the two holes using a pencil.

We recommend positioning the cleat to either side of the blind and out of the reach of children.

STEP 2.



Remove the safety cleat and drill the position marked.

Once the holes are drilled, place a rawlplug into the holes.

Use the screws provided to attach the safety cleat to the wall.

STEP 3.





We recommend that the cord is wrapped around the safety cleat when the blind is not in use, as shown in the pictures above.

WARNING

Young children can strangle in the loop of pull cords, chains and tapes that operate window coverings. They can also wrap the cords around their necks. To avoid the risk of strangulation and entanglement, keep cords out of the reach of young children. Move beds, cots and furniture away from window covering cords.