



# REPAIR OF A CRACK NEAR AN INTERNAL CORNER IN A SOLID WALL USING STRUCSOL ULTRABAR (1 OF 2)

### **Recommended Tooling**

- To achieve final depth of slot beyond 40mm: Hand or power chisel.

- For Injection of the StrucSol Crack Filler: A 400ml Mastic Gun is required.
- For Injection of the StrucSol Crack Filler: A 400ml Mastic Gun is required.
- PPE Clothing and Protection.

#### **General Notes**

If you require specific advice on your project, please call the StrucSol technical help line 0116 2375082. We can supply a full support service which includes:

- Advice and assistance on all structural matters.
- Preparing repair proposals for specific projects.


### **Method Statement:**

- Using a twin-bladed diamond-tipped wall chaser with vacuum attachment, followed by a hand or power chisel, cut slots into the internal horizontal mortar joints to the specified depth and at the required vertical spacing. Use a power / hand chisel to continue slots up to the internal corner. Ensure that NO mortar is left attached to the exposed brick surfaces in order to provide a good masonry / grout hond.
- 2. At the corner, drill 10mm diameter holes in line with the channelled-out mortar beds, through the wall and to the exterior face.
- 3. On the exterior wall, use the wall chaser to remove mortar from the appropriate joints to the specified depth and at the required vertical spacing.
- 4. Remove ALL dust and mortar from the slots and holes and thoroughly flush with water. Ensure the slots are damp or primed prior to commencing step 6.
- 5. Feed the 6mm StrucSol Ultrabar through the drilled holes, bend to fit the external slot and cut to correct length.
- 6. Fit the appropriate Mortar Nozzle.
- 7. Mix StrucSol HSGrout using a power mixer and load into the Pointing Gun CS.
- 8. Inject StrucSol HSGrout into the holes at the corner.
- Inject a bead of StrucSol HSGrout, approx. 15mm deep, into the back of the interior slot using the Mortar Nozzle.
- 10. Push the 6mm StrucSol Ultrabar into the grout to obtain good coverage.
- 11. Inject a second bead of StrucSol HSGrout over the exposed StrucSol Ultrabar and iron it into the slot using a finger trowel. Inject additional StrucSol HSGrout as necessary, leaving 10-15mm for new pointing.
- 12. Bend the external section of StrucSol Ultrabar to fit the exterior slot and cut to the appropriate length.
- 13. Repeat steps 8 to 11 as above on the external wall.
- 14. Point up the remaining internal and external slots with a matching mortar to suit.
- 15. Clean tools with clean, fresh water.
- Pointing may be carried out as soon as is convenient after the StrucSol HSGrout has started to gel.





# REPAIR OF A CRACK NEAR AN INTERNAL CORNER IN A SOLID WALL USING STRUCSOL ULTRABAR (2 OF 2)

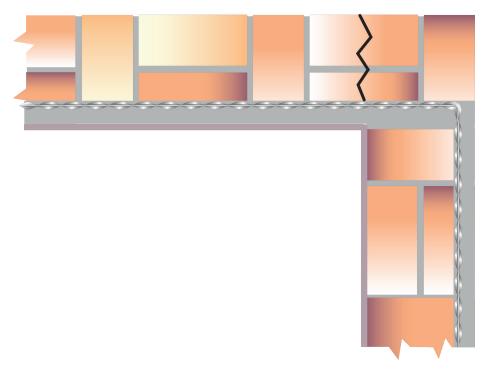

SPECIFICATION NOTES	
Α	Depth of slot into the masonry to be 35mm to 45mm, plus the thickness of any plaster.
В	Height of slot to be equal to full mortar joint height, (minimum 10mm). For thin mortar joint specifications refer to the StrucSol Technical Dept
C	If StrucSol Ultrabar are to be joined in a straight run, overlap the Ultrabars by a minimum of 500mm.
D	Top and bottom reinforcements should be positioned as far apart as practicable, up to a maximum distance equivalent to 12 brick courses (approx. 900mm).
E	Any fractures in the masonry within the 'beam zone' MUST be stabilised by crack-stitching, TE resin or replacement of the masonry.
F	Any missing or very poor quality masonry MUST be replaced.
G	In hot conditions,, ensure the masonry is well wetted or primed to prevent premature curing of the StrucSol HSGrout due to rapid de-watering.
н	Do not use StrucSol HSGrout when the air temperature is +4°C and falling, or apply over ice. In all instances, the slot MUST be thoroughly damp or primed prior to injection of the StrucSol HSGrout.
	The above specification notes are for general guidance only and StrucSol reserve the right to amend as necessary.