


Premium Aluminum TV Wall Mount

Instruction Manual



SKU: MOUNT-G200B

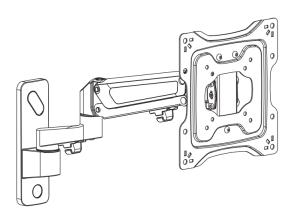

Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/mount-g200b

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST








WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

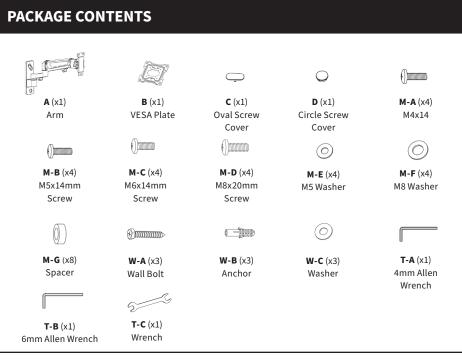

NOTE: NOT ALL HARDWARE INCLUDED WILL BE USED



A CAUTION!

DO NOT INSTALL INTO DRYWALL ALONE. VERIFY YOUR WALL CONSTRUCTION. USE WOOD STUDS TO MOUNT. We include mounting for brick and concrete walls. If unsure, please contact us at vivo-us. com, email at help@vivo-us.com, or call us at 309-278-5303.

TOOLS NEEDED





DO NOT EXCEED WEIGHT CAPACITY.

Failure to do so may result in serious injury.






SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.


ASSEMBLY STEPS

STEP 1

OPTION A: Wood Wall


Using the wall plate on Arm (A), mark drilling locations. Use of a stud finder is highly recommended. Drill 2.2" (55mm) deep holes using a 3/16" (4.5mm) drill bit, and mount Arm to the wall using Wall Screws (W-A) and Washers (W-C).

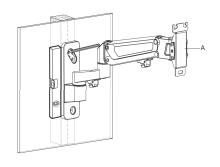


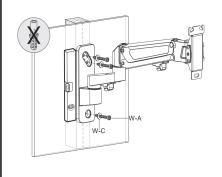

OPTION B: Concrete Wall


Using the wall plate on Arm (A), mark drilling locations. Drill 2.4" (60mm) deep holes using a 3/8" (10mm) drill bit, press Anchors (W-B) into holes, and mount Arm to the wall using Wall Screws (W-A) and Washers (W-C). NOTE: Anchors are made for use with concrete or brick, and will not work with drywall.

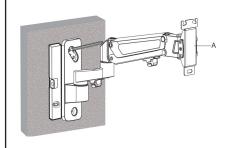

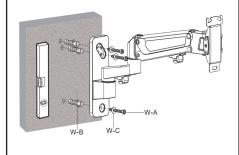




STEP 2

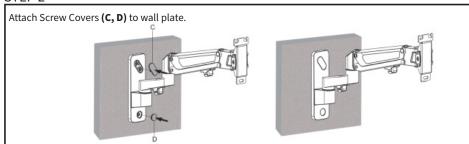

STEP 3


Remove lower nut from VESA Plate (B) using Wrench (T-C), and loosen the upper two nuts until 3mm of screw thread is exposed for each one.

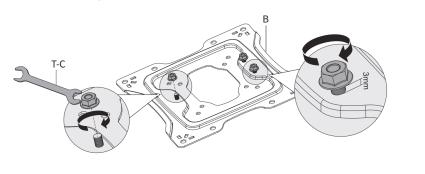

STEP 4


OPTION A: Flat Back Monitor

Mount VESA Plate (B) to TV using appropriate Screws (M-A, M-B, M-C, or M-D) with Washers (M-E or M-F), making sure the two nuts are facing towards the top of the TV.

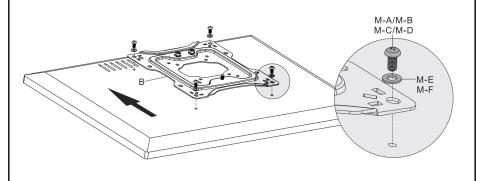



OPTION B: Curved Back Screens


Mount VESA Plate (B) to TV using appropriate Screws (M-D) with Washers (M-F) and Spacers (M-G), making sure the two nuts are facing towards the top of the TV.

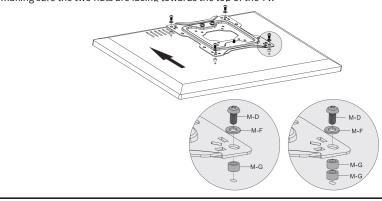

Hang TV with VESA plate onto head of Arm **(A)**. Reinstall lower nut to secure the plate, and tighten all nuts using the wrench.

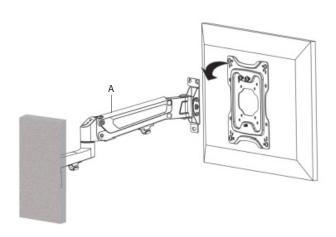


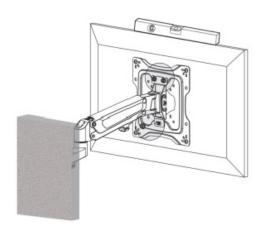


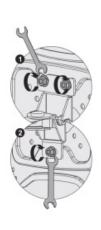

STEP 6 Adjust gas spring tension using 6mm Allen Wrench (T-B). Turn counter-clockwise to increase lift, and clockwise to decrease. Adjust the tilt joint support using 4mm Allen Wrench (T-A). NOTE: use a large flat-blade screwdriver to tighten the socket set screw if the joint makes a popping noise. WARNING: TV must be installed on mount before making tension adjustments to the gas spring arm. Keep monitor in a straight orientation when making adjustments.

STEP 7

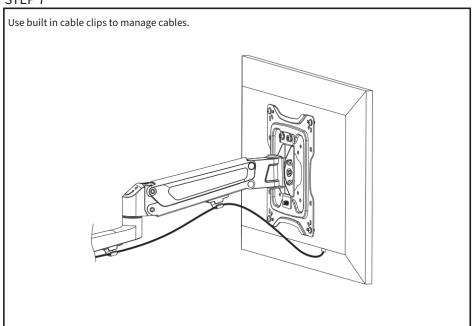

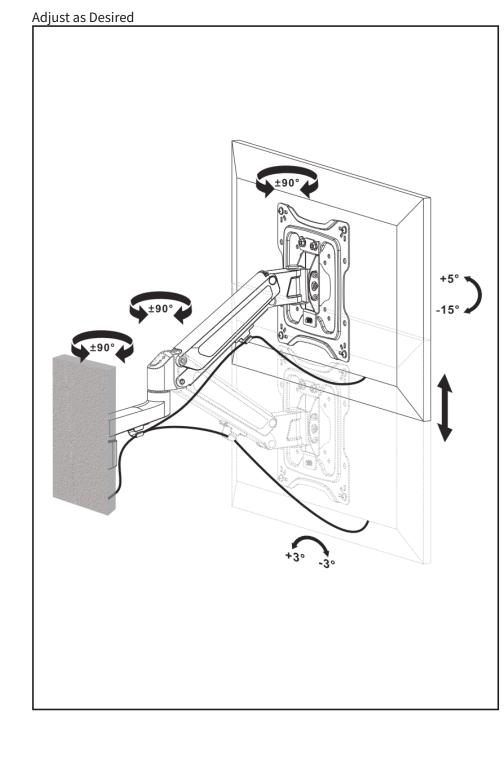



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



www.vivo-us.com Chat live with an agent! AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr