

R


Issue: 0001

Thank you for purchasing your Pergola from Ruby. Simply follow these step by step instructions and our top tips and you'll be enjoying your Pergola for many years to come. If you have any questions or need advice, our friendly team is here to help.

### Cedar Shingle Roof Apex Pergola

Assembly Instructions

### For all sizes of Ruby Pergolas

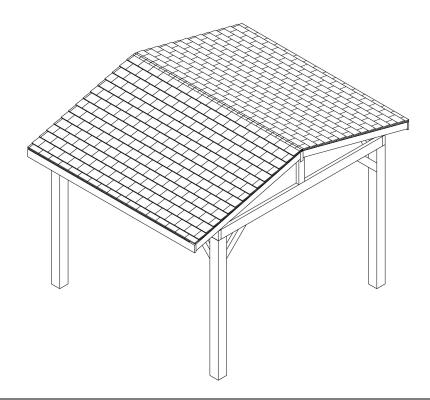

#### Missing Something?

Call our aftersales team on 01409 231 763—Option 1

#### **Need More Information?**

Call our technical team on 01409 231 763-Option 2

## Visit our website for more information

www.ruby-group.co.uk

#### Timber Parts List:

Quantities and lengths of timber parts will vary dependent on the size of your pergola. The assembly instructions however are identical for all pergola sizes.

Uprights 2320x150x150	
Length Ring Beam	
Front/Rear Ring Beam 150x50 Profile	
Mid Roof Brace	
45° Bracing 150x50 Profile	
Gable Bracing 100x50 Profile	
Roof Spars 100x50 Profile	
Cedar Shingles 50 Shingles/Pack	

### Fixing Parts List:

Quantities of fixings will vary dependent on the size of your pergola. The assembly instructions however are identical for all pergola sizes.

6mm Wood Screw  150mm nom length	
5mm Wood Screw  100mm nom length	
Cladding Nails 40mm nom length	

Missing Something?

Call our aftersales team on 01409 231 763—Option 1

Need More Information?

Call our technical team on

01409 231 763-Option 2

#### Before You Start

Please read through these instructions to familiarise yourself with your product. We recommend that you check all the components using the lists found on the front page before you start to build.

All of our Pergolas are constructed in the same way. They simply come with different components depending on the type of Pergola you have. Don't worry if your fixing pack contains some spare items at the end of the build (you haven't missed a bit!) we have sent you a generic fixing pack to suit the Pergola range.

### Preparation

It's vital that you build your new Pergola on a solid, level base.



Concrete Concrete surface/ Concrete slabs



Broken Slabs/Gaps Uneven slab sizes with no cement



A base of soil only

If you have an existing base and think it's suitable for your new pergola to be sited on, it is important you check that it is level and doesn't deviate by any more than 15mm from edge to edge. If this isn't the case the building will twist, causing gaps to appear in the roof sections.

### **Tools Needed**

We recommend using the following tools (not supplied):



Tape Measure



Sharp Knife



Pozidrive Screwdriver



Drill & 2mm Drill Bit



Hammer



Ladder



Spirit Level

#### Missing Something?

Call our aftersales team on 01409 231 763—Option 1

**Need More Information?**Call our technical team on

01409 231 763-Option 2

### Care & Attention

### Things To Notice

#### **MOVEMENT, TWISTING & WARPING**

Wood contains a natural level of moisture so decreasing humidity levels in the surrounding air may cause panels to change their shape as the porous fibres shrink. This can be exaggerated during prolonged periods of dry weather. Movement and gaps in timber products are normal, in most cases the wood will revert to its original form once the high temperatures subside and there is more moisture content in the air. Similarly, in the winter months, the opposite may occur with wood swelling.

#### **EXPANSION, CONTRACTION, SPLITS & CRACKS**

All timber will expand and contract according to its environment. As a result of this expansion and contraction, it is very common to see splits and cracks developing in the wood. Splits are common during the spring and summer months as the wood begins to dry out. The outer surface dries first and contracts, contracting over a still expanded core of the wood. The result of this is that splits and cracks appear along the grain of wood. These splits are not a fault and do not affect the structural integrity of a product.

#### **MOULD & BLUE STAIN**

Mould is a surface-dwelling fungus that feeds on the nutrients and debris contained in the surface cells of timber. The most common problems associated with mould are discoloured timber and an increase in permeability of the timber. Blue stain is part of the same family but penetrates deeper into the surface layers of the timber. It stains the timber a dark blue, whereas mould is usually black. These do not cause the timber to rot. Keep the building well ventilated to avoid mould.

THE ROOF OF THIS BUILDING IS NOT A LOAD BEARING STRUCTURE

### Construction

Assembly is relatively straightforward if your follow these step by step instructions. We recommend getting everything aligned properly before screwing together and that screw holes should be pre-drilled to avoid splitting the timber.





#### Missing Something?

Call our aftersales team on 01409 231 763—Option 1


Need More Information?

Call our technical team on

01409 231 763—Option 2

### Construction


### 1 Right and Left Side

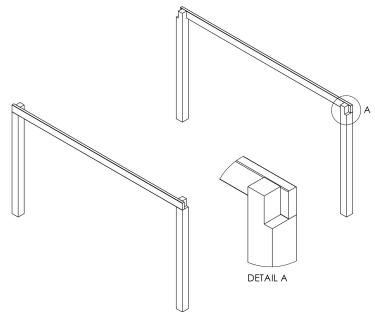

Install your selected post bases onto the notched 2320mm 150x150 uprights. Then, using the supplied 6mm x 150mm wood screws, secure the length ring beam members to the recessed side of the top of the upright.

If your pergola has an overhang, these members will overhang the front posts.

### 2 Front and Rear Ring Beam

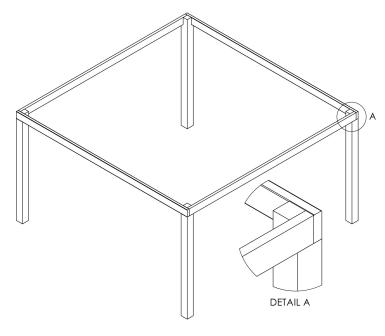

Using the supplied fixings, secure the front and rear ring beam members to the existing 2 structures using the supplied 6mm x 150mm wood screws, creating one freestanding structure.

Call our aftersales team on 01409 231 763—Option 1

#### Need More Information?


Call our technical team on 01409 231 763-Option 2

# Visit our website for more information

www.ruby-group.co.uk

### Construction

### 3 Mid Pergola Structure and Bracing

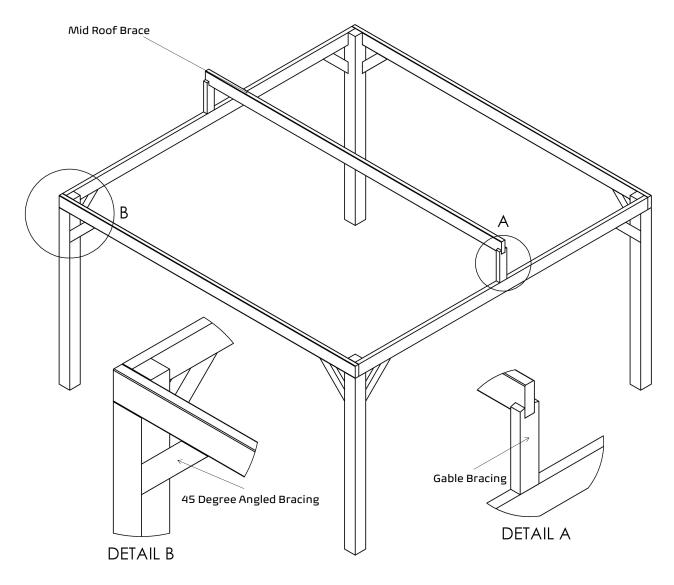

Using the 8  $\times$  45 degree angled braces supplied, secure the 2320mm uprights to the ring beams using the supplied 5mm  $\times$  100mm wood screws.

Then, using the mid bracing, secure the gable bracing to the front and back ring beam using the supplied 5mm x 100mm wood screws.

Finally, install the mid roof brace to the top of the gable bracing using the supplied 6mm x 150mm wood screws. If your pergola has an overhand, the mid roof brace will have a notch at one end which will slot into the gable bracing.

#### Missing Something?

Call our aftersales team on 01409 231 763—Option 1


### Need More Information?

Call our technical team on 01409 231 763-Option 2

# Visit our website for more information


### Construction

### 4.1 Roof Spars

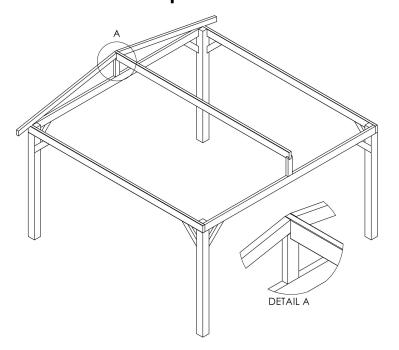

One at a time, install the roof spars to the left and right ring beams using the supplied 6mm x 150mm wood screws and to the mid roof brace using the supplied 5mm x 100mm wood screws.

### 4.2 Roof Spars Complete

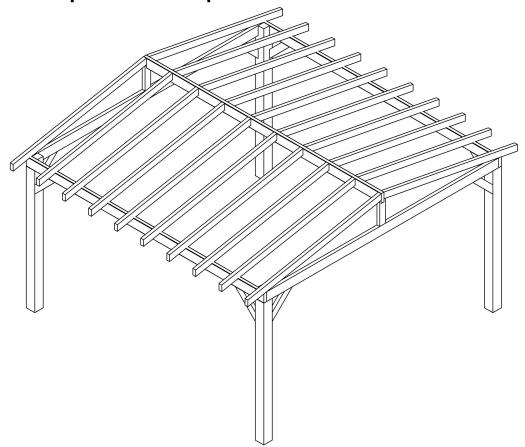


#### Missing Something?

Call our aftersales team on 01409 231 763—Option 1

### Need More Information?

Call our technical team on 01409 231 763-Option 2

# Construction 4.3 Cedar Shingles

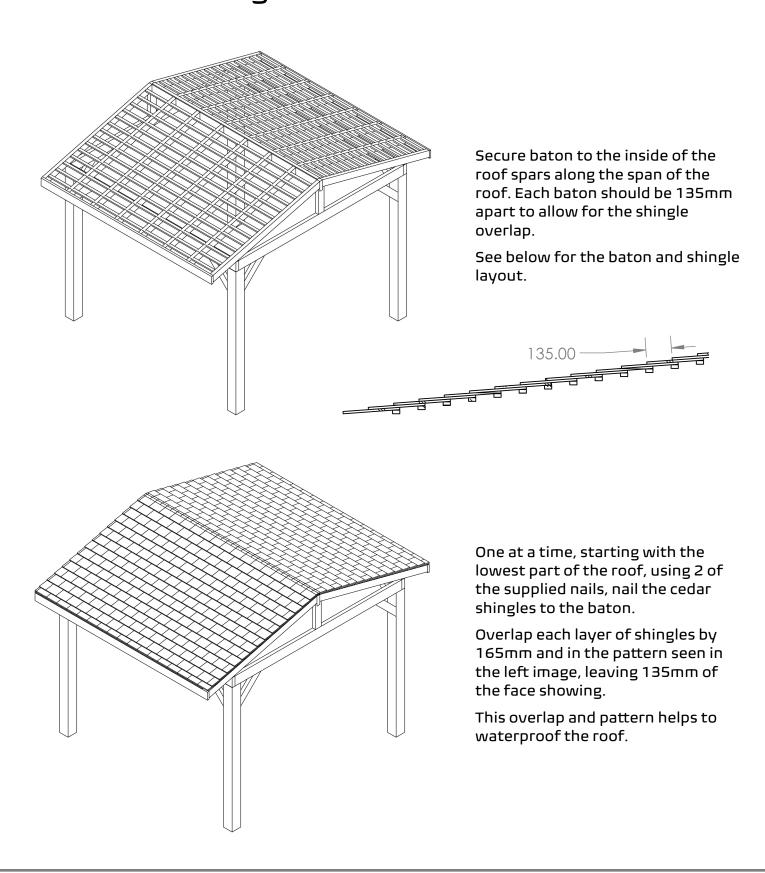

#### Missing Something?

Call our aftersales team on 01409 231 763—Option 1

### Need More Information?

Call our technical team on 01409 231 763-Option 2