urban ambiance

Installation Instructions: UQL2644

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1)A19 Medium Base Bulb 100W Maximum.

Estimated Assembly Time: 20-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

$oldsymbol{\Delta}$ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

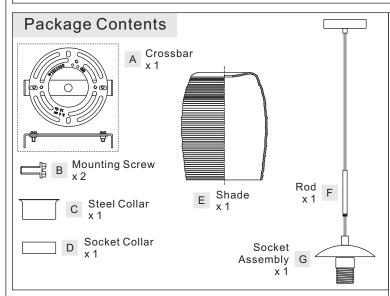

STEP 1 - Install Rod and Shade


- A. Thread the Rod (F) onto the Socket Assembly (G) and hand tighten until snug.
- B. Place the Shade (E) and the Steel Collar (C) over the Socket as shown. Secure by threading the Socket Collar (D) onto Socket. Hand tighten until snug.

Figure 1

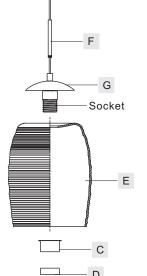

STEP 2 - Adjust Fixture Height

- A. Unlock Set Screw on the Coupling by using screwdrivers.
- B. With screwdrivers, remove the Screw to open the Wire Clasp in the ceiling canopy.
- C. Adjust the Wire in or out of the Ceiling Canopy to achieve your desired hanging height. Once your desired hanging height is achieved, tight the Set Screw on the Coupling with screwdrivers.
- D. Attach Wire to Wire Clasp in the Ceiling Canopy and secure with the Screw previously removed. Tighten until snug with screwdrivers.

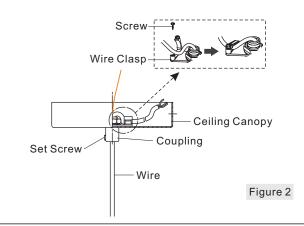

STEP 3 - Attach Crossbar to Outlet Box

A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

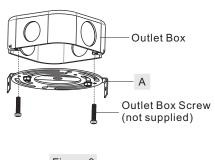



Figure 3

urban ambiance

www.urbanambiance.com


STEP 4 - Make Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
- B. If the electrical wire is going to be cut shorter than provided, strip back the clear wire covering the 3 fixture wires as far as you need to. This will expose each fixture wire individually. Strip each end of 3 fixture wires.

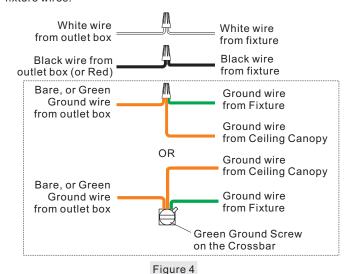

STEP 5 – Attach Ceiling Canopy to Crossbar

A. Fit excess cord and electrical wires in the ceiling canopy properly. Line up the holes on the side of the ceiling canopy to the mounting holes on the Crossbar (A). Secure them with Mounting Screws (B). Tighten until sung.

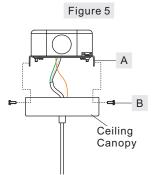


STEP 6 - Install Bulb


A. Insert bulb into socket and screw snugly into place.


Your fixture is now assembled and ready to use. Enjoy!

Figure 6

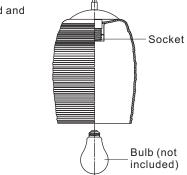

SKU: UQL2644

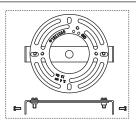

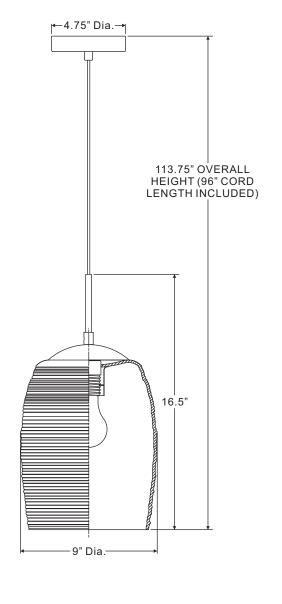

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4''

urban ambiance

www.urbanambiance.com