Installation Instructions: UQL3311

urban ambiance

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

 $\textbf{Bulb Recommended:} \hspace{0.2cm} \textbf{(3) Medium Base Decorative Filament 60W bulb (suppled),} \\$

Maximum 100W.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents


Part	Description	Quantity
Α	Crossbar	1 pc.
В	Mounting Screw	2 pcs.
С	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
Е	Mounting Ball	2 pcs.
F	Fixture Body	1 pc.
G	Ring	1 pc.
Н	Shade	1 pc.
I	Shade Holder	1 pc.
J	Lock Ball	3 pcs.
K	Bulb	3 pcs.

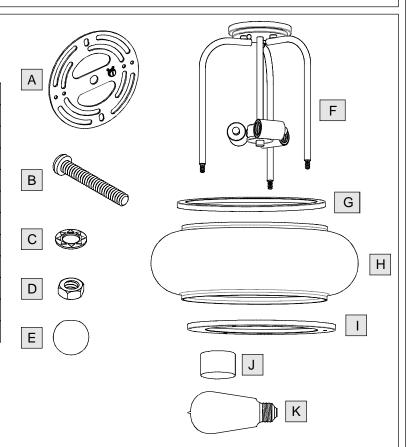



urban ambiance



FINISH: BLACK BRONZE

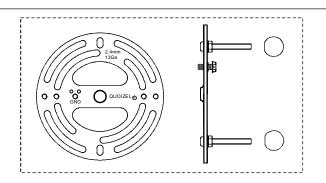

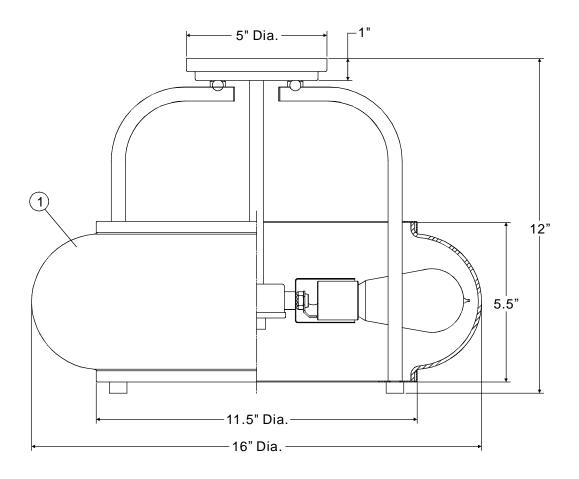

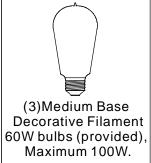


NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

urban ambiance

Installation Instructions: UQL3311


STEP 1 - Install Shade

- A. Attach the Shade Holder (I) onto the end of the Side Arms. Secure by threading the Lock Balls (J) onto the ends of the Side Arms. Hand tighten until snug.
- B. Place the Shade (H) over the Fixture Body (F), seat onto the Shade Holder (I). Proceed to place the Ring (G) over the Fixture body (F), seat onto the top edge of the Shade (H).

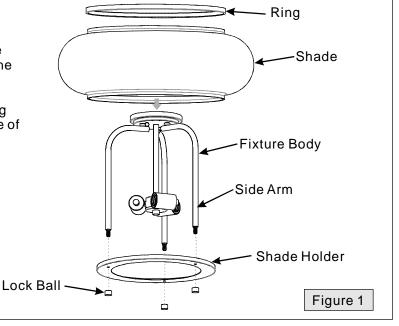


STEP 2 - Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar

- A. Line up a set of holes on the Crossbar (A) and Holes on the Ceiling Canopy.
- B. Thread Mounting Screws (B) into the holes on the Crossbar (A), pass Lock Washers (C) and thread Hex Nut (D) onto the Mounting Screws (B). Hand tighten until snug.

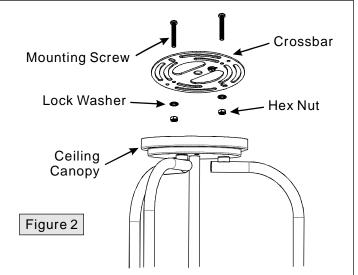

STEP 3 - Attach Crossbar to Outlet Box

A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

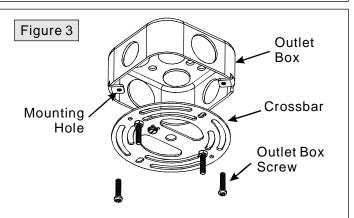


urban ambiance


urban ambiance

Installation Instructions: UQL3311

STEP 4 - Make Wire Connections


- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- C. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

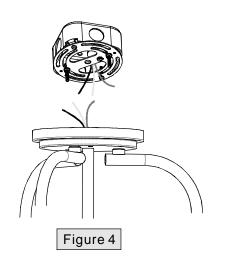

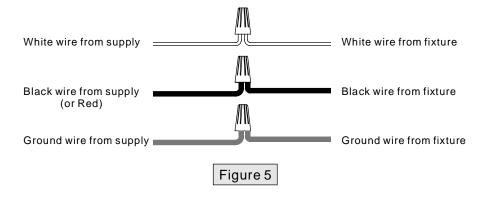

STEP 5 - Attach Ceiling Canopy to Mounting Screw

A. Place the Ceiling Canopy on the top of the Fixture Body (F) over the Mounting Screws (B) and secure with Mounting Balls (E). Hand tighten until snug.

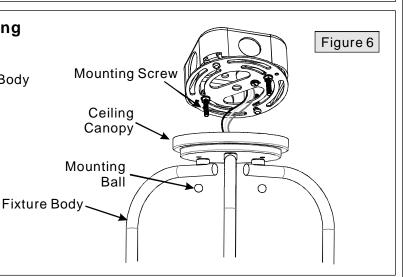

urban ambiance


urban ambiance

Installation Instructions: UQL3311

STEP 6 - Install Bulb

- A. This fixture uses standard bulb 60W (supplied) with a standard screw base. Maximum 100 watts.
- B. Insert bulb and screw properly into place.

Your fixture is now assembled and ready to use. Enjoy!

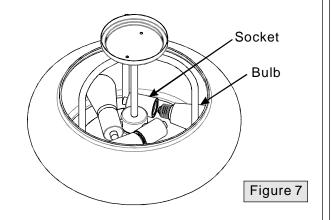

urban ambiance