

— Instruction Manual —

FLOATING FLOOR SOCKET WITH CHROME FLOOR PLATE

NOTICE:

While this product is most commonly used for volleyball systems, it can also be used for tennis, pickleball and other net games that include posts of the same size and where removable installation is desired

PARTS LIST

Item	Qty	Description	Item	Qty	Description
A	1	Floating Floor Socket Tube	G	3	#10 Plastic Tubular Nut
B	1	Chrome Floor Plate	H	6	#10 X 3/8" Sheet Metal Screw
C	3	Nylon Standoff	I	1	Socket Bottom
D	3	#10 X 1 3/4" Flat Head Phillips Wood Screw	J	1	Socket Top
E	6	#10 X 3/4" Wood Screw	K	1	Lid Key
F	2	Spacer			

- ◆ Inspect all contents prior to installation. Report any missing parts to dealer immediately.
- ◆ Read all instructions before proceeding.

NOTICE:

These instructions cover installation of the VB23CH-CV chrome floor plates used separately or in conjunction with volleyball floor socket systems in floating wood gym floors. Installation in tile, synthetic or other gym floors can be accomplished by modifying this instruction as needed to meet conditions.

Caution!

Avoid damage to expensive floor by carefully following these instructions using the VB23IK optional installation tool kit or by using an experienced installer.

Caution!

Do not allow use of sockets for 10 days as permanent structural damage to the socket installation may occur

1. Locate the desired center line of the *Chrome Floor Plate* (B) installation. If the *Chrome Floor Plate* (B) is being installed over an existing sonotube, subfloor cutout, excavated hole or existing socket care must be given to assure that the *Chrome Floor Plate* (B) is centered precisely over that center line. Consult architect as needed.
2. Drill a small (approximately 1/4"-3/8") hole in the center of the desired location in the wood floor. See Photo 1.
3. Center the optional VB23IK "thru hole" routing template on the small center line hole. Secure the template to the floor using duct tape to avoid movement during routing. Rout a 6" hole through the finished wood floor and remove any subfloor materials between the wood floor and the concrete subfloor. An experienced installer can use any method desired that results in a clean 6" diameter "thru hole". See Photo 2.



4. Check to insure that the “thru hole” is directly over the center of the existing excavation in the concrete subfloor. If necessary, it is possible to adjust the location as much as 1/2” in any direction without negatively effecting the *Chrome Floor Plate (B)* installation.
5. Using the optional VB23IK “step bore” routing template duct taped to the wood floor, centered on the “thru hole” or excavation in the concrete subfloor, route a 8” diameter X 1/4” deep step bore. The diameter and depth of the “step bore” is critical to insure flush and gap-free installation of the *Chrome Floor Plate (B)*. An experienced installer can use any method desired that results in an accurate “step bore”. See Photos 3 and 4.





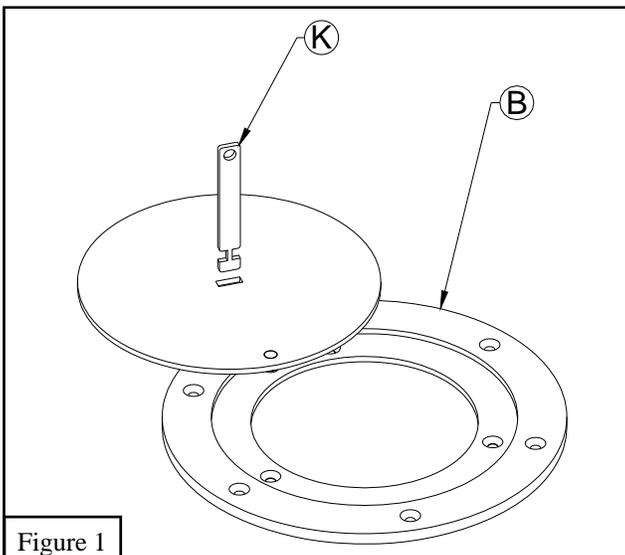


Figure 1

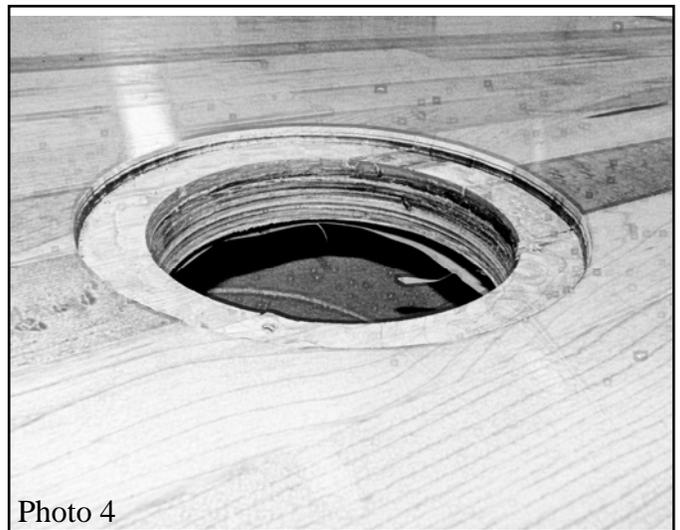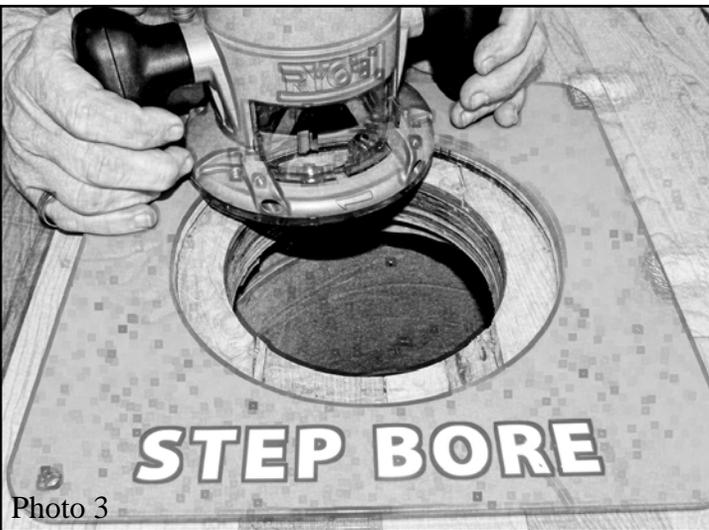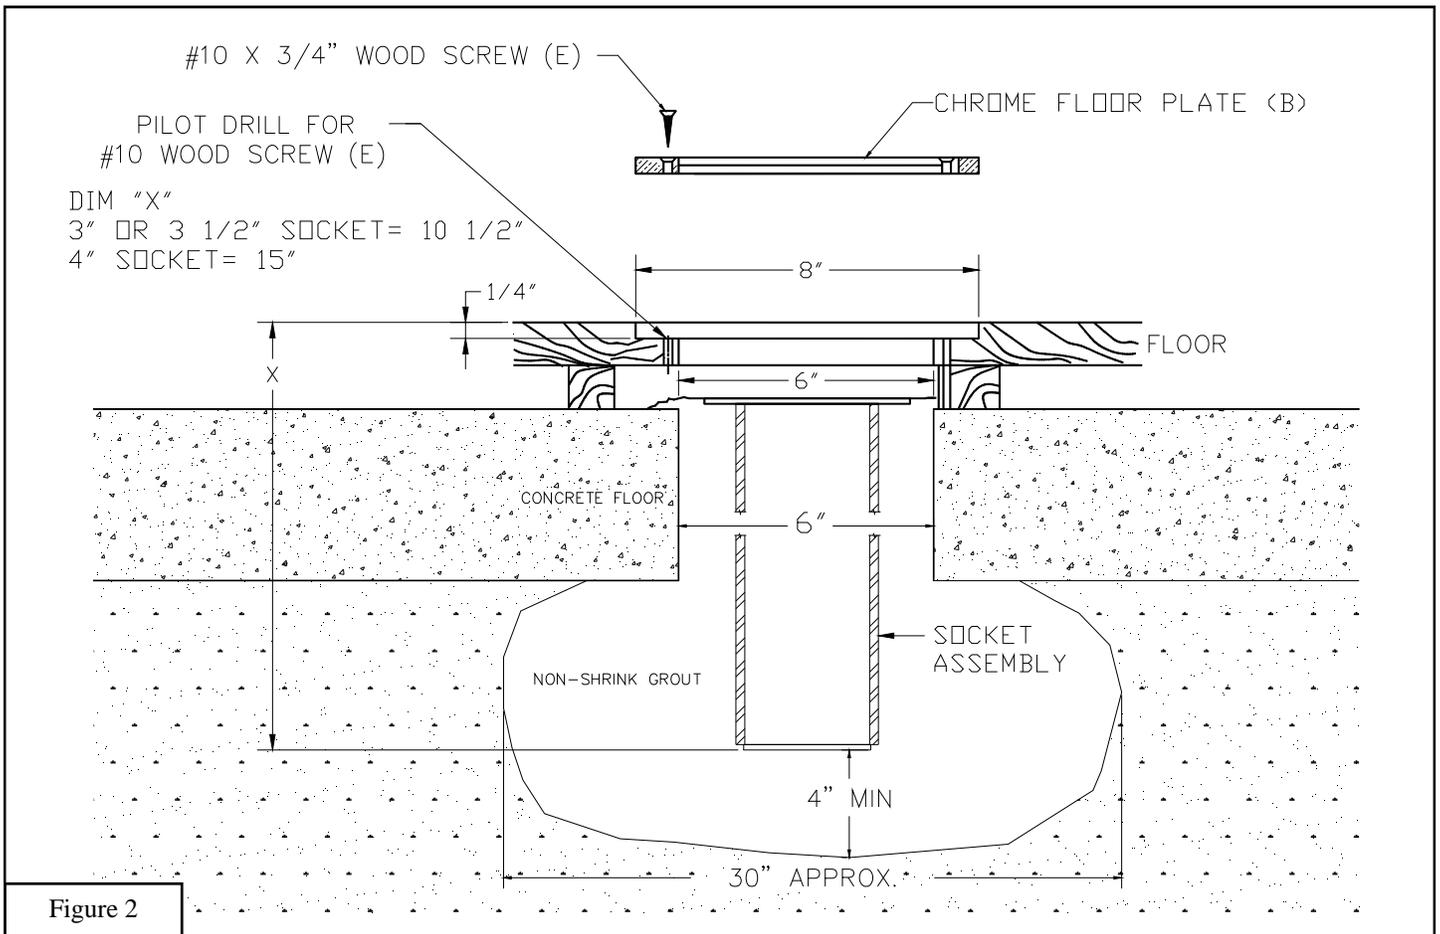


6. Insert the *Chrome Floor Plate (B)* into the routed floor pocket to insure proper fit. Use *Lid Key (K)* to lift and rotate the *Chrome Floor Plate (B)* lid so that the rotated lid is located outside the volleyball court and 180 degrees from the ultimate position of the net. Pre-drill an 1/8" pilot hole through the center of the 6 holes countersunk in the *Chrome Floor Plate (B)* to allow easy installation of the #10 X 3/4" *Wood Screws (E)* provided. See Figure 1.
7. If excess gaps exist between the *Chrome Floor Plate (B)* and the "step bore" in the floor fill with an appropriate wood putty as needed when installation is complete.
8. Excavate the soil, sand and gravel below the concrete to an approximate diameter of 30". The depth of the hole should be approximately 20" from the top surface of the wood floor. See Figure 2.
9. Assemble the 3 piece Floating Floor Socket. Install *Socket Top (J)* to one end of the *Floating Floor Socket Tube (A)* with #10 X 3/8" *Sheet Metal Screws (H)*. Install *Socket Bottom (I)* on the other end using #10 X 3/8" *Sheet Metal Screws (H)*. See Figure 3.

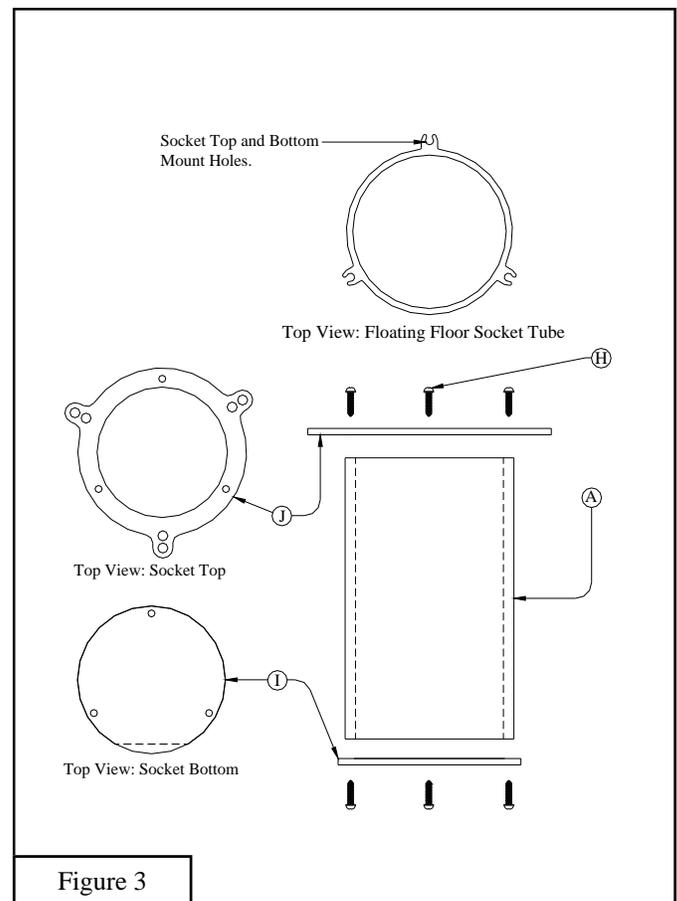

NOTE:

The Spacers are used to install the socket at an angle to compensate for any pole distortion caused by net tensioning.

10. Attach the *Chrome Floor Plate (B)* to the *Floating Floor Socket assembly* using the *#10 X 1 3/4" Flat Head Phillips Wood Screws (D)*, *Spacers (F)*, *Nylon Standoffs (C)* and *#10 Plastic Tubular Nut (G)* provided. Make sure to rotate *Chrome Floor Plate (B)* so two mounting holes are positioned perpendicular and away from the court to install *Spacers (F)* in the two hole locations. See Fig 4.
11. Place entire assembly into hole, trace around the protruding tabs on the socket top in the routed hole then carefully rout clearance in all three areas.
See Fig 4.
12. Install duct tape over the top of the socket to avoid grout entering the socket during installation.
13. Set the socket/floor plate assembly into the prepared hole to insure that both the socket and the floor plate fit neatly. Rework holes if necessary.

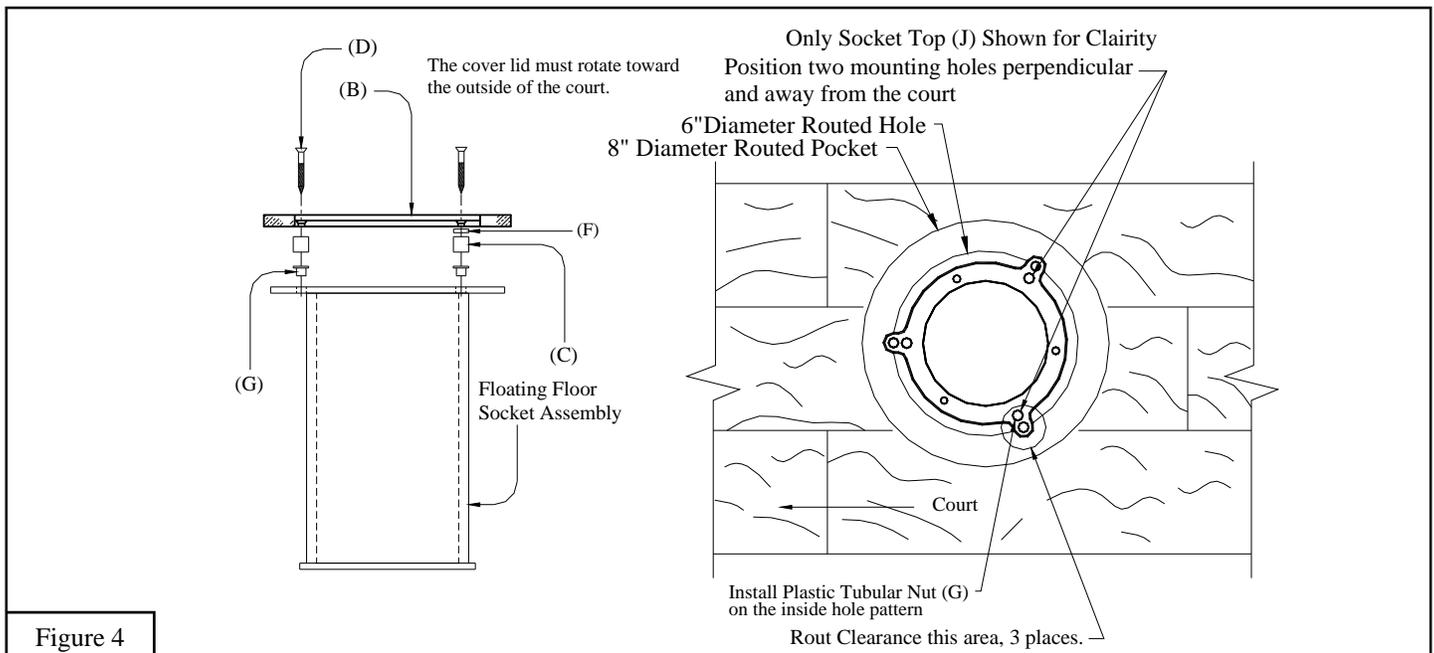

14. Fill the hole in the concrete with premixed, non-shrink grout to within approximately 4" of the top surface of the concrete. Using a pole, vibrate the grout to insure the hole is filled. It is recommended to use a quick cure chemical action mortar or similar product available at most construction supply outlets.
15. Install socket assembly into hole. You will need to work assembly into hole to allow the grout to surround the sleeve. If grout does not flow out the top of the hole in the concrete, remove assembly and add more grout.
16. Attach *Chrome Floor Plate (B)* to wood floor using the 6 *#10 X 3/4" Wood Screws (E)* provided. It is best to drill a small pilot hole into the wood to avoid cracking.
17. After allowing 2 hours for grout to set, remove the 6 *#10 X 3/4" Wood Screws (E)* then remove all hardware holding the *Chrome Floor Plate (B)* to the socket assembly. This allows the wood floor to move independent to the socket when humidity changes in the gym
18. Re-install *Chrome Floor Plate (B)* floor using *#10 X 3/4" Wood Screws (E)*.

