INSTALLATION INSTRUCTIONS



A ATTENTION **A**


- 1. PRIOR TO INSTALLATION: Check all parts carefully to ensure no damage occurred in transit and no pieces are missing. **DO NOT** dispose of any packaging until you are satisfied with this product.
- 2. **SAFETY PRECAUTIONS:** Your installation must comply with all local plumbing codes. Have a qualified tradesman install or approve your plumbing installation. Always wear safety goggles and gloves during installation to avoid personal injury.
- 3. NEED HELP? Please call us at 1 (773) 265-2371 or contact us via email at support@tehilalaundry.com with any questions. Our normal business hours are Monday to Friday from 8 a.m. to 5 p.m. CST.

DO NOT RETURN THE UNIT TO THE PLACE OF PURCHASE BEFORE CONTACTING US AT 1 (773) 265-2371 OR VIA EMAIL AT SUPPORT@TEHILALAUNDRY.COM.

CARE AND MAINTENANCE

- 1. Only soap and water should be used for cleaning the ABS plastic sink. Using other chemicals such as chlorides, acetone (nail polish remover), nail polish, lacquer thinners, dry cleaning solution, gasoline, pine oil, ketones and degreasers will cause the sink to discolor. Rinse well and dry with soft cloth to
- 2. Clean grease, oil, paint and ink stains with isopropyl (rubbing alcohol), immediately rinse with water after stain removal.
- 3. Avoid using razor blades or other sharp instruments that may fall and scratch the surface.

WHAT'S INCLUDED IN THE BOX

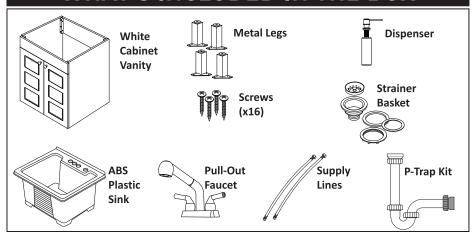


MATERIALS AND TOOLS NEEDED


Phillips Screwdriver, Flat Screwdriver, Silicone, Carpenters Level, Pliers, Pipe Wrench, Plumbers Putty, Hacksaw, Utility Knife.

SKU Numbers: 040 JS7721BLK, 040 JS7721CP 040 JS7721SS, 040JS77WT8BK, 040JS77WT8CP, 040JS77WT8SS

STEP 1: INSTALLING THE CABINET


- 1. Unpack the unit and place the cabinet on a blanket or carboard to protect the surface.
- 2. Turn the **Cabinet** upside down onto the protective surface (see Fig. A).
- 3. Install Metal Legs in each corner of the cabinet (see Fig. A).
- 4. Gently turn the cabinet back to correct position after metal legs are installed.
- 5. Installing door knobs (see Fig. B):
 - Remove the door knobs by unscrewing the screws.
 - Place the door knobs in front of the doors and tighten the screws with screwdriver.

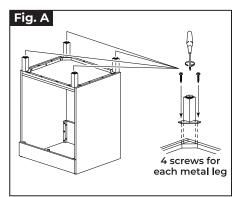


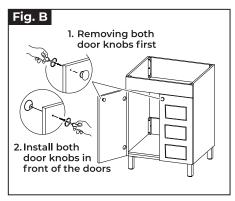

STEP 2: ADJUSTING THE DOOR POSITION (IF NEEDED)

- 1. Take off the metal cap from the hinges with Flat Screwdriver (see Fig. C).
- 2. To adjust the door left or right, slightly tighten or untighten the "Screw\1" (see Fig. D).
- 3. To adjust the door forwards or backwards, slightly tighten or untighten the "Screw\(\mathbf{2}\)" (see Fig. D).

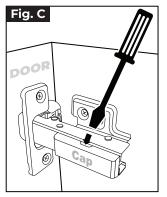

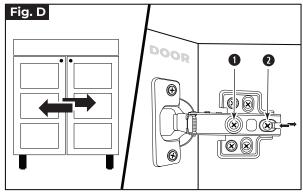


INSTRUCTION: PII040JS77WT8 | 120278


INSTALLATION INSTRUCTIONS (CONT.)



STEP 3: INSTALLING THE SINK STRAINER

- 1. Apply a ring of silicone sealant to the underside of the strainer flange on the **Strainer Body** (see Fig. E).
- 2. Above the sink: insert the **Strainer Body** into the opening in the sink (see Fig. E).
- 3. Underneath the sink: assemble the Rubber Gasket and Locknut onto the Strainer Body 4. hand tighten the **Locknut**. Verify the strainer assembly is properly aligned before tightening with a wrench. (see Fig. F).
- 4. Wipe away any excess sealant from around the strainer flange.

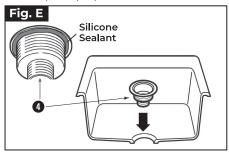


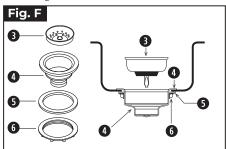


STEP 4: INSTALLING THE LAUNDRY FAUCET



- **FAUCET**
- **PUTTY PLATE**
- HAND SPRAYER
- 1 **SPRAY HOSE**
- **HOSE THREAD AERATOR**
- **SMALL WASHER**
- B **LARGE WASHER X 2**
- **MOUNTING NUT X 2**
- **B** WEIGHT

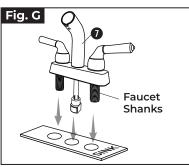

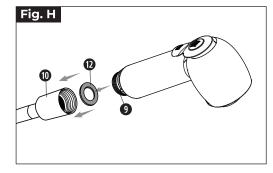



INSTALLATION STEPS


- 1. Shut off the hot and cold water supply from the stop valves and remove the existing faucet and sink.
- 2. Apply a thin bead of silicone sealant to the underside of the **Putty Plate** and carefully slide the **Faucet** Shanks into sink hole and position the faucet into the desired area (see Fig. G).
- 3. Insert Small Washer into hose nut, thread and tighten the Hand Sprayer onto the Spray Hose into the Spray Hose
- 4. Insert the **Spray Hose** in the spout until the **Hand Sprayer** rests in the spout (see Fig. I).
- 5. From below the sink, push the **Black Threaded End Of The Spray Hose** into the middle hose shank on the faucet until it clicks (see Fig. J).
- 6. Attach the **Weight®** to the hose, align it with the **Marked Label** (see Fig. K).
- 7. DO NOT CONNECT THE HOT & COLD SUPPLY LINES YET. SEE STEP 8 FOR CONNECTING SUPPLY LINES.
- 8. (OPTIONAL) Hose Thread Outlet Aerator: Remove the existing aerator from the pull-out spout with an adjustable wrench. Place the washer on the top side of the hose thread aerator. Place the large end of the coned spring onto the top side of the hose aerator. Insert into the spout and tighten (see Fig. L).

MAINTENANCE

- 1. To maintain the appearance of your faucet, always blot dry any water from the faucet's surface. Clean with a damp, non-abrasive sponge and wipe with a clean soft cloth. To remove water spots, apply warm water with a damp soft cloth. Always rinse thoroughly after using a cleaning agent.
- 2. Although the finish is extremely durable, it can be damaged by some cleaners. **DO NOT** use detergent powder, polishing powder, granular detergent or nylon brush to clean.
- 3. **DO NOT** use abrasive detergents. If used, rinse thoroughly and wipe dry with a soft cloth.
- 4. **DO NOT** install in working environments less than 32 degrees F (0 degree C).
- 5. Shut off the water supply valves when the faucet will not be in use for an extended period of time.
- 6. **DO NOT** install the faucet in a rusty or corrosive environment.

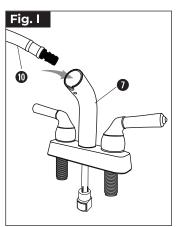

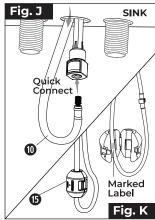


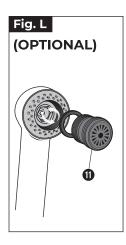



INSTALLATION INSTRUCTIONS (CONT.)



STEP 5: INSTALLING THE SOAP DISPENSER

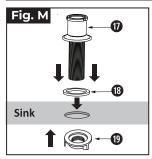

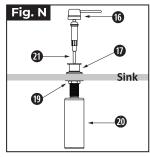

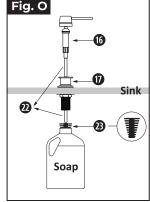

- 1. From above the sink: insert the Base Assembly and Rubber **Gasket®** into the sink hole opening (see Fig. M).
- 2. From underneath the sink: secure the base assembly to the sink using the **Plastic Wing Nut** (see Fig. M).

USING THE SOAP DISPENSER WITH THE INCLUDED BOTTLE (see Fig. N)

- 1. Screw the **Bottle** into the **Base Assembly** from underneath the sink.
- 2. Fill the bottle by pouring soap through the base assembly from above the sink after sink is completely installed (see Fig. P).
- 3. Attach the 7" **Tubing** to the bottom of the **Head Assembly**.

USING THE SOAP DISPENSER WITH THE INCLUDED 3' FLEXIBLE TUBING AND RUBBER HOSE GUIDE (see Fig. O)

- 1. Attach one end of the 3' Flexible Tubing to the bottom of the Head Assembly 6
- 2. From above the sink, run the assembled 3' Flexible Tubing through the Base Assembly 10.
- 3. Take the cap off from the bottle of **Soap** (sold separately).
- 4. After sink is completely installed, insert the **Rubber Hose Guide** into the top of the gallon Soap, and slide other end of the 3' Flexible Tubing through the Rubber Hose Guide into the Soap.
- 5. The Flexible Tubing@ can be cut shorter if needed.

STEP 6: INSTALLING THE SINK TO THE CABINET


- 1. Place vanity in its desired position.
- 2. Place sink with faucet attached into cabinet. Check if all supply lines can be attached.
- 3. Level vanity with levelers on legs.
- 4. Remove sink. Anchor vanity to the wall. It is recommended you anchor the vanity to the wall. Place 1 bead of silicone in each corner of the cabinet and drop the sink back in (see Fig. Q). Gently move the sink side to side to give the silicone a stronger hold.



Fig. P


STEP 7: INSTALLING THE PLASTIC DRAINAGE

NOTE: When installing new plastic drainage, loosely tighten all pieces first to make sure of proper fit, then make final connections.

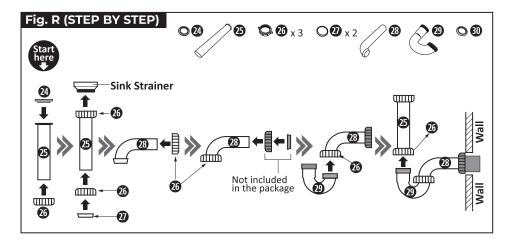

STEP BY STEP (see Fig. R):

- 1. Slide Slip Nut threads up onto the Tail-Piece. and insert Flanged Washer in top of Flanged Tail-Piece
- 2. Tighten the top Tail-Piece to the Sink Strainer with Slip Nut .
- 3. Insert Slip Nut threads down and Washer in bottom end of the Tail-Piece .
- 4. Insert Slip Nut threads down onto Wall Tube insert Slip Nut and Washer (not provided) onto other end of Wall Tube 3.
- 5. Place flanged end of Wall Tube into lower portion of J-Bend and tighten with **Slip Nut**. If wall connection is standard 1 ½" threaded pipe, install wall tube directly into pipe and tighten Slip Nut and Washer (not provided). NOTE: If wall connection is to 1 ½" plastic pipe, a **Conversion Adapter** purchased separately will be required for proper installation (see Fig. S).
- 4. Swing J-Bend to align with bottom of flanged Tail-Piece 3. Connect J-Bend to Tail-Piece and tighten it with Slip Nut. If tail-piece is too long a hacksaw or tubing cutter may be used to trim away excess material.

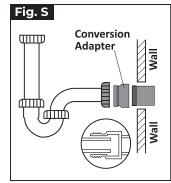

INSTALLATION INSTRUCTIONS (CONT.)




STEP 8: CONNECTING SUPPLY LINES TO **STOP VALVES**

- 1. Insert the Large Washers and Mounting Nuts onto the left and right hose shank on the faucet, and tighten both **Mounting Nuts** (see Fig. T).
- 2. Install new water supply lines according to the manufacturer's installation instructions. **DO NOT** reuse existing supply lines. (see Fig. T).
- 3. Turn on the hot and cold water shut off valves. CHECK FOR ANY LEAKS AT THESE CONNECTIONS BEFORE **RUNING THE FAUCET**. If leaks are found, tighten slightly until the leak stops.

4 Remove the **Hand Sprayer** and run the faucet for at least a minute, this will flush out any sediment that may have been dislodged during installation. While the water is running, check for leaks at the spray hose connection underneath the faucet deck.

If leaks are found:

- (A) Tighten slightly until the leak stops;
- (B) Re-attach the **Hand Sprayer9** to the hose, making sure the **Small Washer** is inside the hose nut.

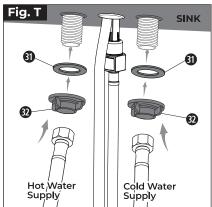

1-YEAR LIMITED WARRANTY INFORMATION

TEHILA® products are backed by a 1-year limited warranty. TEHILA warrants that its products will be free from defects in material and workmanship for a period of I year from the date of purchase. Proof of purchaser's receipt is required to receive this warranty. A replacement for any defective part will be supplied free of charge for installation by you. This 1-year warranty covers the original consumer purchaser only and **DOES NOT** INCLUDE BUSINESS, COMMERCIAL, OR INDUSTRIAL USE OF THIS PRODUCT. This warranty shall not apply to goods which have been subject to accidents, negligence, installation error, product abuse, or misuse. In no event will TEHILA be liable for any consequential, indirect, or special damages, nor shall TEHILA be liable for transportation, labor, or other charges arising out of the removal or reinstallation of its products. Defective parts must be made available for inspection by a TEHILA employee or an authorized representative. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

WARRANTY CLAIM PROCEDURES AND REQUIREMENTS:

To obtain TEHILA® warranty service, the customer will need to write to TEHILA explaining the defect, and include proof of purchase receipt, your name, phone number, email address, and mailing address. Information can be emailed to support@tehilalaundry.com or mailed to TEHILA® (Warranty Department), 990 E North Ave., Glendale Heights, IL 60148.