


## SPACE-SAVING RACK PROTECTOR DIMENSIONS

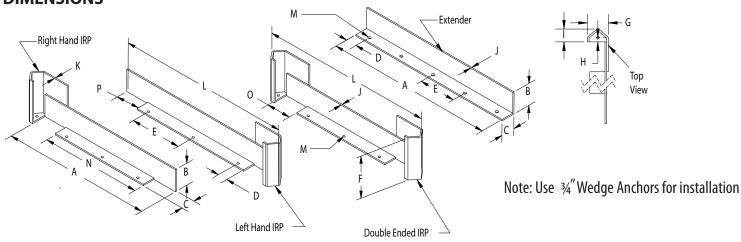

## Dimensions (Inches)

	A	В	C	D	E	F	G	Н	ı	J	K	L	M	N	0	Р		
Part	Outer Length of Extension	Height of Leg	Width of Leg	End to Hole	Hole to Hole	Height of Curve	Width of Curve	Curve Hole to End	Length of Curve	Extention Thickness	Curve Thickness	Outside Overall Length	Hole Diameter	Inner Length of Extension	Gap Length Single	Gap Length Double	Number of Holes	Curve Location
IRP-42-HD	43	6.5	4	2.8	11.7	12	5	1	3	0.4	0.4	49	0.94	25	9	N/A	5	Both Sides
IRP-42LH-HD	43	6.5	4	2.8	11.7	12	5	1	3	0.4	0.4	46	0.94	25	N/A	9	4	Left
IRP-42RH-HD	43	6.5	4	2.8	11.7	12	5	1	3	0.4	0.4	46	0.94	25	N/A	9	4	Right
IRP-48-HD	49	6.5	4	2.8	14.8	12	5	1	3	0.4	0.4	55	0.94	25	9	N/A	5	Both Sides
IRP-48LH-HD	49	6.5	4	2.8	14.8	12	5	1	3	0.4	0.4	52	0.94	25	N/A	14	4	Left
IRP-48RH-HD	49	6.5	4	2.8	14.8	12	5	1	3	0.4	0.4	52	0.94	25	N/A	14	4	Right
RP-42EX-HD	43	6.5	4	5.8	10.5	N/A	N/A	N/A	N/A	0.4	N/A	43	0.94	N/A	N/A	N/A	4	No Curve
RP-48EX-HD	47.5	6.5	4	2.8	10.5	N/A	N/A	N/A	N/A	0.4	N/A	47.5	0.94	N/A	N/A	N/A	5	No Curve
RP-62EX-HD	62	6.5	4	4.8	10.5	N/A	N/A	N/A	N/A	0.4	N/A	62	0.94	N/A	N/A	N/A	6	No Curve

Custom sizes and lengths are available. Please consult factory.

## **Space-Saving Rack Protector Equipment Specification**

To ensure proper protection consider the following:

- Measure overall length of area that is to be protected.
- Measure the size of rack foot plates and clear dimensions between the foot plates.
- Is this a single or double end application? (The exposure to traffic is the key factor.)
- Placing protection equipment as close as possible and still provide an adequate barrier in front of what you're protecting to achieve proper installation.

Protection equipment is used anywhere throughout the plant and warehouse. Key areas for these types of equipment are rack and shelving ends. The cost of the protection equipment is minimal when considering what is being protected and the cost to repair or replace it if it is damaged.

