
LED Signal Lights for Container Spreaders









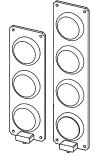

Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.


- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

| SSL100W | - 24 | - R |
|-------------------|----------------|---------|
| [Model number] | [Voltage] | [Color] |
| I I | I | 1 |
| •SSL100W •SSL100M | • 12 - DC12V | R-Red |
| •SSL200W •SSL200M | • 24 - DC24V | A-Amber |
| •SSL300W •SSL300M | • 110 - AC110V | G-Green |
| •SSL400W •SSL400M | • 220 - AC220V | B-Blue |

Product Specifications

| Model number | Voltage | Current | Certificate | Weight | Cable Entry | Color | |
|-----------------|---------|---------|-------------|--------|-------------------------------------|----------------------|-----------------------------|
| SSL100 | DC12V | 0.280A | KIMM | 1.80kg | M12-5PIN (Standard) C10-Cable | R-Red | |
| | DC24V | 0.151A | | 1.80kg | | | |
| | AC110V | 0.040A | | 1.85kg | | | |
| | AC220V | 0.040A | | 1.85kg | | | |
| SSL200 | DC12V | 0.560A | - | 2.15kg | | R-Red G-Green | |
| | DC24V | 0.302A | | 2.15kg | | | |
| | AC110V | A080.0 | | 2.20kg | | | |
| | AC220V | A080.0 | | 2.20kg | | | |
| SSL300 | DC12V | 0.840A | KIMM | KIMM | 2.50kg | (Customiza- tion) | R-Red A-Amber G-Green |
| | DC24V | 0.453A | | | 2.50kg | | |
| | AC110V | 0.120A | | | 2.55kg | | |
| | AC220V | 0.120A | | 2.55kg | | G-Green | |
| SSL400 | DC12V | 1.120A | KIMM | 2.95kg | | R-Red | |
| | DC24V | 0.604A | | 2.95kg | | A-Amber | |
| | AC110V | 0.160A | | 3.00kg | | G-Green | |
| | AC220V | 0.160A | | 3.00kg | | B-Blue | |

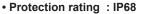

• Ambient operating temperature : -30°C to + 60°C



Please scan the QR code for more detailed product information.


www.qlight.com

Dimensions (Units: mm)

SSL100W/ SSL100M


M12-5PIN 4-Ø10 HOLES CONNECTOR 51


SSL300W/ SSL300M

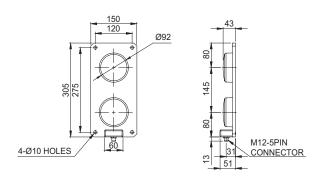

SSL200W/ SSL200M

SSL400W/ SSL400M

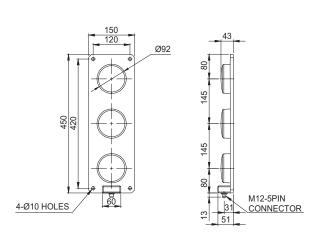


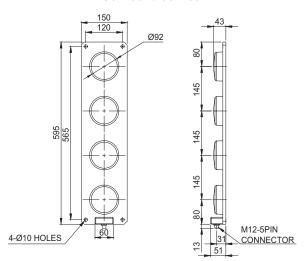


Wiring Instructions

- C10 CABLE TREADING TYPE
- External power/ signal line 7G × 0.5mm² 600V/80°C WIRE 1,000mm

SSL100W-AC/DC SSL100M-AC/DC

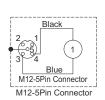


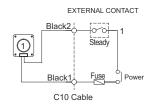


• M12-5PIN connector type

Pin no. 3 is common, however equipped built-in Bridge circuit, power line can be wired to / Pin no.3 or 4 regardless of polarity

> SSL300-W-AC/DC SSL300-M-AC/DC

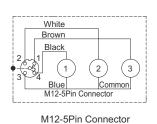


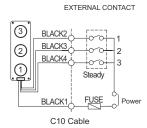


• M12-5PIN connector type

Pin no. 3 is common, however equipped built-in Bridge circuit, power line can be wired to / Pin no.3 or 1, 2, 4 regardless of polarity

SSL200-W-AC/DC SSL200-M-AC/DC

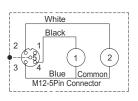

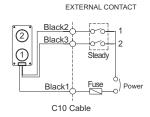


M12-5Pin Connector

• M12-5PIN connector type

Pin no. 3 is common, however equipped built-in Bridge circuit, power line can be wired to / Pin no.3 or 1, 4 regardless of polarity

> SSL400-W-AC/DC SSL400-M-AC/DC

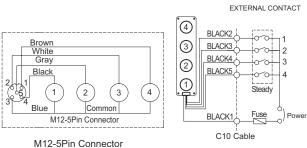


• M12-5PIN connector type

Pin no. 3 is common, however equipped built-in Bridge circuit, power line can be wired to / Pin no.3 or 1, 2, 4, 5 regardless of polarity


Parts Definition/ Installation/ Mounting Hole Specifications

■ Parts Definition/ Installation

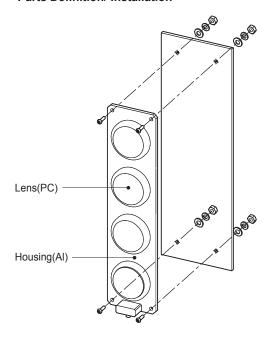

■ Mounting Hole Specifications

 Machine holes on the mounting surface referring to the diagram below.

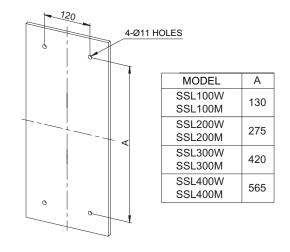

- First, machine taps or holes on the mounting surface ①.
- The mounting hole of this product is 11mm in diameter.
- When machining taps, fasten the bolt through the mounting hole of the product.
- When machining holes, insert the bolt through the hole of the product, and tighten the nut from the opposite side of the mounting surface.

Installation Environment and Protection Rating

- This product is designed for use with protection rating of IP68.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP66), it may cause malfunction or damage to the product.
- For further information, please visit our website (www.qlight.com).

♠ For your safety

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com)

Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea Tel. +82-80-328-2222 Fax: +82-2-2679-6154 Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-80-328-1111 Qlight Overseas Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel: +82-51-620-4100 Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel: +82-51-245-0017

Qlight USA, Inc. www.qlight.com www.qlightusa.com | sales@qlightusa.com | 3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1.408.519.5740 Fax. +1.408.519.5739

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86.21.6651.7100 Fax. +86.21.6315.3929



Product Operation Inquiry / Customer Support +82-51-620-4100

You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.

*ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE

PRODUCT SPECIFICATION OF DESIGN OF OTHERWISE.

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Head office: Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code: 08507)

Factory: 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code: 50805)

www.qlight.com