


OWNER'S MANUAL

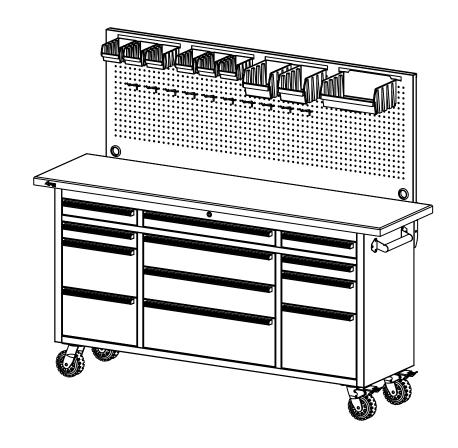


TRINITY PRO 72" 10-DRAWER STAINLESS STEEL WORKBENCH W/ PEGBOARD Model # TLSF-7210

PARTS LIST

Your TRINITY PRO 72in 10-Drawer Stainless Steel Workbench w/ Pegboard should include the following parts. Please inspect box contents to ensure you have received all components.

If you are missing any parts, need assistance with assembly or have questions, please contact TRINITY Customer Service: 800.985.5506 or customerservice@trinityii.com. Parts can also be requested online at www.trinityii.com (Help & More, Contact Us).


You will need 10mm wrench (for handles), 14mm wrench (for casters) and 12mm wrench (for pegboard) for assembly. These are NOT included.

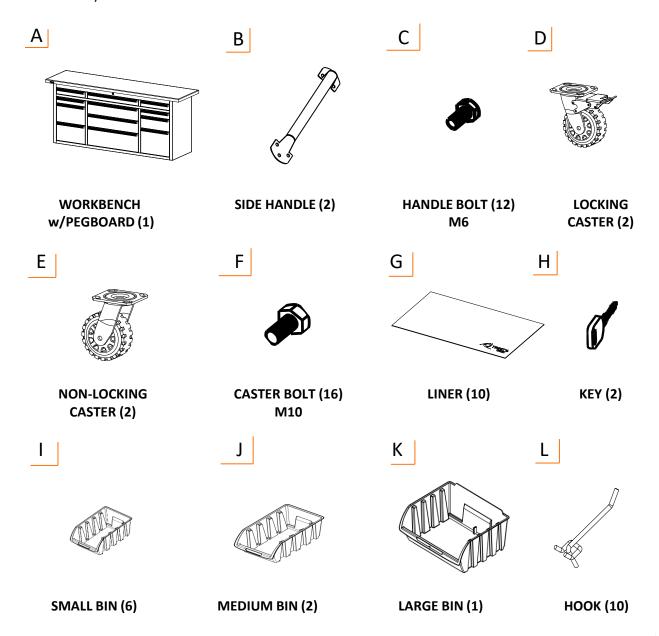

STEP 1


Location of parts:

- KEYS (H) are in a plastic bag taped on top of the CASTERS (D/E/F) box in BOTTOM LEFT Drawer.
- 2) LINERS (G) / SIDE HANDLES (B) and HANDLE BOLTS (C) / BINS (I/J/K) and PEGS (L) are all in BOTTOM RIGHT Drawer.

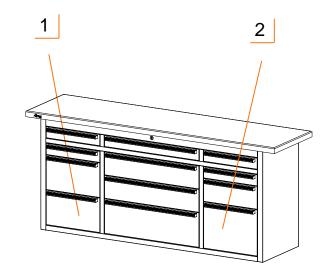


STEP 2

Position SIDE HANDLE (B) over pre-installed nuts on side of WORKBENCH (A). Insert HANDLE BOLTS (C) through holes on SIDE HANDLE (B). Use a 10mm socket wrench to fully tighten HANDLE BOLTS (C) to WORKBENCH (A).

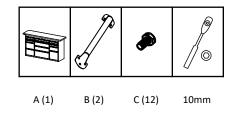

Repeat above steps to install remaining SIDE HANDLE (B).

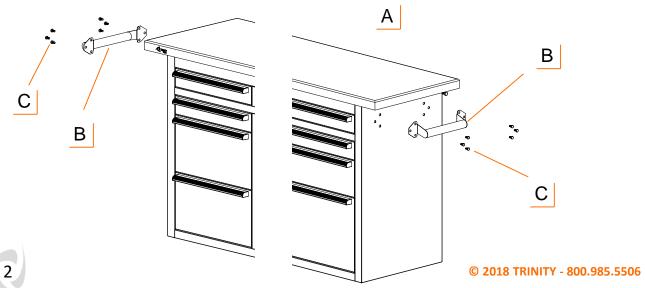

STEP 3


Lay WORKBENCH (A) on its backside. Lift workbench by side handles. Do NOT lift workbench by the wood top. Two people are needed. Do NOT attempt this alone.


Position LOCKING CASTERS (D) on side of WORKBENCH (A) of your choice and align holes to pre-installed nuts on underside of WORKBENCH (A). Use a 14mm socket wrench to fully tighten CASTER BOLT (F) to WORKBENCH (A).

Repeat above steps to install NON-LOCKING CASTERS (E).



- * Make sure to install both LOCKING CASTERS (D) on same side of workbench.
- ** For ease of use, place LOCKING CASTERS (D) on side you will regularly push or pull.
- *** If you plan to push the workbench against a wall, place LOCKING CASTERS (D) on front long side for ease of access.

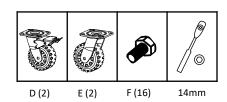

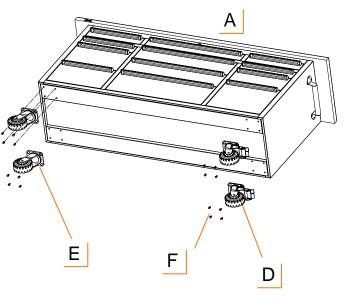

Place LINERS (G) in each drawer. DO NOT place liner in TOP LEFT or TOP RIGHT drawer which already has a wood work surface installed inside. G (10)


STEP 5

Two people are needed for this step. Do NOT attempt this alone.



12mm

Unscrew bottom Bolt on both left and right hand side of Pegboard with a 12mm socket wrench. Lift Pegboard upright. With one person holding the Pegboard in place, have the other person insert the bottom Bolt into the top hole of each bracket. Tighten both Bolts fully back to the Pegboard with wrench.

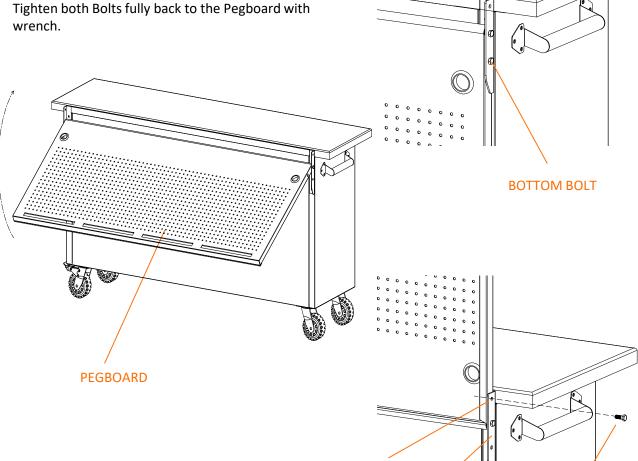


TOP HOLE


BRACKET

BOTTOM BOLT

STEP 6

Hang SMALL/MEDIUM/LARGE BINS (I/J/K) over four rectangular hollow sections on top of pegboard as shown.

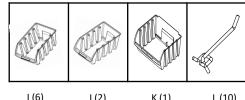

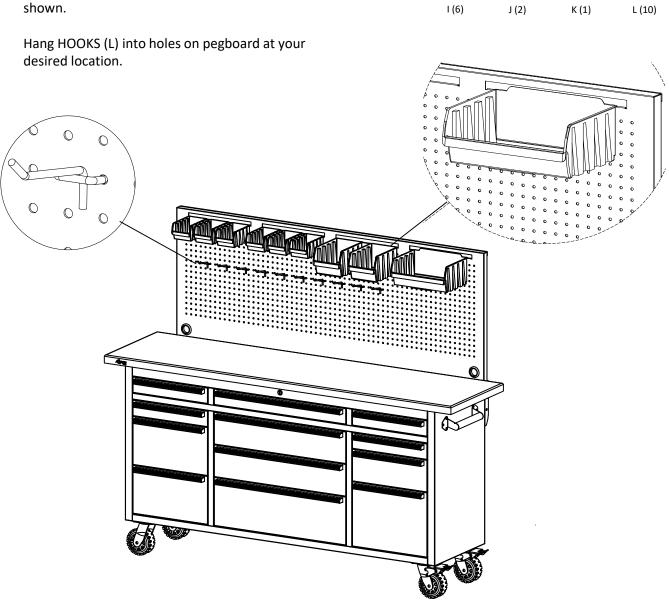


USAGE INSTRUCTIONS

DRAWER REMOVAL


Pull drawer out so that it is almost fully extended. On RIGHT-hand side, push black release lever DOWN. On LEFT-hand side, pull black release lever UP. While holding levers as instructed, pull drawer forward until released from the slides attached to Workbench ("Workbench Slides").

Note: The slides attached to drawer ("Drawer Slides") are an integral part of drawer and must be removed along with drawer itself.

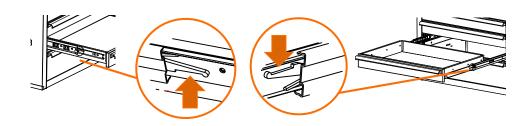

DRAWER REPLACEMENT


To replace drawer, pull slides out completely. Insert brackets on each side of Drawer Slides into corresponding slots on the Workbench Slides, making sure they are properly positioned. Once the brackets are inserted into the slots, completely close the drawer to set all slides in their proper positions.

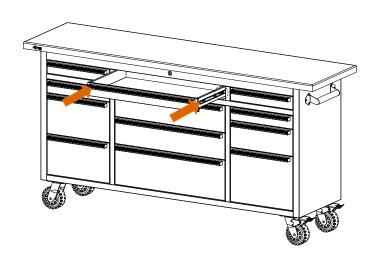

USAGE INSTRUCTIONS


ENGAGE STOPPER

Pull top left or right drawer out so it is almost fully extended. Engage stopper on back corner of each side of drawer by turning it up, making sure stopper rests over drawer frame. Ensure both stoppers are engaged when work surface is being used.

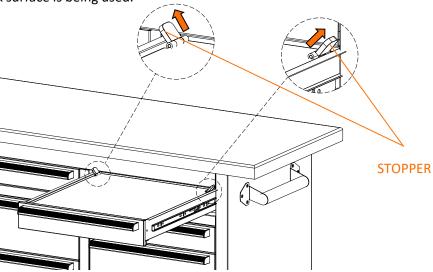

DISENGAGE STOPPER

Disengage stopper by turning it inside drawer. Make sure stopper lays flat on work surface before pushing drawer back into workbench.

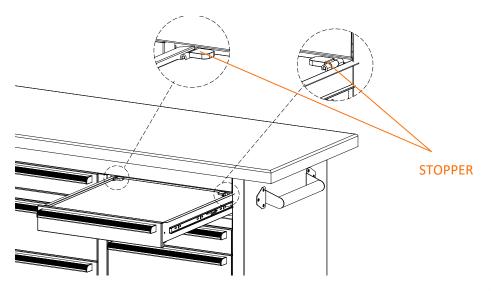

SERVICE PARTS LIST – TLSF-7210


TRINITY Customer Service provides the following replacement parts:

	Part Number	Description		Part Number	Description
1)	XGR-21-007-0605	Medium Bin	17)	XBK-10-003-0XXX	Key
2)	XDG-21-007-1205	Large Bin	18)	XBK-22-006-1415	15" Drawer Liner
3)	XBS-15-014-6428	Pegboard	19)	XBK-22-006-2615	27" Drawer Liner
4)	XSV-01-009-0816	Pegboard Bolt	20)	XBS-07-009-2709	27" Large Drawer
5)	XBS-19-008-0825	Bracket	21)	ZSV-99-028-5020	Non-locking Caster
6)	XSV-01-027-0816	Bracket Screw	22)	XBS-07-009-1509	15" 2 nd Medium Drawer
7)	XSV-05-001-0900	Side Handle	23)	AMA-05-007-1400	15" Drawer Handle
8)	ZSV-01-001-0612	Handle Bolt	24)	XBK-23-010-3012	End cap
9)	XBK-02-024-0001	Stopper	25)	XBS-07-009-2706	27" Medium Drawer
10)	LNA-06-014-1514	Work Surface	26)	AMA-05-007-2600	27" Drawer Handle
11)	XBS-07-009-1506	15" 1st Medium Drawer	27)	XBS-07-009-1503	15" Small Drawer
12)	XBS-07-009-1512	15" Large Drawer	28)	XBS-07-009-2703	27" Small Drawer
13)	ZSV-01-001-1020	Caster Bolt	29)	CSV-11-005-0XXX	Lock
14)	ZSV-99-027-5020	Locking Caster	30)	LNA-06-013-7219	Wood Top
15)	ZSV-12-002-1575	Slide (workbench side)	31)	ZSV-02-025-0001	Hook
16)	ZSV-12-001-1575	Slide (drawer side)	32)	XOR-21-007-0403	Small Bin

SERVICE PARTS LIST – TLSF-7210

TRINITY Customer Service provides the following replacement parts:

NOTE: Replacement keys may be ordered using the code shown on the face of the lock.

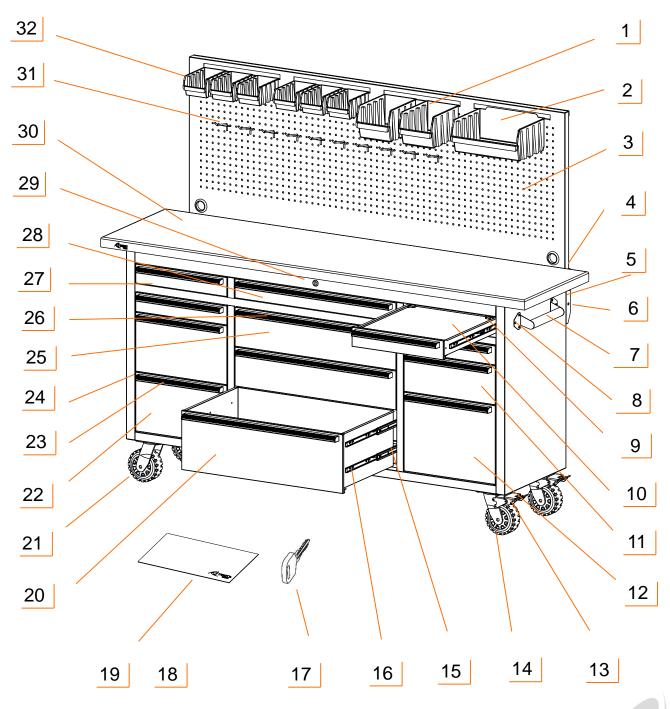

WARNINGS

- Read and understand all instructions. Failure to follow all instructions may result in injury and/or damage.
- 2. The warnings, cautions, and instructions discussed in this manual cannot cover all possible conditions or situations that may occur. The user must always be aware of their environment and ensure that they use the product in a safe and responsible manner.
- Do NOT modify the product in any way. Unauthorized modification may impair the function and/or safety of the product, and may affect the life of the product.
- 4. Check for damaged parts. Before using this product, carefully check that all parts are in good condition, and that the product will operate properly and perform its intended function. Check for damaged parts and any other conditions that may affect the operation of this product. Replace damaged or worn parts, and never use this product with a damaged part.
- 5. Do NOT overload the product.

Weight capacity per small bin	2 lb
Weight capacity per medium bin	4 lb
Weight capacity per large bin	8 lb
Weight capacity per drawer w/ 1 pair of slides	100 lb
Weight capacity per drawer w/ 2 pairs of slides	200 lb
Weight capacity per work surface	50 lb
Weight capacity per hook	10 lb
Total weight capacity of pegboard	200 lb
Total weight capacity of workbench	2200 lb

- 6. Lock the casters when leaving workbench in stationary position.
- 7. Lock the drawers and remove all items from the pegboard before moving the workbench.
- 8. Always move workbench with two people. Roll slowly and constantly check surroundings to ensure enough clearance. Heavy weight workbench can be hard to stop if moving too fast, causing serious injury or damage.
- 9. Do NOT open more than one drawer at a time. Tipping can occur.
- 10. Do NOT step or lean on open drawers or open work surfaces. Tipping can occur.
- 11. Do NOT lift workbench by wood top. Wood top may separate causing injury.

WARNINGS

- **12.** Work surface stopper must be engaged when surface is being used. Failure to properly engage the stopper may lead to accidental closure, knocking items off the work surface.
- 13. Do NOT hang on the pegboard.
- **14. Ensure pegboard bolts are always securely tightened.** Check regularly to ensure the bolts have not loosened during use of workbench.
- 15. Do NOT let children play near the workbench.
- 16. Load the workbench starting with the bottom drawers to prevent workbench from tipping.
- 17. Make sure all drawers are closed tightly before locking or unlocking.

CARE AND MAINTENANCE

- Avoid harsh, abrasive cleaners, and other corrosive chemicals.
- Do not use scouring pad for cleaning.
- Keep dry and avoid damp environments.
- Use a quality stainless steel cleaner and follow instructions that come with the cleaner.
 Wipe ALONG the grain (NOT against).
- Wood top and work surface can be cleaned with damp cloth and wiped dry immediately with dry cloth. If needed, solvent-based wood furniture cleaner can be used.
- Clean up any spills immediately to prevent stains from forming on the wood top and work surface.

PRODUCT REGISTRATION

Thank you for purchasing a TRINITY PRO 72in 10-Drawer Stainless Steel Workbench w/Pegboard. In order to register your product and receive streamlined customer service, please fill out the following Product Registration Form and (1) fax the form to 310.347.4134 (2) complete the Product Registration Form online at www.trinityii.com or (3) scan and email the form to customerservice@trinityii.com. Include a copy of your original receipt with your submission.

First Name:	Last Name:		
Address:			
City:	State: Zip Code:		
Email Address:	Phone:		
Product Model #: TLSF-7210	Purchase Date: / /		
Location of Purchase:			
Please rate the importance of each feature Quality Price Size/Capacity			
	Salesperson Word of Mouth Other		
<u>=</u>	☐ Married 0,000 ☐ \$50,000-\$150,000 ☐ \$150,000+ col ☐ College ☐ Graduate School ☐ Rent		

1 YEAR LIMITED WARRANTY

TRINITY PRO 72" 10-Drawer Stainless Steel Workbench w/Pegboard Model # TLSF-7210

Trinity International Industries ("Trinity") warrants to the original consumer purchaser ("Purchaser") of the TRINITY PRO 72in 10-Drawer Stainless Steel Workbench w/Pegboard ("Product") that each Product shall be free from defects in workmanship and materials for a period of 1 year from the date of original purchase. Trinity's obligation under this warranty shall be limited to repair or replacement of, or adequate compensation for the Product which shall not be greater than the amount of the purchase price of the Product, at the option of Trinity, during the warranty period. All replaced parts and Products become the property of Trinity and must be returned to Trinity.

This warranty excludes normal wear and tear of the Product and its parts or components, and damage arising from any of the following: negligent use or misuse of the Product, use contrary to this User's Manual, or alteration by any one other than Trinity. The warranty period of 1 year shall not be extended or renewed by the repair or replacement of, or compensation for, the Product. Any warranty implied by applicable law is limited in duration to one year from the date of purchase and is subject to the same conditions and limitations as is provided for our express warranty.

Except as set forth herein, and to the extent of applicable there are no warranties on this Product either express or implied, and Trinity disclaims all warranties including, but not limited to, any implied warranties of merchantability, infringement or fitness for a particular purpose. No warranty or guarantee given by any person, firm, or corporation with respect to this product shall be binding on Trinity.

If your Product is defective or otherwise requires service or parts, please call TRINITY Customer Service toll-free at (800) 985-5506, between 5:00 a.m. and 5:00 p.m., PST. Please tell us which model you purchased, the date of the purchase, and the problem with your Product. A copy of your original purchase receipt must accompany your service request.

LIMITATION OF REMEDIES AND LIABILITY

Trinity (and its employees, officers, members, managers, affiliates an assigns) shall not be liable for any incidental, consequential, special, indirect, remote, special or punitive damages for breach of any warranty, express or implied, including, but not limited to, lost profits, lost savings, loss of anticipated benefits and attorneys' fees, which arise out of the purchase, use or inability to use the Product, whether arising out of contract, negligence, strict tort, product liability, or any other legal theory on which a claim is based. As noted above, to the extent damages are allowed by our express warranty or by applicable law, those damages may not exceed the purchase price paid for the Product. Without limiting the foregoing Purchaser assumes all risk and liability for loss, damage or injury to Purchaser and Purchaser's property and to others and their property arising out of the use, misuse, or inability to use this Product. This limited warranty shall not extend to anyone other than the original purchaser of this product, is nontransferable and states your exclusive remedy.

Some states do not allow the exclusion or limitation of incidental, consequential, special, or punitive damages, so the above limitation or exclusion may not apply to you. The above warranty gives you specific legal rights, and you may have other rights which vary from state to state.

QUESTIONS? NEED PARTS? WE ARE HERE TO HELP!

Please feel free to contact us. There are no questions too small, or any problems too big. We're committed to providing our customers with the highest level of service.

TRINITY Customer Service

TEL: 800.985.5506

FAX: 310.347.4134

EMAIL: customerservice@trinityii.com

Monday through Friday 5:00 AM - 5:00 PM (PST)

www.trinityii.com