



GB/D

Contents

1. Explanation of symbols used1
2. Field of application1
3. General Safety Instructions1
4. Processable materials
5. Non-processable materials
6. Preparation of the spray area3
7. General preparations before the application of spray tanning lotion
8. Preparation of the skin
9. Start-up
10. Operation
11. Tips on using the spray tanning system
12. After application of the spray tanning lotion
13. Taking Out of Operation and Cleaning7
14. Maintenance
15. Spare parts9
16. Correction of Malfunctions

GB

Translation of the original operating instructions

Congratulations on the purchase of your Aura Spray Tanning System.

You have purchased a branded product, which requires careful cleaning and care to ensure smooth operation. Please read the operating manual carefully before commissioning the Spray Tanning System and note the safety instructions. Keep the operating instructions in a safe place.

1. Explanation of symbols used

	This symbol indicates a potential danger for you or for the Spray Tanning System. Under this symbol you can find important information on how to avoid injuries and damage to the Spray Tanning System.
i	Indicates tips for use and other particularly useful information.

2. Field of application

The Aura Spray Tanning System has been specifically developed for the application of liquid spray tanning lotion. Any application other than that described in this operating manual is not permitted.

3. General Safety Instructions

- Do not use the spray guns to spray flammable substances.
- The spray guns are not to be cleaned with flammable solvents.
- There must be no sources of ignition such as, for example, open fires, smoke of lit cigarettes, cigars and tobacco pipes, sparks, glowing wires, hot surfaces, etc. in the vicinity during spraying.
- Caution against dangers that can arise from the sprayed substance and observe the text and information on the containers or the specifications given by the substance manufacturer.
- Do not spray any liquid of unknown hazard potential.
- Attention! Spray tanning lotions do not generally offer any protection against sunburn. Repeated unprotected contact with the sun increases the risk of skin cancer, skin aging and other harmful effects.
- This Spray Tanning System is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Spray Tanning System by a person responsible for their safety.

- Do not let children play with the Spray Tanning System.
- Never direct the spray gun at animals.
- Ensure that the spray area is well ventilated.
- Do not breathe in spray tanning lotion. Wearing nasal plugs is recommended.
- Do not spray into the eyes. Wearing safety goggles is recommended.
- If spray tanning lotion is sprayed into the eyes, wash them out with water immediately and consult a doctor.
- Do not spray spray tanning lotion into open wounds or onto damaged skin.
- Cover your hair when spraying your face. Otherwise bleached hair in particular could be stained by the spray tanning lotion.
- Never immerse the Spray Tanning System under water.



GB)

Warning: Never use your Spray Tanning System near bath tubs, shower trays or other receptacles that contain water.

- Always remove the power plug after use, if the Spray Tanning System is located near a washbasin or another water source. Water always represents a hazard even when the system is switched off.
- As additional protection, the installation of a residual current protective device (FI/ RCD) with a rated tripping current of no more than 30 mA is recommended in the bathroom circuit. Ask your installer for advice.
- Always remove the power plug before topping up the spray container or cleaning the system.
- Only use genuine spare parts from the manufacturer. With original Aura accessories and spare parts, you have the guarantee that all safety regulations are fulfilled.
- Never open the Spray Tanning System yourself to carry out electrical repairs!
- Do not place the spray gun on its side, as material could leak out.

4. Processable materials

Liquid spray tanning lotion



Only use spray tanning lotion up to the expiry date specified on the package. means, for example, that the substance can be used for 12 months after $\overline{12M}$ opening.


5. Non-processable materials

All materials not approved for skin treatment



|--|

Description (Fig. 1)		
1) Air cap /Nozzle	2) Union nut	
3) Spray gun	4) Trigger	
5) Material volume regulation	6) Air hose	
7) ON/OFF switch	8) Air filter	
9) Gun holder	10) Container	

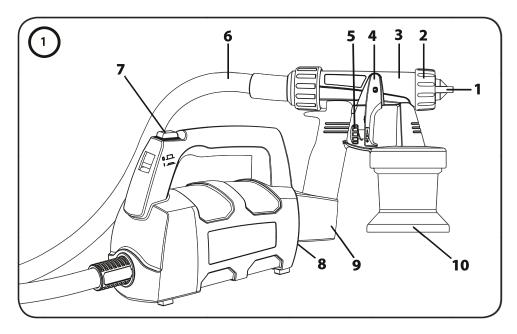

6. Preparation of the spray area

- Remove all objects from the spray area if possible, in order to avoid contamination from overspray.
- Work in a room with a smooth, easy-to-clean surface. The use of a spray booth/spray tent is recommended.

7. General preparations before the application of spray tanning lotion



Test the compatibility of the spray tanning lotion on a small patch of skin approx. 24 hours before the actual application of the spray tanning lotion. Stop application if skin irritations occur.

- Approx. 24-48 hours prior to treatment remove body hair by shaving or waxing.
- Do not apply any perfume, deodorant or make-up. These products can negatively influence the tanning result.
- On the day of the treatment wear dark, loose-fitting clothing, in order to prevent discoloration of clothing by the spray tanning lotion.
- Remove all jewellery, in order to avoid discoloration by the spray tanning lotion.

8. Preparation of the skin




Correct preparation of the skin is the key to an even and long lasting tanning result. Please note the following instructions


- Remove all dead skin cells by means of exfoliation before applying the spray tanning lotion.
- Make sure that the moisture content of the skin is as uniform as possible. Use a moisturizer for dry areas (e.g. elbows and knees). Let the moisturizer dry before commencing the treatment.
- Apply a little balm to lips, nails, palms of the hands, eyebrows and the hairline for protection.

9. Start-up

Before connecting to the mains supply, be sure that the supply voltage is identical with the value given on the rating plate.

- 1. Unscrew the container from the spray gun.
- 2. Prepare spray tanning lotion according to manufacturer's instructions and pour into the container.
- 3. Screw the container tightly onto the spray gun.
- 4. Mount the air hose by aligning the arrow on the hose cuff end and the back of the gun. (Fig. 2,a) Push together firmly and twist to lock.
- 5. Push the other end of the air hose into the device. (Fig. 2, b).
- 6. Place the device only on a plane and clean surface. Otherwise, the device may suck in dust, etc.
- 7. Press the ON/OFF switch at the device. (Fig. 3)

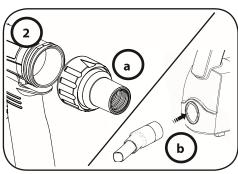

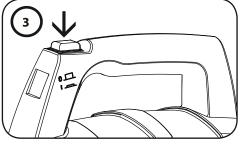

10. Operation

How the Spray Tanning system is handled, including preparation of the work place and spray tanning lotion as well as the final result, is the sole responsibility of the operator.

Wagner excludes any liability for damage which may arise from overspray, application errors, touch-ups, or non-compliance with the instructions provided here.

• Turn the material control (Fig. 4, 1), in order to adjust the desired delivery rate.

lower material volume (-):


- \rightarrow turn anti-clockwise
- higher material volume (+):
- → turn clockwise
- Turn the air cap (Fig. 5, 1) with the union nut slightly unscrewed (2), to adjust the shape of the spray jet:

Fig. 6a vertical flat jet: For spray movements from left to right

Fig. 6b horizontal flat jet:

For spray movements from top to bottom

• Pull the trigger to spray the spray tanning lotion.

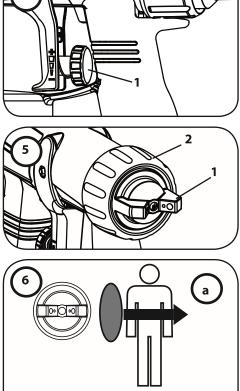

4



b

GB

11. Tips on using the spray tanning system




(GB)

Before commencing application, check that all necessary protective measures (nasal plugs, safety goggles, hair covering) have been taken.



Practice on a large piece of cardboard or paper first of all, in order to find the optimal settings for the spray tanning lotion used.

- Start and end the spray movement outside the body.
- Avoid interruptions during the spray movement.
- The spray movement should come from the arm, not just from the wrist. This ensures that a uniform distance is maintained between the spray gun and the body during the spray operation. Select a distance of 20 - 30 cm, depending on the desired spray jet width.
- Fig. 7 a:CORRECT Even distanceFig. 7 b:INCORRECT uneven distancewill result in uneven tanning
- Move the spray gun at an even speed

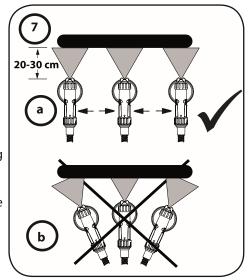

12. After application of the spray tanning lotion




The full tanning effect develops during the first 24 hours after the treatment.

• Allow the spray tanning lotion to dry for 15-20 minutes before getting dressed again.



You can also use the air from the air hose to accelerate the drying process of the spray tanning lotion. To do this, simply remove the spray gun from the air hose and switch the system on.

• Do not shower or bathe in the first 6-8 hours after application, as this will affect the tanning result.

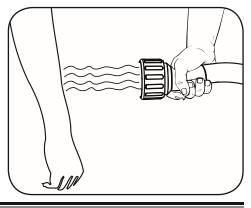

GB


• Prolonged hot baths and showers should be avoided, in order to maintain the tanning effect for as long as possible. Daily moisturization of the skin is also recommended.


13. Taking Out of Operation and Cleaning



Clean the Spray Tanning System as required, but at the end of the working day/application or before changing to a different colour as a minimum. Dried spray tanning lotion makes cleaning more difficult and can even damage the system.

- 1) Turn the system off.
- 2) Unscrew the container.
- 3) Pour any remaining spray tanning lotion back into the original packaging.
- 4) Preclean the container and feed tube with a brush.
- 5) Clean the ventilating bore (Fig. 8, 1).
- 6) Pour water into the container. Screw the container back on.
 Do not use flammable materials for cleaning purposes.
- 7) Turn on the system and spray the water into a container or a cloth.
- 8) Repeat the above procedure until the water emerging from the nozzle is clear.
- 9) Turn off the system.
- 10) Screw off the container and empty it. Pull out the feed tub with container seal.
- **CAUTION!** Never clean seals, nozzles or air holes of the spray gun with metal objects.
- 11) Unscrew the union nut and remove the air cap and nozzle (Fig. 9). Clean the air cap, nozzle seal and nozzle with a brush and water.
 - and water.
- 12) Clean the outside of the spray gun and container with a cloth soaked in water.
- 13) Assemble the parts again (see "Assembly").

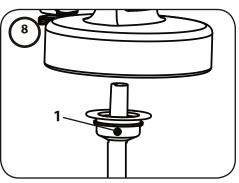

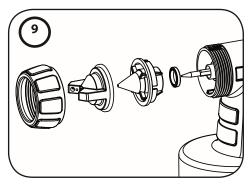


Assembly


(GB)


- 1) Slide the nozzle seal (Fig. 10, 1) with the groove (slot) facing forwards into the nozzle (2).
- 2) Put the nozzle onto the gun body and find the correct position by turning it.
- 3) Put the air cap onto the nozzle and tighten it using the union nut.
- 4) Place the container seal (Fig. 11, 1) from below on the feed tube (2) and slide it over the collar, while turning the container seal slightly.
- 5) Insert the feed tube with container seal in the gun body.

14. Maintenance

- **Important!** Never operate the system without the air filter; dirt could be sucked in and interfere with the function of the system.
- Change the air filter if it is soiled (check daily in the case of intensive/ commercial use).
- 2) For this pull the air filter out of the unit (Fig. 12).
- 3) Insert a new air filter.

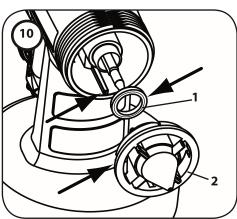


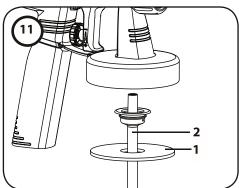

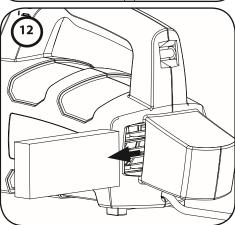

15. Spare parts

Spare Parts List (Fig. 13)		
Pos.	Designation	Order No.
1	Spray gun complete with 150 ml container	2334 595
2	Union nut	2319 304
3	Air cap	2334 407
4	Nozzle	2334 409
5	Nozzle seal	0417 706
6	Feed tube	2334 876
7	Container seal	2323 039
8	Container with cover 150 ml	2334 878
9	Air hose	2319 307
10	Air filter	2308 502
	Lubricant	2315 539

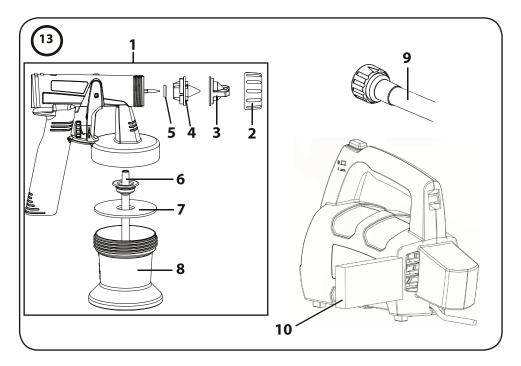

16. Correction of Malfunctions

Malfunction	Cause	Remedy
No spray tanning lotion comes out of the nozzle	 Nozzle clogged Material volume setting turned too far to the left (-) No pressure build-up in container Container empty Feed tube loose Feed tube clogged 	→ Clean → Turn to the right (+) → Tighten container → Refill → Insert → Clean
Spray tanning lotion drips out of the nozzle	 Spray tanning lotion has accumulated on the air cap, nozzle or needle Nozzle loose Nozzle seal worn Nozzle worn 	→ Clean → Union nut tighten → Change → Change
Atomisation too coarse	 Material volume adjusting screw turned too far to the right (+) Nozzle contaminated Too little pressure build-up in container Air filter heavily soiled 	 → Turn material volume adjusting screw to the left (-) → Clean → Tighten container → Change
Uneven spray pattern	 Spray tanning lotion in the container is running out Nozzle seal worn Air filter heavily soiled 	→ Refill → Replace → Replace
Excessive overspray	 Distance too large Material volume adjusting screw turned too far to the right (+) 	 → Reduce distance → Turn material volume adjusting screw to the left (-)
Spray tanning lotion runs down body	 Too much spray tanning lotion applied Spray paths overlap too much Spraying distance too small or spray movement too slow 	→ Carefully dab affected points with a towel, reduce flow setting if required and lightly overspray again
The tan is patchy or blotchy	 Skin was not correctly prepared Spray movement not even enough 	→ Correct by lightly overspraying

GB

Malfunction	Cause	Remedy
Customer's skin appears orange	 Too much spray tanning lotion applied Skin was not correctly prepared 	→ Remove spray tanning lotion from the skin. Prepare skin correctly for new application, reduce flow setting
	 High sensitivity to active ingredient DHA 	→ Use another shade with lower concentration of DHA

Technical Data		
Power source:	230 V ~, 50 Hz	
Power consumption:	280 W	
Double insulation:		
Sound pressure level*	81 dB (A); Uncertainty K= 4 dB	
Sound pressure output*	94 dB (A); Uncertainty K= 4 dB	
Oscillation level	$< 2.5 \text{ m/s}^2$; Uncertainty K = 1.5 m/s ²	
Air hose length:	2.0 m	
Container capacity:	150 ml	
Weight:	approx. 1.6 kg	

* Measured in accordance with EN 50144-2-7:2000

Environmental protection



The appliance and accessories should be recycled in an environmentally friendly way. Do not dispose of the appliance with household waste. Support environmental protection by taking the appliance to a local collection point or obtain information from a specialist retailer.

Important Note regarding Product Liability!

Due to an EC ordinance in effect since 01.01.1990, the manufacturer is liable for his product only if all parts originate from or were approved by the manufacturer and the devices are assembled and operated correctly. The use of other accessories and spare parts can partially or completely invalidate the liability.

Guarantee

The guarantee runs for two years, counting from the date of sale (sales slip) in case of private use, and 1year in case of commercial use. It covers and is restricted to freeof-charge rectification of faults which are demonstrably attributable to the use of faulty materials in manufacture, or assembly errors; or free-of-charge replacement of the defective parts. The guarantee does not cover incorrect use or commissioning or fitting or repair work which is not stated in our operating instructions. Wearing parts are also excluded from the guarantee. This includes in particular cables, valves, nozzles, fluid-carrying housing components, filters, hoses, seals, etc.. We expressly reserve the right to fulfil the guarantee. The guarantee expires if the tool is opened up by persons other than WAGNER service personnel. Transport damage, maintenance work and loss and damage due to faulty maintenance work are not covered by the guarantee. Under any guarantee claim, there must be proof of purchase of the tool through submission of the original receipt. Wherever legally possible, we exclude all liability for injury, damage or consequential loss, especially if the tool has been used for a purpose other than that stated in the operating instructions, commissioned or repaired other than in accordance with our operating instructions or if repairs are performed by someone who is unqualified. We reserve the right to perform any repairs in excess of those stated in our operating instructions. In case of guarantee or repair, please refer to your point of sale.

Warning

If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.

Warning: Do not connect the blue or brown wire to the earth terminal of the plug! The wires in this mains lead are coloured in accordance with the following code:

blue = neutral **brown** = live

As the colours of the wires in the mains lead of this

appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

◆Should the moulded plug have to be replaced, never re-use the defective plug or attempt to plug it into a different 13 A socket. This could result in an electric shock.

 ShoulditbenecessarytoexchangethefuseintheplugonlyusefusesapprovedbyASTAinaccordancewith BS 1362. 5 Amp fuses may be used.

• To ensure that the fuse and fuse carrier are correctly mounted please observe the provided markings or colour coding in the plug.

◆After changing the fuse, always make sure that the fuse carrier is correctly inserted. Without the fuse carrier, it is not permissible to use the plug.

The correct fuses and fuse carriers are available from your local electrical supplies stockist.



(GB)

GB

Elite Compact Sprayer

Inhalt

Originalbetriebsanleitung

Herzlichen Glückwunsch zum Erwerb Ihres Aura Spray Tanning Systems.

Sie haben ein Markenprodukt erworben, das für eine reibungslose Funktion einer sorgfältigen Reinigung und Pflege bedarf. **Bitte lesen Sie vor Inbetriebnahme des Spray Tanning Systems die Bedienungsanleitung genau durch und beachten Sie die Sicherheitshinweise. Bewahren Sie die Bedienungsanleitung sorgfältig auf.**

1. Erklärung der verwendeten Symbole



Dieses Symbol weist auf eine potenzielle Gefahr für Sie bzw. das System hin. Unter diesem Symbol finden Sie wichtige Informationen, wie Sie Verletzungen und Schäden am System vermeiden.

Kennzeichnet Anwendungstipps und andere besonders nützliche Hinweise.

2. Anwendungsbereich

Das Aura Spray Tanning System wurde speziell zum Auftrag von flüssiger Spray Tanning Lotion (Bräunungsmittel) entwickelt. Eine andere Anwendung, als in dieser Bedienungsanleitung beschrieben, ist nicht zulässig.

3. Allgemeine Sicherheitshinweise

- Die Sprühpistolen dürfen nicht zum Sprühen brennbarer Stoffe verwendet werden.
- Die Sprühpistolen dürfen nicht mit brennbaren Lösungsmitteln gereinigt werden.
- Beim Sprühen dürfen in der Umgebung keine Zündquellen vorhanden sein, wie z. B. offenes Feuer, Rauchen von Zigaretten, Funken, glühende Drähte und heiße Oberflächen.
- Achten Sie auf die Gefahren die von dem versprühten Stoff ausgehen können und beachten Sie ebenfalls die Aufschriften auf den Behältern oder die vom Hersteller des Stoffes angegebenen Hinweise.
- Versprühen Sie keinerlei Stoffe von denen Sie die Gefährlichkeit nicht kennen.
- Achtung! Spray Tanning Lotionen bieten im Allgemeinen keinen Schutz gegen Sonnenbrand. Der wiederholte ungeschützte Kontakt mit der Sonne erhöht das Risiko von Hautkrebs, Hautalterung und anderen schädlichen Effekten.
- Dieses System ist nicht dafür bestimmt, durch Personen (einschließlich Kinder) mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder mangels Erfahrung und/oder mangels Wissen benutzt zu werden, es sei denn, sie werden durch eine für Ihre Sicherheit zuständige Person beaufsichtigt oder erhielten von ihr Anweisungen, wie das System zu benutzen ist.
- Lassen Sie Kinder nicht mit dem Spray Tanning System spielen.



- Richten Sie die Sprühpistole niemals auf Tiere.
- Sorgen Sie für eine gute Belüftung des Sprühbereiches.
- Spray Tanning Lotion nicht einatmen. Das Tragen von Nasenstöpsel wird empfohlen.
- Nicht in die Augen sprühen. Das Tragen einer Schutzbrille wird empfohlen.
- Falls die Spray Tanning Lotion in die Augen gesprüht wird, waschen Sie diese unverzüglich mit Wasser aus und wenden Sie sich an einen Arzt.
- Sprühen Sie die Spray Tanning Lotion nicht in offene Wunden oder auf geschädigte Haut.
- Decken Sie beim Besprühen des Gesichts die Haare ab. Insbesondere gebleichtes Haar könnte durch die Spray Tanning Lotion sonst fleckig werden.
- Das Spray Tanning System niemals unter Wasser tauchen.



Warnung: Verwenden Sie Ihr Spray Tanning System niemals in der Nähe von Badewannen, Duschwannen oder anderen Gefäßen, die Wasser enthalten.

- Ziehen Sie nach der Benutzung immer den Netzstecker, wenn sich das Spray Tanning System in der Nähe eines Waschbeckens oder einer anderen Wasserquelle befindet. Wasser stellt auch bei einem ausgeschaltetem System immer eine Gefahr dar.
- Als zusätzlicher Schutz wird die Installation einer Fehlerstromschutzeinrichtung (FI/RCD) mit einem Bemessungsauslösestrom von nicht mehr als 30 mA im Badezimmerstromkreis empfohlen. Fragen Sie Ihren Installateur um Rat.
- Ziehen Sie immer den Netzstecker bevor Sie den Sprühbehälter nachfüllen oder das System reinigen.
- Benutzen Sie nur original Ersatzteile des Herstellers. Mit original Aura Zubehör und Ersatzteilen haben Sie die Gewähr, dass alle Sicherheitsvorschriften erfüllt sind.
- Öffnen Sie das Spray Tanning System nie selbst um elektrische Reparaturen auszuführen!
- Sprühpistole nicht auf die Seite legen, da Material auslaufen könnte.

4. Verarbeitbare Materialien

Flüssige Spray Tanning Lotion (Bräunungsmittel)



Verwenden Sie Spray Tanning Lotion nur bis zum Ablauf des auf der Verpackung angegebenen Haltbarkeitsdatums.


bedeutet zum Beispiel, dass das Mittel nach dem Öffnen noch 12 Monate verwendet werden kann.

5. Nichtverarbeitbare Materialien

Alle nicht für die Hautbehandlung zugelassenen Materialien



Beschreibung (Abb. 1)		
1) Luftkappe /Düse	2) Überwurfmutter	
3) Sprühpistole	4) Abzugsbügel	
5) Materialmengenregulierung	6) Luftschlauch	
7) EIN / AUS Schalter	8) Luftfilter	
9) Pistolenhalter	10) Behälter	

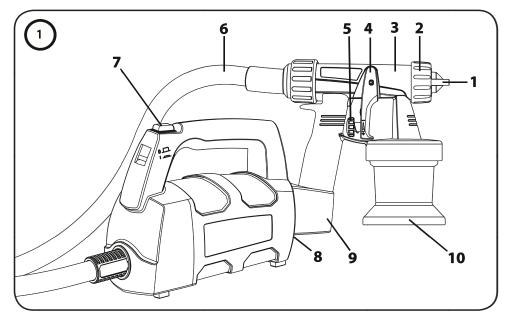

6. Vorbereitungen des Sprühbereiches

- Entfernen Sie möglichst alle Gegenstände aus dem Sprühbereich, um Verschmutzungen durch Sprühnebel (Overspray) zu vermeiden.
- Arbeiten Sie in einem Raum mit einer glatten, leicht zu reinigenden Oberfläche. Die Verwendung einer Sprühkabine/Sprühzelt ist empfehlenswert.

7. Allgemeine Vorbereitungen vor dem Auftrag der Spray Tanning Lotion



Testen Sie die Verträglichkeit der Spray Tanning Lotion auf einer kleinen Hautpartie ca. 24 Stunden vor dem eigentlichen Auftragen der Spray Tanning Lotion. Brechen Sie die Anwendung ab, falls Hautirritationen auftreten.

• Ca. 24-48 Stunden vor der Behandlung Körperbehaarung durch Rasieren oder Entwachsen entfernen.

- Kein Parfüm, Deo oder Make-up auftragen. Diese Produkte können das Bräunungsergebnis negativ beeinflussen.
- Am Tag der Behandlung dunkle, lockersitzende Kleidung tragen, um Verfärbungen der Kleidung durch die Spray Tanning Lotion zu vermeiden.
- Allen Schmuck ablegen, um Verfärbungen durch die Spray Tanning Lotion zu vermeiden.

8. Vorbehandlung der Haut




Die richtige Vorbehandlung der Haut ist der Schlüssel für ein gleichmäßiges und langanhaltendes Bräunungsergebnis. Beachten Sie daher die folgenden Hinweise


- Entfernen Sie vor dem Auftragen der Spray Tanning Lotion unbedingt alle abgestorbenen Hautzellen durch Peeling.
- Achten Sie darauf, dass der Feuchtigkeitsgehalt der Haut möglichst gleichmäßig ist. Verwenden Sie für trockene Stellen (z.B. Ellbogen und Knie) einen Feuchtigkeitsspender. Lassen Sie den Feuchtigkeitsspender vor der Behandlung zuerst trocknen.
- Tragen Sie zum Schutz etwas Balsam auf Lippen, Nägel, Handinnenflächen, Augenbrauen und den Haaransatz auf.

9. Inbetriebnahme

Vor Anschluss an das Stromnetz darauf achten, dass die Netzspannung mit der Angabe auf dem Leistungsschild übereinstimmt.

- 1. Behälter von der Sprühpistole abschrauben.
- 2. Spray Tanning Lotion entsprechend den Herstellerangaben vorbereiten und in den Behälter einfüllen.
- 3. Behälter fest an die Sprühpistole anschrauben.
- 4. Zum Montieren des Luftschlauches, den Pfeil auf dem Schlauchgewinde ausrichten (Abb. 2, a). Schlauch und Pistole verbinden und gut festdrehen.
- 5. Das andere Schlauchende in das Gerät stecken. (Abb. 2, b)
- 6. Gerät nur auf ebener und sauberer Fläche abstellen. Gerät kann sonst Staub usw. ansaugen.
- 7. EIN / AUS Schalter am Gerät betätigen. (Abb. 3).

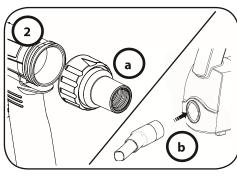

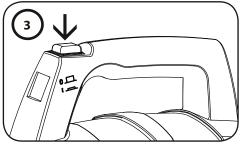

10. Bedienung des Systems

Die Handhabung des Systems, einschließlich Vorbereitung von Arbeitsplatz und Spray Tanning Lotion sowie das Sprühergebnis, liegen in der alleinigen Verantwortung des Anwenders. Wagner schließt jegliche Haftung für Schäden aus, die durch Sprühnebel, Anwendungsfehler, Nachbesserungen oder Nichtbeachtung der Anweisungen in dieser Betriebsanleitung entstehen.

• Drehen Sie den Materialregler (Abb. 4, 1), um die gewünschte Fördermenge einzustellen.


weniger Materialmenge (-):


- → gegen den Uhrzeigersinn drehen mehr Materialmenge (+):
- → im Uhrzeigersinn drehen
- Drehen Sie die Luftkappe (Abb. 5, 1) bei leicht gelöster Überwurfmutter (2), um die Form des Sprühstrahls einzustellen:


Abb. 6a Senkrechter Flachstrahl : Für Sprühbewegungen von links nach rechts

Abb. 6b Waagrechter Flachstrahl : Für Sprühbewegungen von oben nach unten

• Ziehen Sie den Abzugsbügel, um die Spray Tanning Lotion zu versprühen.

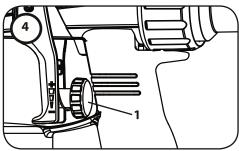

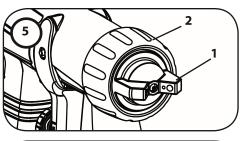

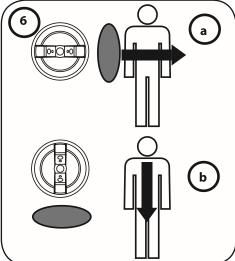



11. Tipps zur Benutzung des Spray Tanning Systems



 \bigcirc


Überprüfen Sie vor Anwendungsbeginn, dass alle notwendigen Schutzmaßnahmen (Nasenstöpsel, Schutzbrille, Abdeckung der Haare) getroffen sind.

 (\mathbf{i})

Üben Sie zuerst auf einem größeren Stück Karton oder Papier, um die für die verwendete Spray Tanning Lotion optimalen Einstellungen zu finden.

- Beginnen und beenden Sie die Sprühbewegung außerhalb des Körpers.
- Vermeiden Sie Unterbrechungen während der Sprühbewegung.
- Die Sprühbewegung sollte nicht aus dem Handgelenk, sondernaus dem Armkommen. Somit bleibt während der Spühbewegung immer der gleiche Abstand zwischen Sprühpistole und Körper gewährleistet. Wählen Sie einen Abstand von 20 - 30 cm je nach gewünschter Sprühstrahlbreite.
- Abb. 7 a: RICHTIG gleichmäßiger Abstand
- Abb. 7 b: FALSCH ungleichmäßiger Abstand führt zu ungleichmäßiger Bräunung

 Bewegen Sie die Sprühpistole mit einer gleichmäßigen Geschwindigkeit.

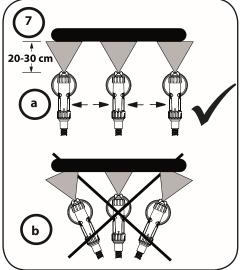

12. Nach dem Auftragen der Spray Tanning Lotion




Der vollständige Bräunungseffekt entwickelt sich erst innerhalb der ersten 24 Stunden nach der Behandlung.

• Lassen Sie die Spray Tanning Lotion erst 15-20 Minuten trocknen bevor Sie sich wieder anziehen.



Sie können auch die Luft aus dem Luftschlauch verwenden, um den Trocknungsprozess der Spray Tanning Lotion zu beschleunigen. Entfernen Sie hierzu einfach die Pistole vom Luftschlauch und schalten Sie das System ein.

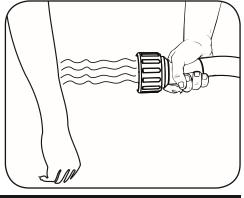

- Duschen oder Baden Sie innerhalb der ersten 6-8 Stunden nach dem Auftragen nicht, um das Bräunungsergebnis nicht zu beeinträchtigen.
- Um den Bräunungseffekt möglichst lange zu erhalten, sollte längeres heißes Baden und Duschen vermieden werden. Außerdem empfiehlt es sich die Haut täglich einzucremen.


13. Außerbetriebnahme und Reinigung


Reinigen Sie das Spray Tanning System nach Bedarf, mindestens jedoch am Ende des Arbeitstages/der Anwendung oder dem Wechsel des Farbtons. Angetrocknete Spray Tanning Lotion erschwert die Reinigung und kann das System sogar beschädigen.

- 1) Spray Tanning System ausschalten.
- 2) Behälter abschrauben.

i

- 3) Restliche Spray Tanning Lotion in die Originalverpackung umfüllen.
- 4) Behälter und Steigrohr mit Pinsel vorreinigen.
- 5) Entlüftungsbohrung reinigen (Abb. 8, 1)
- 6) Wasser in den Behälter einfüllen.
 Behälter anschrauben.
 Verwenden Sie zur Reinigung keine brennbaren Materialien.
- Spray Tanning System einschalten und Wasser in einen Behälter oder ein Tuch sprühen.
- 8) Den obigen Vorgang wiederholen, bis an der Düse klares Wasser austritt.
- 9) Spray Tanning System ausschalten.
- 10) Behälter abschrauben und entleeren. Steigrohr mit Behälterdichtung herausziehen
- ACHTUNG! Dichtungen, und Düsenoder Luftbohrungen der Sprühpistole niemals mit spitzen metallischen Gegenständen reinigen.

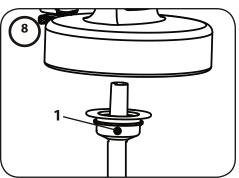

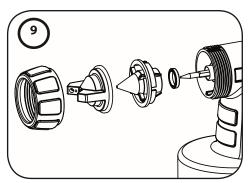

- 11) Überwurfmutter abschrauben, Luftkappe und Düse abnehmen. (Abb. 9) Luftkappe, Düsendichtung und Düse mit Pinsel und Wasser reinigen.
- 12) Spritzpistole und Behälter außen mit einem in Wasser getränktem Tuch reinigen.
- 13) Teile wieder zusammenbauen (siehe "Zusammenbau").




Elite Compact Sprayer


Zusammenbau


- 1) Düsendichtung (Abb. 10, 1) mit Schlitz voraus in die Düse (2) schieben.
- 2) Düse auf den Pistolenkörper stecken und durch Drehen die richtige Position finden.
- 3) Luftkappe auf Düse stecken und mit Überwurfmutter festziehen.
- 4) Behälterdichtung (Abb. 11, 1) von unten auf das Steigrohr (2) stecken und bis über den Bund schieben, dabei Behälterdichtung leicht drehen.
- 5) Steigrohr mit Behälterdichtung in Pistolenkörper stecken.

14. Wartung

- Wichtig! System niemals ohne Luftfilter betreiben, es könnte Schmutz angesaugt werden und den Betrieb des Systemes beeinflussen.
- Je nach Verschmutzung den Luftfilter auswechseln (bei intensiver/ kommerzieller Nutzung täglich kontrollieren).
- 2) Hierfür Luftfilter aus dem Gerät ziehen (Abb. 12).
- 3) Neuen Luftfilter wieder einsetzen.

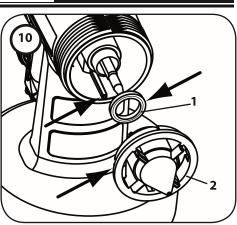


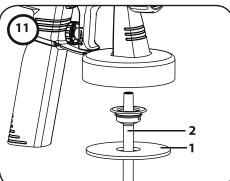

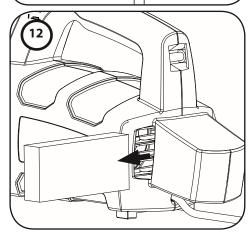

15. Ersatzteile

Ersatzteilliste (Abb. 13)		
Pos.	Benennung	Best. Nr.
1	Sprühpistole kpl. mit Behälter 150 ml	2334 595
2	Überwurfmutter	2319 304
3	Luftkappe	2334 407
4	Düse	2334 409
5	Düsendichtung	0417 706
6	Steigrohr	2334 876
7	Behälterdichtung	2323 039
8	Behälter (150 ml) mit Deckel	2334 878
9	Luftschlauch	2319 307
10	Luftfilter	2308 502
	Schmiermittel	2315 539

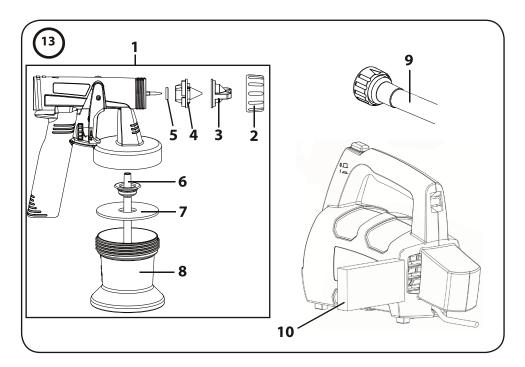

16. Behebung von Störungen

Störung	Ursache	Abhilfe
Es kommt keine	• Düse verstopft	→ Reinigen
Spray Tanning	 Materialmengen-Einstellung 	→ Nach rechts drehen (+)
Lotion aus der Düse	zu weit nach links gedreht (-)	
	• Kein Druckaufbau im Behälter	→ Behälter anziehen
	Behälter leer	→ Nachfüllen
	Steigrohr lose	→ Einstecken
	Steigrohr verstopft	→ Reinigen
Die Spray Tanning	• Es hat sich Spray Tanning	→ Reinigen
Lotion tropft an der	Lotion an Luftkappe, Düse	
Düse nach	oder Nadel angesammelt	
	• Düse lose	→ Überwurfmutter anziehen
	• Düsendichtung verschlissen	→ Auswechseln
	Düse verschlissen	→ Auswechseln
Zu grobe	• Materialmengen-	→ Materialmengen-
Zerstäubung	Einstellschraube zu weit nach	Einstellschraube nach links
	rechts gedreht (+)	drehen (-)
	• Düse verunreinigt	→ Reinigen → Behälter anziehen
	 Zu geringer Druckaufbau im Behälter 	\rightarrow Benalter anzlenen
	• Luftfilter stark verschmutzt	→ Auswechseln
Sprühstrahl	Spray Tanning Lotion im	→ Nachfüllen
ungleichmäßig	Behälter geht zu Ende	
ungleichnabig	• Düsendichtung verschlissen	→ Auswechseln
	Luftfilter stark verschmutzt	\rightarrow Auswechseln
Sehr viel	Abstand zu groß	\rightarrow Abstand verringern
Sprühnebel	Materialmengen-	\rightarrow Materialmengeneinstell-
(Overspray)	Einstellschraube zu weit nach	schraube nach links
(Overspray)	rechts gedreht (+)	drehen (-)
Spray Tanning	• Zuviel Spray Tanning Lotion	→ Betroffene Stellen
Lotion verläuft am	aufgetragen	vorsichtig mit einem
Körper	• Sprühbahnen überlappen sich	Handtuch abtupfen,
	zu stark	Mengeneinstellung
	• Sprühabstand zu gering oder	bei Bedarf reduzieren
	Sprühbewegung zu langsam	und noch einmal leicht
		übersprühen
Die Bräune ist	• Haut war nicht richtig	\rightarrow Durch leichtes
lückenhaft oder	vorbehandelt	Übersprühen korrigieren
fleckig	Sprühbewegung nicht	
	gleichmäßig genug	



Störung	Ursache	Abhilfe
Haut des Kunden wirkt orange	 Zuviel Spray Tanning Lotion aufgetragen Haut war nicht richtig vorbehandelt 	→ Spray Tanning Lotion von der Haut entfernen. Für den erneuten Auftrag die Haut richtig vorbehandeln Mengeneinstellung reduzieren
	• Hohe Empfindlichkeit auf den Wirkstoff DHA	→ Einen anderen Farbton mit geringer DHA Konzentration verwenden

Technische Daten		
Spannung:	230 V ~, 50 Hz	
Leistungsaufnahme:	280 W	
Doppelisolation:		
Schalldruckpegel*	81 dB (A) Unsicherheit K= 4 dB	
Schallleistungspegel*	94 dB (A); Unsicherheit K = 4 dB	
Schwingungspegel	$< 2,5 \text{ m/s}^2$; Unsicherheit K = 1,5 m/s ²	
Luftschlauchlänge:	2,0 m	
Behälterinhalt:	150 ml	
Gewicht:	ca. 1,6 kg	

* Gemessen nach EN 50144-2-7:2000

Umweltschutz



Das Gerät samt Zubehör sollte einer umweltgerechten Wiederverwertung zugeführt werden. Geben Sie das Gerät bei der Entsorgung nicht in den Hausmüll. Unterstützen Sie den Umweltschutz und bringen Sie deshalb Ihr Gerät zu einer örtlichen Entsorgungsstelle oder erkundigen Sie sich im Fachhandel.

Wichtiger Hinweis zur Produkthaftung!

Aufgrund einer seit 01.01.1990 gültigen EU-Verordnung haftet der Hersteller nur dann für sein Produkt, wenn alle Teile vom Hersteller stammen oder von diesem freigegeben wurden, bzw. die Geräte sachgemäß montiert und betrieben werden. Bei Verwendung von fremden Zubehör und Ersatzteilen kann die Haftung ganz oder teilweise entfallen.