

Natural Gas Conversion Instructions for Model PIT2141AS Natural Gas Conversion Kit Sold Separately

Use Even Embers Natural Gas Conversion Kit

PROFESSIONAL INSTALLATION MANUAL

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

▲ WARNING

HAZARDOUS EXPLOSION MAY RESULT IF THESE WARNINGS AND INSTRUCTIONS ARE IGNORED. READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL TO AVOID PERSONAL INJURY, INCLUDING DEATH OR PROPERTY DAMAGE.

ASSEMBLY AND OPERATING INSTRUCTIONS

SAVE THIS MANUAL FOR FUTURE REFERENCE





IMPORTANT SAFETY WARNINGS

WE WANT YOU TO USE YOUR CONVERSION KIT FOR YOUR FIRE PIT AS SAFELY AS POSSIBLE. THE PURPOSE OF THIS SAFETY ALERT SYMBOL A IS TO ATTRACT THE ATTENTION TO POSSIBLE HAZARDS AS THE FIRE PIT IS CONVERTED AND USED AS A NATURAL GAS FIRE PIT. WHEN YOU SEE THE SAFETY ALERT SYMBOL A PAY CLOSE ATTENTION TO THE INFORMATION WHICH FOLLOWS!

A READ ALL SAFETY WARNINGS AND INSTRUCTIONS CAREFULLY BEFORE CONVERTING AND OPERATING YOUR FIR PIT.

ADANGER

FIRE OR EXPLOSION HAZARD

If you smell gas:

- Shut off gas to appliance
- Extinguish any open flame.
- If odor continues, leave the area immediately.
- After leaving the area, call your gas supplier or fire department. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

AWARNING

- 1. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.
- 2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

Failure to follow the instructions as written, or installation by other than a trained professional, will void all manufacturer warranties.

Installer Company or Service Name:	
Technician Name:	Installation Date:

AWARNING

This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion or production of carbon monoxide may result causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.

IMPORTANT: FILL (AUT PRO	DUICT RECO	ORD INFOR	MATION REI	\mathbf{O} W
IIVIF ON LANT. LIEE V	JUI FIIL	JUUGI NEGO	JIID IIII OII	IVIA LICIY DEL	

Model Number:	_
Serial Number:	Date Purchased:

TABLE OF CONTENTS

General Warnings	2-3
Assembly Instructions	4-6
Connecting to Natural Gas Source	7-8
eak Testing	8-9
Pre-start Check List	10
ighting Instructions	10
Varranty Information	ver

DANGER: Indicates an imminently hazardous situation which, if not avoided, will result

in death or serious injury.

WARNING: Be alert to the possibility of serious bodily injury if the instructions are not

followed. Be sure to read and carefully follow all of the messages.

CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result

in minor or moderate injury.

CALIFORNIA PROPOSITION 65 WARNING

WARNING: This product can expose you to chemicals, including carbon monoxide, which are known to the State of California to cause birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov

WARNING: CONTAINS LEAD. MAY BE HARMFUL IF EATEN OR CHEWED. COMPLIES WITH FEDERAL STANDARDS. KEEP OUT OF REACH OF CHILDREN.

AWARNING

- FOR OUTDOOR USE ONLY. DO NOT operate indoors or in an enclosed area such as a garage, shed or breezeway.
- Use your fire pit OUTDOORS in a well ventilated space away from dwellings or other buildings to prevent dangers associated with gas accumulation and toxic vapors. We recommend your fire pit be situated at least 10 feet (3.1 m) from buildings.
- Maintain a minimum clearance of 36 inches (91 cm) between all sides of fire pit and walls or other combustible material. DO NOT use fire pit under overhead unprotected combustible construction.
- DO NOT use or install this fire pit in or on a recreational vehicle and/or boat.

INSTALLATION INFORMATION:

The installation of this appliance must be in accordance with:

All applicable local codes, or in the absence of local codes, either:

- National Fuel Gas Code ANSI Z223.1 NFPA 54
- Natural Gas and Propane Installation Code: CAN/CGA B149.1
- Natural Gas Installation Code: CAN/CGA B149.1 (Canada)

This kit converts your fire pit for natural gas use at 7 inch water column supply pressure. To check your pressure contact your local natural gas company. If the supply pressure is different than 7 inch, contact a professional service technician for assistance. **Not for use with LP gas.**

$oldsymbol{\Lambda}$ Danger

Connection should be made by a professional service technician. Supply the technician with a copy of these instructions. Incorrect connection can result in a gas leak with possibility of fire.

GENERAL WARNINGS

AWARNING

- Never use liquid propane gas in a unit designed for natural gas.
- Never use charcoal or wood briquette in a gas fire pit.
- Leak test all connections before first use, even if fire pit was purchased fully assembled.
- Never check for leaks using a match or open flame.

▲CAUTION: Strong odors, colds, sinus congestion, etc. may prevent the detection of natural gas.

Use caution and common sense when testing for leaks.

- Always keep your gas fire pit free and clear of gasoline, lighter fluid, paint thinner, or other flammable vapors and liquids or combustible materials.
- Always check the fire pit prior to each use as indicated in the "Pre-Start Check List" section of this
 manual.
- DO NOT obstruct the flow of combustion or ventilation air.
- Keep children and pets away from hot fire pit. DO NOT allow children to use or play near this fire pit.
- DO NOT leave the fire pit unattended while in use.
- DO NOT allow the gas hose to come in contact with hot surfaces.
- Keep any electrical supply cords away from water or heated surfaces.
- Keep a fire extinguisher on hand acceptable for use with gas products. Refer to your local authority to determine proper size and type.
- For household use only. DO NOT use this fire pit for anything other than its intended purpose.
- DO NOT use while under the influence of drugs or alcohol.
- Fire pit is hot when in use. To avoid burns:
 - DO NOT attempt to move the fire pit.
 - Wear protective gloves or oven mitts.
 - DO NOT touch any hot fire pit surfaces.
- The outdoor cooking gas appliance and it's individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressure in excess of 0.5 psi (3.5kPa)
- The outdoor cooking gas appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa)
- This fire pit is designed for an inlet pressure of 7" WC. Check your pressure to see if it is between 3.5"
 WC and 10.5" WC.

▲ USE CAUTION AND COMMON SENSE WHEN OPERATING YOUR GAS FIRE PIT.

FAILURE TO ADHERE TO THE SAFETY WARNINGS AND GUIDELINES IN THIS MANUAL COULD RESULT IN SEVERE BODILY INJURY OR PROPERTY DAMAGE.


ASSEMBLY INSTRUCTIONS

YOU MUST BE A PROFESSIONAL SERVICE TECHNICIAN TO CONVERT THIS FIRE PIT.
READ ALL SAFETY WARNINGS & ASSEMBLY INSTRUCTIONS CAREFULLY
BEFORE ASSEMBLING OR OPERATING THE CONVERTED FIRE PIT.

The following tools are required to assemble the Conversion Kit:

- Phillips and Flathead Screwdrivers
- Adjustable Wrench
- 3/4 Wrench

PARTS CONTENTS

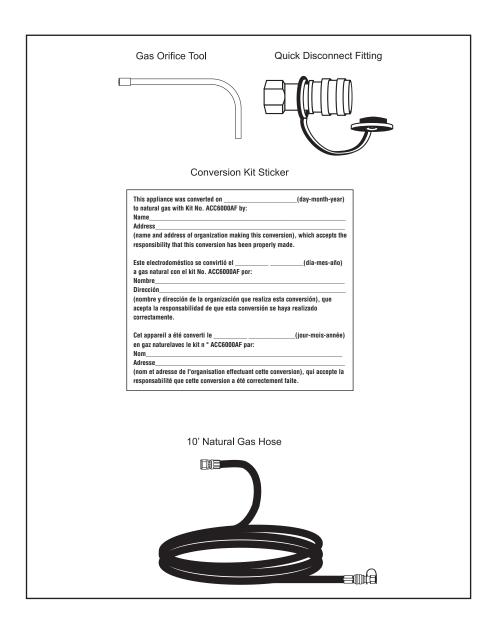

Inspect contents of the box to ensure all parts are included and undamaged.

Orifice size	LP	NG	
Office size	Ф2.55 mm	Ф4.20 mm	
Input rating	62,000 BTU/h (18.15 kWh)	56,000 BTU/h (16.40 kWh)	

CONVERSION INSTRUCTIONS PIT2141AS


CAUTION:


Some parts may contain sharp edges. Wear protective gloves if necessary.


Note: Make sure control knob is in the OFF position, LP tank valve is closed and tank is disconnected from regulator and removed from fire pit.

Step 1

Using an adjustable wrench to hold the gas manifold connection secure, use a 3/4" wrench to loosen the hose connection nut. Replace existing LP hose/regulator assembly with natural gas 10' hose assembly. Tighten the connection carefully using two wrenches.

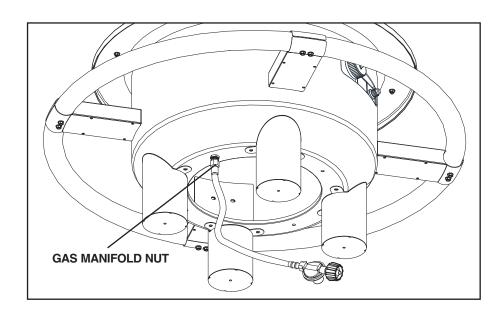


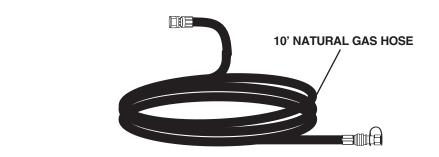

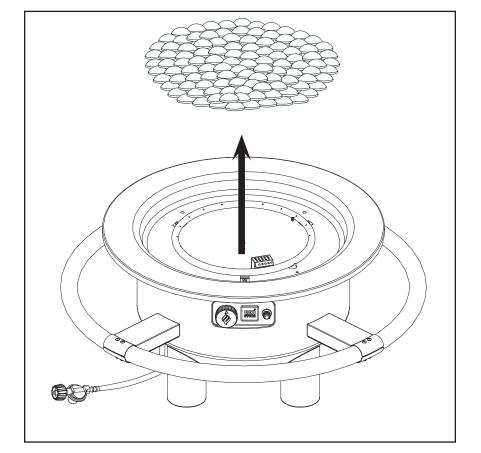


Step 2

Remove lava rocks. Set aside for later use.

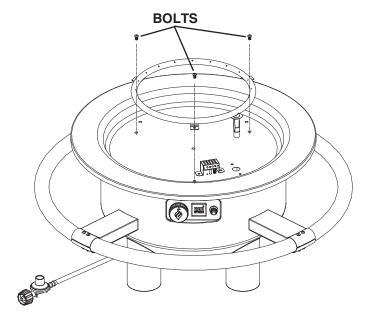

Step 3


Remove three screws and lift burner assembly up and away. Set aside for later use.

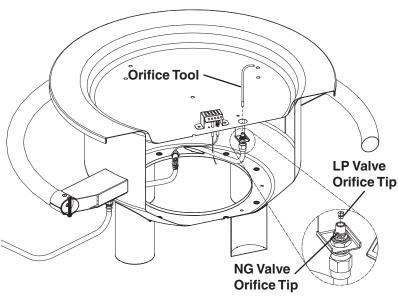

Step 4

Use the orifice tool to remove the LP gas valve orifice from burner valve through the hole in the fire pit lava rock pan.

Note: The orifice of the fire pit is a double orifice (LP gas and natural gas). You only remove the LP gas orifice tip.

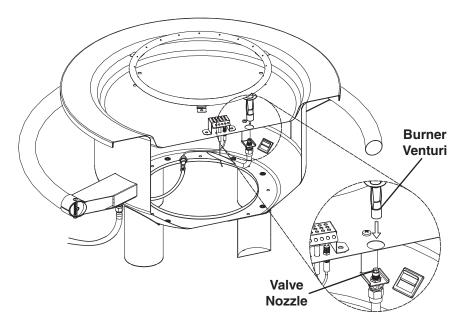


Step 5


Carefully replace the burner, making sure burner venturi slides over valve nozzle. Replace lava rocks that were set aside in previous step.

CONNECTING YOUR FIRE PIT TO THE NATURAL GAS SOURCE

- 1. Coat pipe nipple with gas resistant teflon tape or pipe dope. Tighten quick-disconnect coupling onto pipe nipple that leads to natural gas supply (Figure A).
- 2. After fire pit is completely assembled, make sure natural gas supply valve is "OFF" and then connect natural gas hose to socket. Push sleeve back on socket (Figure B) and insert plug until sleeve snaps forward, locking plug into socket. Be sure to leak test these connections prior to use.

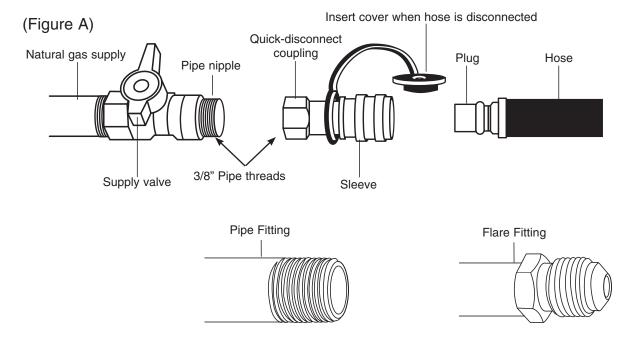

When attaching the quick disconnect to your natural gas supply line, use a pipe fitting, DO NOT use a flare fitting.

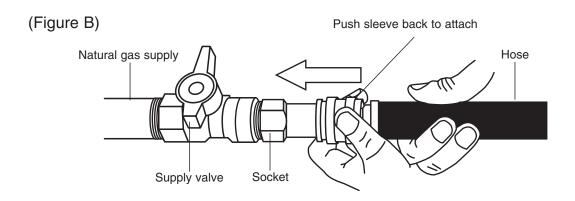

DISCONNECTING YOUR FIRE PIT FROM THE NATURAL GAS SOURCE

- 1. Turn natural gas supply valve "OFF"
- 2. To disconnect, push sleeve back and pull plug out of sleeve.

AWARNING

- Never use your fire pit without leak testing all gas connections and hoses. See the section on "Leak Testing" in this manual for proper procedures.
- Visually inspect the hose assembly prior to each use for evidence of damage, excess wear or deterioration. If found, replace the assembly before using your fire pit. Only the manufacturer's supplied replacement should be used.
- During assembly or conversion to natural gas, keep the supply hoses free of kinks and/or damage.

AWARNING

AVOID HARD METAL PIPING

DO NOT use hard metal piping of any kind to connect this converted natural gas fire pit. Use
only natural gas hose specified by the manufacturer. Using hard metal piping or convoluted
metal tubing is an unsafe practice. Movement of the fire pit can cause breakage of metal pipe.

ADANGER

LEAK TESTING:

To prevent fire or explosion hazard:

- DO NOT smoke or permit ignition sources in the area while conducting a leak test.
- Perform test OUTDOORS only in a well ventilated area.
- Never perform a leak test with a match or open flame.
- Never perform a leak test while the fire pit is in use or while fire pit is still hot.


AWARNING


WHEN TO PERFORM A LEAK TEST:

- After assembling or converting your natural gas fire pit and before lighting for the first time, even if purchased fully assembled.
- Any time the gas components are replaced.
- Any time your fire pit has been moved.
- At least once per year or if your fire pit has not been used for more than 60 days.

CHECKING FOR LEAKS:


- 1. Create a mixture of 50% water and 50% liquid dishwashing soap.
- 2. Ensure control knob is in "OFF" position.
- 3. Ensure gas hose is tightly connected to gas source.
- 4. Turn on the fuel supply at the source.
- 5. Apply the soap water mixture to the following:

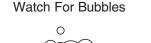


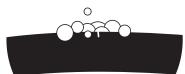

- (A) Hose connection to gas manifold.
- (B) Brass connections and quick disconnect assembly.
- © The full length of gas supply hose.
- (D) Quick disconnect coupler.
- 6. Check each place listed (A-D) for growing bubbles which indicates a leak.
- 7. Turn off gas supply at source.
- 8. Turn on control knob to release gas pressure in hose.
- 9. Turn control knobs to "OFF" position.
- 10. Tighten any leaking connections.
- 11. Repeat soapy water test until no leaks are detected.
- 12. Turn off gas supply at source until you are ready to use your fire pit.
- 13. Wash off soapy residue with cold water and towel dry.
- 14. Wait 5 minutes to allow all gas to evacuate the area before lighting fire pit.
- **A** CAUTION: DO NOT use the fire pit if leaks cannot be stopped.

Note: The leak test must be performed in an area that has adequate lighting in order to see if bubbles are developing.

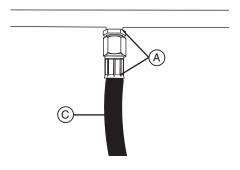

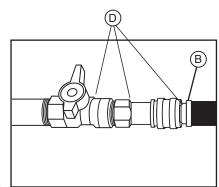

∆WARNING

Property damage, bodily harm, severe burns, and death could result from failure to follow these safety steps. These steps should be performed after the fire pit has been assembled and prior to each use. DO NOT operate this fire pit until you have read and understand ALL of the warnings and instructions in this manual.

PRE-START CHECK LIST:

- Ensure that the fire pit is properly assembled.
- Inspect the gas supply hose for burns, chaffing, kinks, and proper routing before each use. If it is
 evident there is excessive abrasion or wear, or the hose is cut, it must be replaced prior to the fire pit
 being used.
- Leak check all gas connections and hose. See section on "Leak Testing".
- Ensure that all electrical supply cords are properly grounded. Keep any electrical supply cord and the fuel supply hose away from any heated surfaces. Hose should be at least 3 inches from hot surfaces.
- Position your fire pit on a level noncombustible surface in a well ventilated location, a safe distance from combustible materials, buildings and overhangs.
- DO NOT obstruct the flow of combustion and ventilation air.

▲WARNING

Read, understand and follow all warnings and instructions contained in this manual. DO NOT skip any of the warnings and instructions contained in the preceding sections of this manual.

AWARNING

LIGHTING INSTRUCTIONS:

Follow the instructions in your fire pit owners manual or on the control panel of the fire pit.


- 1. Remove the fire pit cover before attempting to light burner so that fumes do not accumulate inside the fire pit.
- 2. Check that the burner control knob and the cylinder valve are turned to the "OFF" position.
- 3. Turn on the fuel supply by slowly rotating the cylinder valve knob counter-clockwise to full open.
- 4. DO NOT stand with head, body, or arms over the fire pit when lighting.

TURNING OFF THE FIRE PIT:

- 1. Turn off the gas at the source.
- 2. Turn control knob to the "OFF" position.

A CAUTION:

- The natural gas source should always be in the off, or closed position when the fire pit is not in use.
- Refer to your fire pit owner's manual for fire pit operating instructions.
- Apply conversion kit sticker to an area near the rating label to show the fire pit has been converted for use with natural gas.

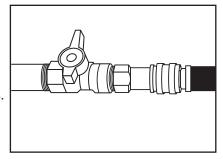

WARRANTY

Even Embers warrants to the original purchaser that the Natural Gas Conversion Kit is free from defects due to workmanship or materials for 1 Year when installed by a professional service technician.

Even Embers's obligations under this warranty are limited to the following guidelines:

- . This warranty does not cover conversion kits that have been altered/modified or damaged due to: normal wear, rust, abuse, improper maintenance and/or improper use.
- · This warranty does not cover surface scratches, rust or heat damage to the finish, which is considered normal wear.
- · Even Embers may elect to repair or replace damaged units covered by the terms of this warranty.
- · This warranty extends to the original purchaser only and is not transferable or assignable to subsequent purchasers.

Even Embers requires reasonable proof of purchase. Therefore, we strongly recommend that you retain your sales receipt or invoice. To obtain replacement parts for your Natural Gas Conversion Kit under the terms of this warranty, please call Customer Service Department at

1-866-212-3150 A receipt will be required. Even Embers will not be responsible for any conversion kits forwarded to us without prior authorization.

EXCEPT AS ABOVE STATED, EVEN EMBERS MAKES NO OTHER EXPRESS WARRANTY.

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THOSE LISTED ABOVE FROM THE DATE OF PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

ANY LIABILITY FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM THE FAILURE OF THE NATURAL GAS CONVERSION KIT TO COMPLY WITH THIS WARRANTY OR ANY IMPLIED WARRANTY IS EXCLUDED. CUSTOMER ACKNOWLEDGES THAT THE PURCHASE PRICE CHARGED IS BASED UPON THE LIMITATIONS CONTAINED IN THE WARRANTY SET OUT ABOVE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION OR EXCLUSION

MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.