

Important information – Fig. 1

- The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer shall be liable for damages incurred as a result of incorrect installation.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
- Before starting up the appliance, remove any packaging material and adhesive film from the cooking compartment and the door.
- Fitted units must be heat-resistant up to 90 °C, and adjacent unit fronts up to 70 °C.
- Do not install the appliance behind a decorative panel. There is a risk of overheating.
- Any cut-outs that need to be made in the units should be made before the appliance is installed. Remove any shavings as they may prevent the electrical components from working properly.
- Wear protective gloves so that you do not cut yourself. Parts that are accessible during installation may have sharp edges.
- For appliances that have a hinged switch panel, make sure that the switch panel does not hit adjacent kitchen units when you open it.
- The power socket for the appliance must either be located in the hatched area **A** or outside of the area where the appliance is installed.
- Secure any unsecured units to the wall using a standard bracket **B**.
- The dimensions in the figures are in mm.

△ Wearers of electronic implants!

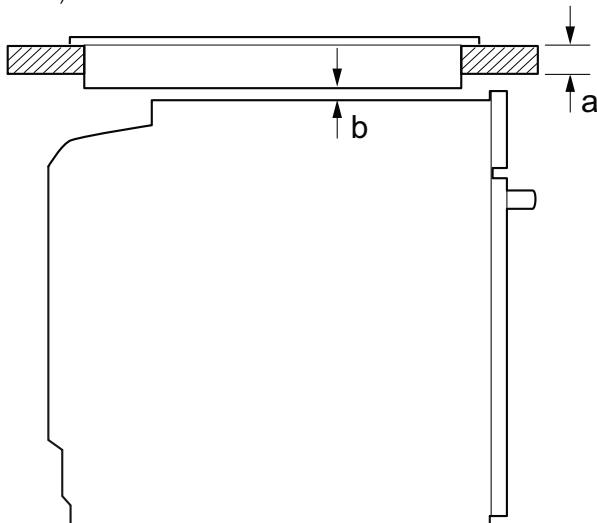
The appliance may contain permanent magnets which may affect electronic implants, e.g. heart pacemakers or insulin pumps. Therefore, during installation, wearers of electronic implants must maintain a minimum distance of 10 cm from the appliance.

Appliance under worktop – Fig. 2

To ventilate the appliance, the intermediate floor must have a ventilation cut-out.

Secure the worktop to the fitted units.

If the appliance is installed under a hob, the following minimum dimensions must be adhered to (including substructure, if applicable):



Hob type	a Fixed	a Flush with sur- rounding sur- faces	b
Induction hob	37 mm	38 mm	5 mm
Full-surface induction hob	43 mm	48 mm	5 mm
Gas hob	32 mm	42 mm	5 mm
Electric hob	22 mm	24 mm	2 mm

The minimum worktop thickness **a** results from the minimum required dimension **b**.

Observe the installation instructions for the hob.

Appliance in a tall unit - Fig. 3

To ventilate the appliance, the intermediate floors must have a ventilation cut-out.

If the tall unit has another back panel in addition to the element back panels, this must be removed.

Only fit the appliance up to a height which allows accessories to be easily removed.

Corner installation – Fig. 4

To ensure that the appliance door can be opened in a corner installation, take account of dimension **C**. Dimension **D** is dependent on the thickness of the unit front under the handle.

Connecting the appliance

The appliance corresponds to protection class 1 and must only be operated with a protective earth connection.

The fuse protection must correspond to the power rating specified on the appliance's rating plate and to local regulations.

The appliance must be disconnected from the power supply whenever installation work is being carried out.

The appliance must only be connected with the power cable provided. Connect the power cable to the back of the appliance (listen for the click).

A 3 m power cable can be obtained from the after-sales service.

The power cable must only be replaced with a cable from the original manufacturer, which can be obtained from the after-sales service.

When the appliance is installed, protection must be provided against accidental contact in the future.

Power cable with a plug with earthing contact

The appliance must only be connected to a properly installed protective contact socket.

If the plug is no longer accessible following installation, an all-pole isolating switch must be present on the installation side with a contact gap of at least 3 mm.

Power cable without a three-pin earthed plug

The appliance must only be connected by a licensed professional.

The installation must have an all-pole isolating switch with a contact gap of at least 3 mm. Identify the live and neutral conductors in the mains socket. The appliance may be damaged if it is not connected correctly.

Only connect the hob as shown in the connection diagram. See the rating plate for the voltage. Connect the wires of the mains power cable according to the colour coding: Green/yellow = PE conductor <, blue = neutral conductor, brown = live (external conductor).

Only in Sweden, Finland and Norway

The appliance can also be connected using the plug provided which has an earthing contact system. This must still be accessible after installation. If this is not the case, an all-pole isolating switch must be used on the installation side with a contact gap of at least 3 mm.

Securing the appliance – Fig. 5

1. Fully insert the appliance and centre it.

2. Screw the appliance into place.

The gap between the worktop and appliance must not be sealed by additional strips.

Thermal insulation strips must not be fitted to the side panels of the surround unit.

Removal

1. Disconnect the appliance from the power supply.

2. Undo the securing screws.

3. Lift the appliance slightly and then pull it out completely.

إرشادات مهمة - شكل 1

- ولا يمكن ضمان التشغيل الآمن لهذا الجهاز إلا في حالة تركيبه بطريقة احترافية وفقاً لدليل التركيب هنا. يعتبر الشخص القائم بالتركيب مسؤولاً عن أية أضرار قد تنتجم عن تركيب الجهاز بشكل غير سليم.
- تتحقق من عدم وجود أضرار بالجهاز بعد إخراجه من عبوة التغليف. ولا تقم بتوصيل الجهاز في حالة اكتشاف أضرار ناتجة عن عملية النقل.
- احرص قبل بدء تشغيل الجهاز على إزالة أيّة مواد تغليف أو رقائق لاصقة من حيز الطهي أو الباب.
- يجب أن تكون الوحدات المركبة مقاومة للحرارة حتى 90°C ، وواجهات الوحدات المجاورة حتى 70°C .
- لا تقم بتركيب الجهاز وراء لوحة زينة. فهناك خطر التعرض لسخونة مفرطة.
- ينبغي عمل آية قطوعات لازمة في الوحدات قبل تركيب الجهاز. تخلص من آية نشارة أو برادة موجودة، حيث أنها قد تعيق عمل الأجزاء الكهربائية بشكل صحيح.
- ارتد قفازات واقية لكي لا تجرح نفسك. الأجزاء التي يمكن إدخال اليد فيها أثناء التركيب قد تكون حادة الحواف.
- بالنسبة للأجهزة المشتملة على لوحة مفاتيح مفصلية، تأكد من عدم ارتطام لوحة المفاتيح بوحدات المطبخ المجاورة أثناء فتحها.
- يجب أن يكون المقبس الكهربائي للجهاز إما في المنطقة المظللة A أو خارج المنطقة التي يتم فيها تركيب الجهاز.
- قم بتأمين أية وحدات غير مؤمنة بالجدار باستخدام الركيزة القياسية B.
- الأبعاد الواردة في الأشكال مقاسة بوحدة مم.

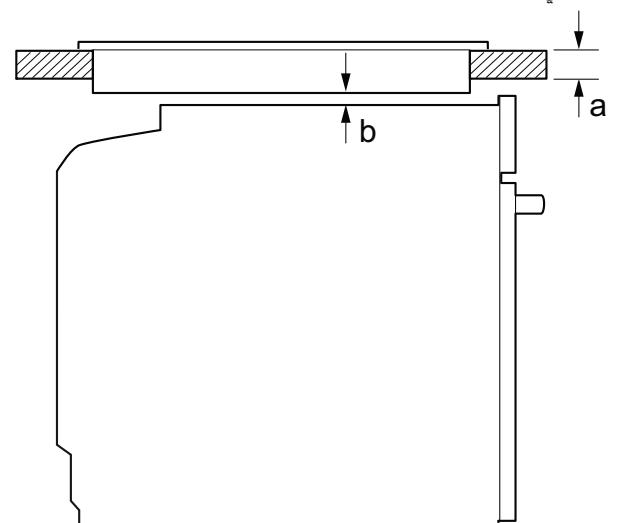
▲ الأشخاص الحاملون لأجهزة طبية إلكترونية ممزروعة!

قد يحتوي الجهاز على قطع مغناطيسية دائمة تؤثر على الأجهزة الطبية الإلكترونية الممزروعة في الجسم، مثل أجهزة تنظيم ضربات القلب أو مضخات الأنسولين. لذلك، يجب على الأشخاص الحاملين لأجهزة طبية إلكترونية ممزروعة في أجسامهم الحفاظ على مسافة لا تقل عن 10 سم من الجهاز أثناء التركيب.

الجهاز تحت سطح العمل - شكل 2

لفرض تهوية الجهاز، يجب وجود فتحة تهوية بالأرضية البيئية. قم بتأمين سطح العمل بالوحدات المركبة.

إذا تم تركيب الجهاز أسفل موقد، فيجب الالتزام بأدنى حد للمسافات التالية (شاملة الهيكل السفلي إن وجد):



نوع الموقد	a	b	متاحاني مع الأسطح المحيطة	ثابت
موقد حثي	37 مم	38 مم	5 مم	
موقد حثي للتركيب على السطح بأكمله	43 مم	48 مم	5 مم	
موقد غازى	32 مم	42 مم	5 مم	
موقد كهربائى	22 مم	24 مم	2 مم	

تأمين الجهاز - شكل 5

1. أدخل الجهاز في الموضع المخصص له حتى النهاية وقم بمركزته.

2. اربط الجهاز بالبراغي في موضعه.

لا يجوز سد الفجوة بين سطح العمل والجهاز باستخدام أشرطة إضافية. يحظر تركيب أشرطة عزل حرارية بالألوان الجانبية للوحدة المحيطة.

الفك

1. افصل الجهاز عن مصدر الإمداد بالتيار.

2. قم بفك براغي تأمين الجهاز.

3. ارفع الجهاز قليلاً ثم اسحبه للخارج بالكامل.

الحد الأدنى لسمك سطح العمل a ينتج عن الحد الأدنى للمسافة المطلوبة b. تراعي التعليمات الخاصة بتركيب الموقد.

تثبيت الجهاز في وحدة عالية - شكل 3

لفرض تهوية الجهاز، يجب وجود فتحة تهوية بالأرضيات البيئية. إذا كانت الوحدة العالية مشتملة على لوح خلفي آخر بالإضافة إلى الألوان الخلفية الأساسية، فإنه يجب خلع هذا اللوح الخلفي. قم بتركيب الجهاز فقط على ارتفاع يسمح بإخراج الكماليات بسهولة.

التركيب في أحد الأركان - شكل 4

لضمان إمكانية فتح باب الجهاز عند التركيب في أحد الأركان، التزم بالمسافة C. المسافة D تتوقف على سُمك واجهة الوحدة أسفل المقابض.

توصيل الجهاز

الجهاز متافق مع فئة الحماية 1 ولا يجوز تشغيله إلا في حالة وجود وصلة حماية أرضية.

يجب أن يكون مصهر الحماية مطابقاً للقدرة الاسمية المقررة بلوحة صنع الجهاز ومتابعاً للتشريعات المحلية.

يجب فصل الجهاز عن مصدر الإمداد بالتيار عند إجراء أعمال التركيب.

يجب توصيل الجهاز بكافب الكهرباء الموردة فقط. قم بتوصيل كابل الكهرباء بظهر الجهاز (يثبت بصوت كليب مسموع).

يمكن الحصول على كابل كهرباء 3 م من مركز خدمة ما بعد البيع.

يجب استبدال كابل الكهرباء بكافب كهرباء من الجهة الصانعة الأصلية فقط والذي يمكن الحصول عليه من مركز خدمة ما بعد البيع.

عندما يتم تركيب الجهاز بكافب الكهرباء الموردة، يجب تزويده فيما بعد بوسيلة حماية ضد التلامس غير المقصد.

كافب كهرباء مزود بمقابس بمقاييس بمقاييس أرضي

لا يجوز توصيل الجهاز إلا بمقابس مركب بشكل صحيح ومزود بوصلة حماية.

إذا لم يعد بالإمكان الوصول إلى المقابس بعد التركيب، فيجب أن يكون هناك مفتاح فصل لجميع الأقطاب على جانب التركيب بفجوة تلامس مقدارها 3 مم على الأقل.

كافب كهربائي بدون قابس مؤرض ثلاثي السنون

يجب توصيل الجهاز عن طريق فني معتمد فقط.

يجب أن يستعمل التركيب على مفتاح فصل لجميع الأقطاب بفجوة تلامس تبلغ 3 مم على الأقل. قم بتحديد الأساند الموصولة للكهرباء والأساند المحاذية في مقابس الشبكة الكهربائية. قد يتعرض الجهاز للضرر إذا لم يتم توصيله بشكل صحيح.

قم بتوصيل الموقد فقط كما هو موضح في مخطط التوصيل. انظر لوحة الصنع لمعرفة قيمة الجهد الكهربائي. قم بتوصيل أساند كابل الكهرباء طبقاً للتزميرن اللوني: أحمر/أصفر = سلك PE > أزرق = سلك محاید، بنى = موصل للتيار (سلك خارجي).

نقطة في السويد وفنلندا والنرويج

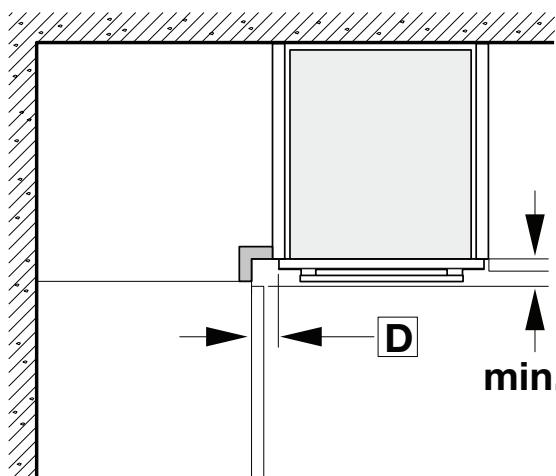
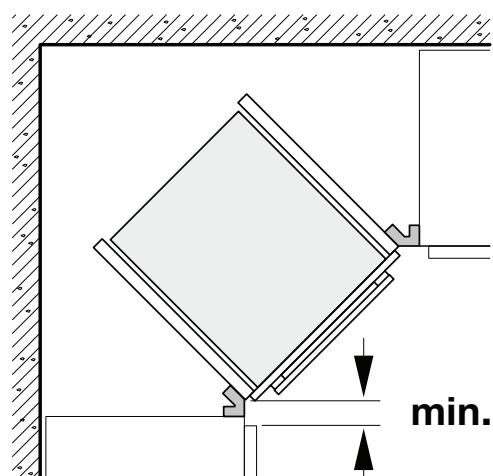
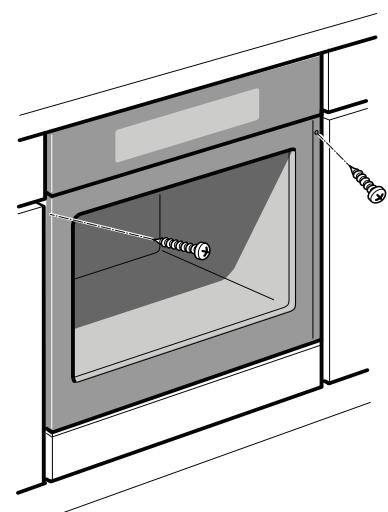
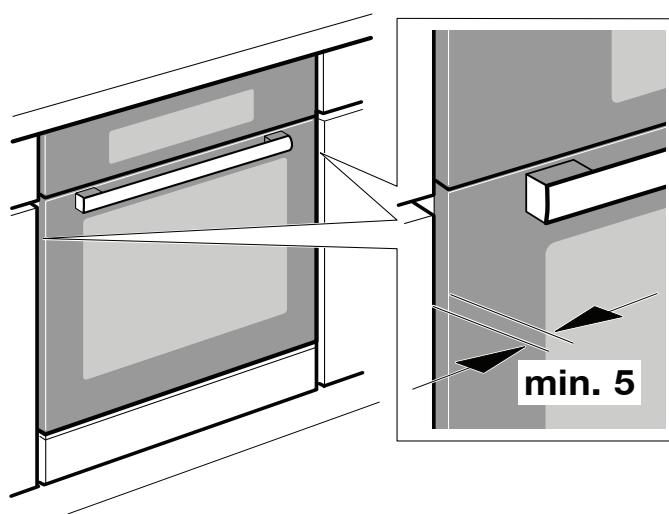
يمكن أيضاً توصيل الجهاز باستخدام القابس المورد المشتمل على نظام توصيل مؤرض. ويجب أن يظل الوصول إليه متاحاً بعد التركيب. وإذا لم يكن الحال كذلك، فيجب استخدام مفتاح فصل لجميع الأقطاب بمكان التركيب بفجوة تلامس لا تقل عن 3 مم.

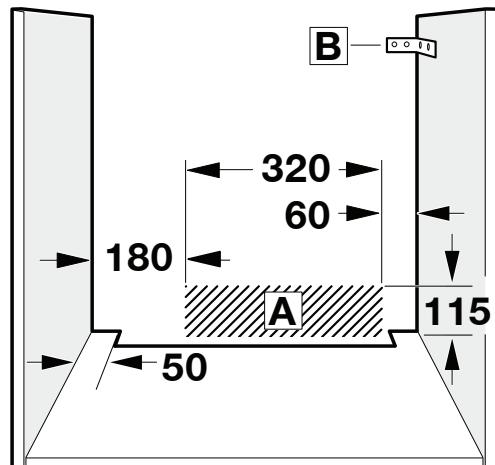
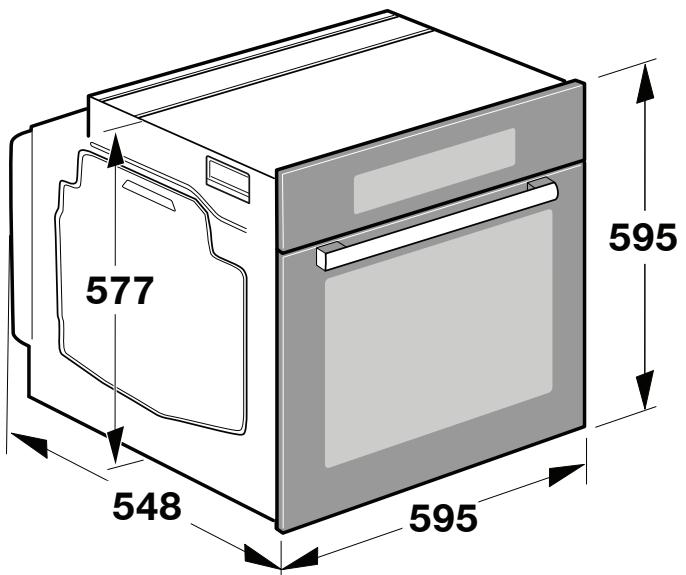
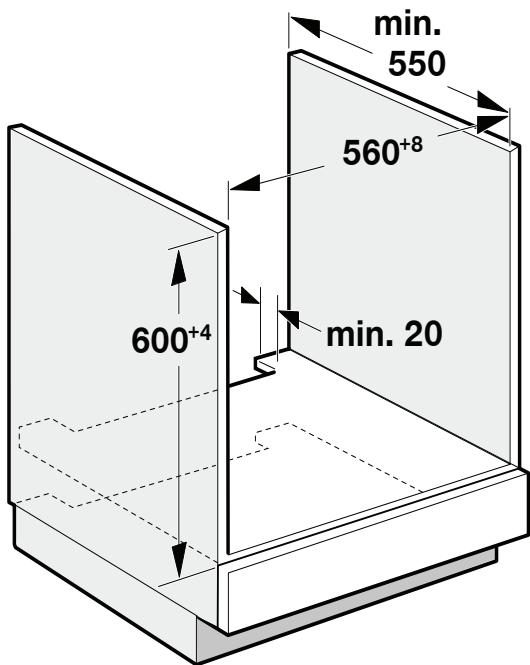
تأمين الجهاز - شكل 5

1. أدخل الجهاز في الموضع المخصص له حتى النهاية وقم بمركزته.

2. اربط الجهاز بالبراغي في موضعه.

لا يجوز سد الفجوة بين سطح العمل والجهاز باستخدام أشرطة إضافية. يحظر تركيب أشرطة عزل حرارية بالألوان الجانبية للوحدة المحيطة.

4**C****5**

**1****2****3**