




OFFICINA **UICOLAZZI**

DAL 1960

Classic Prov Wall Basin/Bath Set 230mm Spout Art: Z26777L



Specifications

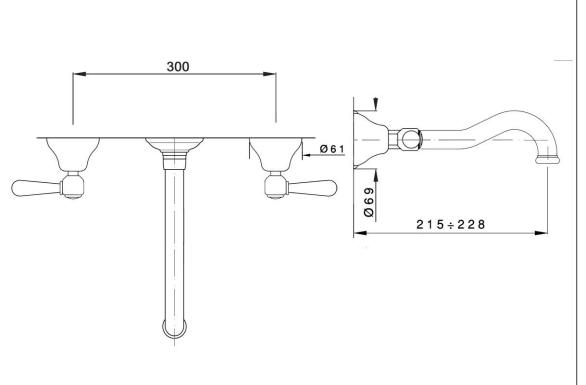

<u>Available replacement</u> handles:



MAC KINLEY

- Handmade in Italy since 1960
- ¼ Turn valves handmade at Nicolazzi Factory
- Lead Free Brass Compliant to AZ/NZS 3718
- Suitable even and uneven pressure
- Handles are interchangeable





AS/NZS3662

Canterbury Sink & Tap Co.

Max/Min Operating Pressure: 100/500kPa





Important Notice Model: Z26777L

CAREFULLY READ THROUGH THESE INSTRUCTIONS BEFORE INSTALLATION AND USE OF ALL TAP WARE AND WALL VALVES

INSTALLATION and WARRANTY INSTRUCTIONS

TECHNICAL INFORMATION

All tapware washers and O-rings are designed and manufactured for use with water. Do not expose to household cleaners, chlorine, chloride, hydrochloric acid or other corrosive chemicals.

Our tap ware is designed for use with the temperatures and pressures listed below:

- minimum cold water supply 10 °C
- maximum hot water supply 62 °C
- minimum pressure 100 kPa
- maximum pressure 500 kPa
- maximum fixing torque value = 13.6 Nm

<u>Please note:</u> The recommended pressure for best performance is between 270 kPa and 420 kPa. More pressure than 420 kPa or less pressure than 270 kPa may affect the diverting action in side spray tap ware.

Do not use any Nicolazzi tap ware with sulphurous water.

The minimum temperature for all tap ware is 10 degrees Celsius . Below 10 degrees Celsius will void the warranty.

When available, filter systems must be placed between hot and cold supply lines and the tap ware. Improper use or non-use of filters may make diverting tap ware with hand sprays perform poorly.


Don't modify the tap ware and their components.

Use only original spare parts if there are replacements to be ordered. Installation must be made by authorized plumbers or installers. Improper installation or diagnosis of problems is not covered by the warranty. Yearly maintenance of cleaning and flushing is recommended.

Operation and use of any tap ware or wall valve that do not conform to these technical instructions will void the warranty.



Z26777L WALL TAP ASSEMBLIES LEVERS

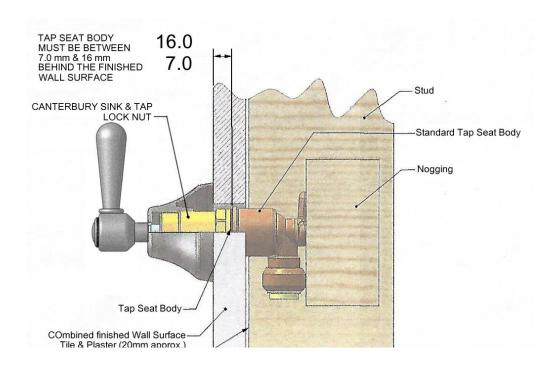


- A small amount of silicon can be applied behind the flange to hold it in place.
- To access the screw holding the handle onto the valve spindle, lever the hot and cold indice buttons
 off with a box cutter blade and using a phillips head screwdriver; unscrew the machine screw.





Preparation

- Flush out the pipework to remove any foreign matter.
- Tap cut out hole sizes : Maximum **45mm** diameter.

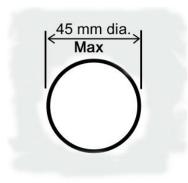


Not supplied:-Wall breech 300mm centre to centre



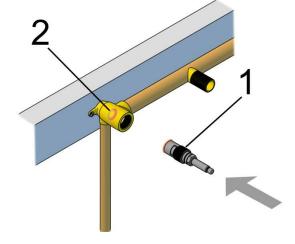

 Install the fibre washer 3, and the lock nut 4, onto the cartridge.

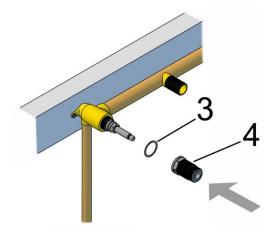







 Ensure that the locknut is adequately tightened against the breech face to prevent any water leaks.



Position the collar 5, onto the locknut outer thread.

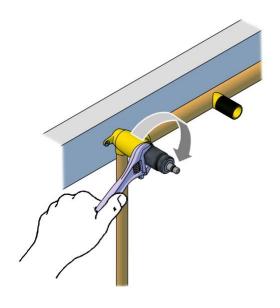

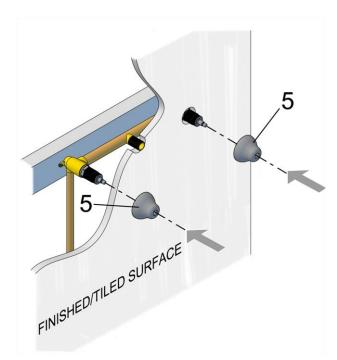




- Carefully hand turn the tap cover cap 5, onto lock nut thread turning in a clock wise direction until it is firmly seated in place against the finished/Tiled surface.
- Install the handle **6**, onto the cartridge spline.
- Insert the retaining screw 7, into the top of the handle tighten with Philips head screw driver.
- Screw the indice button 8, onto the tap handle.


DO NOT USE A SHIFTER TIGHTEN BY HAND ONLY!

Note: Do not over tighten as this could damage the ceramic cartridge!



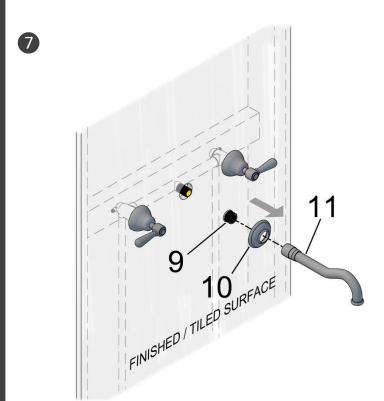

- Place the cover plate 10, over the thread end of the spout.
- Fit the supplied ¾" to ½"adptor **9**, into the thread section of the spout, **11**. Ensure it is properly sealed using PTFE tape or equivalent sealer to prevent any leakage.

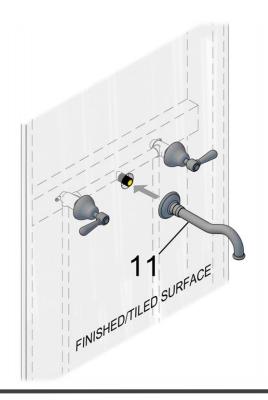


Line-up the spout 11, with the thread section of the wall breech. Screw the spout until it is firmly secured on the wall breech. Ensure to use adequate PTFE tape, or a suitable sealing material is applied the threads, to prevent any leakage from the wall spout.



9

Ensure the Hot and Cold water cartridges are installed correctly.

Hot water cartridge : C-teck 11047 Cold water cartridge: C-teck 11147

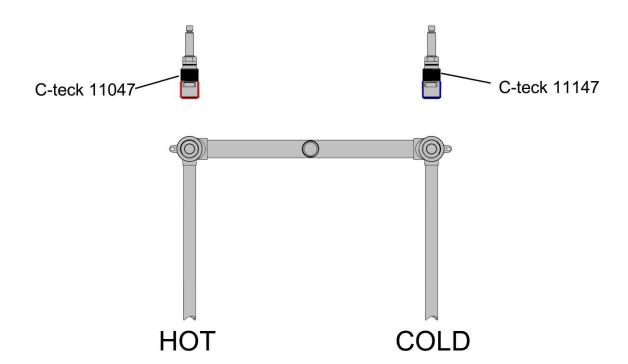


Before use

- Turn on the Hot and Cold supplies to the tap.
- Maximum temperature for Hot water supply to the tapware is 62 °C.
- Minimum recommended pressure is 100 kPa Maximum recommended pressure is 500 kPa.
- Check the installation carefully for leaks.
- If further building work is to be carried out in the vicinity of the tapware, it should be covered to prevent paint, adhesive, etc. from damaging the surface.



Spare Parts list Model: Z26777L

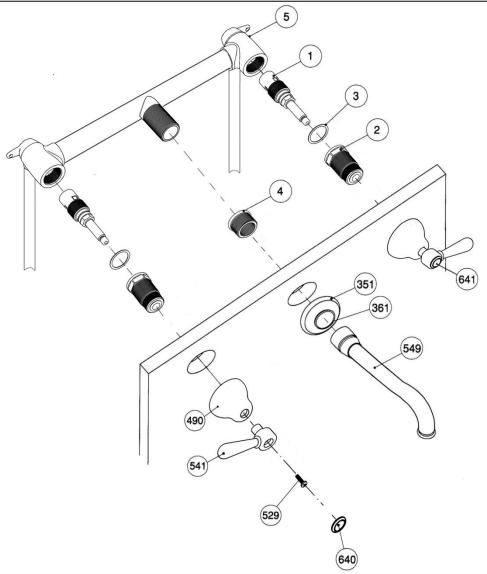

	•	V (***) (***)	
Pos.	Descrizione	Description	Cod.
115	Vitone ceramic disc sinistro	Ceramic disc valve left	C 7075SX
351	Cappuccio per rubinetto arresto incasso	Cap for built-in stop cock	C 7226
490	Coprivitone con Mac Kinley	Cover valve Mac Kinley	C 7213
529	Vite 3/16" x 10	Stainless steel screw M4x23	C 7551
541	Maniglia Mac Kinley	Mac Kinley handle	C 7660
549	Bocca lavabo a parete	Wash-basin spout on the wall	C 1478
640	Placchetta per maniglia "Caldo"	Plate for handle with indication "Hot"	C 7672P
641	Placchetta per maniglia "Freddo"	Plate for handle with indication "Cold"	C 7672P
1	C-tech cartridge 11047 Hot / 11147 Cold		
2	Lock Nut		
3	Fibre Washer		
4	Spout Adapter 3/4" to 1/2"		
5	Wall breech 300mm cntre to centre (Not supplied)		





Care and Maintenance Instructions Model: Z26777L


Removing and replacing a handle

MODEL SHOWN: Z26777L


- 1
- Unscrew and remove the indice buttonA, from the tap handle body.

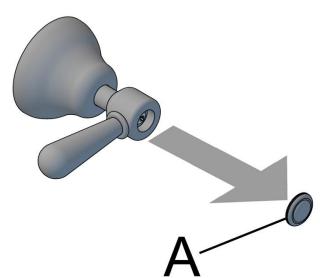



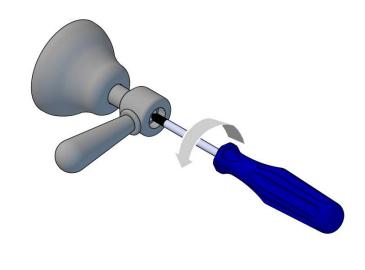

 Once the retaining screw is loose, lift and remove the handle B, from cartridge spline

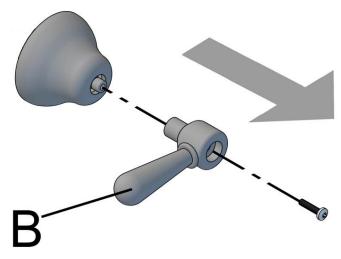

- To reassemble, reverse the disassembly procedure.
 - The retaining screw only needs to be hand tight.

NOTE: DO NOT OVER TIGHTEN, HAND TIGHT ONLY!

Do not over tighten as this could damage the ceramic cartridge!

Available replacement handles:

-60 Mac Kinley handle




Care and Maintenance Instructions Model: Z26777L

LOW FLOW OR NO FLOW TROUBLESHOOTING INSTRUCTIONS

Current bathroom taps have a max flow rate of 7 Litres per minute from the aerator.

If you are experiencing low flow from the spout: **Do not change the cartridge**

- Unscrew and clean the spout aerator 1.
- Unscrew and clean the filters inside the supply connections
- Check the supply lines for kinks or obstructions
- Make sure the supply line stops are fully on. (Not shown.)

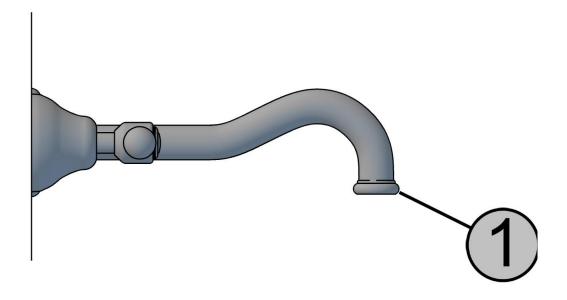



Care and Maintenance Instructions Model: Z26777L

Care of external finishes

Nicolazzi products are all authentic finishes that have not been coated with any product. After each use, pat the fixture down to remove any excess water. This will prevent any water spotting or mineral build-up. Use only soft liquid soap and water to clean the surface. Use a soft brush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, Jif or Ajax. These products can damage the finish leaving black or white spots. Never use on abrasive products on tap ware or this will devoid the warranty.

Live Finishes DO NOT carry a warranty as they are living finishes and will change over time.

Raw Brass, Brush Brass (To make the brass lighter again rub the brass tap with lemon juice, this will lighten the dark colouring).

Shiny Brass, Polished Nickel has an ageing process and will tarnish over time.

Tuscan Brass is a living finish and also carries NO warranty. It will lighten with use. To extend the life of the finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or buff this finish.

WARNING: The use of cleaning products not recommended might irreparably harm the surfaces of the tap, which in such cases are not covered by our warranty.

Lime scale build up

The tap is fitted with an aeration device in the Hot/Cold water outlet.

This may need occasional cleaning especially in hard water areas.

This is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and

leaving the inner screen mesh immersed over night in vinegar