



OFFICINA
NICOLAZZI
DAL 1960




One-Hole Sink Mixer

Art: Z3407 – 75

LAZIO

Specifications

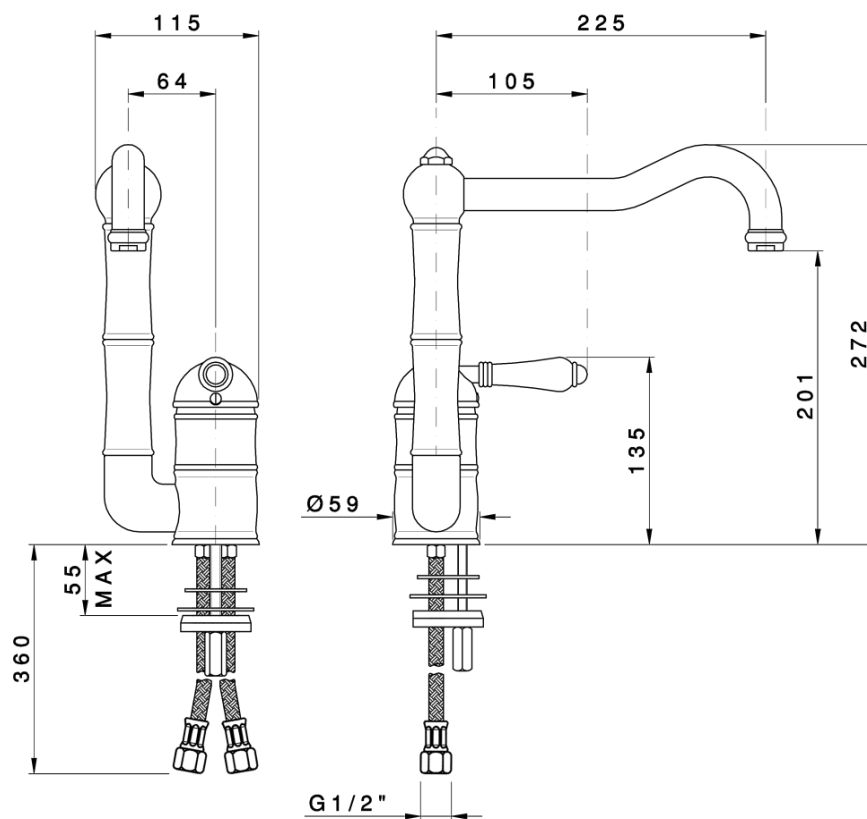

- Handmade in Italy since 1960
- 1/4 Turn valves handmade at Nicolazzi Factory
- Lead Free Brass Compliant to AZ/NZS 3718
- Suitable even and uneven pressure
- Handles are interchangeable



WaterMark
WM22315
AS/NZS3662

Canterbury Sink & Tap Co.

Max/Min Operating
Pressure: 100/500kPa

OFFICINA
NICOLAZZI
DAL 1960

Important Notice Model : Z3407-75

CAREFULLY READ THROUGH THESE INSTRUCTIONS BEFORE INSTALLATION AND USE OF ALL TAP WARE AND WALL VALVES

INSTALLATION and WARRANTY INSTRUCTIONS

TECHNICAL INFORMATION

All flexible hoses are designed and manufactured for use with water in exposed locations only. Do not expose to household cleaners, chlorine, chloride, hydrochloric acid or other corrosive chemicals.

All connections with threads M10x1 male must be hand tighten. Do not over tighten. Over tightening may cause damage to the hose.

All tap ware washers and o-rings are designed and manufactured for use with water. Do not expose to household cleaners, chlorine, chloride, hydrochloric acid or other corrosive chemicals.

Our tap ware is designed for use with the temperatures and pressures listed below:

- minimum cold water supply 10 °C
- maximum hot water supply 62 °C
- minimum pressure 100 kPa
- maximum pressure 500 kPa
- maximum fixing torque value = 13.6 Nm

Please note: The recommended pressure for best performance is between 270 kPa and 420 kPa. More pressure than 420 kPa or less pressure than 270 kPa may affect the diverting action in side spray tap ware.

Do not use any Nicolazzi tap ware with sulphurous water.

The minimum temperature for all tap ware is 10 degrees Celcius . Below 10 degrees Celcius will void the warranty.

When available, filter systems must be placed between hot and cold supply lines and the tap ware. Improper use or non-use of filters may make diverting tap ware with hand sprays perform poorly.

Don't modify the tap ware and their components


Use only original spare parts if there are replacements to be ordered. Installation must be made by authorized plumbers or installers. Improper installation or diagnosis of problems is not covered by the warranty. Yearly maintenance of cleaning and flushing is recommended.

Operation and use of any tap ware or wall valve that do not conform to these technical instructions will void the warranty.

Installation Instructions

Model : Z3407-75


1

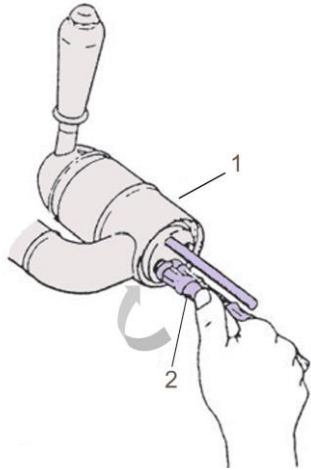

Install the water supply hoses into the body - 1


- Note: Hand tighten only, **DO NOT** over tighten- 2

2

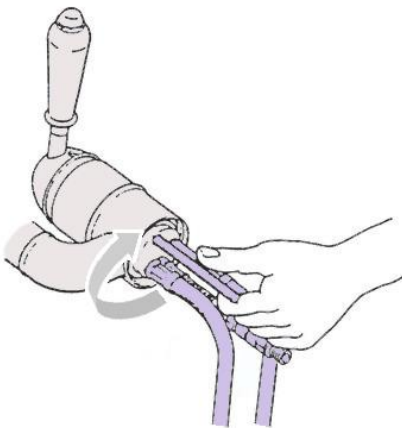

Install the supplied mounting stud and verify it is securely installed.


3

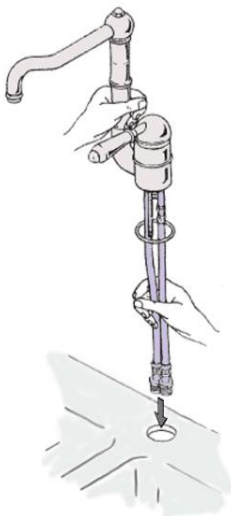

Insert the tap into mounting hole. Feed the water supply hoses carefully through the hole ensuring that they are not bent or kinked, as this could result in permanent damage or leakage.


Installation Instructions Model : Z3407-75

4

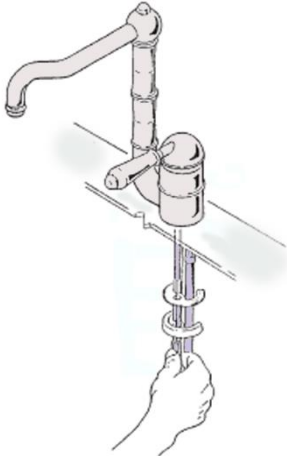

Under the sink, stack the supplied half ring rubber gasket above the half ring mounting plate and feed them onto the stud. Then screw the mounting nut onto the stud. Screw the mounting stud until the half ring rubber mates up with the underside of the


5

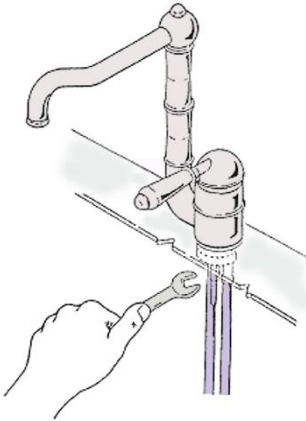

Check the position on the sink of the tap, then tighten the nut using a 13mm wrench.

Note: the under deck mounting surface must be flat. If the mounting surface is irregular, the nut may not be secured, and the tap will be loose on the sink.

Spare Parts list Model : Z3407-75

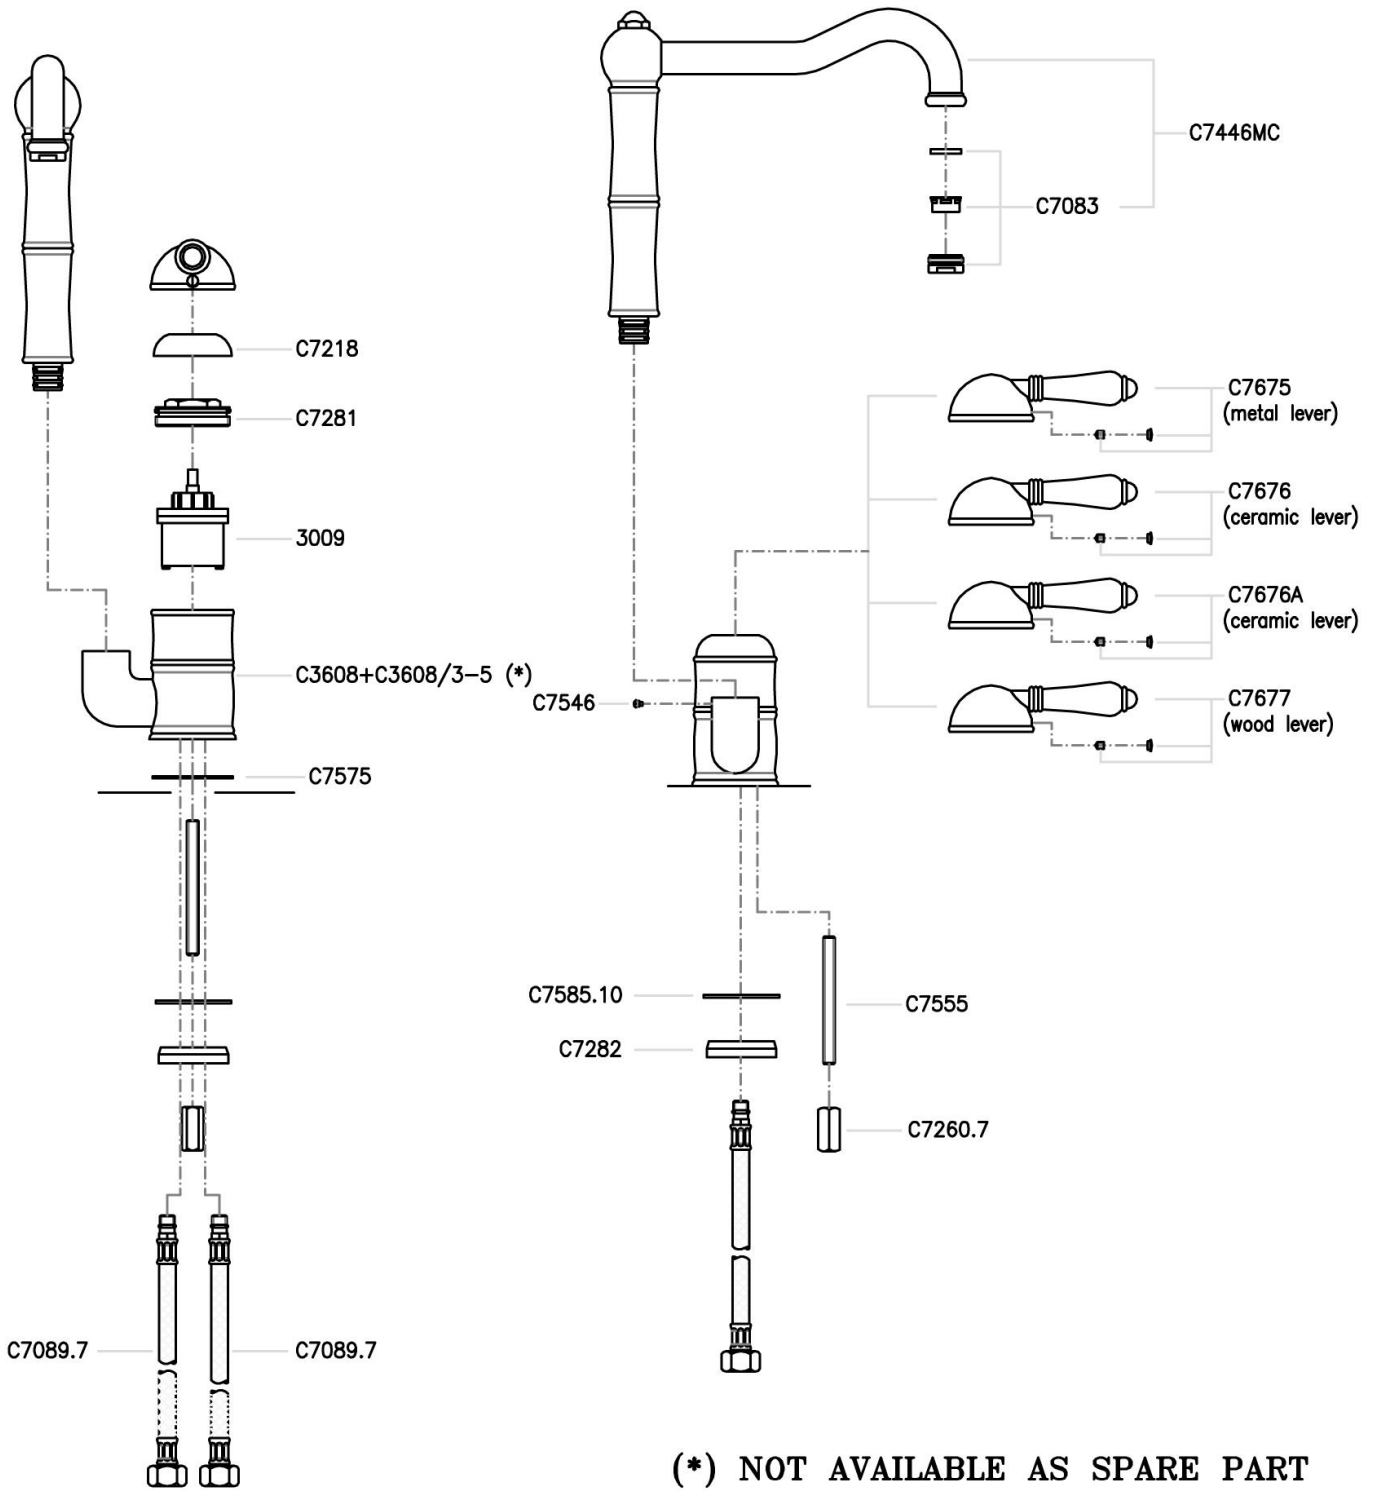

(*) NOT AVAILABLE AS SPARE PART

Care and Maintenance Instructions Model : Z3407-75


INSTRUCTIONS FOR REPLACEMENT OF THE C3009 CARTRIDGE

Please note: Only replace the cartridge if, the lever is stiff on to off, or from hot to cold.

Do not replace the cartridge if there is low flow or no flow. Low flow or no flow is caused by obstruction or kinking of supply hoses.


①

- Turn off the hot and cold supply lines to the tap.
- Remove the handle and dome.
- Remove the screw cover cap - A

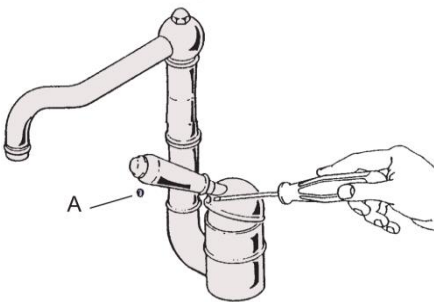


②

- Tip the lever and dome up to access the 3mm allen key.
 - Loosen but do not remove the 3mm allen key.
 - Note: use only a 3mm allen key.
- Remove lever and dome.

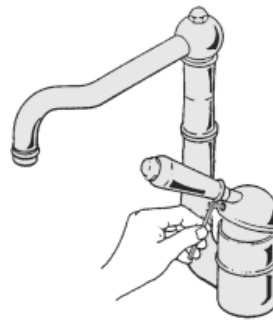


③

- Remove the ring nut cover-B

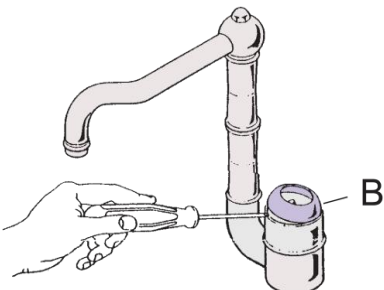

④

- Loosen the cartridge nut with a smooth jawed shifter.

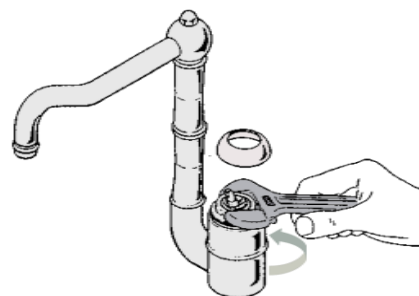


Continue.....

Care and Maintenance Instructions Model : Z3407-75


5

- Remove the cartridge nut – C
- Remove the cartridge – D

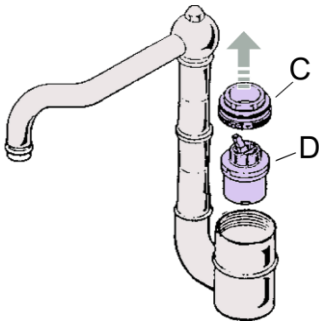

6

- Clean the cavity and remove all debris.
- Liberally grease the cavity.

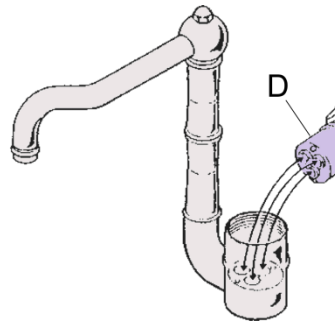

Reinstalling

- Install the cartridge with the ports correctly aligned.
- Install the cartridge nut
 - Correct torque on the nut is $16 \pm$ Newton meters (NM)
 - If no gauge is available:
 - Hand tighten the nut
 - Tighten a 1/4 turn or until snug
 - **Do not over tighten**
- With the dome and lever off, turn on the water and test for leaks.
- Then install the lever and dome and test the diverter by using the hand spray

Please note: If there is a 99% divert or small trickle of water out the spout when using the hand spray that is acceptable. Due to water conditions, a 100% diverting action is not always possible.


Care and Maintenance Instructions Model : Z3407-75

Removing and replacing a handle


MODEL SHOWN : Z3407-75

- 1
 - Using a flat head screw driver or similar sharp edged tool, carefully remove the indice button **A**, located on the front of the dome under the handle.

Be careful not scratch or damage the surface.

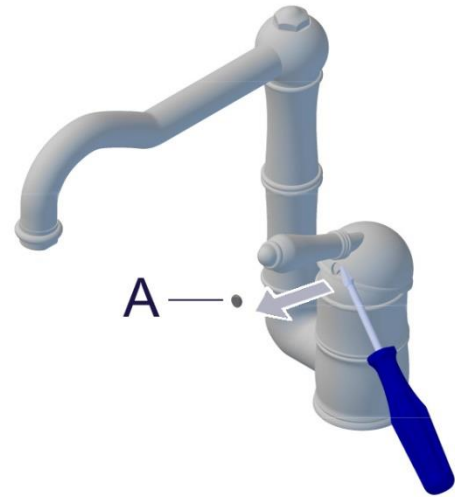

- 2
 - Tip the lever and dome up to access the 3mm allen head grub screw.
 - -Using a 3mm allen key, loosen but do not remove the 3mm allen head grub screw.
- 3
 - Lift the handle and carefully remove the dome from the cartridge lever arm.

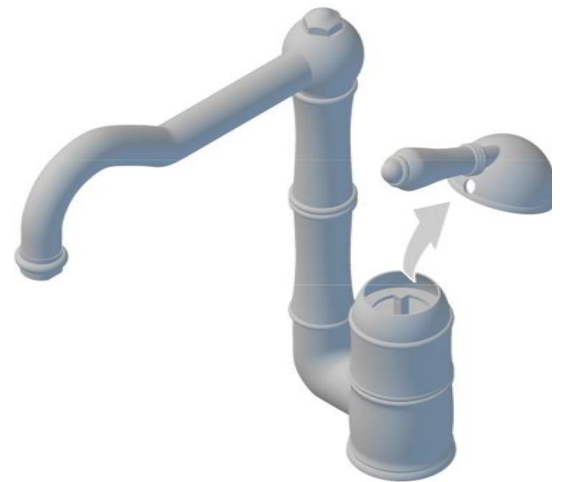

- 4
 - To reassemble, reverse the disassembly procedure, given above.

Available replacement handles:

- El Capitan Handle
- 78 Mont Blanc Handle
- 78A Mont Blanc Antique Crackle
- 78B Mont Blanc Black

*NOTE: Should the handle feel loose, retighten the allen head grub screw with a 3mm allen key.

Care and Maintenance Instructions Model : Z3407-75

LOW FLOW OR NO FLOW TROUBLESHOOTING INSTRUCTIONS


Current kitchen taps have a max flow rate of 7 Litres per minute from the aerator and the hand spray.

If you are experiencing low flow from the spout: **Do not change the cartridge**

- Unscrew and clean the aerator -1
- Unscrew and clean the filters inside the supply connections- 3
- Check the supply lines for kinks or obstructions-3
- Make sure the supply line stops are fully on. Not shown

If your tap has a hand spray, and your hand spray has obstructed flow or no flow:

- Check the hand spray hose for kinks-5
- Unscrew and clean the hand spray filter-4
- Clean the aerator in the hand spray-2

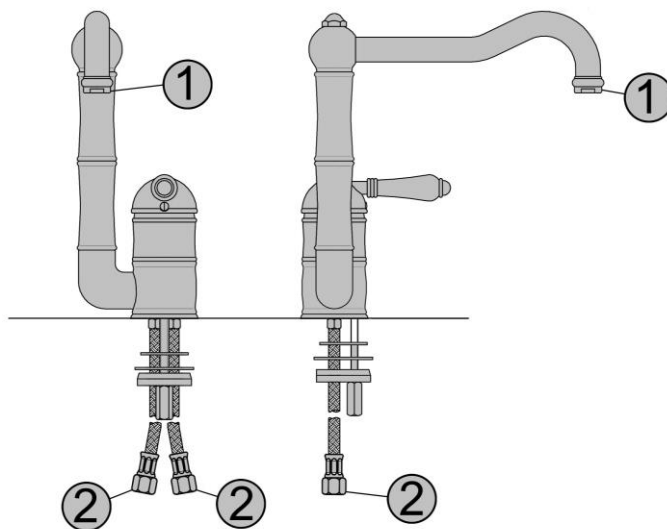

Care and Maintenance Instructions Model : Z3407-75

Care of external finishes

Nicolazzi products are all authentic finishes that have not been coated with any product. After each use, pat the fixture down to remove any excess water. This will prevent any water spotting or mineral build-up. Use only soft liquid soap and water to clean the surface. Use a soft brush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, Jif or Ajax. These products can damage the finish leaving black or white spots. Never use on abrasive products on tap ware or this will void the warranty.

Live Finishes DO NOT carry a warranty as they are living finishes and will change over time.

Raw Brass, Brush Brass (To make the brass lighter again rub the brass tap with lemon juice, this will lighten the dark colouring).

Shiny Brass, Polished Nickel has an ageing process and will tarnish over time.

Tuscan Brass is a living finish and also carries NO warranty. It will lighten with use. To extend the life of the finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or buff this finish.

WARNING: The use of cleaning products not recommended might irreparably harm the surfaces of the tap, which in such cases are not covered by our warranty.

Lime scale build up

The tap is fitted with an aeration device in the Hot/Cold water outlet.

This may need occasional cleaning especially in hard water areas.

This is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and leaving the inner screen mesh immersed over night in vinegar