


Widespread Bathroom Sink Faucet Installation

INSTALLATION MANUAL Tools You Will Need:

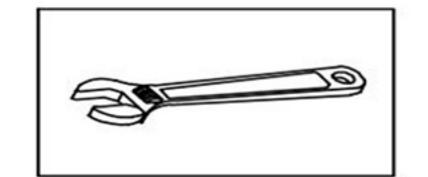

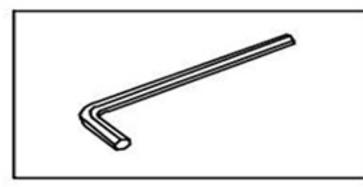

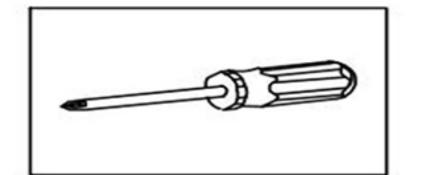

Adjustable wrench

Hexagon wrench

Philips Screwdriver


Before the Installation

- 1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
- 2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- 3. Shut off the main water supply prior to beginning installation.
- 4. Do flush the water supply lines to remove any dirt and debris before installation (IMPORTANT).
- 5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
- 6. After the installation, check for leaks and make sure every joint is safely sealed.

Cleaning and Maintenance


- 1. Rinse with clean water and dry with a soft cloth.
- 2. Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.
- 3. Do not use cloth with a coarse surface.

Parts List

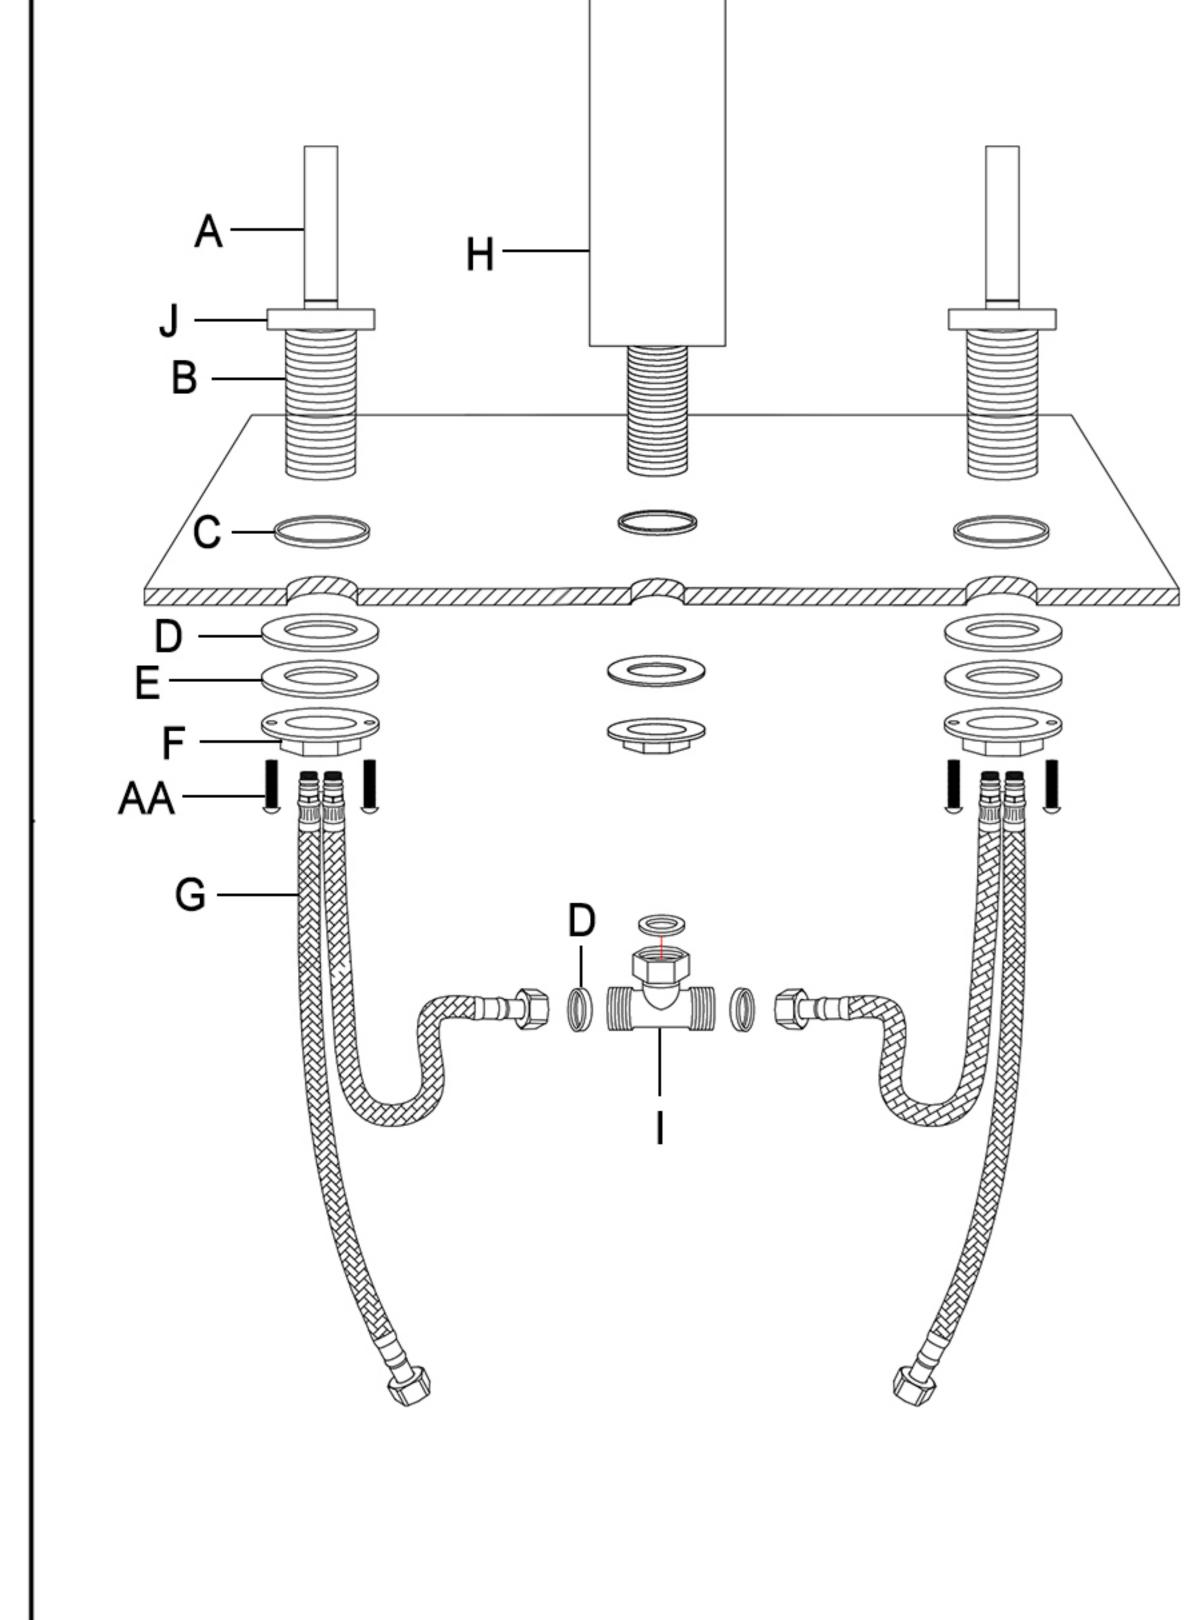

Part	Name	Quantity
Α	handle	2
В	threaded pipe	3
С	O-ring	3
D	rubber washer	large: 3 small: 3
E	metal washer	2
F	mounting nut	3
G	waterlines	4
Н	spout body	1
	triple tube	1
J	base plate	2
AA	screws	4

Installation Guide

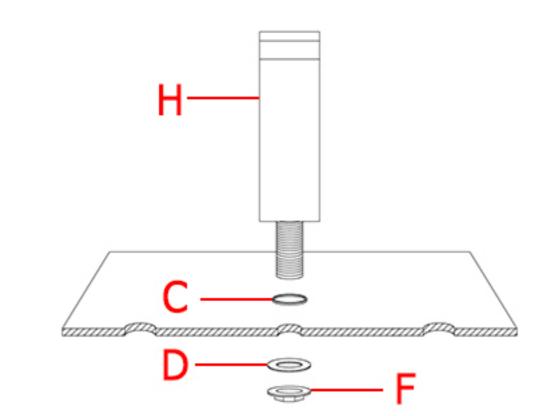

. Fix O-ring (C) into the bottom groove of 2. Fix O-ring (C) into groove of the base spout body (H) and insert spout body (H) into the specified drill hole on the counter top. Install rubber washer (D) to the threaded tail pipe of the spout body (H) from underneath the counter top. Adjust the faucet body (H) correctly and then screw the mounting nut (F) tightly.



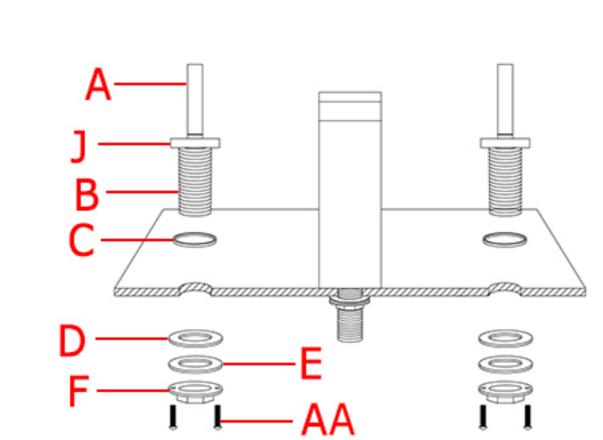



plate (J). Then, insert the handle (A) and threaded pipe (B) into the specified drill hole on the counter top. Install rubber washer (D), metal washer (E) and mounting nut (F) to the threaded tail pipe (B) of the handle (A). Adjust the handle (A) correctly and then screw the mounting nut (F) with screws (AA) tightly.

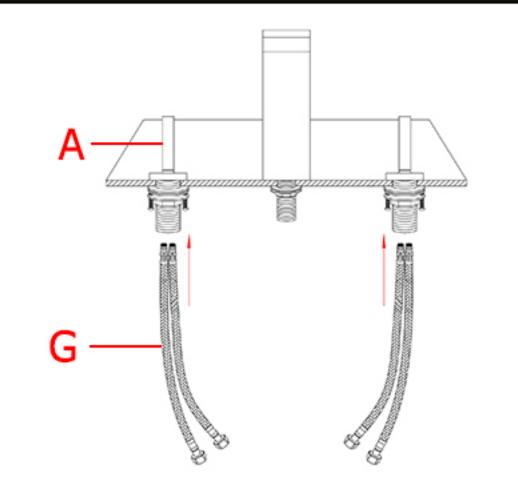


3. Screw waterlines (G) into the corresponding screw-hole of the handle (A).

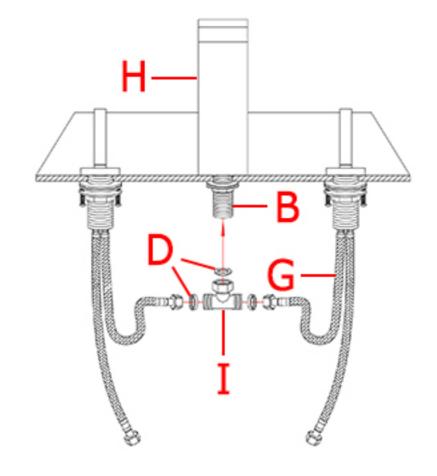

4. Add the rubber washer (D) inside of the 5. Connect the hot & cold waterlines (G) female end of the triple tube (I) and then install the triple tube (I) by screwing onto the threaded tail pipe (B) of the faucet body (H). Screw waterlines (G) into triple tube (I). Make sure to add the rubber washer (D).

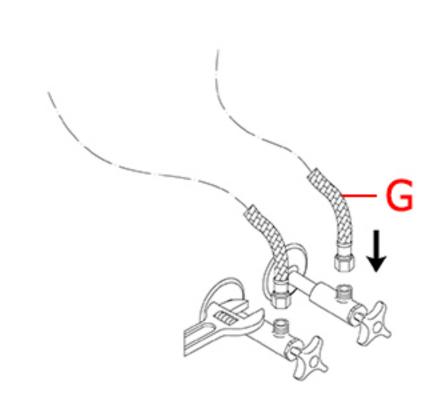

(not included) to the main water supply line.

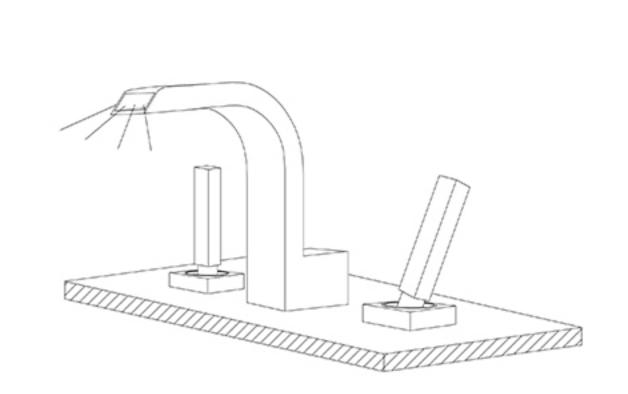

6. Turn faucet on for 1 minute to flush any debris.

Troubleshooting

Problem	Possible Cause	Corrective Actiom
Water does not shut off completely.	O-ring is not seated correctly or worn. Cartridge may be defective.	Reseat or replace O-ring. Replace cartridge.
Leaks at waterline connection.	Worn or broken washer. Faucet body may be defective.	Replace washer. Replace faucet (contact us for the replacement).
Leaks from handle.	Cartridge may come loose. Cartridge may be defective.	Reseat cartridge tight. Replace cartridge.
Leaks at hose connection.	1. Hose connection is loose	Tighten hose. Replace hose.
Leaks at shower valve connection.	Connection may come loose or not sealed completely. Defective shower valve inlet or outlet connector.	Check connections. Replace valve body.
Diverter knob does not work.	Diverter cartridge may be defective.	Replace cartridge.
LED light does not Light or noisy LED showerhead.	Defective LED generator.	 Replace LED spray head (for kitchen faucet). Replace LED threaded pipe (for seperate faucet spout). Replace LED generator (for others).
Low flow.	Check for water pressure problems. Aerator may be dirty or clogged.	 Clean or replace the aerator. Remove waterflow restrictor if available. Install booster or pump (if applicable).