Warranties

Domestic: Applies to domestic uses and applications of Fienza® products, such as private residential dwellings and retirement villages.

Commercial: Applies to commercial uses and applications of Fienza® products, including, but not limited to: restaurants; hotels; hospitals and healthcare facilities; public amenities; and commercial premises.

Product Component	Domestic Use	Commercial Use		
Structure	15 years	7 years 15 years		
Cartridge	15 years (including labour)			
Finish	5 years replacement (includes labour in first year only)	1 year replacement (includes labour in first year only)		

Note: Warranties do not include parts subject to wear and tear such as O-rings, washers and jumper valves.

Warranty Conditions

- Installation has been carried out by a licensed plumber in accordance with AS/NZS 3500 and all applicable local regulations and plumbing codes.
- All maintenance and adjustments to the product after the installation have been carried out by a licensed plumber.
- Cleaning and care instructions detailed in this document have been strictly adhered to.
- Proof of purchase is required for warrantu claims.

Warranty Limitations

To the extent permitted under the Trade Practices Act and other relevant legislation, Fienza's liability is limited to: the cost of replacing the goods; or, the cost of obtaining equivalent goods; or, the cost of having the goods repaired. Fienza is not responsible for any lack of operation or performance of goods (or any loss or damage) where goods are used or adapted for use with other goods not supplied by Fienza.

It is the responsibility of the customer and installer before installation to ensure that all components are correct and free of obvious visible faults. Fienza is not responsible for the labour and rectification costs incurred in this circumstance.

Conditions for On-Site Warranty Service Calls

Fienza will charge a service fee for each visit to an installation by its technician where it is determined that the fault is due to poorly executed or unlicensed installation work or where the product is not a genuine Fienza product or where the product is outside the warranty period. This may be paid in advance by credit card over the phone to a Fienza technician attending the site and will be refunded if the Fienza product is found to be at fault.

PLEASE LEAVE THIS MANUAL WITH THE END USER

For more information, contact us or visit our website:

P: (07) 3490 6700

E: contactus@fienza.com.au

W: fienza.com.au Updated: 03/07/20


fienza

INSTALLATION GUIDE


(aya/Sansa

PULL DOWN SINK MIXERS

Kaya 228109 Sansa 229109

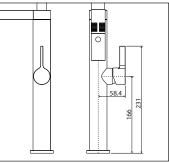



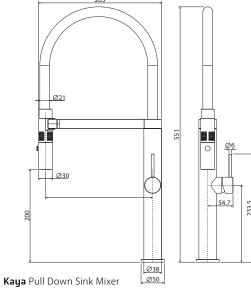

IMPORTANT: Please read all of the instructions before installation. Check the product thoroughly for damage. Installation is acceptance of goods supplied and will void warranty. This product is pre-assembled. Do not disassemble, as this may void the warranty.

Specifications

Please refer to **fienza.com.au** for the latest product specifications before installing.

Mixer Type	Progressive, 25 mm cartridge		
Operating Pressure	Min: 150 kPa / 1.5 bar Max: 500 kPa / 5 bar Optimum: 350 kPa / 3.5 bar		
Operating Temperature	Hot: Max 80°C Cold: Min. 5°C		
Inlet Connections	1/2" BSPP		
Suitable Hot Water Units	Storage tank and continuous flow only. Not suitable for gravity feed.		
WELS Rating	6 Star rated, 4.5L/min		

General Information

- This product must be installed by a qualified licensed plumber in accordance with AS/NZS 3500 and all
 applicable local regulations and plumbing codes.
- All pipe work must be thoroughly flushed prior to installation.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation all hoses and connections must be checked for leaks.
- It is the responsibility of the installer to ensure a waterproof seal is achieved between the product and mounting surface.

Installation


IMPORTANT: Before commencing installation, turn off the water supply. While not essential, we recommend fitting isolation valves to both the hot and cold-water supply.

- Remove product from packaging and check for damages. If the product is damaged in any way, do not
 install and return to the store where the item was purchased.
- 2. The mounting surface requires a single 35 mm diameter hole.
- 3. Unscrew the mounting stud assembly (26, 27, 28, 34, 36) and slide over the male end of the two hoses (31 & 32). Ensure the mounting stud assembly remains upright.
- 4. Ensure the O-ring (43) is tightly inserted into the base ring (8).
- 5. Place the mixer into the mounting surface hole.
- 6. From underneath the mounting surface, screw in the two flexible inlet hoses (31 & 32): red ringed hose on the left & blue ringed hose on the right (to match hot & cold tap markings). Ensure the O-rings are greased and tighten with a spanner.
- 7. Screw the mounting stud (26) into the base of the mixer body (9) and slide the gasket and washer over the top in that order.
- 8. Screw the plastic mounting nut (34) by hand to secure the mixer in position.
- 9. Position the mixer into its final position as desired.
- 10. Tighten the mounting screws (36) with a screwdriver to securely mount the mixer to the top.
- 11. Connect the ½" BSP female end of the flexible inlet hoses (31 and 32) to the supplies: red ringed hose to the hot water supply and blue ringed hose to the cold water supply.
- 12. Fit the handle (47) onto the cartridge (30).
- **13.** Use the allen key provided and screw the grub screw (48) into the back of the handle to secure. Fit the hole cap (49).
- 14. Turn on the water supply and check carefully for leaks. Re-tighten fittings if necessary.

Cleaning & Care

We recommend weekly cleaning with mild soapy water and a microfibre cloth. In highly polluted or coastal locations we recommend cleaning 2-3 times per week. Please note that colour tapware requires more frequent cleaning than chrome tapware.

- Never use harsh detergents, citrus-based cleaners or abrasive cleaners, as these will scratch the surface.
 Use of unsuitable cleaners may damage the surface and will not be covered by warranty.
- Where your tapware remains dry in use, a non-abrasive soft cloth can be used to remove surface dust.
- Use of wax-based furniture cream should be avoided as these can result in a build-up of deposits which
 could detract from the appearance.
- Do not use undue pressure and wipe in one direction only.

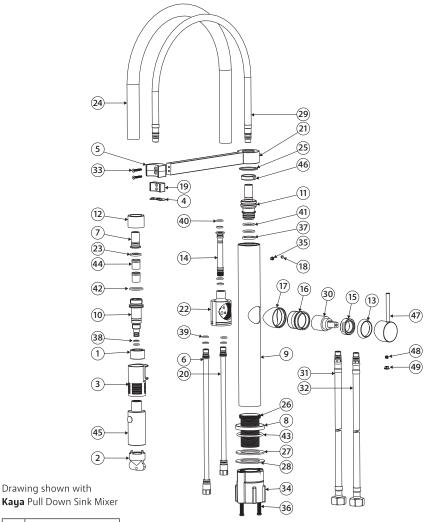

1	Ring						
2	Aerator Key	14	Pipe	26	Mounting Stud	38	O-Ring
3	Connector	15	Retaining Nut	27	Rubber Gasket	39	O-Ring
4	Gasket	16	Sleeve	28	Washer	40	O-Ring
5	Magnet Base	17	Cover Sleeve	29	Hose	41	O-Ring
6	Copper Pipe	18	Rubber Cover Button	30	25 mm Cartridge	42	O-Ring
7	Adaptor	19	Magnet	31	Flexible Inlet Hose	43	O-Ring
8	Base Ring	20	Copper Pipe	32	Flexible Inlet Hose	44	Check Valve
9	Body	21	Holder	33	Grub Screw	45	Spray Nozzle
10	Connector	22	Cartridge Seat	34	Mounting Nut	46	Resistant Ring
11	Connector	23	Filter	35	Screw	47	Handle
12	Cover	24	Flexible Hose	36	Screw	48	Grub Screw
13	Cover Ring	25	Resistant Ring	37	Resistant Ring	49	Hole Cap