


User Instructions

Villa Pergola motorized operation

Size: 13'x19' Double Bay (400 x 600cm)

Please visit www.bonpergola.com for the latest instruction under Q&A section

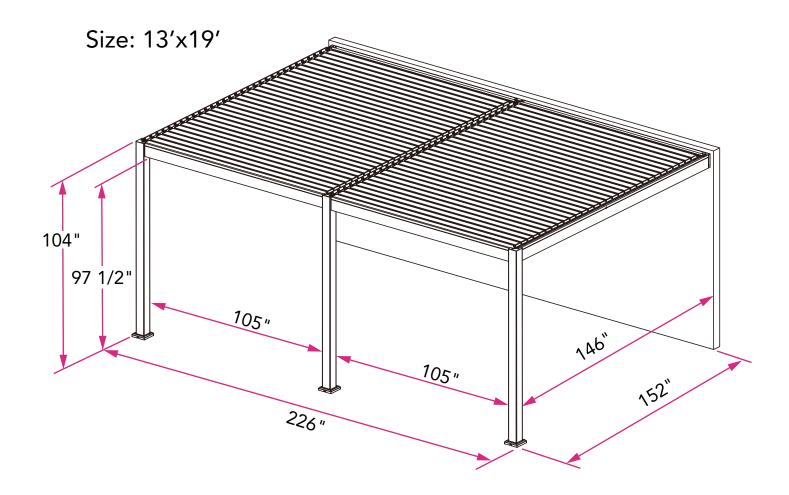

v2023.02 01



Content

Tools and man force	3
Parts List	3-4
Product Description	5
Safety Instruction	5
Mounting	6-19
Dismounting	21
Storage	21
Disposal	21

Attention:

Read this instruction manual carefully and completely before mounting and usage. Keep this manual for future reference.

Dear Customer,

Congratulations and welcome to our Villa Pergola family. To enjoy your Villa Pergola for its lifetime and for you and other's safety, please follow the assembly instructions. Before you start the assembly process and using the Pergola, we suggest you are best to get familiar with this product. Make sure all parts listed up in below packing lists are delivered and intact. If you find that there are parts missing or damaged please do not install the pergola but contact us immediately. Do not start the assembly process if parts are missing or defective.


Tools and man force

Recommended: 2 or 3 people

Additional tools:

- 1. Ladder
- 2. M10/13 open wrench supplied
- 3. Rubber mallet
- 4. Tape measure
- 5. 5mm hexagon wrench supplied
- 6. Pencil
- 7. Spirit level
- 8. Electric drill




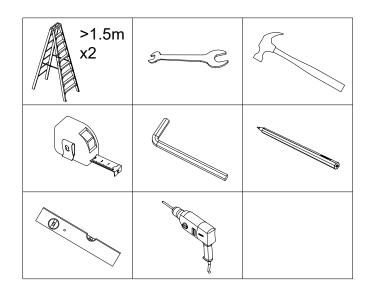

Parts List


Please check all parts against the parts list before commencing construction of pergola.

SIZE:13'x19' or 400X600CM PARTS LIST:

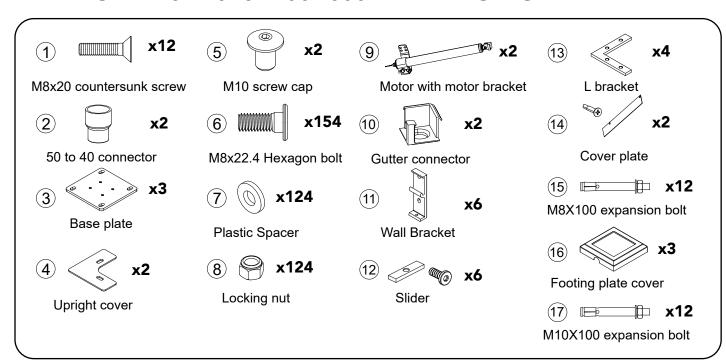

SIZE:13'x19' or 400X600CM PARTS LIST:

Please check all parts against the parts list before commencing construction of pergola.

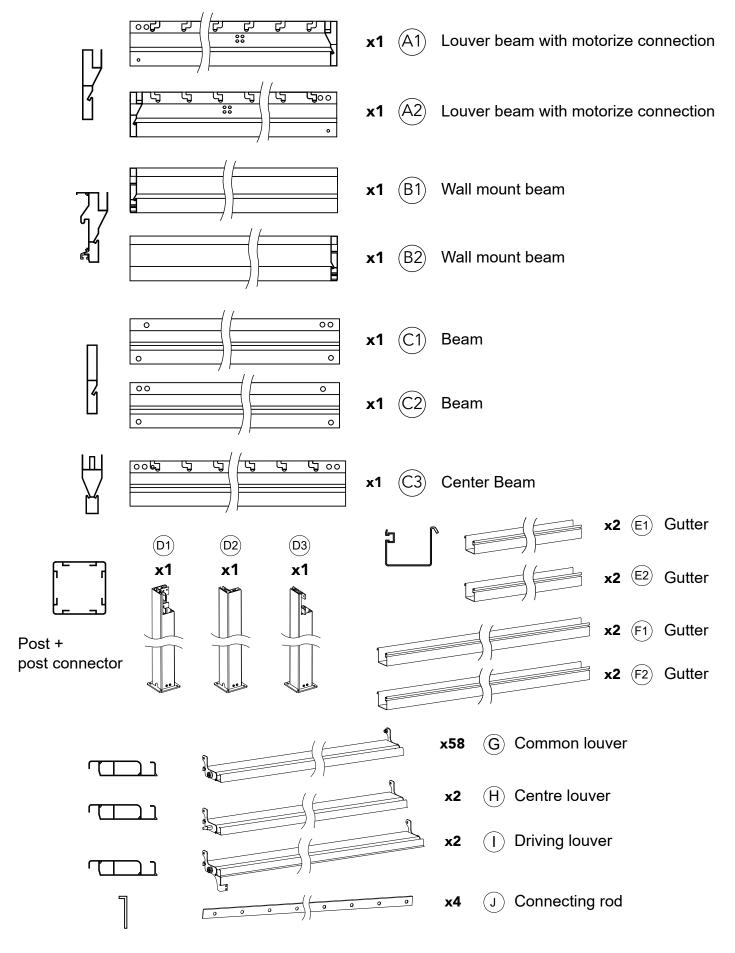

Product Description:

Make the most of your outdoor living area with your pergola.

Relax and enjoy the outdoors while being protected from sun.

The coated aluminum frame pergola is perfect for shading your garden, deck, courtyard and swimming pool.

Important Safety Instructions:

Warning: For the safety of you and other persons it is important to follow below instructions and obey warnings.

Symbol explanation



This warning triangle calls attention to hazards that that can lead to death or to severe injuries or which are important for the functioning of the Pergola.



This sign identifies important notes.

Safety instructions



To install this pergola technical knowledge is necessary.

Do not mount this pergola yourself but contact a professional workman for help if



- you are unsure if the pergola can be mounted on the place you chose for installation.
 - you do not understand the instruction manual or parts of it.
 - you do not have necessary tools available.
 - you do not have necessary technical knowledge



A minimum of three healthy adults are required to move and install the pergolaas the product is big and heavy. Do not try to install the pergola alone. If the pergola falls, it could cause serious injuries and damages! Contact an authorized assembler for help.



Do not install the pergola when you find damage parts are that parts are missing. Contact your dealer.



Keep children and pets out of the working area during assembly and adjustments.



This product and its fixing parts are only suitable for installation on a plain cement wall or stable brickwork. If the wall/brickwork shows cracks you have to consult a professional.



Nobody is allowed to change the products' design and structure without the permission of manufacture or authorized deputy.



Please make sure that your hands are clean at the time of the assembly; otherwise you may soil frame.




Nobody is allowed to climb onto the Pergola. Hanging anything on the Pergola is forbidden. Sheeting was used to protect the paint. This must be removed afterwards.

This structure is a non-permanent structure and the warranty does not cover damage incurred under extreme weather conditions including heavy rain, high winds or if exposed to high heat from heaters or BBQs.


Safety precautions should always be followed when assembling and using this product to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use. Never leave children unattended around/under this pergola. Do not attempt to assemble or use the pergola in moderate or heavy wind conditions. Always keep the pergola louver open and secure it during heavy winds or extreme weather conditions to avoid damage to the pergola or personal injury.

Attach base plate 3x2 to the bottom of posts (D1x1, D2x1, and),use bolts 1x8 to attach with hex key or electric drill

(D1) (D2) posts should be installed diagonally as below

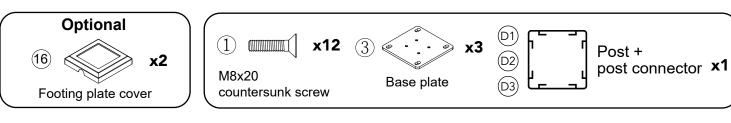



***NOTE: If you will need to cover the anchor with footing plate cover, put them on before attach base plate to post

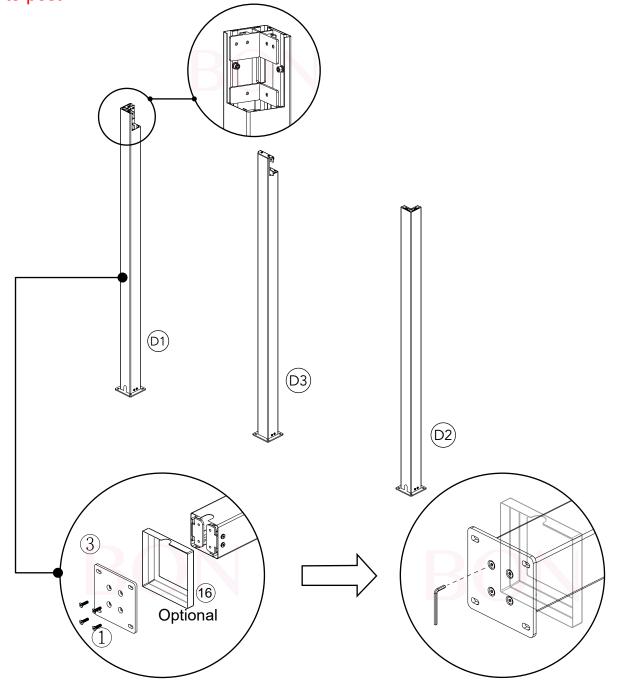




According the height of (C2) to measure the height of (15), use anchor to fasten

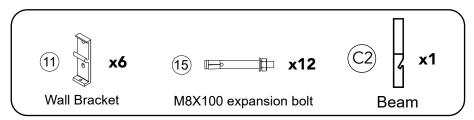

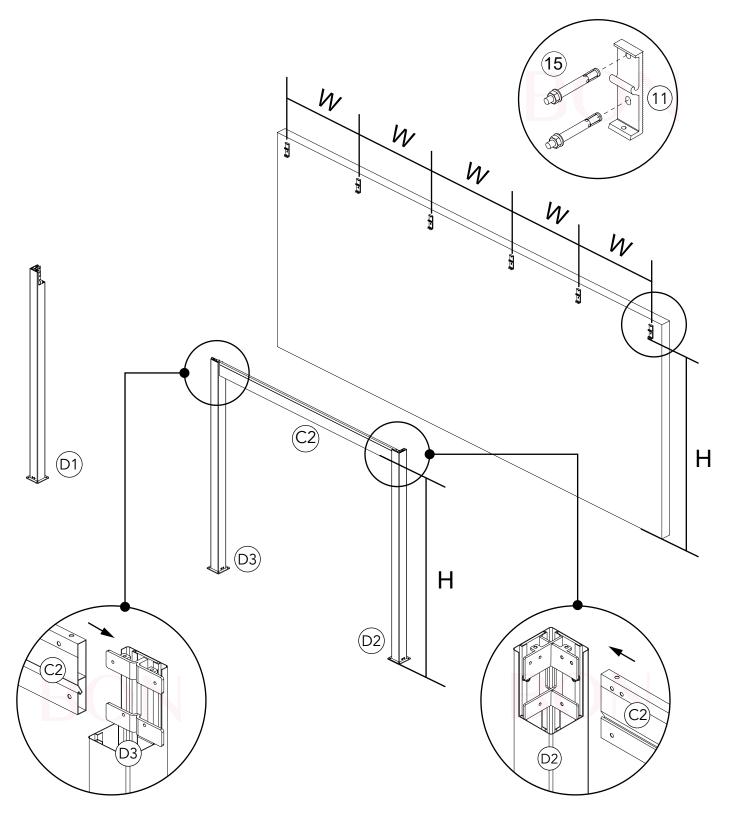





Use bolts (12) x6 to fasten beam (B1) & beam (B2)

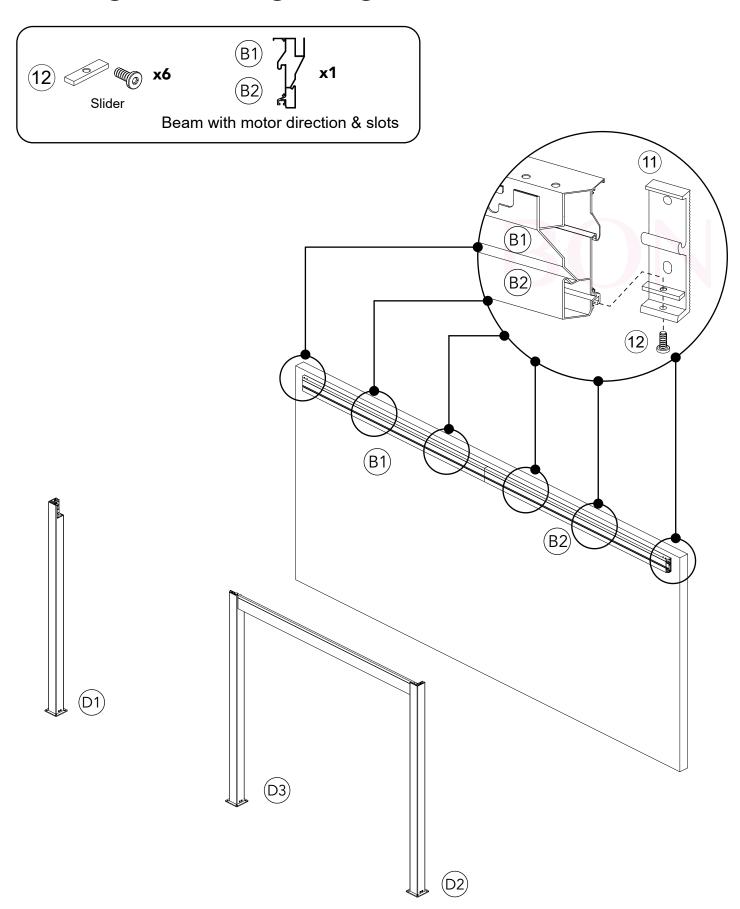



Connect (A2)/(B2) with (13), fasten the screws, and insert the middle beam (C3) Lock the screws. Connect the (B1) and (B2), insert (C1) into (D3), fasten the screws.

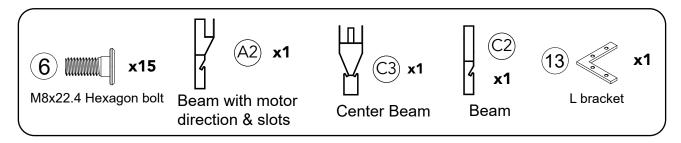


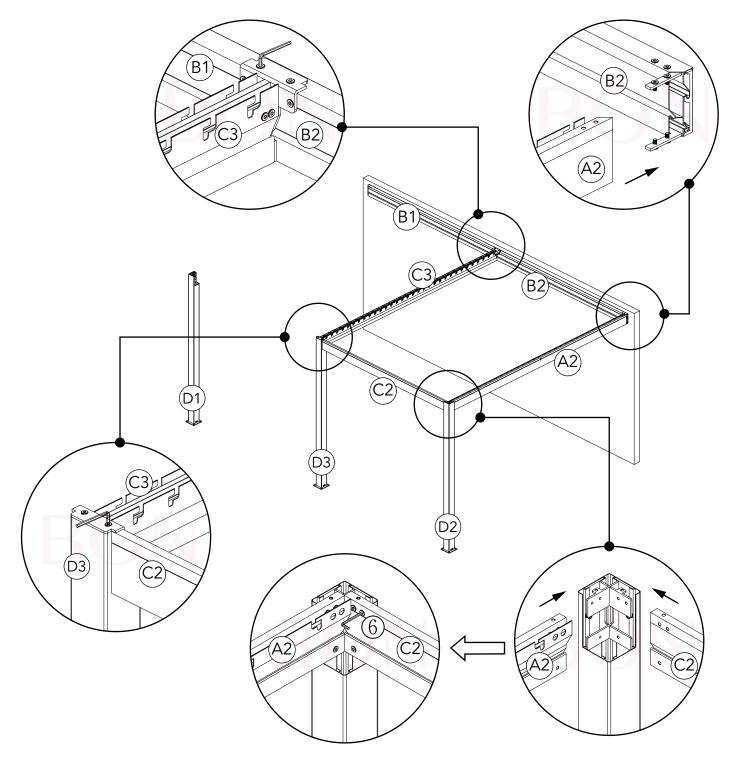



Insert the \bigcirc A1 / \bigcirc C1 into \bigcirc D1 ,then connect \bigcirc B1 with \bigcirc D3 ,fasten the screws.




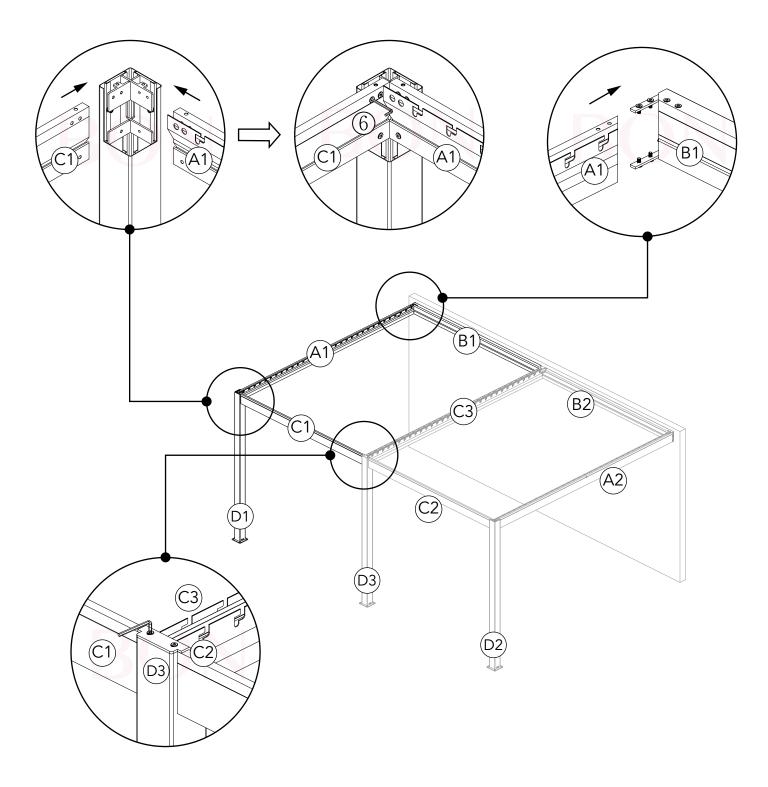





Cover the post with 4 x 2, fasten the screws.

Cover the beam on both sides with (14), fasten the screws

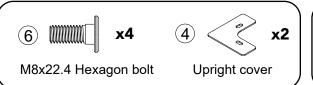


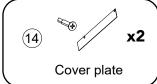


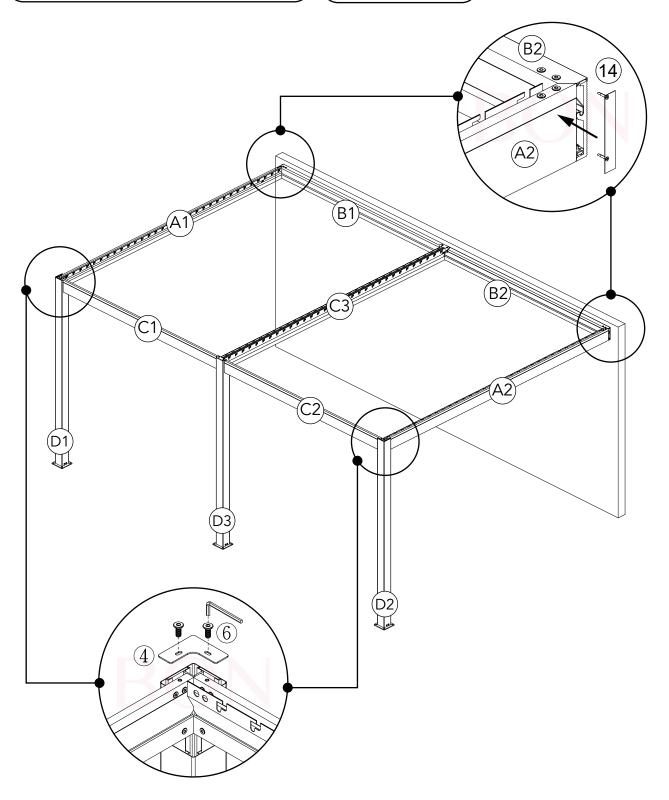




Placed all gutter $\stackrel{\textstyle \leftarrow}{(E1)}$, $\stackrel{\textstyle \leftarrow}{(E2)}$, $\stackrel{\textstyle \leftarrow}{(F1)}$, $\stackrel{\textstyle \leftarrow}{(F2)}$ in proper position as picture

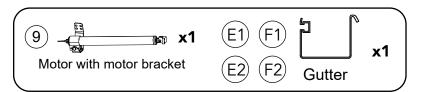


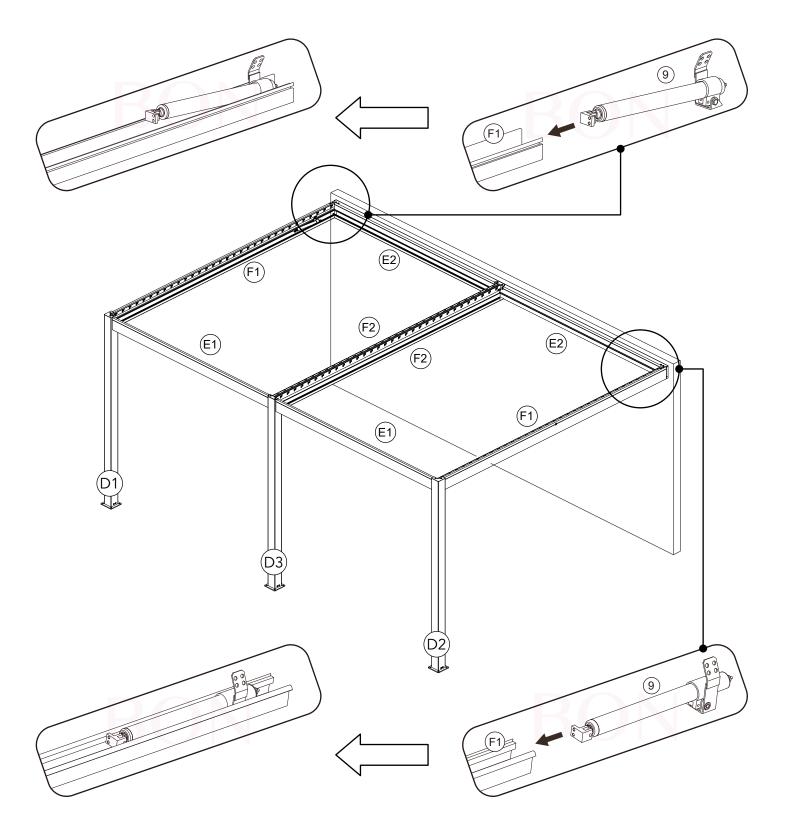




- 1. Fasten 10 x2 gutter connector
- 2. If motor wire is running downward through the post, use ② to connect with ① as shown below to not allow water drain through this post.

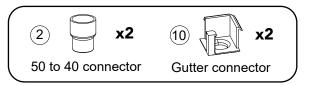

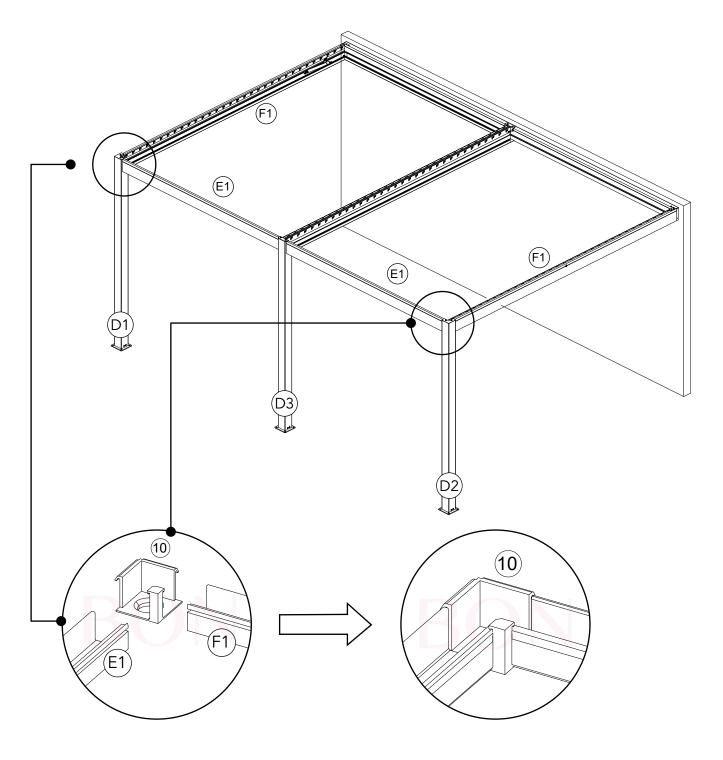




Fasten motor (9) x2 with its screws as shown below.

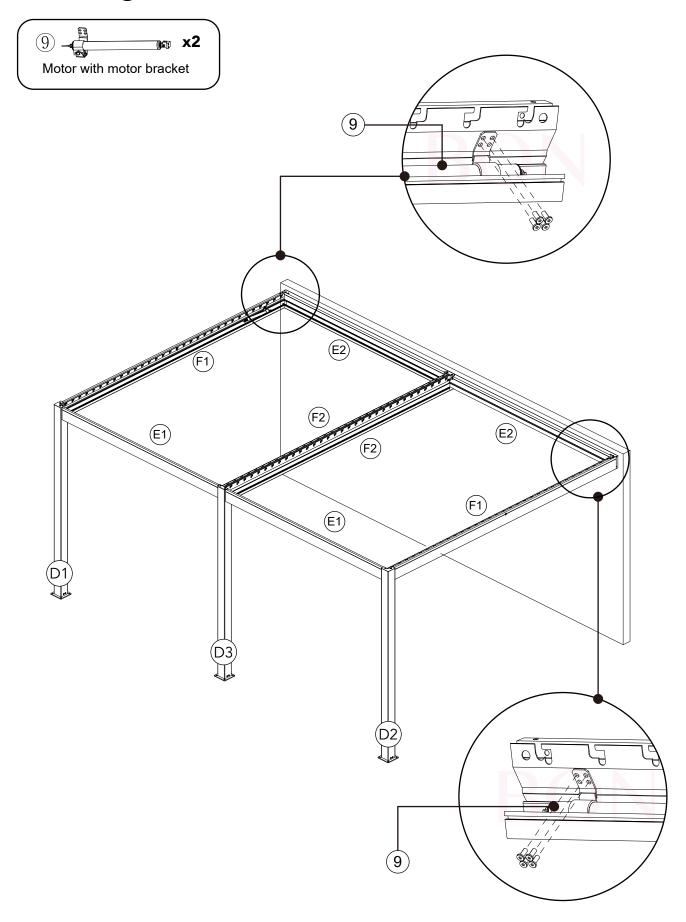




Connect the female and male plugs for the LED lighting (DC24V to DC24V) and motor (DC24V to DC24V) and Plug the power cable into local socket.

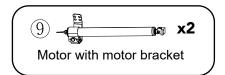

***Note: You can test your motor at this stage. Plug in and use its remote.

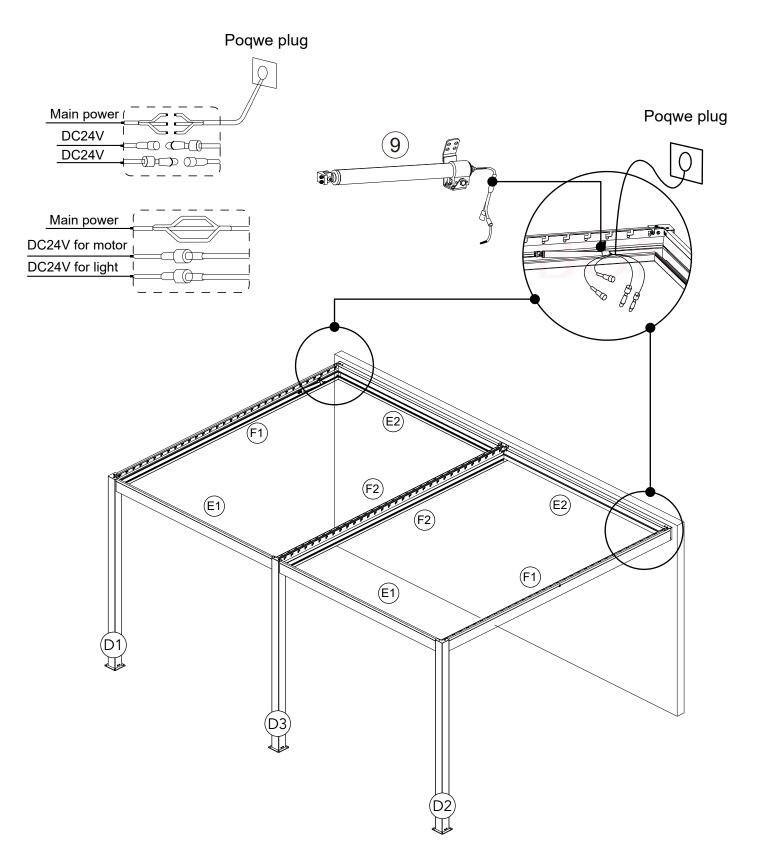





Place center louver (H)into 16th slot, lining up with the holes

Using M10 nut (5) x2, secure the louver in place

Place Steering louvers (I) x2 in line with 7th slot on the beam (A1) and (A2)

Fit all common louvers (G) x58 into the remaining slots in the beams

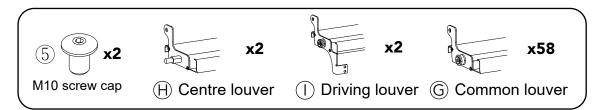

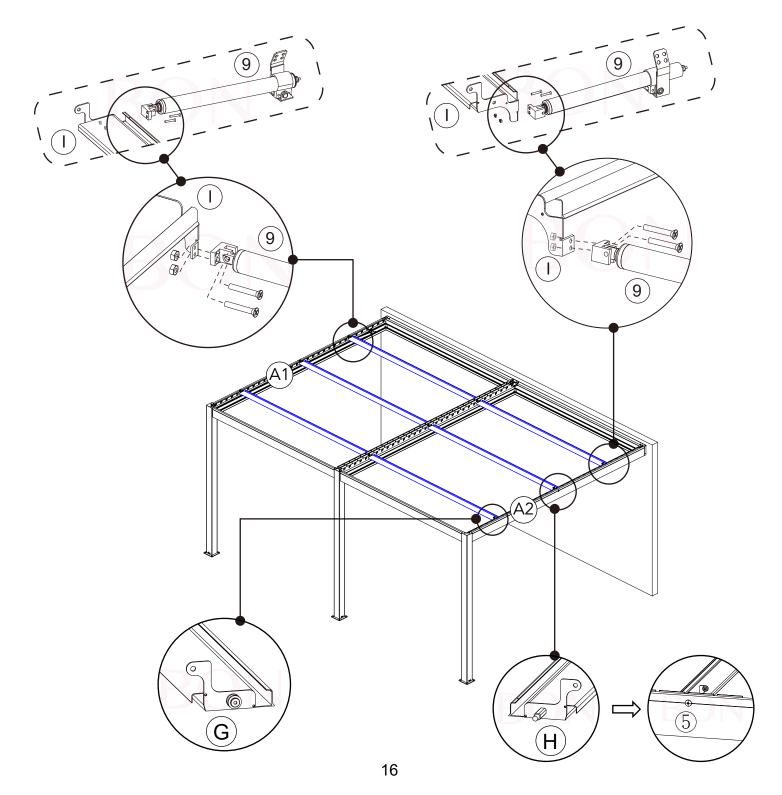




Fix (J) x 4 (flat L-shaped aluminum profile).

One for each other of the slats is required.

Use bolt 6 x124, plastic spacer 7 x124 and nut 8 x124 to tighten for 600X400cm size. Secure the louvers at each end.


***NOTE:


- 1. Do not over tighten. If over tighten, louver will not move and possibly damage the louver driver component. Please test the louvers are rotatable by hands smooth and easy to confirm it's not over tighten.
 - 2. Please make sure the Nylon Washer is in between the J and Louver End Cap.

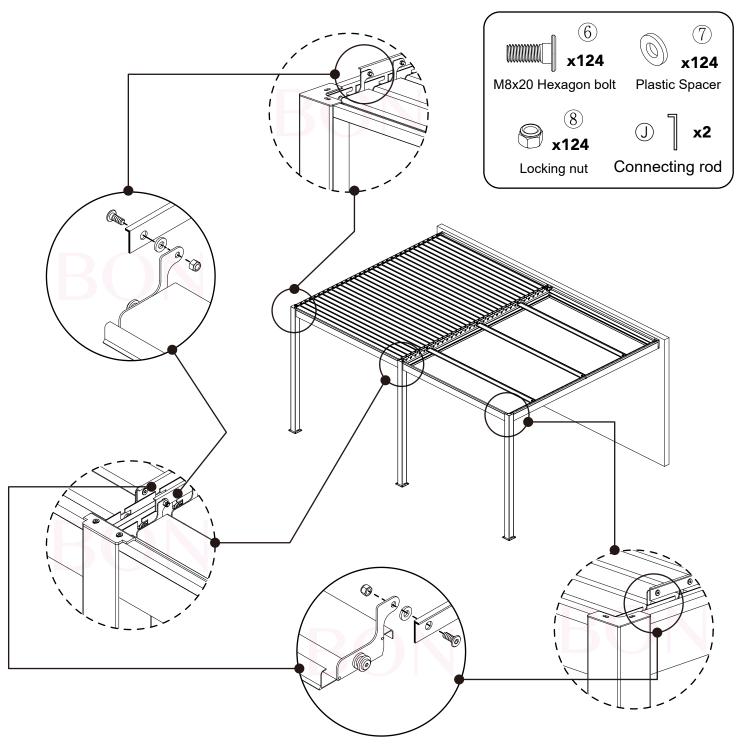



- *Check for diagonal distance in between the posts L1~L4 and K1~K4 are equal.
- *Please note, this step is very important to ensure the pergola are in a rectangle shape in any angle. It's extremely important if you are installing a screen before anchor the pergola down or afterward.

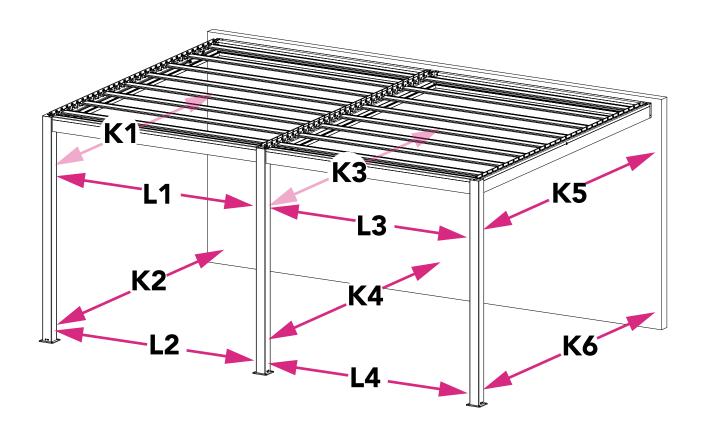

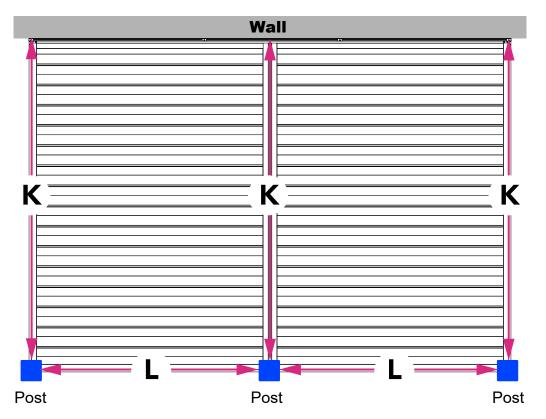




Mark holes for Wedge Anchor/Bolt (17) x12 for each post Note the drill size should be 12 mm.

Insert the bolts. Use a hammer drill if necessary. Place the posts over the bolts. Tighten the nuts.

Once installed, make sure any remaining plastic is removed and silicone is used along all corners and gutters to be waterproof.

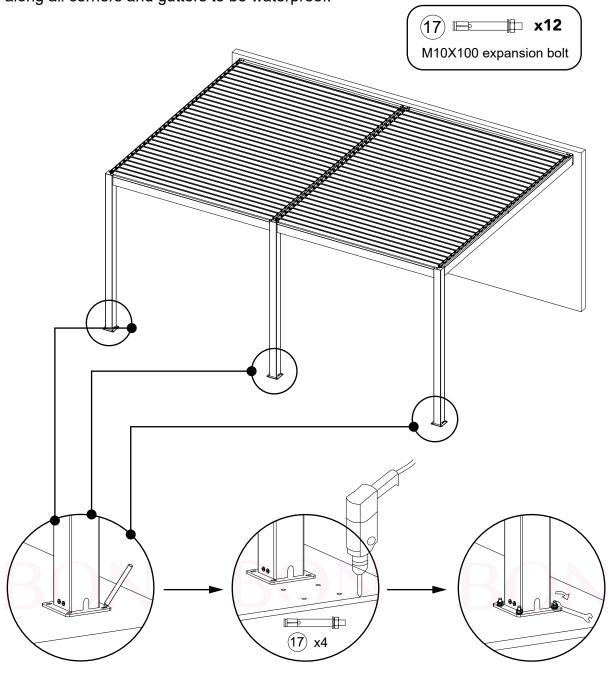

IMPORTANT NOTE:

If you order the screens, please anchor down the pergola to the ground AFTER installing the screens onto the pergola as it might require minor adjustment to make screens fit perfectly.

WARNING:

Make Sure louvers are open during periods of mild to strong winds to avoid damage overtime


Motor set up

Operating Instructions for Remote Controller with Light Control

1.Function and Features


- * 86mm*86mm, in accordance with international installation standard;
- * The electric structure is partial conformity with the standard fire protection requirement of the electrician;
- Metal grade microcomputer chip is used to improve product quality and reliability greatly;
- W Use shock-proof current relay;
- Components using precision SMT industry, surface moisture-proof treatment;
- ※ Power supply has safety protection, power supply time is 5 minutes;

* It is used with various emiters and tubular motors.

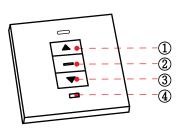

HC-PM03F\D-T1

- ① Motor: Up button
- ② Motor: Stop button
- 3 Motor: Down button
- 4 Light bulb: turn on/off button

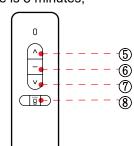

HC-PM03\D-T1


- **5** Motor: Up button
- 6 Motor: Stop button
- 7 Motor: Down button
- ® Light bulb: turn on/off button

2.Product Parameters

Product name	Remote controller with light control
Product model	HC-PM03F\D-T1
Receiving/ transmitting frequency	433.92MHz
Working temperature	-20°C~+85°C
Receiving sensitivity	-110dBm
Allowed number of transmitters	≤8pcs

Product name	Remote controller with light control
Product model	HC-PM03\D-T1
Receiving/ transmitting frequency	433.92MHz
Working temperature	-20°C~+85°C
Receiving sensitivity	-110dBm
Allowed number of transmitters	≤8pcs

3. Operating Instruction

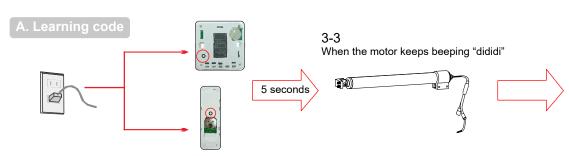


3-4

Press the "up button" of the remote control once and hear the beep of the motor, and the code matching is successful





3-1 Must unplug over 10 seconds before plug in 3-2
Within 7 seconds after plug in or power on
Open the back cover of the remote control and press and hold the code key for more than 5 seconds with a fine needle.

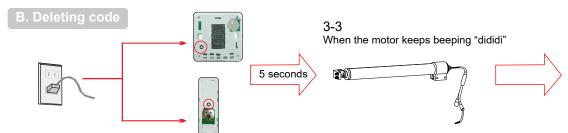

3-4

Press the "down button" of the remote control once and hear the beep of the motor, and the code matching is successful







Dismounting

If you want to disassemble the Pergola, please follow the following process.

Attention! At least two people are needed for this step.

- Keep the Pergola louvers open before you begin with dismounting. Bind the Louvers
 of the Pergola together to avoid unintended unfolding. This might cause damage and injury.
 You can use the protection band that was fixed on the Pergola when purchasing it.
- Follow the mounting instructions in reversed order to dismount the Pergola.
- Make sure that drilling holes in the wall will be sealed professional.
- Attention! Safety hints and instructions have to be followed for dismounting as well.

Storage

When you do not want to use the Pergola for a longer period of time it is recommended to take the Pergola out of the brackets and store it.

- Make sure that the frame is dry completely before storing.
- Store the Pergola at a dry and safe place that is not reachable for children.

Disposal

Do not dispose this Pergola with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling. Dispose packing materials according to local guidelines.