

XC-QL4-K1, 4-Station QuadLink Kit Quick Start Instruction Manual

What's Included:



- [1] QuadLink 4-Station
Charger Multiplier,
XC-QL4



- [1] Xtreme Charge Battery
Maintenance Charger,
XC400



- [1] Battery Tester,
XC-822-TEST



- [1] 2' Battery Leads with
Clips, XC-CLIPS



- [5] 2' Battery Leads with
Lugs, XC-LUGS



- [4] 5' Battery Extension
Lead, XC-EXT-5



- [2] 25' Battery Extension
Lead, XC-EXT-25



Xtreme
Charge
Battery
Charger



QuadLink



PulseTech™

XC-QL4-K1, 4-Station QuadLink Kit

Quick Start Instruction Manual

This Quick Start Instruction Manual is designed to help you quickly set up and use your 4-Station QuadLink Kit correctly. It is not intended to serve as a replacement for the product manuals themselves.

- (1) Turn off engine if battery is still connected.
- (2) Take the battery tester and remove the black negative (- NEG) probe from the tester (**Fig. 1**)
- (3) Touch the red positive (+POS) probe to the (+) battery post.
- (4) Then touch the black negative (-NEG) probe to the negative battery post.
- (5) The battery tester's LED will indicate the battery's state of charge (100%, 75%, 50% or 25%).
- (6) If battery state of charge is 75%, 50%, or 25% go to step 7. If state of charge is 100% go to step 12. All batteries should test at 100% prior to being connected to the QuadLink.
- (7) Connect the battery charger's 2-pin output connector to the 2-pin input connector of either the battery clips or lugs. (**Fig.2**)
- (8) Attach the red positive (+POS) battery clip or lug to the (+) battery post.
- (9) Attach the black negative (-NEG) battery clip or lug to the (-) battery post.
- (10) Plug battery charger into 110-220 VAC power source.
- (11) Charge battery until it's fully charged. This is shown by the green "100%" LED illuminating.
- (12) Connect your battery charger's 2-pin output connector to the 2-pin input connector of the QuadLink. (**Fig.2**)
- (13) Connect the QuadLink 2-pin output connector to the 2-pin input connector of either the battery lead with lugs or battery lead with clips.
- (14) Connect the lugs or clips to the battery. Be sure to first connect the red battery clip or lug to the (+) battery terminal. Then connect the black battery clip or lug to the (-) battery terminal.
- (15) Repeat as necessary for up to 4 batteries.
- (16) Once all cable leads have been connected to all the batteries, plug battery charger into 110-220 V ac power source.
- (17) Your 4-Station QuadLink Kit can remain connected indefinitely without danger of overcharging or overheating. Continued use will ensure existing sulfates on the battery plates are eliminated and will prevent new sulfate crystals from forming allowing your battery to charge deeper, maintain greater reserve capacity and last longer.

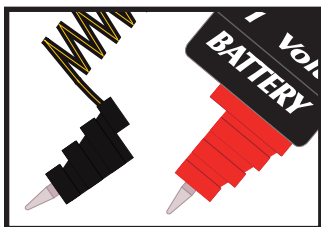


Fig. 1



Fig. 2

