

Floodlight with Charger

Compatible with Wyze Cam Outdoor

User Manual




The Wasserstein Wired Floodlight & Charger with Integrated Mount for Wyze Cam Outdoor is an ideal solution to enhance your camera's vision in low light outdoor conditions.

Table of Contents

Package Includes	2
Safety Information	2
Features	2
Installing Your Floodlight	3
Mounting Your Camera	6
Important Tips	7
FAQ	7
Specifications	7

Package Includes

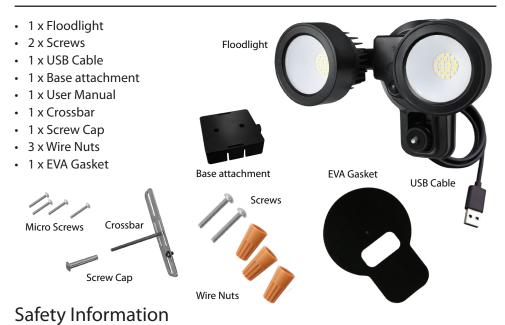

- Disassembling the light head is not recommended as it may cause damage to internal components. The floodlight may not function properly after disassembly.
- · Turn the main circuit OFF before installation.
- Do NOT remove the protective LED lens.
- Do NOT look directly at LEDs that are turned on for any length of time.
- Do NOT leave bare wires exposed outside the wall canopy enclosure.

Feature



PIR Motion Detection



IP65 Waterproof



Universal Female USB Charging



Integrated Mount

Pre-Installation


Note: If you are unfamiliar with electrical installations, we highly recommend hiring a professional electrician to perform the installation.

- 1. Make sure you have all the included materials.
- You will be working with electrical wires during the installation process. For safety reasons, shut off the power to your floodlight at the circuit breaker.




If You Have an Existing Floodlight


1. Remove your existing foodlight from the junction box, and disconnect the wires. If there is a crossbar attached to your junction box, remove it also.

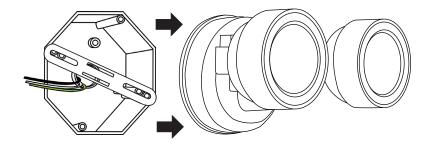

2. Remove the crossbar attached to your junction box.

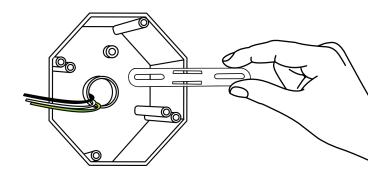


3. Secure the ground wire.

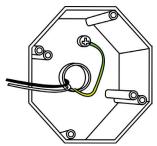

Installing the Floodlight to the Junction Box


1. Attach the crossbar included in the package to the junction box with the screws.

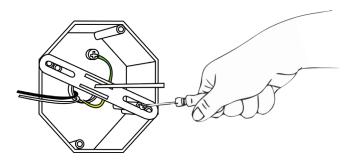

- 2a. Remove the protective tape from the EVA gasket. Press the adhesive side firmly against the rear of the floodlight.
- 2b. Ensure that the center screw hole and wire slot of the foam gasket are aligned with the screw hole and wire slot.




3. Before securing the cover of your junction box, thread the wires through the slot on the bottom of the plate to access them during installation.

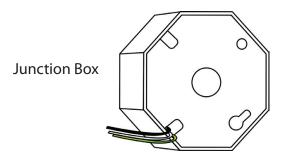

Wiring the Floodlight and Junction Box Through the EVA Gasket

The white wire on your floodlight is a neutral wire. The black wire on your floodlight is a hot wire.

- 1. Connect the green and yellow wire from the floodlight to the existing ground wire inside the junction box. Use the included wire nut to connect the wires properly.
- 2. Using a wire nut, connect the white neutral wire from the floodlight to the neutral wire of the junction box.
- 3. Using a wire nut, connect the black hot wire from the floodlight to the hot wire of the junction box.

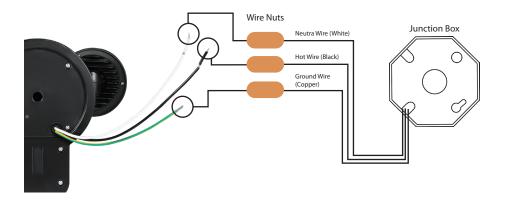

- 4a. Make sure the wire connections are secured. Carefully place the wires into the junction box.
- 4b. Mount the floodlight onto the crossbar and secure it with the screw cap provided.



Important: Before mounting the floodlight, completely apply the EVA gasket around the perimeter of the cover plate where the back of the cover plate meets the mounting surface. This prevents water from seeping into the junction box.


Switch on the electricity, checking that the wiring has been done correctly and that the floodlight turn on.

Note: The floodlight will provide continuous charging to the USB port 24/7, however, the motion sensor will only get triggered and turn the lights on when it is dark outside (i.e., during night time).



Mounting Your Camera (Wyze Cam Outdoor)

- 1. Remove the base of the Wyze Outdoor.
- 2. Attach the provided base attachment to the base of the Wyze camera. Making sure the orientation is correct as shown below in the diagrams.
- 3. Attach and screw in this base attachment connection tightly to the floodlight.
- 4. Attach the Wyze Cam Outdoor to the magnetic base making sure that the top part of the camera is attached.
- 5. Connect the included USB cable to the camera and press in firmly.
- 6. Open the USB port cap of the floodlight and connect the charging cable. Press in firmly.
- 7. Adjust the camera to your preferred viewing angle.

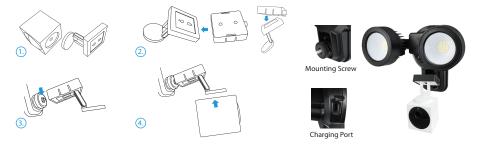

Important Tips

- 1. Assess where intruders are most likely to enter and the path they would take. Most intruders enter the home through a back door, patio door, or garage door. Therefore, it is advisable to place the floodlight near entrances to your home.
- 2. Mount the floodlight on walls that an intruder would walk alongside, such as a narrow pathway. The motion sensor works best when movements are detected parallel to the floodlight, not towards it.
- 3. You can also mount the floodlight beside your security camera to illuminate the camera's vision at night.
- 4. Although the floodlight is weatherproof, it is advisable to mount it to a wall shaded from the rain and sunlight to maximize battery life.

FAQ

One or more floodlight(s) is flashing on and off. What's going on?

There are several possibilities. Try the following items:

- Check your connection to the house power.
- Check the area around the floodlight. There may be something in the area (e.g. a small animal) that is triggering it.

The floodlight will not turn on. What's going on?

There are several possibilities. Try the following items:

- Check your connection to the house power.
- Leave the area for 10 minutes to give time for the floodlight to reset without you triggering them. Return and check the floodlight by turning off the power for at least a minute, then turning it back on.
- · Make sure you are testing the floodlight in darkness.

Specification

Material : PC + Aluminum

Sensor Angle Range : 120°

Sensor Distance Thresholds : 13 to 33 ft (4 to 10 m)

Max LED Light Intensity : 2000 Lumens
Color Temperature : 5500 - 6500 K
Power : AC 120V

Wyze Cam Outdoor not included.

W Wasserstein is not affiliated with Wyze Labs, Inc.

W Wasserstein is a trademark of Dropcases Ltd.

Wyze Cam Outdoor is a trademark of Wyze Labs, Inc.



For more information, visit: www.wasserstein-home.com or contact us at: contact@wasserstein-home.com

Made in China