



**KODIAK™**  
**CANVAS**

## Owner's Manual

For Models 6010, 6014, 6055



**Important!** For safe and proper assembly, use, and care read and follow all instructions. Everyone who uses this tent should first read this manual.

## **Kodiak Canvas Limited Lifetime Warranty**

This product is warranted, to the original purchaser, to be free of defects in materials and workmanship for as long as you own the product. This product is made with quality materials and expert workmanship, but is not indestructible. This warranty does not cover damage attributed to or resulting from normal wear and tear (e.g. exhausted zippers), natural hazards (e.g. weather, animals), abuse (e.g. mold, mildew, burns, ultraviolet), or alterations or modifications of any kind. If your product is found defective, we will repair or replace it free of charge. Charges for shipping your product to Kodiak Canvas will be your responsibility. We reserve the right to make substitutions if parts are unavailable or obsolete. If your product needs repair beyond what is covered under warranty, we will provide parts and service at a reasonable charge.

This warranty gives you, the original purchaser, specific legal rights. You may also have other rights which vary from state to state. **Do not return your product until you have received authorization and instruction to do so.**

To obtain service contact us at **[www.KodiakCanvas.com](http://www.KodiakCanvas.com)**, or write to:

Kodiak Canvas Customer Service  
78 South Fairfield Rd. #101-109  
Layton, UT 84040, USA.

# **WARNING**

## **No Fire**

This tent is flammable. Keep all flame and heat sources away from the tent fabric. Never place a stove, campfire, or any other flame source in or near your tent. Never use, light, or refuel a stove, lantern, heater, or any other heat source inside your tent. Death by carbon monoxide poisoning and/or serious burns are possible.

## **Ventilation**

Maintain adequate ventilation inside your tent at all times. Death by suffocation is possible.

## **Anchor**

This tent is not free-standing. If not properly anchored it will collapse. Anchor your tent properly at all times to reduce the risk of loss or injury to the tent or occupants.

## **Campsite Choice**

Carefully consider the possibility of falling rocks or tree limbs, lightning strikes, flash floods, avalanches, strong winds, and other objective hazards when choosing a campsite to reduce the risk of loss or injury to the tent or occupants.

## **Children**

Do not leave children unattended inside a tent or camp.  
Do not allow children to assemble or disassemble the tent.  
Do not allow children to remain closed-up in a tent on hot days.  
Do not allow children to swing on or hang from any part of this tent, organizers, or guylines. Failure to follow these warnings may result in injury and/or death.

## **Before You Set Out**





- It is recommended that you assemble this tent at home at least once before your trip to familiarize yourself with the process, and make sure your tent is in good order.
- After initial set-up it is recommended that you spray the tent lightly with water and allow it to dry completely. This “seasons” the canvas. The water causes the canvas to shrink slightly, closing needle holes where the canvas was stitched. This process is only required once.

# Component Checklist for 10x10 Tents (Model 6010, 6055)

- Identify all components and make sure they are in good condition and working order.

Qty	Item
1	Tent Body
1	T-pole with Sliding Brace
1	T-pole
4	Spring Rods
2	Upright Poles
2	Awning Poles
2	Adjustable Guylines
1	Pocket Organizer*
1	Mesh Bag Organizer *
1	Gear Loft*
18	12-inch Metal Stakes
1	Strap-and-Cinch Tent Bag
1	Pole Bag
1	Stake Bag

\* Organizers and Gear Loft Included Only with Model #6010

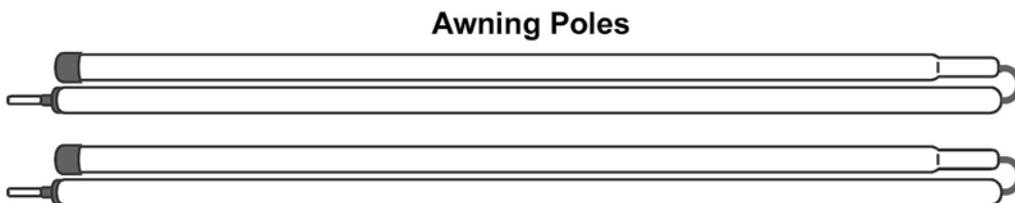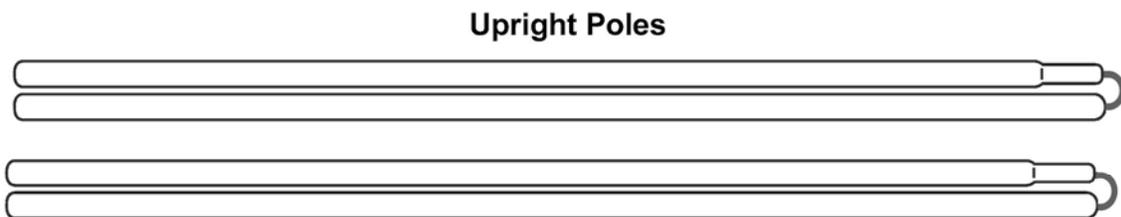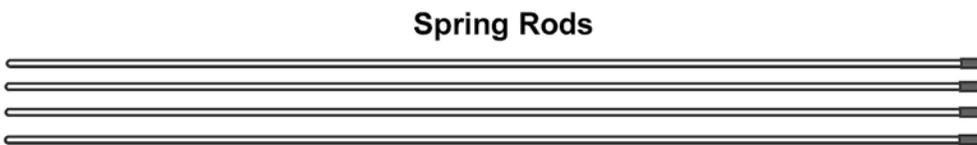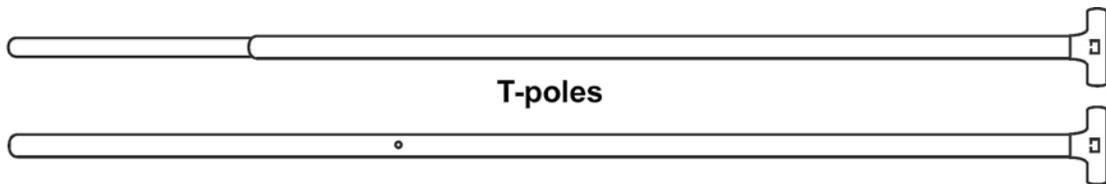


# Component Checklist for 10x14 Tents (Model 6014)


- Identify all components and make sure they are in good condition and working order.

Qty	Item
1	Tent Body
1	T-pole with Sliding Brace
1	Two Piece T-pole
4	Spring Rods
2	Upright Poles
2	Awning Poles
2	Adjustable Guylines
1	Pocket Organizer
1	Mesh Bag Organizer
1	Gear Loft
18	12-inch Metal Stakes
1	Strap-and-Cinch Tent Bag
1	Pole Bag
1	Stake Bag


T-Pole with Sliding Brace




Two Piece T-Pole




Spring Rods



Upright Poles

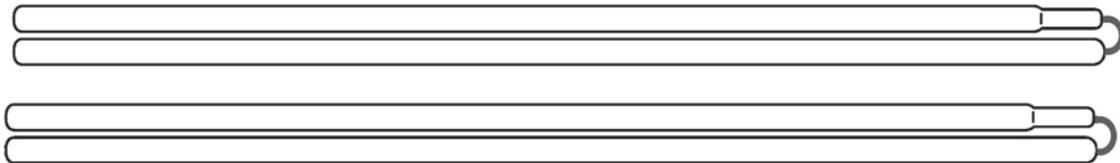

Awning Poles

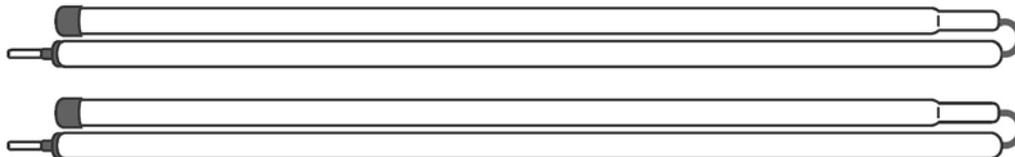

# Assembly


The use of protective gloves and eyewear is recommended during assembly.

## STEP 1: Stake the Tent

Stake each of the tent's four corners, making sure that the tent is taut and square. Continue to place a stake at all the remaining stake loops (14 total) and D-rings (2). Do not over tighten.


### Tips:

- Staking opposite diagonal corners first helps square the tent.
- Drive in stakes with the tip angling toward the tent. Secure hooks on the end of the stakes over the tent loops.
- In soft sand or snow, use a dead-man anchor. Bury a horizontal piece of wood approximately 12 – 18 inches deep with a guyline connecting to the stake loop. **Make sure that the anchor is secure.**

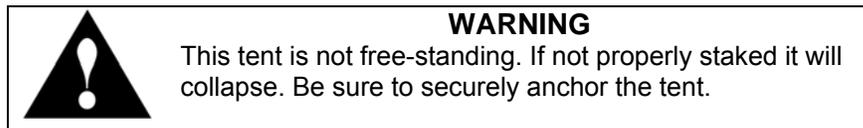


## STEP 2: Assemble the Frame

- 1) If you have a 10x14 tent, join the two piece T-pole.
- 2) Lay both T-poles across the top of the tent. One side of the T-pole connector has a post. Face the post down.
- 3) Insert a spring rod through each of the sleeves on the top of the tent and into the T-poles. **Be sure that the rods are inserted completely or parts may be damaged!**

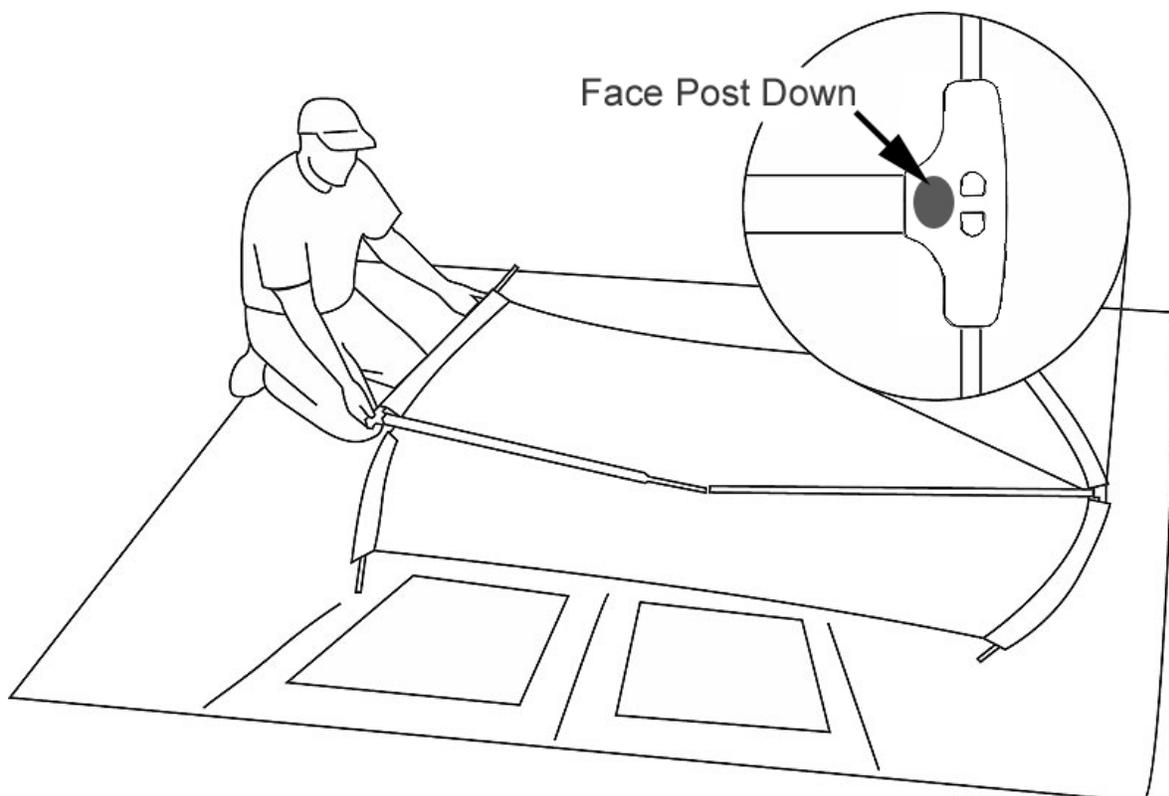


- 4) Match the ends of the T-poles so that they are touching. Grasp both poles firmly and push down.

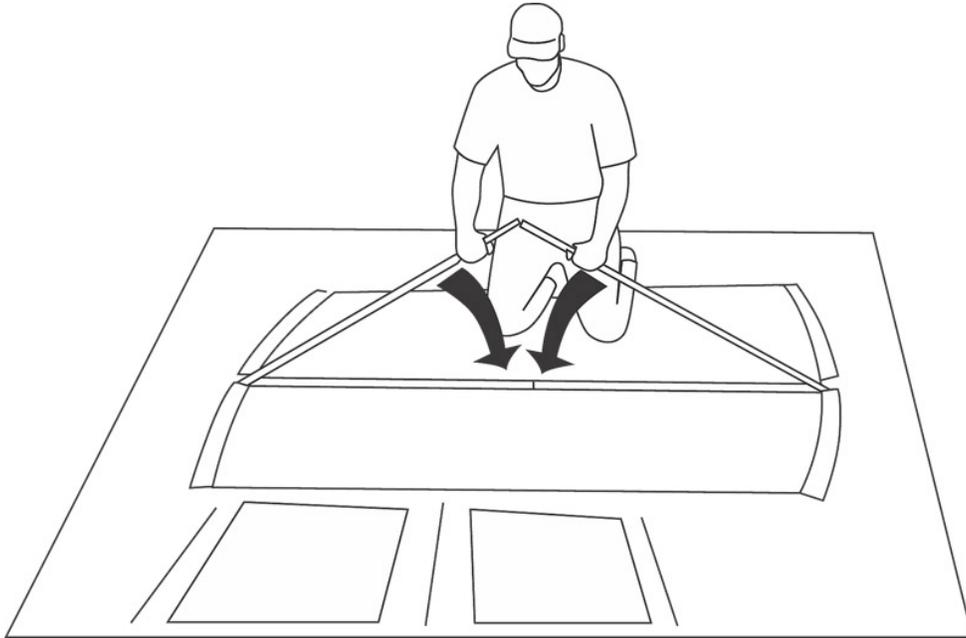

**WARNING**

Poles are under tension. Grasp poles firmly. Keep face away from poles. Keep hands away from the pole joint to avoid pinching.


- 5) Slide the metal brace over the pole joint until the push pins in the pole lock the sleeve into place.  
NOTE: To disassemble, push the pin in to slide the brace away from the joint.
- 6) Join upright poles.
- 7) Unzip doors to allow air to enter. Raise the tent end and insert the end of the upright pole onto the post on the bottom of the T-pole. Lift the pole and place pole bottom over the pin attached to the D-ring at the bottom of the tent.

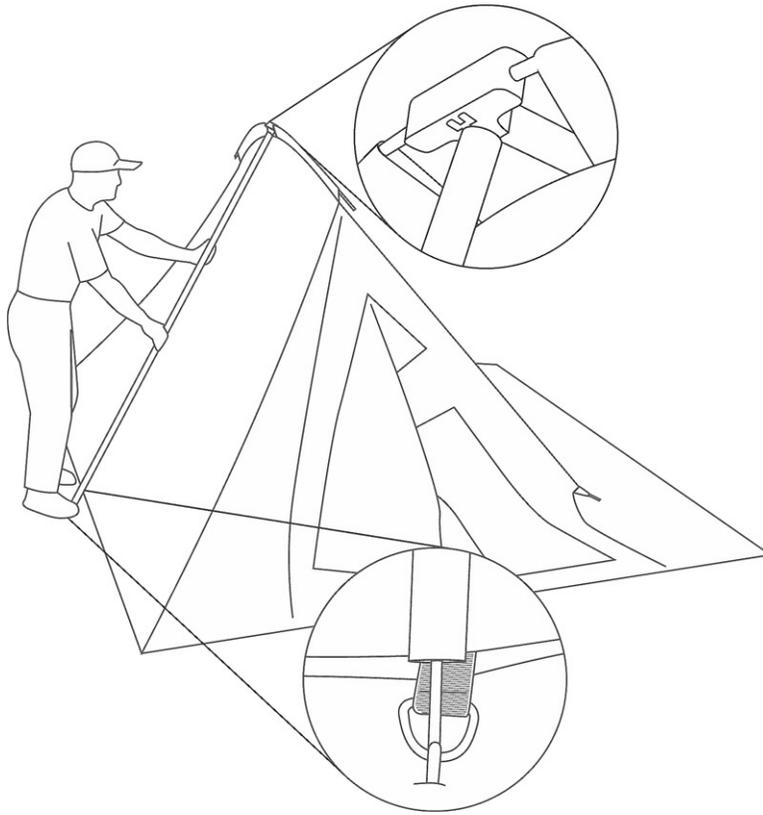

**WARNING**

Hold poles firmly. Avoid pinch points.


8) Repeat step 7 for the other side of the tent.

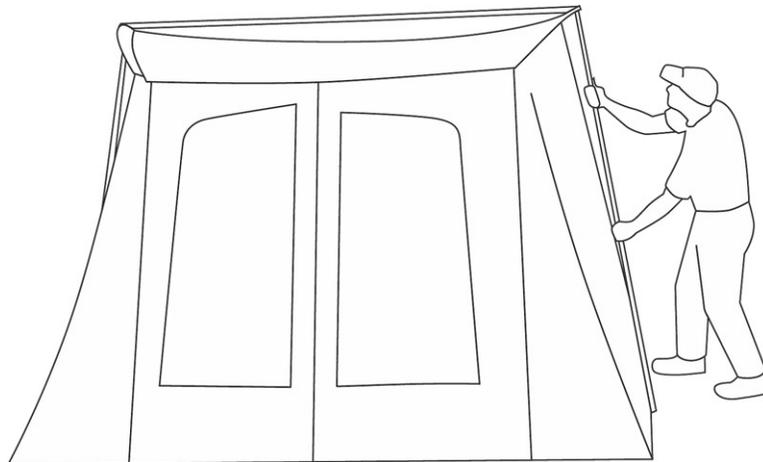

**STEP 3: Awning Set-up**

1) Join awning poles. Place the tip of the assembled pole through grommet at the end of the awning.

2) Tie a small loop in the end of the guyline. Place loop over the tip of the pole. Stake the guyline. Adjust slider so guyline is taut. Repeat on other side.

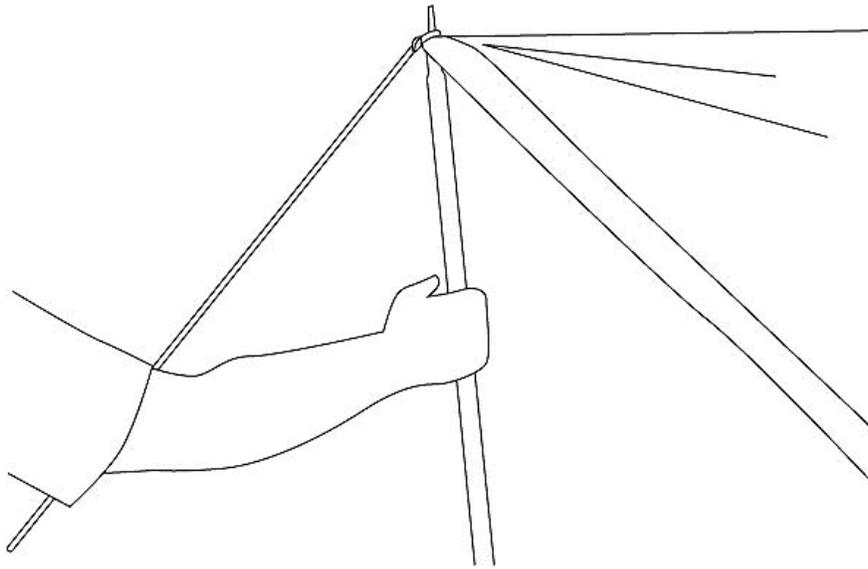

**Tips:**

- When in use, slant awning down and away from tent so rain will drain away from tent.
- When stowing, roll awning down and under so water will run off and not pool on the roll. This is best done with two people.
- In strong wind or heavy snow conditions, roll and stow awning.

## Special Features

- Funnel-flow vents. Designed so a gentle exterior breeze will actually funnel into the vents and force air to move through the tent. Positioned at the top to help allow heat to escape on a hot day. Zip them closed when not needed.
- 14 interior tie-rings (12 ceiling, 2 floor). Use them to clip on the organizer accessories, attach gear, lights, clotheslines, or privacy curtain divider (sold separately).
- Gear loft (Models #6010, 6014 only). Can be used in horizontal style or sling style. For **sling style**, fold lengthwise. Clip two of the loft clips into one of the corner tie-rings, and the other two clips into the other corner. For **horizontal style**, clip one corner of the sling into a corner of the tent. Clip the next corner of the sling into the other tent corner. Then clip the loft into the tie-rings next out from the corners.
- Pocket Organizers (Models #6010, #6014 only). There are two that are permanently attached and two that clip on. Clip them just under the vents. Put one on each side or clip one to the bottom of the other.



**WARNING**

Tie-rings, gear loft, and organizers are designed for lightweight gear and personal articles. Do not place heavy objects in them or damage to the tent or injury to the occupants may occur.

- Cinch button tie-backs. Securely tie back doors, windows, and awning.

## Taking Down and Storing the Tent

### STEP 1: Clean and Dry

- 1) Sweep out any dirt or food particles.
- 2) Empty all storage pockets.
- 3) Allow tent to dry completely! Zip down windows and allow tent to air out and dry inside and out.



#### **CAUTION**

VERY IMPORTANT—Your tent must be completely dry before storage! Storing a wet or damp tent, even for a short time, will ruin it and void the warranty. This causes mildew and mold that will cause a bad odor, stain, and deteriorate the canvas and its water repellency.

If you must take the tent down while still wet or damp, loosely roll it for transport. After transport, immediately unroll and set up or hang out to dry thoroughly before long-term storage.

### STEP 2: Collapse Tent

- 1) Unzip windows and doors.
- 2) Collapse Upright Poles.
- 3) Grasp T-pole firmly. Push in push-pin and slide back the brace.



#### **WARNING**

Poles are under tension. Grasp poles firmly. Keep face away from poles.

- 4) Remove all poles and stow in pole bag. **Note: A slight permanent bend in the spring rods is normal.**

- 5) Remove stakes. Clean off moisture and dirt and store in stake bag.



#### **CAUTION**


To avoid tearing or damaging the tent, do not remove stakes by pulling with the tent stake loops. Use a hammer, a piece of rope, or a stake puller to remove stakes.

### STEP 3: Storage

- 1) Fold tent in half lengthwise.
- 2) Fold again lengthwise (now in quarters).
- 3) Fold this in half.

4) Place tent bag flat (instruction side facing up).

5) Roll tent tightly and place on tent bag as shown below. Tuck stake bag at either end. Fold ends over the tent. Strap and cinch.

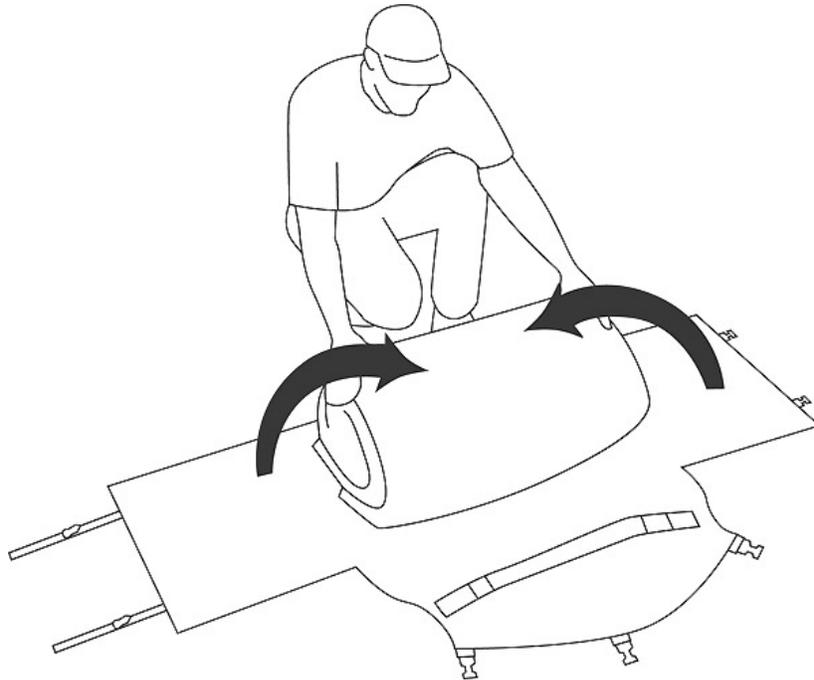

6) Fold Cover over. Strap and cinch. Tuck in loose ends.



# Care

- **VERY IMPORTANT**—Your tent must be completely dry before storage! **STORING A WET OR DAMP TENT, EVEN FOR A SHORT TIME, WILL RUIN IT AND VOID THE WARRANTY.**
- To clean tent, hose down with water and wipe with a cloth. Soaps and detergents can damage the water-repellant treatment of the canvas.
- Do not spray insecticides or bug repellent directly on the canvas. This may damage the water-repellant treatment.
- For long-term storage, store in a cool dry location that is not exposed to direct sunlight.
- This tent is equipped with top-quality YKK zippers. To prolong zipper life, do not “grind” zippers around corners. If needed pull the canvas, windows or doors to help zippers glide smoothly. Keep them clean from dirt.
- The canvas on your tent has a special Hydra-Shield™ treatment that is watertight yet breathable. You should rarely, if ever have to retreat the canvas. If you do need to spot treat the canvas for water repellency, use a silicone based repellent such as Camp Dry® by Kiwi®. Other treatments will clog the tiny holes in the canvas eliminating its breathability.
- Winter camping can be an enjoyable experience in a Kodiak Canvas tent. However, it is not designed for heavy snow accumulations.

# Other Notes

- Condensation inside the tent is affected by the difference between inside and outside temperatures, and humidity. Condensation can be reduced by venting your tent. Condensation between the floor and a sleeping mat can be reduced by placing a ground cloth underneath the tent.
- Some slight irregularities are normal with 100% cotton canvas and will not affect the performance of your tent.

We appreciate your business. Thank you for purchasing a Kodiak Canvas™ tent. We put our pride into the design and manufacturing of this product. It is the best of its kind available. We wish you safe and happy camping. Please tell your friends about us.