


## LED STRIP INSTALLATION INSTRUCTIONS



PRODUCT SPECIFICATIONS	
INPUT VOLTAGE	12v DC OR 24V DC LED DRIVER See Product Data Sheet for specific requirements
WIRING	PARALLEL
MOUNTING	ALUMINIUM PROFILE OR HEAT SINK
MAXIMUM LENGTH	5,000MM-20000MM See Product Data Sheet for Maximum Length
REQUIREMENTS	12v DC OR 24V DC LED DRIVER See Product Data Sheet for specific requirements
DIMMING	0-1/10V, DALI, DMX, RF, WIFI
OPERATING TEMP.	UP TO 65° CELCIUS
AMBIENT TEMP.	-20° TO 50° CELCIUS
MAXIMUM RUNNING TIME	12HRS PER DAY- See Warranty T&C's for full Terms & Conditions
CRI	> 80 OR >90 See Product Data Sheet for specific requirements
BEAM ANGLE	120°
IP RATING	IP20   IP54   IP67
WARRANTY	3 YEARS REPLACEMENT* See Warranty T&C's for full Terms & Conditions

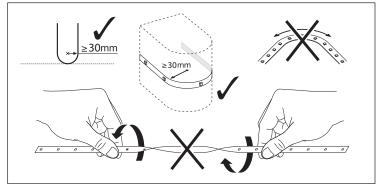


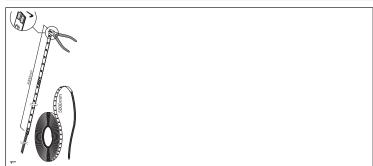


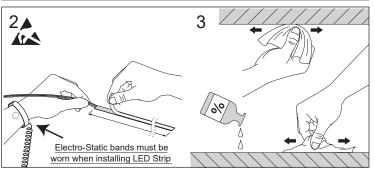

## PRODUCT MAINTENANCE AND PRECAUTIONS

- LED strip installation must be installed by qualified personnel.
- LED strip must be tested and photographed on before installation for warranty validation.
- For cutting LED strip, it is necessary to use the standard accessories
  provided by Havit Lighting (e.g. DC wire, end-cap, front-cap, adhesive,
  etc.), and according to the correct cutting and connecting methods for the
  installation.
- LED strip cannot be installed in areas where water hazards might be formed, such as the surface of pits and ditches. And similar places in which rain and water may be accumulated easily.
- LED Strip must be installed on aluminium surface including heat sink or profile, Aluminium sheets can also be used but must be 3mm or greater in thickness to comply with warranty.
- Do not strongly pull or twist the LED strips during the installation process.
   Also avoid squeezing and scratching LED strips with sharp objects.
- LED Strip must be operated within the correct ambient and operating temperature ranges specified on the product data sheets and also in table on this document.
- For correct connection of the product, each length of LED strip must be connected to the main power source.
- Do not bend LED Strip below 60mm in diameter, Bending below this diameter will cause strip to break and will void warranty.
- LED Driver should retain 20% of total load to make sure LED Strip has the full potential to work correctly.
- Voltage supplied to LED Strip must be with 5% of required voltage LED Strip requires to work correctly.
- Must guarantee that each power source (GND) must be connected.
- When cutting IP67 LED Strip, Make sure end caps are properly sealed to avoid any water ingress, Failure to do this will void warranty.
- Pay attention to the power cable during the installment process, Installer
  must not connect LED Strip incorrectly to LED Driver by making sure
  polarity is correct and output voltage of LED Driver is same as LED Strip,
  Incorrect installation may cause damage to LED Strip and warranty will be
  voided.
- Electro-static bands must be worn during installation to avoid any electricity being transferred to LED Strip and causing failure.
- During the warranty period, only defective products are acceptable to be replaced by Havit Lighting. Havit Lighting is not responsible for other expenses because of replacement, such as transportation fee, installation fee, etc.

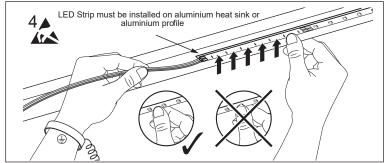

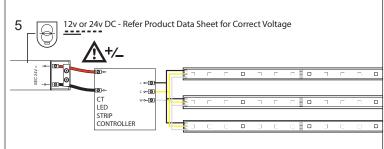



Web: www.havit.com.au Email: sales@havit.com.au Phone: 02 9381 8300



