


hollis+morris



**bolt
pendant 5'**

product installation + specifications

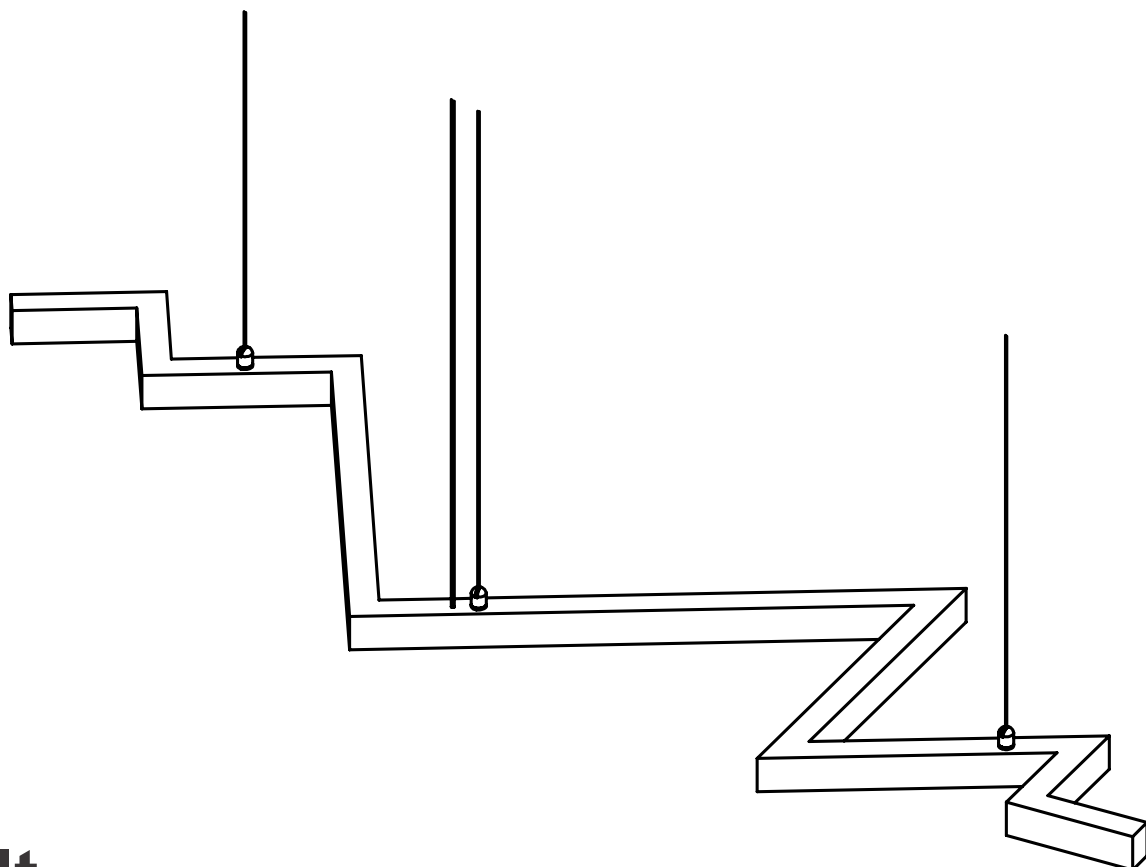

bolt pendant

product code:
BOLTpendant

materials:

- + solid wood
- + 24V LED extrusion
- + suspension hardware

finish:

- + hardwax oil
- + stainless steel hardware

input:

- + 120V 50/60 Hz (Canada + US)

driver:

- + 24V phase dimmable driver
- + driver included with canopy
- + 277 VAC- 0-10 dimmable driver (upon request)


output:

- + 75 W (4.4 W/foot)
- + 5700 lumens
- + 3000K with CRI of 95 or higher
- + equivalent incandescent- 75-100W


suspension:

- + cord length: 10' standard (custom lengths available)
- + 3-point suspension
- + single canopy connection

certification:

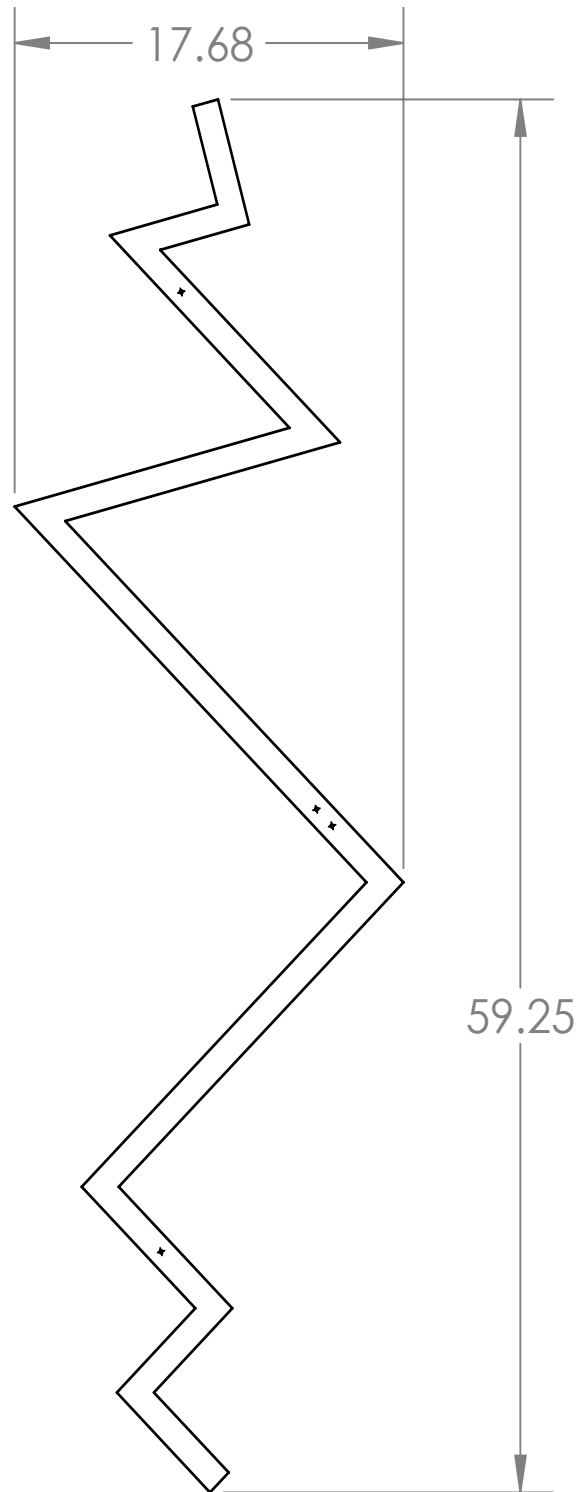


dimensions + installation

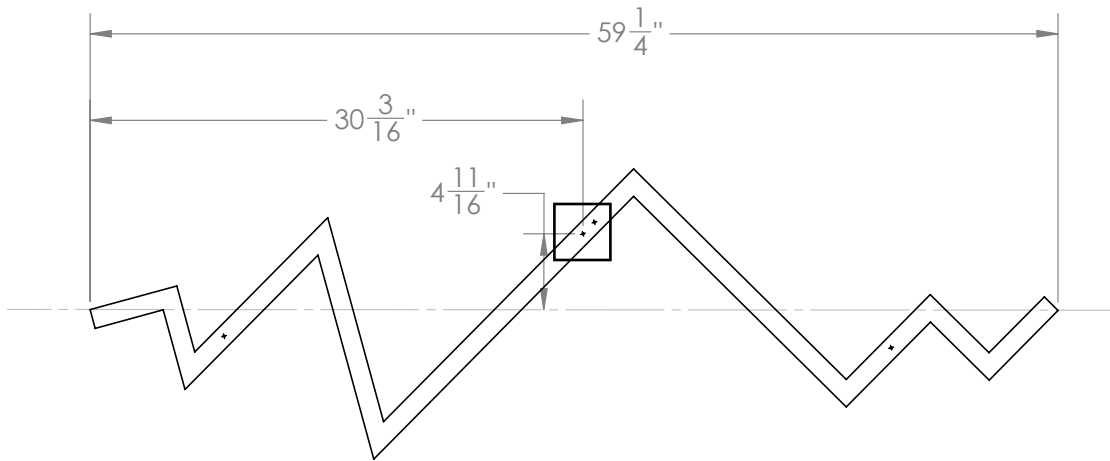

plan view- canopy & centre support location

1. Locate desired canopy location on ceiling and have a certified electrician supply and install to 120V power.
2. Connect braided suspension cable from fixture to ceiling or canopy as illustrated on pg. 4
3. Feed insulated power line into canopy as illustrated on pg. 4
4. Connect +/- leads to 24V transformer inside canopy.
5. Secure all connections.

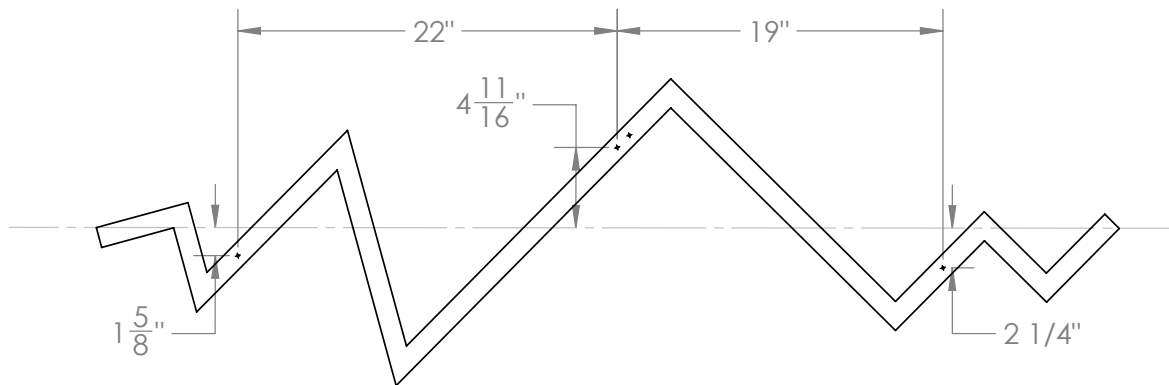


plan view- outer hanger locations




1. Locate remaining suspension cable points on ceiling as per drawing.
2. Install using supplied suspension hardware
3. Use hardware to adjust for vertical height and horizontal plane

dimensions + installation

Option A - Support from canopy

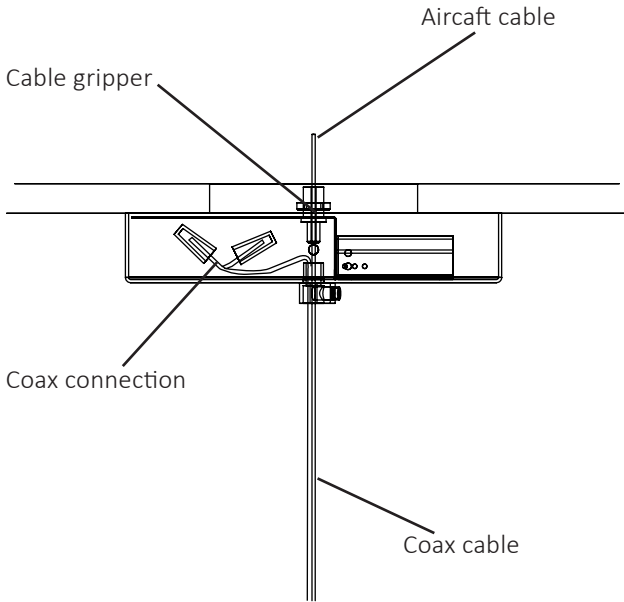

Option B - Support from ceiling

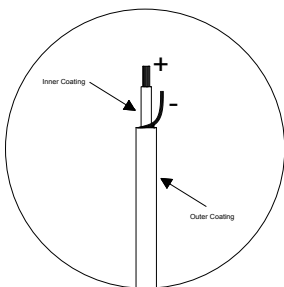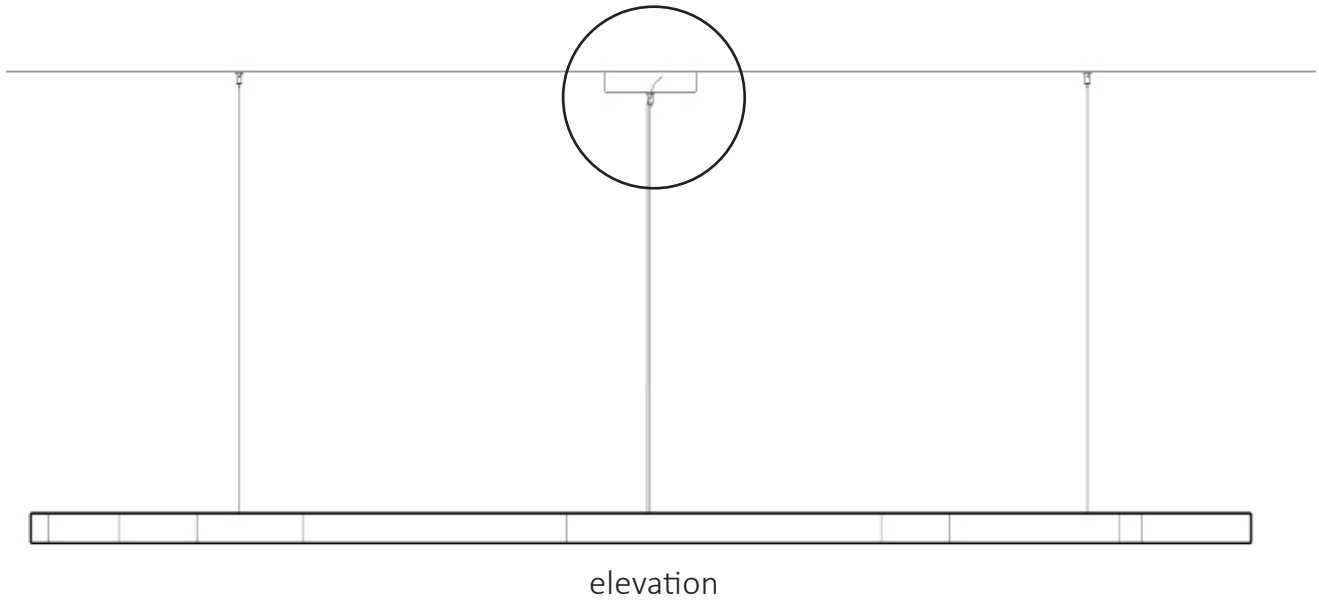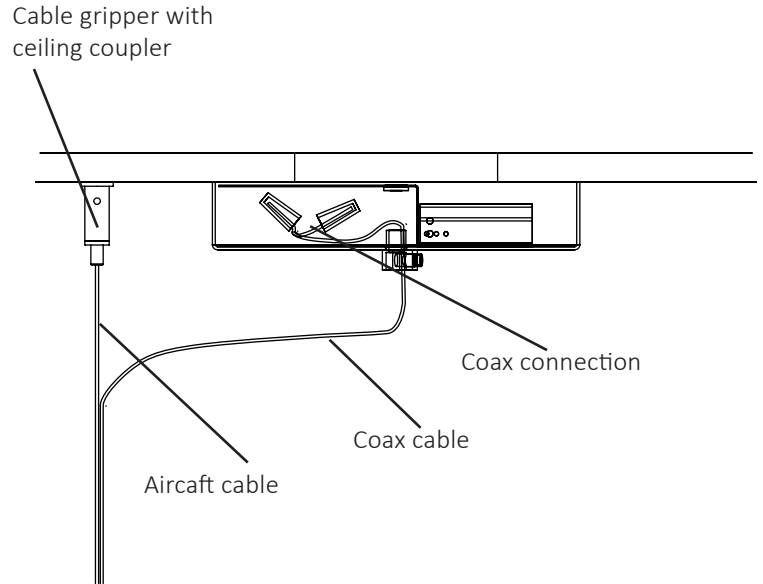


*** COAX CABLE
coax cable requires stripping of outer and inner coatings to access positive and negative connection wires

dimensions + installation

SINGLE FIXTURE CANOPY CONNECTION


Coax runs into canopy

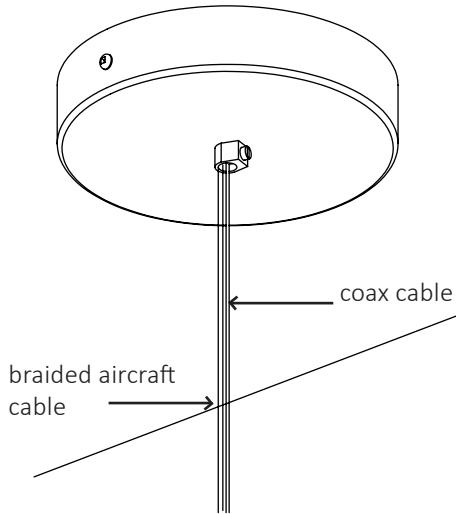

MULTIPLE FIXTURES CANOPY CONNECTION

A Coax runs into canopy

B Second coax runs up to ceiling and drops over to enter power feed canopy

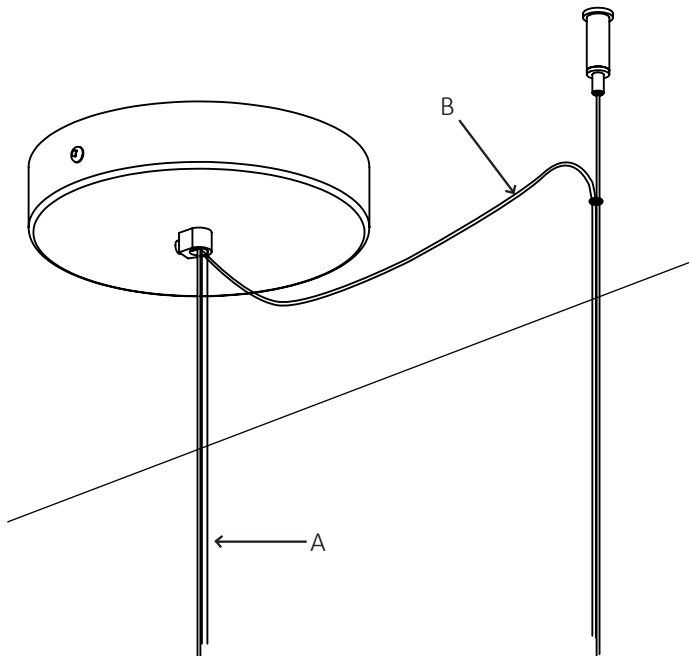


SINGLE FIXTURE CONNECTION INTO REMOTE DRIVER

A Coax from fixture runs up into ceiling to connect to remote driver (B)

B Remote driver (supplied w/ fixture) installed in ceiling

C Remote driver connects to power supply

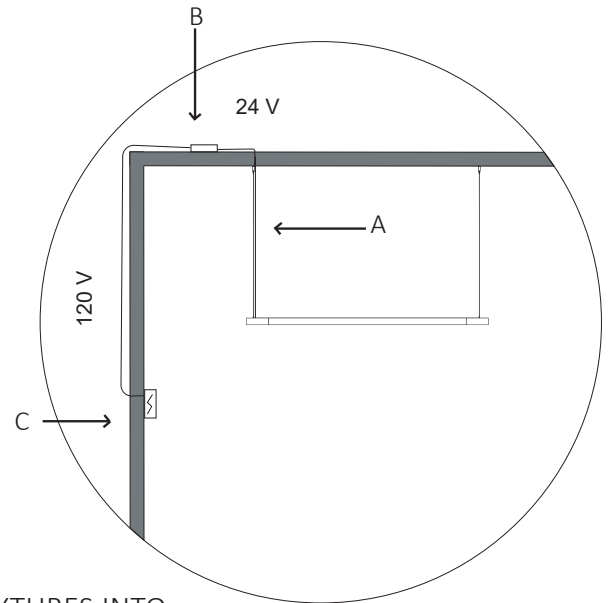


MULTIPLE FIXTURES INTO REMOTE DRIVER

A Coax from multiple fixtures runs up into ceiling to connect to remote drivers (B&C)

B Remote drivers (supplied w/ fixture) installed in ceiling


C Remote driver (B) connects to power supply

D Remote driver (C) connects to power supply

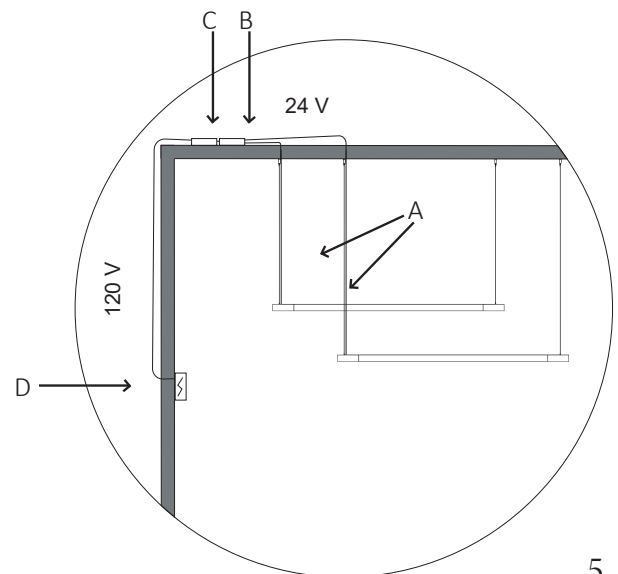


dimensions + installation

CANOPY DIMENSIONS

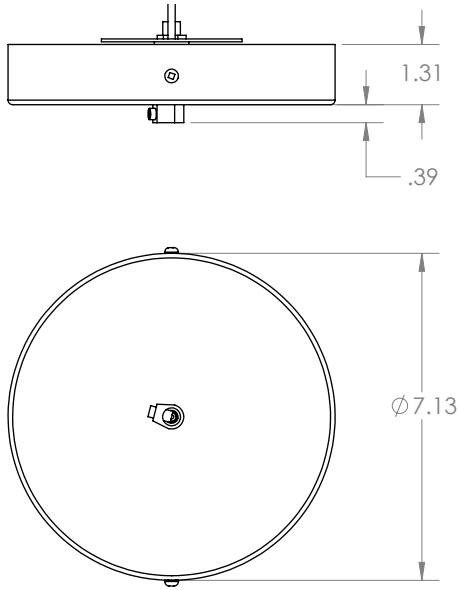

PENDANT GRIPPER ASSEMBLY

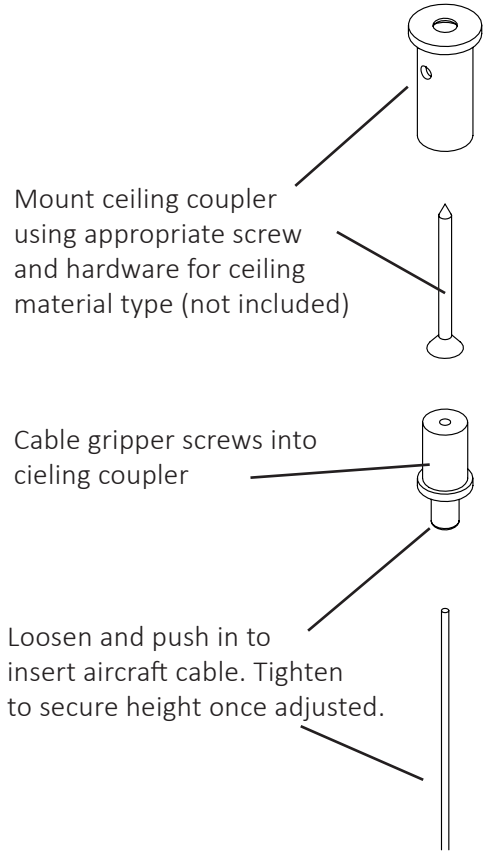

0-10 CANOPY DIMENSIONS (UPON REQUEST)

