## **Installation Manual**

### **UNI-PGRM Instruction Manual v5.2**

#### For models:

UNI-PGRM/1P1 UNI-PGRM/2P1 UNI-PGRM/3P1 UNI-PGRM/4P1 UNI-PGRM/5P1 UNI-PGRM/6P1 UNI-PGRM/6P1





#### Introduction

The PGRM series of pole mounts are a sturdy, economical universal pole mounting solution with user adjustable angle settings (0° to 60°).

NOTE: 4-inch Schedule 40 (Sch-40) steel support pipe and 3" Sch-40 Horizontal Beam pipe is user supplied.

Galvanized coated sheet steel used in the MID Clamps and END Clamps will show rust on cut edges. This is normal and will not affect the structure and function of the mount.

#### **Installer Responsibility**

The installer is solely responsible for the following:

Comply with all applicable local or national building codes, including any that may supersede this manual.

Ensure that Tamarack Solar parts and other products are appropriate for the particular installation and the installation environment.

Use only Tamarack Solar parts and installer-supplied parts as specified by Tamarack Solar. Substitution parts may void the warranty;

Ensure safe installation of all electrical aspects of the PV array.

Ensure correct and appropriate design parameters are used in determining the design loading used for the specific installation. Parameters, such as snow loading, wind speed, exposure and topographic factor should be confirmed with the local building official or a licensed professional engineer.

#### **Customer Support**

Tamarack Solar makes every effort to ensure your mounting kit is easy to install. If you need assistance at any point in your installation or have suggestions on how we can improve your experience, call customer support at 1-800-819-7236 or email us at sales@tamaracksolar.com

#### **Tools Required**

Tools that support the following size Hex heads:

NOTE: Anti-seize compound should be used on all stainless steel hardware in order to prevent galling when tightening. The torque values listed below are "dry", subtract 20% if using anti-seize lubricant.

```
1/2" = 480\40 In\Ft Lbs (8 or 12 point socket for square head set screws)
```


3/8" = 240\20 In\Ft Lbs 5/16" = 144\12 In\Ft Lbs 1/4" = 84\7 In\Ft Lb

#### **UNI-PGRM-END END CLAMP**

NO matter what version of the PGRM Kit you are using, there are two End Clamps per kit, one clamp for each

end of the mount. End Clamps are designed to grab the flange on the underside of the solar module frame.

Item	Part Number	Description	Qty
1	51-0835-ECB	End Clamp Base	1
2	51-0835-UPC	Panel Frame Clamp	2
3	51-0835-UBC	U-Bolt Clamp	1
4	23-3118-875	Bolt, 5/16-18 x .875	4
5	25-3102-000	Washer, Flat 5/16"	4
6	25-2501-015	Nut, Flange 5/16"	4
7	23-0100-033	U-Bolt for 3" Pipe	1
8	25-3702-GLV	Washer, Flat 5/16"	2
9	25-3701-GLV	Washer, Lock 3.8"	2
10	24-3716-GLV	Nut. 3/8-16	2

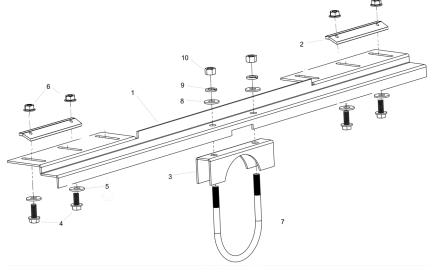


#### **UNI-PGRM-MID MID CLAMP**

Each PGRM Kit includes one Mid Clamp per two PV modules.

UNI-PGRM/1P1 will not have a Mid Clamp.


Item	Part Number	Description	Qty
1	51-0835-UBC	U-Bolt Clamp	1
2	51-0835-MCT	Mid Clamp Top	1
3	51-0835-MCB	Mid Clamp Bottom	1
4	23-2520-250	Bolt, 1/4-20 x 2.5 all thread	2
5	25-2502-000	Washer, Flat 1/4"	2
6	25-2501-000	Washer, Lock 1/4"	2
7	23-0100-033	U-Bolt for 3" Pipe	1
8	25-3702-GLV	Washer, Flat 5/16"	2
9	25-3701-GLV	Washer, Lock 3.8"	2
10	24-3716-GLV	Nut. 3/8-16	2

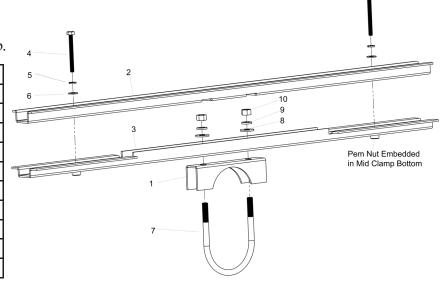

#### **70-0300-PGM POLE CAP**

Use one Cap per 1-4 modules and two per 5-6 modules in typical installations. additional vertical pipes may be needed in some instances.

Item	Part Number	Description	Qty
1	70-0400-000	Cap, 4" Pipe	1
2	23-0350-GLV	U-Bolt 1/2-13 for 3" Pipe	2
3	51-0812-UBC	U-Bolt Saddle Clamp 1/2"	2
4	25-5002-GLV	Washer, Flat 1/2"	4
5	25-5001-GLV	Washer, Lock 1/2"	4
6	24-5013-GLV	Nut, 12-13	4
7	23-5013-150	Set Screw 1/2-13 x 1.5"	4
8	24-513J-GLV	Nut, Jam 1/2-13	4

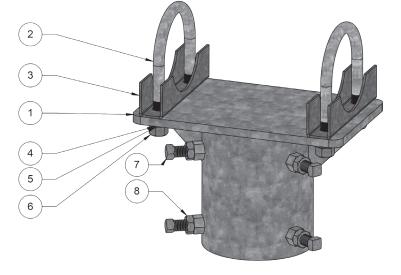

#### **Horizontal Beam Length and Post Placement Calculations**

Use 3-inch Sch-40 pipe (3.5-inch OD) steel pipe. Compute Horizontal Beam Length with the formula below.

W= Module Width (inches) Q= Quantity of Modules


Beam Length Formula: Length (inches) =  $4.82 + (Q \times W) + ((Q - 1) \times 1.28)$ 

This is the minumum length required. There is no problem if the Main Beam is longer.

6 Module Example with modules that are 39.5-inches wide:

$$4.82" + (6 \times 39.5") + (5 \times 1.28") = 248.22$$
 inches (or  $20' \times 8-1/4$ ")

Pipe generally comes in 21' lengths

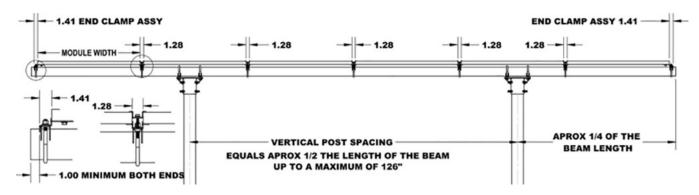

When using a single vertical pole (4" Sch-40 pipe) (1-4 modules) center the beam over the vertical post.

When using 2 vertical posts, determine post center to center spacing. (2 posts required for 5 to 6 modules)

Mark the placement of the Mid Clamp and End Clamp U-Bolts on the Horizontal Beam.

If you are mounting an even number of modules, there will be a clamp at the center point of the Horizontal Beam. If you are mounting an odd number of modules there will be a clamp on each side of the center of the Horizontal Beam that are W+1.28-inches apart.

#### Assemble Pipe Cap(s) and Horizontal Beam

Place Top Cap(s) on 4-inch Schedule 40 vertical post(s) but do not tighten set-screws at this time.

Place U-Bolt clamp saddles over the mounting holes on the top caps.

Place the Horizontal Beam pipe onto the U-Bolt clamp saddles centered over the holes on each end of the top cap(s).


Place the 1/2-inch U-bolts over the Horizontal beam through the U-Bolt clamps and top caps, loosely attach with 1/2-inch flat washers, lock washers and nuts.

Align the Horizontal Beam approximately east to west and torque the set-screws to 40 ft-lbs.

Tighten the jam nuts to prevent the screws from backing off over time.

Tighten the nuts on the U-bolts to keep the Horizontal Beam from rotating as you install the modules. Torque on these nuts after you set the tile angle later in the installation.






#### **Install Module Clamps**

Position and place the Mid Clamps and End Clamps onto the Main Beam at the marked locations. See the spacing info on the previous page.

Use a level to put each Mid and End Clamps in a horizontal position before tightening their U-bolts

Tighten the U-bolt nuts just enough to hold the horizontal position as you will be placing solar modules onto them in next steps. You will need to move the clamps slightly after you place the solar modules between them so that the module frames are tight against the vertical stops on the mid clamps.

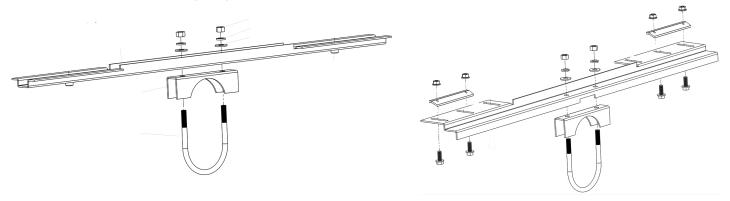

Start in the center of the Main Beam. Lay the first module onto the flat flanges of the clamp bases.


Center the solar module in the north/south direction to overhang equally past the clamps.

Loosen the next mid clamp and move it against the first solar module so that both clamps are firmly against the module frame and re-tighten to hold position.

Add modules one at a time and repeat this procedure in both directions.

Place each solar module onto the mid clamp base and center the module to overhang equally past the clamps.

Install Mid Clamp tops with the 1/4 x 2.5-inch hex bolts, flat & lock washers after the mid clamps have been moved thight against the module frames. Be sure that the bolt holes in the top part of each clamp lines up with the threaded hole in the bottom part of the clamp. It is a good idea to use antisieze compound on these bolts. Start the bolts by hand far enough to be sure they are not cross-threaded and torque to 84 inch-lbs (7 ft-Lbs). TO AVOID DAMAGE TO THE BOLT AND FASTENER, DO NOT OVERTIGHTEN. The flanges on the top part of the clamp will pull downward on the top of the module frames when the bolts are tightened.

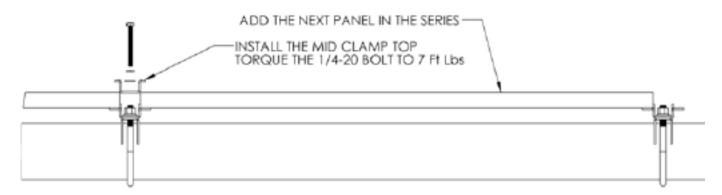

#### **Tighten Mid Clamp U-Bolts**

As each module clamp is positioned tight against module frames, thighten the U-Bolt nuts through the square access holes on the top of the top clamps. Torque the U-Bolts nuts to 20 ft-lbs.


# to 20 ft-lbs.


#### **End Clamp Installation**

Install an End Clamp at both ends of the mount, tightening the

U-bolts just enough to hold them in a horizontal position. Leave an extra 1/4" of space, more than the PV module width, between the End Clamp and the Mid Clamp to allow for easy insertion of the module.

Starting at one end of the array, place an end PV module tight up against the last Mid Clamp, and rest the other side of the PV module on the bottom tabs of the End Clamp to hold it up.

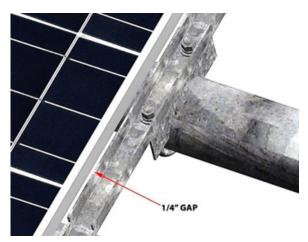

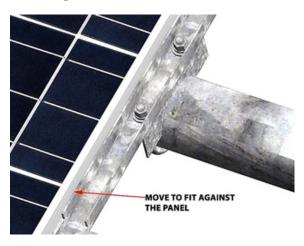


Loosen the End Clamp U-Bolts if necessary and move it to fit firmly against the solar module frame and retighten to hold position.

Attach Panel Frame Clamps to the end clamp base with the 5/16-18 x 7/8 bolt flange nut and washer as shown, torque to 12ft Lbs. NOTE: The Panel Frame Clamp must be resting on the inside of the solar module frame with bolts against the solar module frame.

Tighten the U-Bolt nuts on the End clamps to 20 Ft-lbs. There are slots in the End Clamp base to use for the module clamp. Choose two of the slots that place the frame clamp closest to the mounting hole in the solar module frame. We provide two possible positions for the module clamps because some modules have cross braces that interfere with placing the clamp.



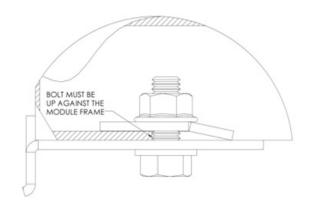

#### **Set Final Angle**

All of the modules should be horizontal at this point.

Check to make sure that all of the module clamp bolts and U-bolts are tightened to the proper torque specifications before proceeding.

Loosen all the U-Bolt nuts on the PGRM Cap(s). Use both hands to rotate the entire array to the desired angle and re-tighten the U-Bolt nuts on the PGRM Cap(s). Torque these bolts to 40 ft-lbs to lock the angle.

#### **Foundation Hole Guidelines**

The suggestions below are recommendations only. It is the installer's responsibility to validate foundation parameters prior to installation, as local geotechnical report may be required to assess ground conditions. We recommend consulting with a local engineer familiar with local regulations and build site requirements, including soil conditions, terrain and load criteria (wind, snow, seismic). All of these parameters may impact foundation requirements.

PGRM Foundation hole guidelines - Exposure Category C						
Module Area	One Vertical 4-inch Schedule 40 Pole		Two Vertical 4-inch	Schedule 40 Poles		
Square Feet	Min. Hole Diameter	Min Hole Depth	Min. Hole Diameter	Min Hole Depth		
40	20 inches	45 inches				
50	24 inches	40 inches				
60	24 inches	45 inches				
70	24 inches	60 inches				
80	24 inches	66 inches	20 inches	45 inches		
92	24 inches	74 inches	24 inches	40 inches		
120			24 inches	45 inches		

#### Installation Recomendations

Auger hole to the minumum depth shown in the table above

The bottom of the hole should be filled with crushed rock or equivalent to prevent the pipe from touching the base of the hole.

The pipe should be installed vertically and braced to remain in position until the concrete has cured at least 24 hours.

#### **Warranty Information**

Tamarack Solar warrants each Mounting Structure to be free from defects in materials and workmanship for ten (10) years from the date of first purchase ("Warranty Period"), when installed properly and used for the purpose for which it is designed, except for the finish, which shall be free from visible peeling, or cracking or chalking under normal atmospheric conditions for a period of three (3) years, from the earlier of 1) the date the installation of the Product is completed, or 2) 30 days after the purchase of the Product by the original Purchaser ("Finish Warranty"). The Finish Warranty does not apply to any foreign residue deposited on the finish.

Galvanized coated sheet steel components will show rust on cut edges and is normal and will not affect the structure and function of the mount.

All installations in corrosive atmospheric conditions are excluded. The Finish Warranty is VOID if the practices specified by AAMA 609 & 610-02 – "Cleaning and Maintenance for Architecturally Finished Aluminum" (www. aamanet.org) are not followed by Purchaser for Tamarack Solar's aluminum based products.

The warranty covers the replacement cost of parts to repair the product to proper working condition. Transportation and incidental costs associated with warranty items are not reimbursable. The warranty does not cover normal wear, or damage resulting from misuse, abuse, improper installation, negligence, or accident, or typographical errors in instruction manuals. The Warranty does not cover any defect that has not been reported in writing to Tamarack Solar within ten (10) days after discovery of such defect. Furthermore, it does not cover units that have been altered, modified or repaired without written authorization from the manufacturer or its authorized representative, or units used in a manner or for a purpose other than that specified by the manufacturer. Tamarack Solar's entire liability and Purchaser exclusive remedy, whether in contract, tort or otherwise, for any claim related to or arising out of breach of the warranty covering the Mounting Structures shall be correction of defects by repair, replacement, or credit, at Tamarack Solar's discretion. Refurbished Mounting Structures may be used to repair or replace the Mounting Structures

Tamarack Solar shall have no liability for any injuries or damages to persons or property resulting from any cause, whatsoever, or any claims or demands brought against Tamarack Solar by Purchaser, any employee of Purchaser, client of Purchaser, end-user of the Product or other party, even if Tamarack Solar has been advised of the possibility of such claims or demands (collectively, "Third Party Claims"). This limitation applies to all materials provided by Tamarack Solar during and after the Warranty Period.