
PHYLRICH®

Defining Luxury Since 1959

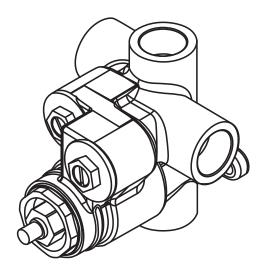

INSTALLATION INSTRUCTIONS FOR

3/4 Medi Thermostatic Valve 1-135

- w/ 3/4 VOLUME CONTROL 1-136
- w/ (TWO) 3/4" VOLUME CONTROL 1-148
 - w/ 3 Way Diverter 1-137
 - ■w/ 2 Way Diverter 1-142

INSTRUCTIONAL VIDEOS







ENGLISH

SPANISH

1

GENERAL CHARACTERISTICS

WE RECOMMEND THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Thoroughly read instructions before installation.

WARNING:

IF THIS VALVE IS INSTALLED UPSIDE-DOWN A REVERSE CARTRIDGE IS NOT AVAILABLE.

CONSEQUENTLY, VALVE MUST BE REMOVED AND REINSTALLED RIGHT-SIDE UP.

The valve is designed with two outlets for ease of installation, but are not intended to be used concurrently with each other. Using both outlets will reduce the performance of the valve.

VALVE SPECIFICATION

scalding prior to consumer use.

Recommended supply pressure = 20 to 80 psi (1,38-5,52 bar)

Recommended hot water supply temperature = 120° to 140°F (48°-60°C)

Operating pressures between **hot and cold supplies** should vary no more than **30 psi (2,07 bar)**. If water pressure exceeds **70 psi (4,83 bar)**, install a pressure reducing valve.

Ensure the mixing valve is in compliance with local plumbing codes when setting the temperature on the water heater.

It is the installer's responsibility to verify correct temperature setting to prevent any risk of

For use with shower heads rated at 1.8 gpm (6.8 L/min) or higher Stem Extension Safety & Mechanical Stop M4 Stem Screw - **9** Cartridge Sleeve COLD SUPPLY CONNECTION Nut for All thread 9/16"-20 Threadall HOT SUPPLY Female 3/4" NPT inlets and outlets CONNECTION Factory temperature setting = $100^{\circ}F$ (38°C) Temperature range = 52° to 118° F (11° - 48° C) Temperature hot supply = 149° to 180° F (65° - 82° C) Temperature cold supply = 50° to 72° F (10° - 22° C)

Temperature stability = Compliant with ASSE 1016

VALVE -


TABS (X2)



Defining Luxury Since 19

PARTS BREAKDOWN

- Medi Thermostatic Valve
- TURN TO PAGE 8 FOR VALVE TURN MECHANICS

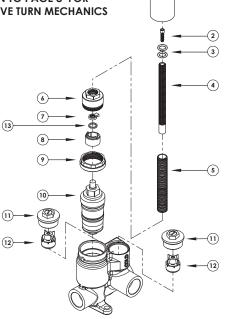

1-	135 3/4"	Medi Therm Valve	
#	PART#	DESCRIPTION	QTY.
1	11496	MUD GUARD	1
2	92335	SCREW	1
3	90011	O-RING	2
4	10054	STEM EXTENSION	1
5	10209	SHANK, NIPPLE THREAD ALL	1
6	11610	MEDITHERM NUT FOR ALL THREAD	1
7	11320	SAFETY AND MECHANICAL STOP	1
8	11598	CARTRIDGE LIMIT STOP SLEEVE, MEDI	1
9	11599	RETAINER NUT	1
10	11583	CARTRIDGE	1
11	2-256	SHUT OFF NUT	2
12	11593	CHECK VALVE	2
13	92050	WASHER ACETAL	1

■ Medi Thermostatic Valve w/ 3/4" VOLUME CONTROL


(If you have purchased the Medi Therm Valve w/ **Volume Control**)

■ 3/4" NPT female outlet





CAP TO CLOSE UNUSED OUTLETS INCLUDED IF LOWER PORT IS USED, INSTALL A VOLUME CONTROL DO NOT USE UPPER & LOWER PORTS AT THE SAME TIME.


1-	136 3/4"	Medi Therm Valve w/ Volume Control		
#	PART#	DESCRIPTION	QTY.	Р
1	11496	MUD GUARD	1	ARTS
2	92335	SCREW	1	
3	90011	O-RING	2	밁
4	10054	STEM EXTENSION	1	ાણ
5	10209	SHANK, NIPPLE THREAD ALL	1	
6	11610	MEDITHERM NUT FOR ALL THREAD	1	THERM
7	11320	SAFETY AND MECHANICAL STOP	1	ᄪ
8	11598	CARTRIDGE LIMIT STOP SLEEVE, MEDI	1	3
9	11599	RETAINER NUT	1	\$
10	11583	CARTRIDGE	1	I₽I
11	2-256	SHUT OFF NUT	2	뚦
12	11593	CHECK VALVE	2	-
13	92050	WASHER ACETAL	1	
14	11496	MUD GUARD	1	ĺ
15	92157	SCREW	1	
16	90011	O-RING	2	
17	11416	STEM EXTENSION	1	
18	11498	SHANK, NIPPLE THREAD ALL	1	
19	10058	NUT. ADAPTOR CARTRIDGE	1	
20	10215	CARTRIDGE VALVE	1	
21	2-259	3/4" MEDITHERM W/ VOLUME CONTROL	1	

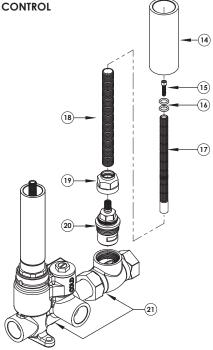

■ Medi Thermostatic Valve w/ 2 VOLUME CONTROL

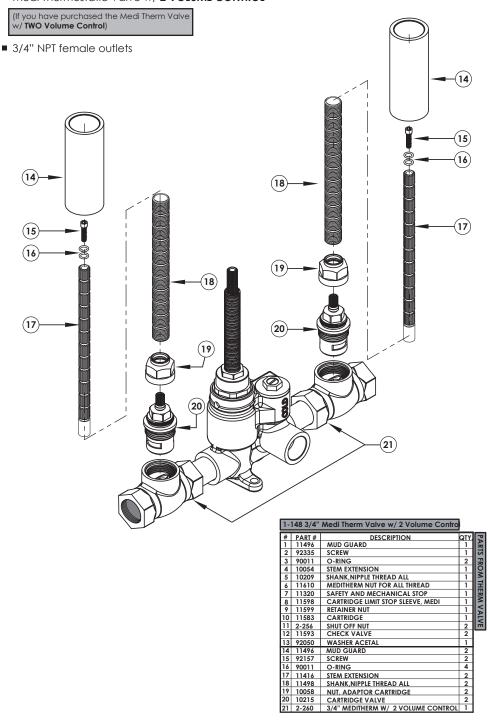

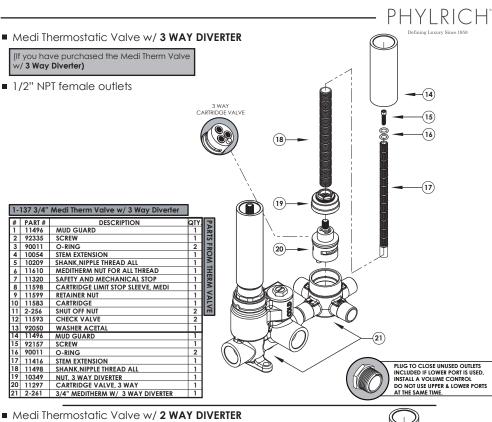




w/ 2 Way Diverter)

■ 1/2" NPT female outlets


		Medi Therm Valve w/ 2 Way Diverter		_
#	PART #	DESCRIPTION	QTY.	ᄬ
1	11496	MUD GUARD	1	K
2	92335	SCREW	1	
3	90011	O-RING	2	끘
4	10054	STEM EXTENSION	1	FROM
5	10209	SHANK, NIPPLE THREAD ALL	1	
6	11610	MEDITHERM NUT FOR ALL THREAD	1	
7	11320	SAFETY AND MECHANICAL STOP	1	THERM
8	11598	CARTRIDGE LIMIT STOP SLEEVE, MEDI	1	
9	11599	RETAINER NUT	1	II\$
10	11583	CARTRIDGE	1	VALVE
11	2-256	SHUT OFF NUT	2	E
12	11593	CHECK VALVE	2	
13	92050	WASHER ACETAL	1	l
14	11496	MUD GUARD	1	ĺ
15	92157	SCREW	1	l
16	90011	O-RING	2	l
17	11416	STEM EXTENSION	1	l
18	11498	SHANK, NIPPLE THREAD ALL	1	ı
19	10349	NUT, 3 WAY DIVERTER	1	ı
20	11567	CARTRIDGE VALVE, 2 WAY	1	ı
21	2-262	3/4" MEDITHERM W/ 2 WAY DIVERTER	1	l

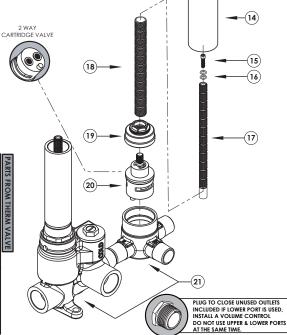


ROUGH IN DIMENSIONS / ROUGH IN VALVE TO FRAME

(All dimesions shown are to the nearest 1/16")

Once the desired location has been determined, install a **cross support beam to wall studs**. Ensure to level the **valve & secure to the cross support**. The valve should be level horizontally, vertically, & parallel to finished wall.

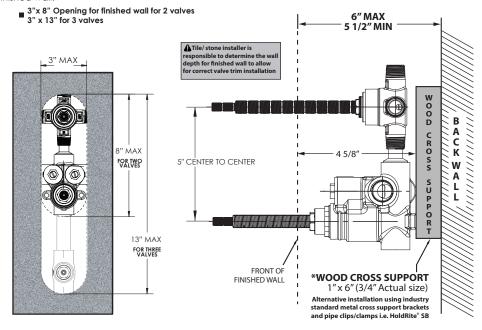

Pre-assemble fittings before attaching to cross support. Attach the "COLD" Inlet to Cold Supply & "HOT" Inlet to Hot Supply using copper supply lines.

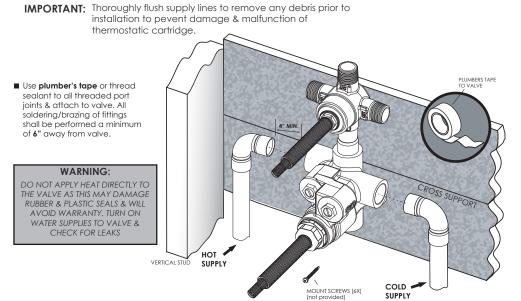





THERMOSTATIC CARTRIDGE


Carefully remove the trim and plate and place in a safe location for the time being. Use a flat head screwdriver to shut off the water supply to the cartridge by turning the temporary shutoff screws clockwise until screw stops. Ensure to close both the hot and cold sides of the water supplies. Remove extensions to gain access to the cartridge nut. Unscrew the cartridge nut using a 11/16" socket wrench or adjustable wrench, if possible.

Gently pull the cartridge out of the housing body (rotating cartridge while pulling may assist in removing). Clean the cartridge by rinsing it under running water to remove any possible debris. Wipe cartridge and housing seat clean and apply a thin film of NON-PETROLEUM GREASE to o-rings.

NOTE: Do NOT use oil based lubricants as this may cause the o-rings to dry out over time and crack.

How to calibrate temperature:

To limit the amount of HOT water allowed to mix with cold water, use a 4 " long flat blade screw driver to remove the stem. Unscrew and remove nut for all thread using a 3/4" socket. Remove the limit safety stop and rotate the stem counterclockwise till the desired maximum temperature is found. The maximum temperature is factory set at 120°F. Once the desired temperature is set, reinstall the safety stop at the maximum position. Proceed installing the stem and trim.

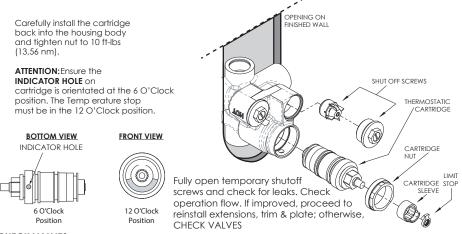

CHECK VALVES

Shut off water supply at main or upstream from valve body. Remove check valve nut with a 15 mm socket wrench from the body.


If check valve needs replacement, forcefully remove check valve w/ needle nose pliers. Wipe check valve and housing seat clean and apply a thin film of NON-PETROLEUM GREASE to o-rings. Install new check valves by pressing them in evenly & ensuring check valve snaps into place.

NOTE: Do NOT use oil based lubricants as this may cause o-rings to dry out over time and crack.

Tighten check valves to 10 ft-lbs (13,56 nm).

Reinstate water supply from upstream and check for leaks.


Check operation of flow. If improved, proceed to reinstall extensions, trim, & plate; otherwise, see PARTS BREAKOUT for any replacement parts needed.




VALVE TURN MECHANICS

RECOMMEND INSTALLING FUNCTIONALITY AS SHOW BELOW, 1, 2 & 3 CONSEQUENTIALY.


1-136 THERMOSTATIC VALVE W/ VOLUME CONTROL

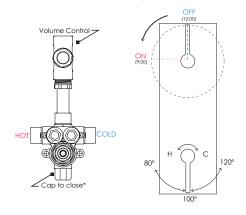


1-148 THERMOSTATIC VALVE W/ VOLUME CONTROL

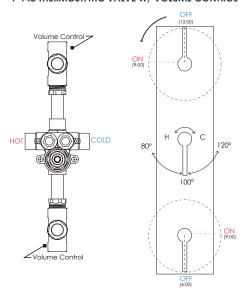

1-137 THERMOSTATIC VALVE W/ VOLUME CONTROL

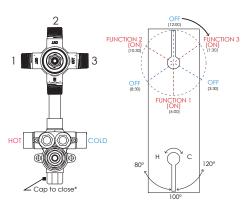

1-142 THERMOSTATIC VALVE W/ VOLUME CONTROL

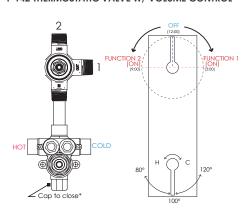

PHYLRICH®

Defining Luxury Since 1959