

Kings[®] Sprayers

100 Gallon
2-Wheel Sprayer
Model #: KT100P15B12

User Manual

Read this manual for complete instructions



Need help? Call Kings Sprayers if you have any questions with this product.
Technical service hours: Monday – Friday, 8:00 a.m. – 5:00 p.m. ET
1-800-228-0905 | info@kingsssprayers.com

Model #: KT100P15B12

Table of Contents

Warranty..... 3

General Safety Information 3

Hazardous Substance Alert 4

Sprayer Components..... 5

Getting Started 7

Starting Your Sprayer for the First Time 7

Shutting Down Your Sprayer 7

Engaging / Disengaging the Regulator..... 7

Troubleshooting Your Sprayer 8

Warranty

5 year frame / 5 year tank / 1 year parts and labor (limited to manufacturer defects) / 1 year pump (limited to manufacturer defects) / 90 days gas engine (limited to manufacturers defects and void if engine used commercially).

The warranty will not apply to products that were improperly installed, misapplied, damaged, altered or incompatible with fluids or components. Kings Sprayers obligation under this warranty is limited to the repair or replacement of the product. All returns will be tested per factory criteria. Products found not defective (under the terms of this warranty) are subject to charges paid by the returnee for testing and packing of "tested good" non-warranty returns.

No credit or labor allowances will be given for products returned as defective. Warranty replacement will be shipped at Kings Sprayers discretion. Kings Sprayers reserves the right to choose the method of transportation.

Contact Kings Sprayers at 800-228-0905 to receive a Return Merchandise Authorization (RMA#) before returning any products. The RMA number should be clearly marked on the outside of the package. Kings Sprayers shall not be liable for freight damage incurred during shipping. All products returned for warranty work should be sent shipping charges prepaid.

General Safety Information

The following chemicals should never be put through any pump:

- Gasoline (Petrol)
- Kerosene/Kerosine (Paraffin)
- Diesel Fuel
- Ceramic Slurries
- Sewage
- Potable Water

DO NOT pump flammable or explosive fluids such as gasoline, fuel oil, kerosene, etc.

DO NOT use in explosive atmospheres

DO NOT pump asphalt sealer, roofing compounds, concrete sealers, or any two-step curing products

DO NOT pump non-approved liquids (See Above)

DO NOT operate any pump under the influence of drugs or alcohol

DO NOT perform service or maintenance to the pump or attached components until the pumping unit is below 109°F

Only authorized operators having the knowledge and skill necessary to safely use the pump, or any equipment the pump is connected to, may run the pump.

When handling pumps, wear steel-toed shoes and protective gloves in order to protect the feet in the event the pump is dropped and protect the hands from chemicals or any sharp surfaces on the pump.

When spraying manually, chemical-resistant facemasks and clothing should be worn to prevent any chemicals from coming into contact with the skin or being inhaled.

When spraying manually, always spray downwind from yourself as long as the sprayed chemical will not drift into the vicinity of other people.

Never operate a pump outside while there is a chance of getting struck by lightning.

Never leave wires or plumbing components where they can be a tripping hazard or become entangled in a moving component.

All maintenance should be done when machinery is stationary and has been isolated from its energy sources. It is dangerous to perform maintenance while machinery is still connected to its power source. Machinery should be isolated from its electrical, hydraulic, shaft driven or gas engine power source.

Be sure to release all pressure from the system before performing any sort of maintenance on a pump.

The sound level of the pump may exceed 80dBA. Observe all safety precautions when operating the pump within close proximity for extended periods of time by wearing hearing protectors. Extended exposure to elevated sound levels will result in hearing loss and other effects such as loss of balance and awareness.

Do not pump at pressure higher than the maximum recommended pressure.

Operate the pump between a temperature range of 45° to 140°F (7° to 60°C).

Secure the discharge line before starting the pump. An unsecured discharge line may whip, resulting in injury.

Check all hoses for weak or worn condition before each use.

Periodically inspect the pump and the system components. Perform routine maintenance as required.

Do not use pumps for pump water or other liquids for human or animal consumption.

Do not pressure feed pump inlet.

Failure to follow these notices can result in severe personal injury and/or property damage and will void product warranty.

Hazardous Substance Alert

Any hazardous liquids should be disposed of in a manner that complies with local and national regulations. Never dump fluids onto the ground.

Always drain and flush pump before servicing or disassembling for any reason.

Always drain and flush pump prior to returning unit for repair.

Never store pumps containing hazardous chemicals.

Before returning pump for service/repair, drain out all liquids and flush unit with neutralizing liquid. Then, drain the pump. Attach tag or include written notice certifying that this has been done. Please note that it is illegal to ship or transport any hazardous chemicals without United States Environmental Protection Agency Licensing.

Sprayer Components

Boom selector valve – Choose from 7 different settings to control which boom sections are spraying. Flip handle up (towards you) to engage valve.

Inline strainer to keep debris out of system

Ball valve to shut off flow when cleaning strainer or servicing sprayer

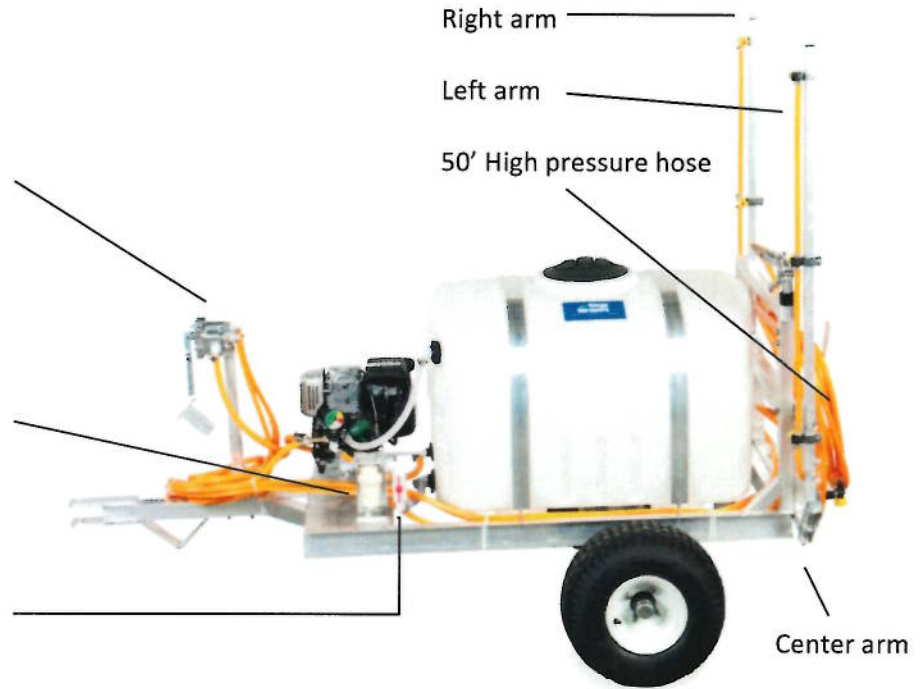


Figure 1: Side View

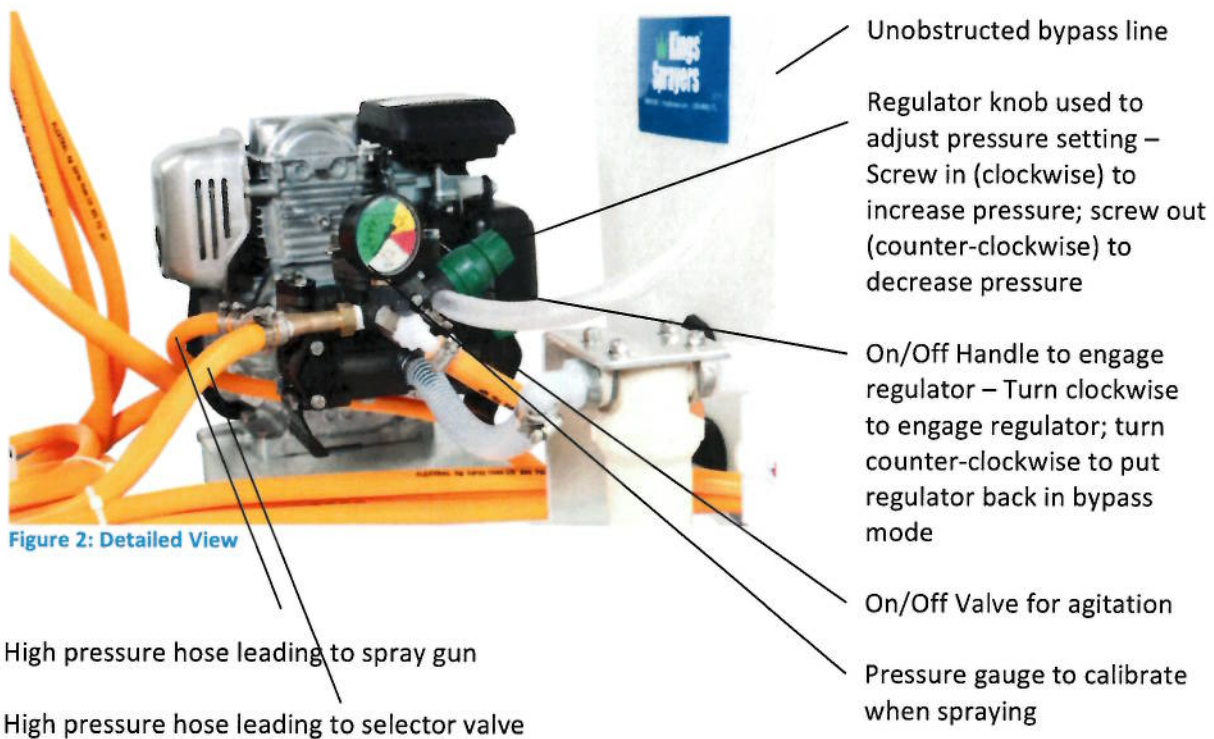


Figure 2: Detailed View

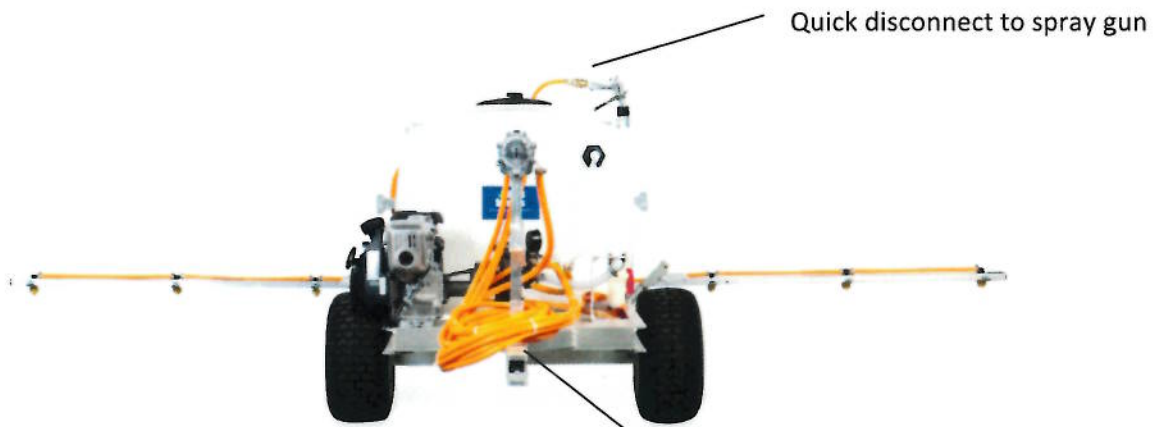


Figure 3: Front View (Booms Down)

Extra hose in case you need to relocate selector valve

Getting Started

Starting Your Sprayer for the First Time

1. Ensure all unnecessary personnel are clear of the area.
2. For initial testing, it is recommended to start with clean water instead of chemicals to confirm the system and plumbing components are leak free.
3. Ensure there is fluid in the tank and supply line.
4. Check line strainer for debris or clogs and remove if any found.
5. Check all plumbing connections to ensure tightness.
6. Ensure all valves and regulators are set to the desired setting and working properly.
7. Ensure all hoses are positioned properly and undamaged.
8. Then, follow these steps to start the engine.
9. First, remove the boom clamps from either boom and extend the booms.
10. For a cold start, pull the choke out to FULL.
11. Set the throttle to slightly above OFF.
12. Pull start the engine.
13. Release the choke by pushing it in fully.
14. Raise the throttle to FULL.
15. The regulator handle turns ON and OFF the pressure; the knob at the top of the regulator handle adjusts the pressure; adjust the pressure to roughly 200 psi.
16. Turn the agitator ON; you'll notice a slight drop in pressure.
17. Adjust the spray gun to the correct setting and you are ready to spray.
18. The spray boom has seven spray settings: left, right, center, left/right, left/right/center, left/center, right/center.

Shutting Down Your Sprayer

1. Shut down the sprayer using these outlined steps.
2. Set the regulator pressure to OFF.
3. Slowly lower the throttle to OFF.
4. Raise the booms and replace the boom clamps.
5. If the pump will not be used for several hours flush your system to prolong the life of the components.

For a step-by-step video guide, visit the Sprayer Depot YouTube Channel to watch instructional videos on a variety of topics. Tune in by visiting <http://YouTube.com/SprayerDepot>.

Engaging / Disengaging the Regulator

Pump Model	Engage	Disengage
Hypro D30	Move lever down	Move lever up
Hypro D252	Turn knob to "C"	Turn knob to "A"
Iota 20	Turn lever clockwise	Turn lever counterclockwise
Kappa 40	Move lever up	Move lever down
Kappa 43	Turn lever clockwise	Turn lever counterclockwise

For regulators found on roller pumps and 3-Point Hitches, leaving regulators engaged will not hurt the pumps.

Troubleshooting Your Sprayer

Symptom	Possible Reason	Correction
Pump does not draw water	One or more valves are seating improperly. Suction line is plugged or collapsed. Clogged strainer.	Remove valve and check for debris. Remove any debris found. Examine valve seatings and clean them. Examine and clean the suction line. Clean the strainer.
Liquid flow is irregular	The charge in the pulsation dampener is incorrect. One or more valves are seating improperly.	Check the pressure in the pulsation dampener. (It should be 20% of your spray pressure.) Remove valve and check for debris. Remove any debris found. Examine the valve seatings and clean them.
Output drops and the pump is noisy	The oil level is too low.	Add oil to the correct level (halfway up the sight tube).
Oil comes out of the discharge port or oil is a milky color	One or more diaphragms have split.	Remove the manifold and heads. Drain the oil and clean the crankcase of water. Replace the diaphragms, heads, and manifold. Refill with Hyrpo Oil (part number 2160-0038).
Loss of pressure / pressure fluctuation	Check valve spring is worn or valve seat is not sealing. Pressure regulator internal parts are worn/compromised.	Examine spring to ensure it is not broken or gummed up with chemical. Inspect seat to make sure valve is still sealing. Examine o-rings to ensure they are not swollen or ripped. Inspect poppet/seat to make sure it is still intact and not broken apart or shrunk down.