



TENTSILE

Connect Tree Tent

OWNERS MANUAL

It is important that all users read and understand the materials in this manual before any installation and use of the product.



edenprojects.org
PLANT TREES | SAVE LIVES



WeForest
Making Earth Cooler

20 Trees
Planted

WARNING

TENTSILE IS NOT A TOY

RISK OF SERIOUS INJURY

A VISUAL AND TACTILE INSPECTION OF YOUR TENTSILE'S FLOOR, STRAPS AND RATCHETS SHOULD BE MADE BEFORE EACH USE.

FOR SAFETY REASONS, STRAPS AND RATCHETS SHOULD BE REPLACED EVERY 2 YEARS.

DO NOT LEAVE OUTSIDE UNATTENDED FOR MORE THAN A WEEK.

CHECK THE HEALTH AND STRENGTH OF THE TREES CHOSEN TO BE ANCHOR POINTS BEFORE USE.

Recommended set up height 1.2m / 4 feet

MAX LOAD 400kg / 880lbs.

DO NOT EXCEED MAXIMUM WEIGHT LOAD CAPACITY.

CONGRATULATIONS

YOU ARE NOW THE PROUD OWNER OF A

Tentsile Connect Tree Tent

IT IS IMPORTANT THAT ALL USERS READ AND UNDERSTAND THE MATERIALS IN THIS MANUAL BEFORE ANY INSTALLATION AND USE OF THE PRODUCT.

03: Introduction

04: Terms of Use

05: Specifications

06: Warnings & Disclaimers

07-08: Layout & Alignment

09-28: Set up instructions

29: Floor calibration

30: Ratchet usage

31: Policies

32: The small print

Introduction

The Connect provides a unique opportunity for you and your friends to experience the great outdoors with a whole new level of freedom and comfort.

Tentsile invented Tree Tents as treehouses you can take anywhere, combining the versatility of a hammock with the comfort and security of a tent.

The Connect comprises of a double hammock, suspended in tension above the ground and enclosed in an elegantly simple insect mesh top and rainfly.

The unique design creates a comfortable base camp, irrespective of ground conditions, as well as providing increased protection from insects, snakes and other predators – if you venture somewhere more exotic.

This product was created because Tentsile loves trees and believes that if we're all hanging out in trees, they can't cut them down!

20 trees are planted for every Tentsile Tree Tent sold.

PLAY, CAMP, EXPLORE...

Terms of Use

Tentsile Tree Tent should be set up only as outlined in this manual.

NEVER jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops.

DO NOT attempt to use this product for anything another than its intended purpose, and always observe height and weight limits.

DO NOT use walls, fences, street furniture, roof racks, movable platforms, posts or trees less than 25cm/10inches in diameter as anchor points, as they may not be strong enough.

DO NOT use tensioning components other than those supplied with this product.

DO NOT set up higher than 1.2metres / 4 feet from the ground or above hard, sharp or pointy objects.

Tactile and visual checks should be made to ALL tent components and ALL anchor points before each use.

Replace any damaged elements if any are found.

Keep away from fire and sharp objects.

DO NOT use after the consumption of any intoxicating substances.

Children must be supervised by an adult at all times.

DO NOT attach to trees or branches that show signs of structural weakness.

DO NOT adjust/open ratchets whilst tent is occupied.

DO NOT use during lightning storms or high winds.

DO NOT use in areas of unstable ground.

Tentsile Tree Tents do not offer protection from all animals.

Specifications

Size:

2.56 x 4 x 4m / 8.4 x 13.5 x 13.5ft

Floor area:

5sqm / 52sqf

**Dry porch area
at ground level:**

6sqm / 65sqf

Entry Points:

x 4

Bag Size:

56 x 33 x 25cm / 22 x 12.9 x 9.8"

Height:

100cm / 3ft

Tent weight:

9.4kg / 20.7lbs

Poles:

x2 8.5mm diameter
anodised aluminium alloy

Ratchet & straps:

3x Heavy duty, plated,
industry grade buckles - 2.5
ton minimum breaking strength

Roof:

Tear resistant insect mesh

Rainfly:

70D PU coated waterproof
polyester, 5000HH

Floor:

240D polyester-nylon
composite, reinforced with
15 metres of 25mm webbing

Maximum capacity:

2 adults

DO NOT EXCEED MAXIMUM LOAD 400kg / 880lbs

Warnings & Disclaimers

Installation and use of the Tentsile Tree Tent may involve heights, can be dangerous and may lead to injury and/or death.

The installation must never be executed by minors, and extreme care and caution must be taken when executed by adults.

Do not use any other components, parts, tools or materials other than those included in the Tentsile Tree Tent package, recommended in this manual or in other Tentsile literature.

A hanging and/or suspension system is only as strong as its weakest link and all instructions and guidelines must be followed.

The Tentsile Tree Tent must only be used in the manner described in this manual. When assembled and installed, the Tentsile Tree Tent places significant force on the anchor points;

great care must be exercised when using it to decrease the risk of injury and/or death.

Overloading the Tentsile Tree Tent with more than 880lbs (400kg) increases the forces and may cause anchor, Tree Tent and/or any parts to fail, resulting in injury and/or death.

The manufacturer and resellers of the Tentsile Tree Tent explicitly disclaim any and all responsibility and liability for any death, paralysis, injury, and/or damage to any person or property that may occur that arises out of or is in any way related to the use of this product.

Using any equipment that is suspended above ground can be a dangerous activity that may result in serious injury and/or death even when used properly. Use at your own risk and always use common sense.

Positioning the Connect

Tentsile Tree Tents need 3 secure and strong anchor points to suspend from. The distances are marked below. Once the location is found, lay out the Connect on the ground with the corners facing your selected trees. Protective tree wraps are provided should you wish to use them.



Connect Body



Connect Rainfly



x2 Poles




x3 Ratchet



x3 Straps




x3 Screw Pegs

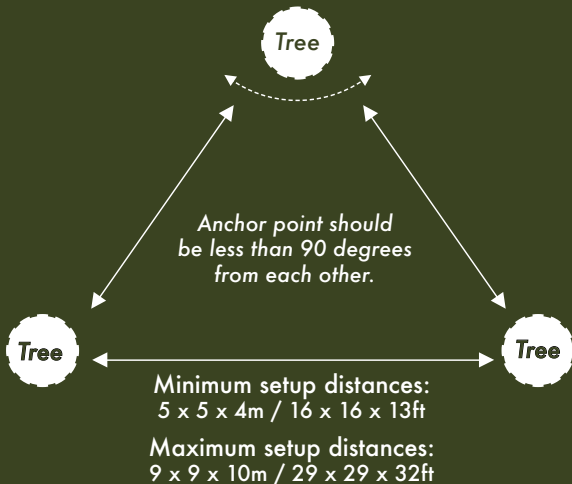

Alignment Sight Tag


Use the pole sockets on the side of the tent.
Look along the Connect and ensure it and the
strap are inline with the tree.

The central seam should line up with the tree strap
at the rear of the Connect.

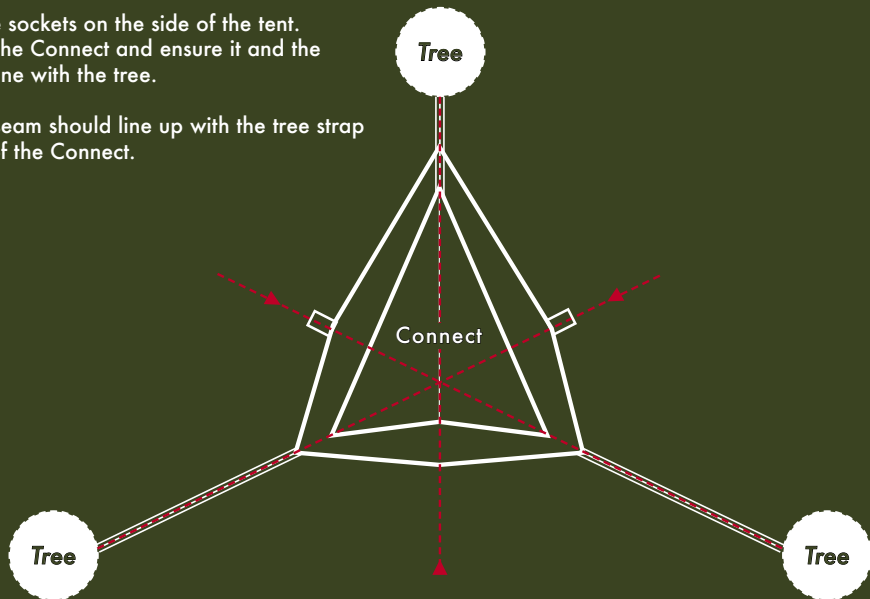

Tree Straps

With a location found, start by wrapping the tree straps around your selected trees.

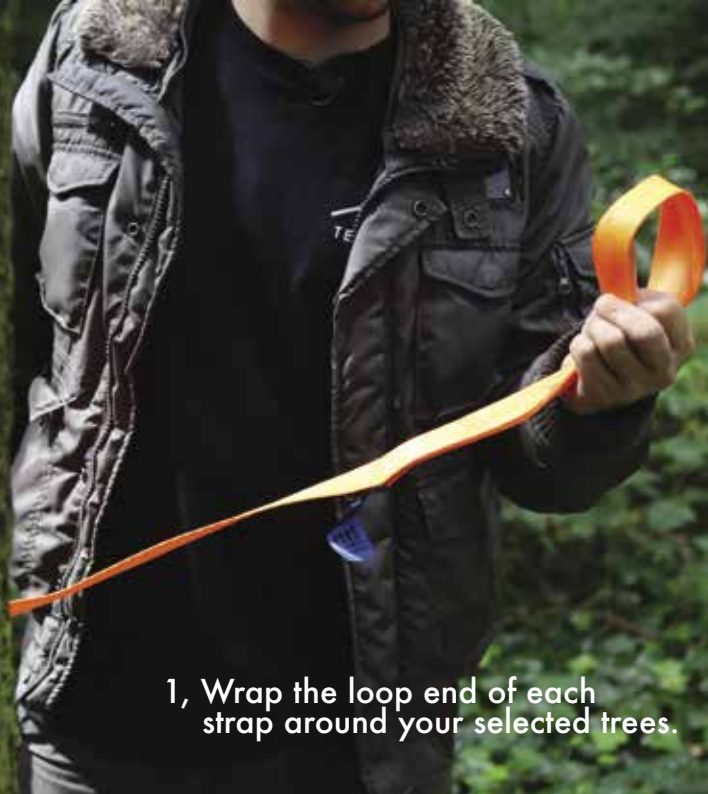

1, Wrap the loop end of each strap around your selected trees.




2, Once around, thread the strap and pull it all through towards the Connect.



3, Ensure the strap is flat against the tree and not twisted.

Attaching The Ratchet

With the tree straps attached and the Connect laid in position, you can now attach the 3 ratchet straps to the D-rings at each corner.

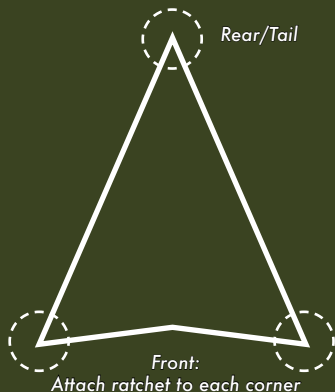

4, The ratchet has a loop in its strap



7, Pull the ratchet through the loop.



5, The loop should be passed through the D-ring in the corners of the tent



6, Pass the ratchet through the loop.



8, Pull tight and dress the Girth Hitch




9, Pushing the strap back into the knot will loosen it.

Fitting Strap To The Ratchet

With the ratchet strap attached to the D-rings, it can now be connected to the tree straps.

Check each corner of the Connect is aligned to each anchor point.

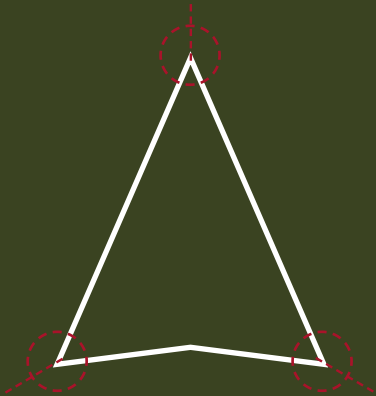

10, Ensuring there's enough length, bring the ratchet and tree strap together.





11, Feed the tree strap end through the spindle.



12, Feed it in and pull it through making sure it does not twist.



13, Lift the Connect off the ground by pulling through excess strap at each point.




14, Give a strong pull before cranking the ratchet.

Tightening The Ratchet

Cranking the ratchet will give the tension needed and allows for easy adjustment. Ensure the ratchet is correctly in the locked position before entering the Connect.

Attention - Ratchet Locking

Crank the ratchet handle back & forth 7- 9 times to increase tension to straps.

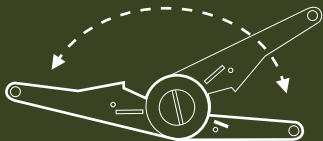

UNLOCKED



LOCKED



15, Release the ratchet lock by pushing the inner latch upwards.



18, Do this until the handle has strong resistance.



16, This will release the handle and allow it to be cranked.




17, Pull the handle back and begin cranking it back and forth.



19, Once achieved, move the handle to the closed position and lock.

LOCKING RATCHET

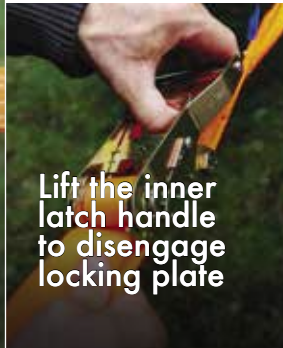



Lift the inner latch handle to disengage locking plate



Push down so it latches flat.

Aligning The Connect

Now the Connect is raised, it needs to be aligned. This is adjusted by slacking the other ratchets and re-adjusting the tension between them to pull it in the desired direction. Once aligned ensure all ratchets are tight and locked.

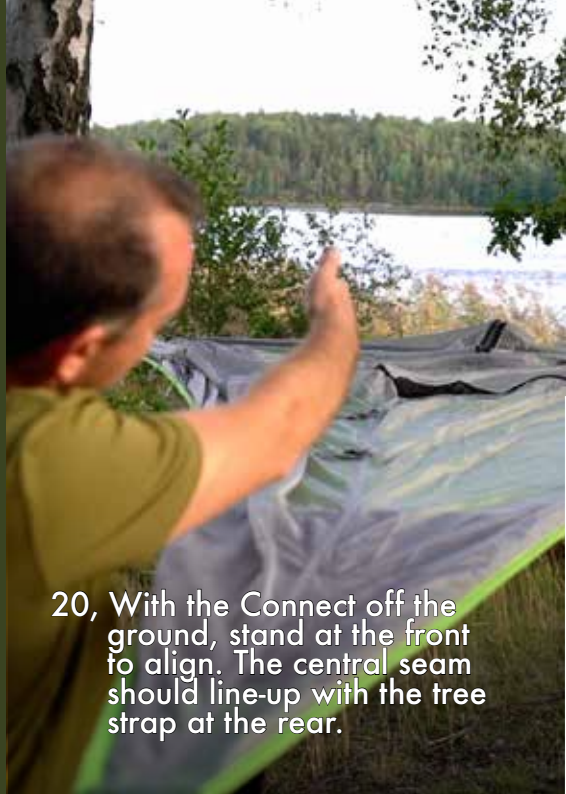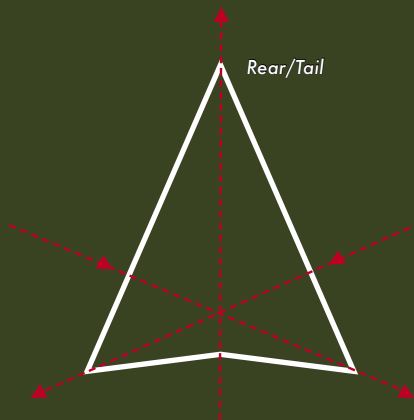

20, With the Connect off the ground, stand at the front to align. The central seam should line-up with the tree strap at the rear.


21, At either side, use the pole socket nearest the rear to align against the tree strap. Do the same for the other side.

22, Once all are aligned then tighten the rackets and lock them before inserting the poles .

Inserting The Poles

Insert the poles into the pole sleeves that run across the top of the mesh.


Once through, secure the ends into the pole sockets and move around to the other side and repeat.

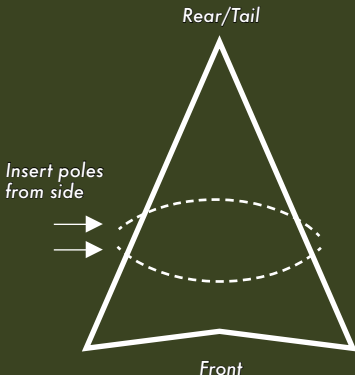


23, Take the 2 poles and unfold them to their full length before inserting.



25, Push them through until they are visible from the other side.

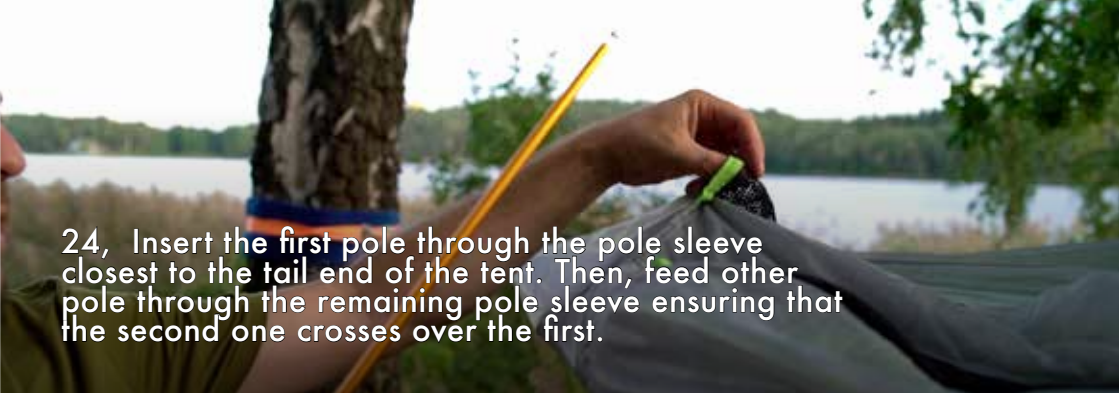

24, Insert the first pole through the pole sleeve closest to the tail end of the tent. Then, feed other pole through the remaining pole sleeve ensuring that the second one crosses over the first.


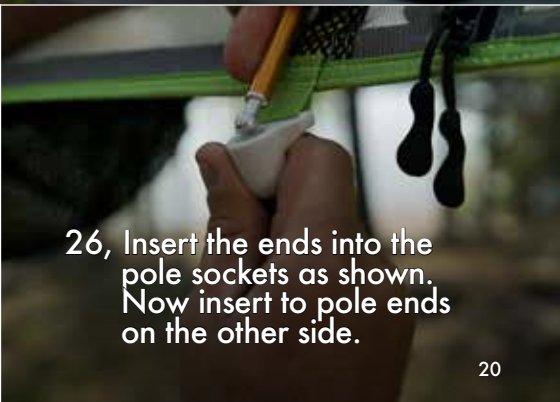


26, Insert the ends into the pole sockets as shown. Now insert to pole ends on the other side.


Inserting the Poles (Cont.)

Take the pole ends and carefully push them towards the Connect so that the lengths move upwards. Now secure them in the pole sockets.

The main body of the Connect is now complete and ready for the rainfly.

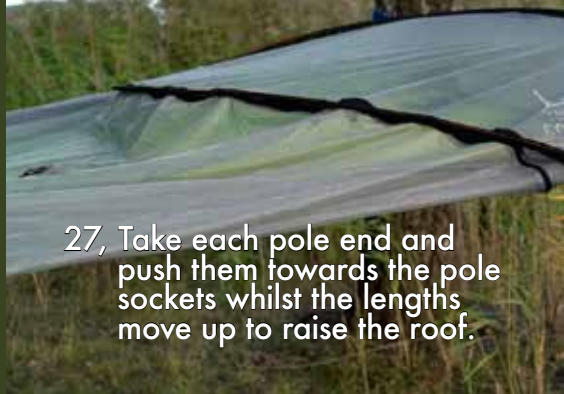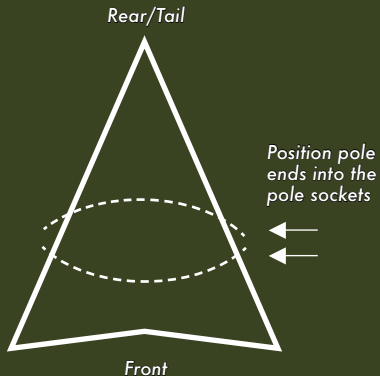

27, Take each pole end and push them towards the pole sockets whilst the lengths move up to raise the roof.

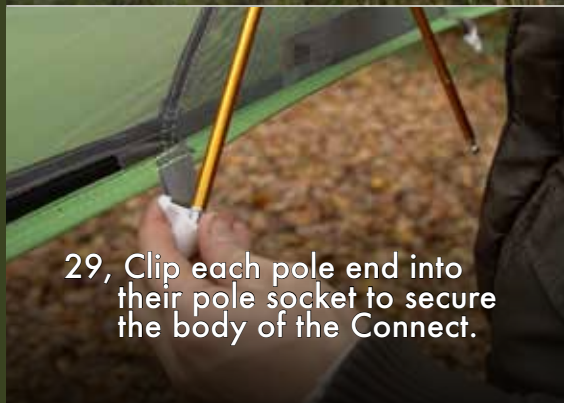

29, Clip each pole end into their pole socket to secure the body of the Connect.





28, The poles will be under tension as you get closer to the pole sockets.



30, Double check the tree straps, ratchet locks and poles are secure before entering the Connect.

Fitting The Rainfly

The rainfly is easily added to the Connect. Each corner of the rainfly has C-clips that simply clip onto the ratchet handle for easy installation. Start at the rear to begin fitting.

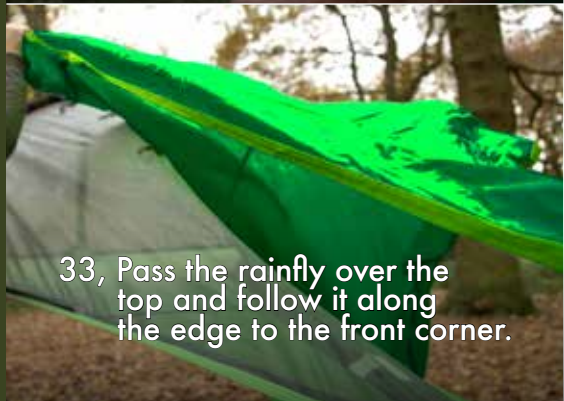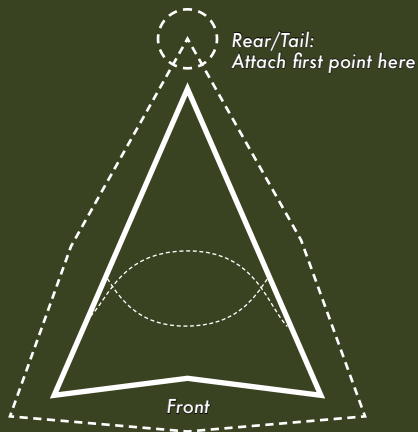



32, Start at the rear and place the rainfly 6"/15cm along the strap. Then attach the C-clips to the ratchet handle.



34, Overlap the strap again with the rainfly and ensure it covers the Connect.




35, Lace the cords around the strap and connect the hooks to secure. Repeat for the final corner.

Pegging Out

The final part is to peg it out using the bungees and pegs provided.


Simply attach the bungee loop to the peg, pull until firm and then screw them into the ground to secure.

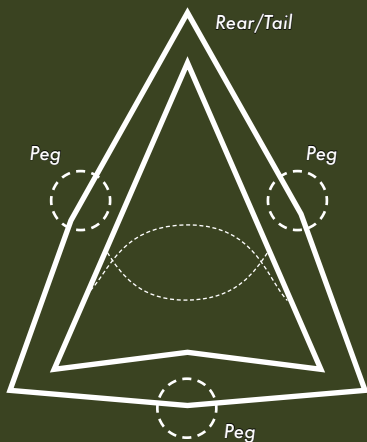

36, In the middle of each edge is a loop with a bungee attached.



37, Loop the bungee on to the peg so that it will securely hold it.

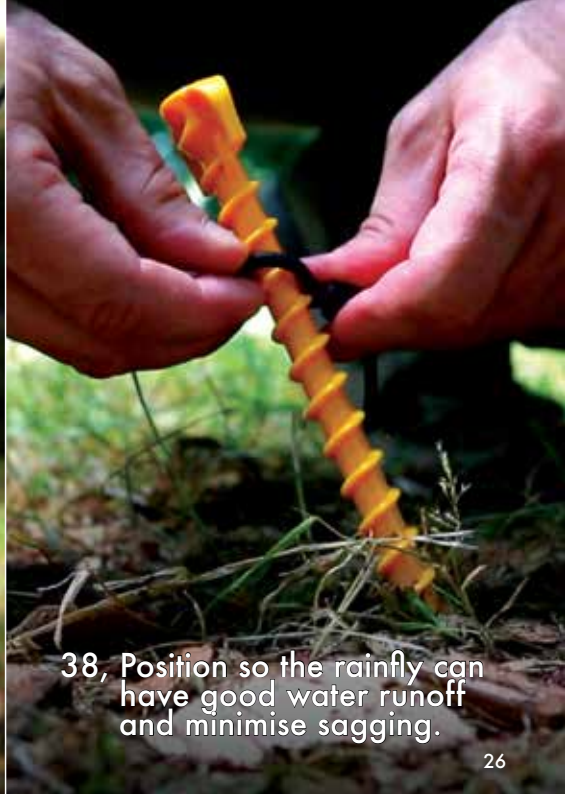

38, Position so the rainfly can have good water runoff and minimise sagging.

You're done

At each corner underneath the rainfly are hooks that allow it to be pegged out to provide the best rain protection.

Check all ratchets are in the locked position before entering.



39, At each corner, connect the rainfly hooks together to secure it down.



Double check the tree straps, ratchet locks and poles are secure before entering the Connect. Enjoy.


Floor Strap Calibration

Tentsile Trees Tents come pre-calibrated, but stretch over time so will need you to tighten the underfloor strap, using the buckle every so often. Here is how:

When the Connect is up, the centre (underfloor) strap should provide a clear delineation between both hammock berths. To increase this tension (and therefore separation between the two hammocks) just tighten or loosen the adjuster buckle strap on the underside of the Connect.

This re-tensioning will need to take place every so often as the materials can stretch over time.

If you are using the Connect, you can slack off this strap completely and have the whole floor as a large single hammock berth to yourself.

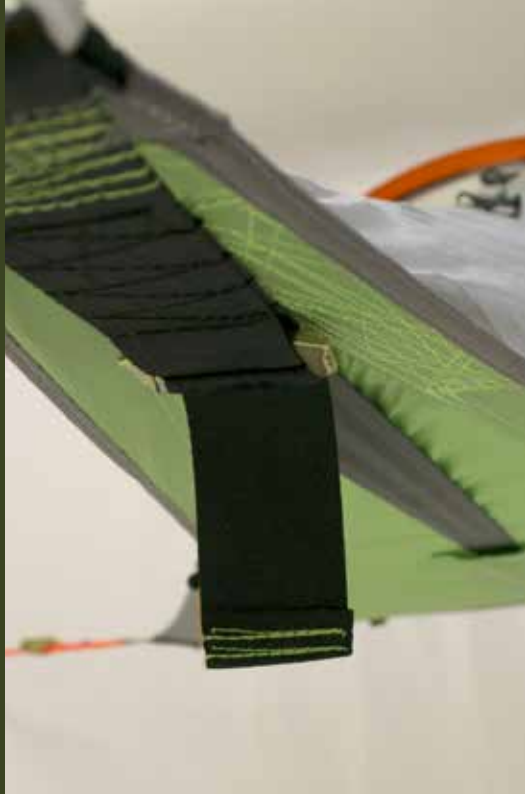

How to use the Ratchet

1) Take tail end of the long strap around your trees and thread through the loop and away from tree, towards your Tentsile Tree Tent.

2) Thread loop of the ratchet through the D-Ring at each corner of your Tentsile Tree Tent and take the buckle through the loop.

3) Take long strap tail and thread it through the ratchet buckle spindle, pulling through all excess orange strap. Crank ratchet until the orange strap has gone around the spindle at least 1.5 full revolutions to underlock it. This will prevent any slippage before moving to the next corner.


4) Repeat step 3 at each corner, trying as much as possible to keep the corners pointing towards their respective anchor points.

5) Revisit all corners and adjust as necessary. Use line of sight down each strap to centralise your Tentsile Tree Tent between your chosen anchor points. You have about a 7° degree margin of tolerance in each direction.

6) Tighten ratchets as much as you can. **ENSURE RATCHETS ARE IN LOCKED POSITION BEFORE ENTERING THE TENTSILE TREE TENT.**

7) Roll and tidy up strap ends to avoid any possible trip hazards.

Crank the ratchet handle back & forth 7-9 times to increase tension to straps.

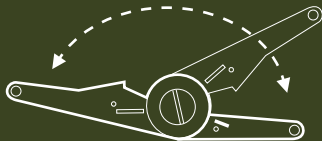

UNLOCKED



LOCKED



Policies

Maintenance

Visual and Tactile inspection of all components for structural damage before every use and dry out Tentsile Tree Tent thoroughly before packing away. Tentsile Tree Tent should be stored safely in a dry environment.

Returns

You can return this product, in a clean and dry condition, within 4 weeks of purchase and expect a full refund or replacement. If a manufacturing defect occurs within 1 year of reasonable* use, the product can be returned for repair or exchange.

Weather

The Tentsile Tree Tent is not intended to be used in severe weather. If there is weather that creates dangerous conditions, such as storms, heavy rain, high winds, and/or lightning, do not use or remain in the Tentsile Tree Tent in or during those conditions. It is recommended that the Tentsile Tree Tent is taken down and stored to avoid remaining inside and being subject to such conditions. Leaving the Tentsile Tree Tent out and installed in bad weather can lead to potential destruction and/or damage to it (not covered by warranty). If the Tentsile Tree Tent is subject to such

conditions, it and its anchor/hanging system should be inspected in detail prior to any future use. Be sure to thoroughly dry the Tentsile Tree Tent before storing.

Customer Service Charter

Quality first - We will manufacture, sell and distribute the best possible quality Tentsile Tree Tents in the World.

Customer focus - We will provide prompt, courteous and efficient service, with honesty and integrity and expert, clear, and timely information to customers and colleagues.

Tentsile Promise - We will strive for a 'get it right first time, every time' in all our dealings in manufacturing, distribution, sales, and service.

This policy does not cover damage incurred by environmental conditions, weather conditions, or apocalyptic events.

Contact us
info@tentsile.com

*use as intended and outlined herein and no more than 3 months continuous use.

The small print

The Tentsile Tree Tent is designed for play, relaxation, and camping/sleeping. Never jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops. Do not attach or secure the Tentsile Tree Tent to a movable platform or anchor; it is not intended to be used for such recreation or activities. Do not attempt to use this product for anything other than its intended purpose, and always observe height and weight limits.

Warranties

This one year warranty covers all manufacturing faults of fabrics, parts and workmanship. This warranty covers the functionality of the product for its normal, intended use as specified in Tentsile's consumer literature, incl. website.

It does not cover poles or malfunction of any component that has resulted from improper or unreasonable use or neglectful maintenance, the user's use of undersized or unhealthy trees, sharp objects or fire near the Tentsile Tree Tent or the use by more than the recommended number of persons, at the recommended set up height.

This policy does not cover damage incurred by environmental conditions, weather conditions, or apocalyptic events.

The warranty herein will not be honoured for products that are purchased through an unauthorised dealer or secondary reseller.

Unauthorised and/or resold products are not backed up by the high quality standards and dependability of original products sold by authorized dealers. By buying from an unauthorised dealer you could get a product that is counterfeit, stolen, or re-manufactured, and being listed as new.

To redeem any potential warranty you will need to provide proof of purchase with the product.

Other than as described above, the manufacturer, sellers, and resellers of this product make no other representations and/or warranties, either express or implied, regarding the product, including without limitation, any warranties as to merchantability, quality, or fitness for a particular purpose.

The manufacturer, sellers, and resellers shall not be liable in any way whatsoever for special, indirect, consequential, or incidental damages, whether based on breach of contract, breach of warranty, tort (including negligence), product liability or otherwise, even if they have been advised of the possibility of such damages. Violation of the instructions and warnings herein operates as a waiver of claims by the user.

The Tentsile Tree Tent user agrees that his or her full remedy against the manufacturer, sellers, and resellers for any liability, claims, or damages, shall be limited to the purchase price of the Tentsile Tree Tent, and irrevocably waives all claims for any other damages that such user may have.

20 Trees Planted

Tree Planting Mission

For every tent purchased we make a donation to plant 20 trees with our partners: WeForest, Eden Projects, and Arbor Day Foundation. So far, we have planted over 560,000 trees in projects located across Zambia, India, Madagascar, and Oregon.

Follow our #BecomeOneOfTheMillion campaign and keep up with our progress as we work with each of these organisations to plant 1 million trees over the next 5 years.

Where Do We Plant Them?

Tentsile's tree planting partners all meet a number of strict criteria; from regular updates and tracking donations, to working with local communities, training residents, planting native species and protecting saplings to maturity.





TENTSILE

www.tentsile.com

All rights reserved Tentsile Ltd 2015
Patent Approved