LUXURY LED SHOWER INSTALLATION INSTRUCTION

SHOWERING WITH ROMANTIC AND FUN



Bluetooth music speaker




Remote control LED light




64 RGB LED color







SHOWERING WITH ROMANTIC AND FUN

Product Specification

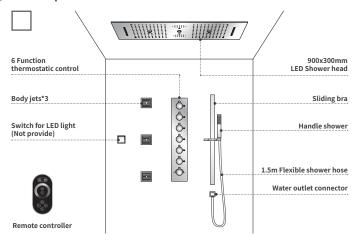

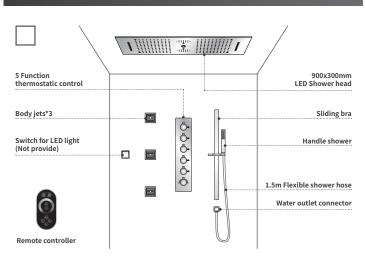

Product Specification

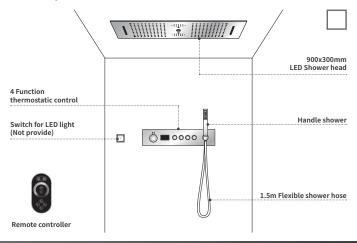

Install Caution:

> Technical Data:

Please read carefully these instructions before proceeding with the product installation.

It is indispensable to flush through the supply pipes before installing and using the product.

Operating pressure = 0,3 - 1MPa (3 - 10bar)

Large differences in pressure between the hot and the cold water supply should be balanced.

Recommended hot water temperature = 60° C - 70° C

Maximum hot water temperature = 70° C

Cleaning:

Cartridge Change :

It is recommended to clean the tap with a soapy solution.

Never use cleaners containing acids, abrasives, or solvents.


Towel dry any water left on the product after each use to avoid water spots on its surface.

To avoid obstructions caused by scale buildup at the aerator it is recommended to periodically dismount it and submerge it in water with vinegar. It is essential to turn off the water supply system (angle value or stopcock) and to close the popup waste before beginning with the cartridge change.

The stronger you tighten the cartridge nut, the harder the lever will move.

▶ Bom List




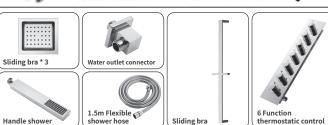



Bom Lis



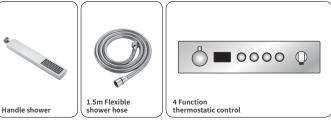

Please read the safety warnings carefully Tools needed as bellow




Electric drill


Water blocjing tape

Screwdriver

Power / water pipe - layout

Before installation, well plan the pipe groove in the required position for the product according to the actual installation location of the wall and ceiling.

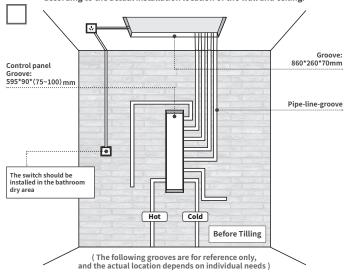


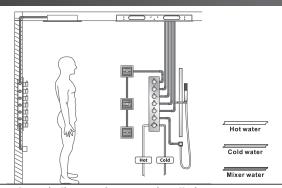


Schematic diagram of waterway installation

Power / water pipe - layout

Before installation, well plan the pipe groove in the required position for the product according to the actual installation location of the wall and ceiling.

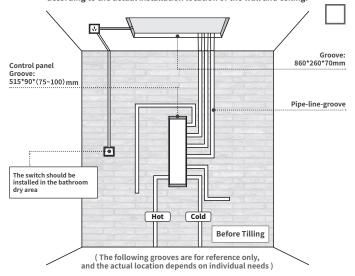


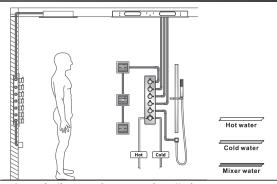


Schematic diagram of waterway installation

Power / water pipe - layout


Before installation, well plan the pipe groove in the required position for the product according to the actual installation location of the wall and ceiling.

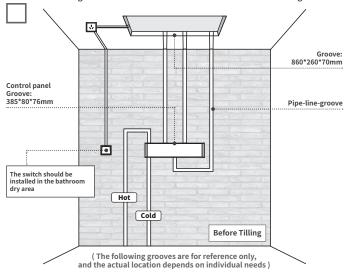

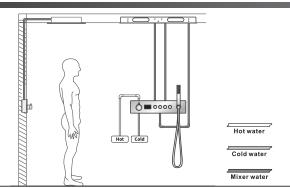


Schematic diagram of waterway installation


Luxury LED Shower spara parts Exterior Dimensions

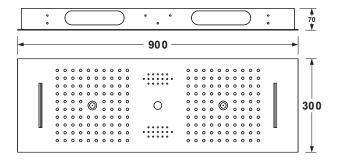


Luxury LED Shower spare parts Identification chart

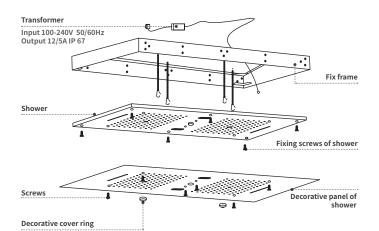

Luxury LED Shower spare parts method

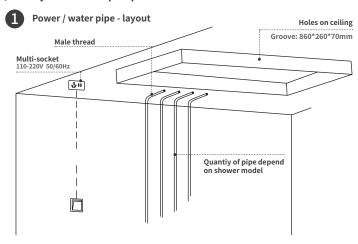



2 Shower head installation fixed frame

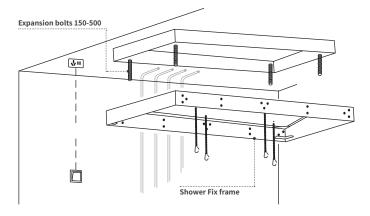


Luxury LED Shower spare parts installation instruction


3 layout for power / water pipe

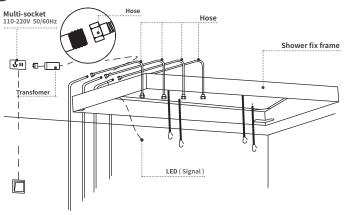


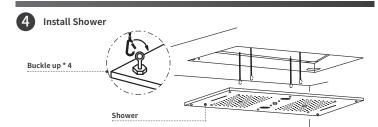


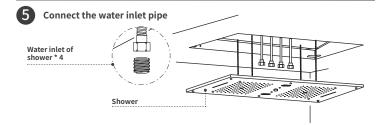

Luxury LED Shower spare parts installation instruction

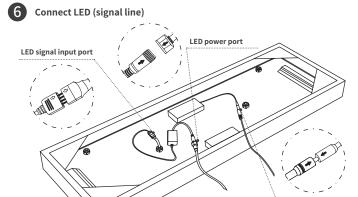

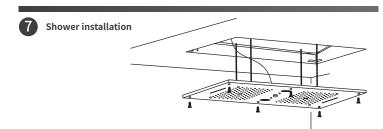




➢ Installation method





6 Function thermostatic control shower valve

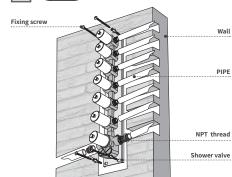

Before Tilling

· Please grooved and install the shower valve according to the size drawing, the depth of the groove is about 75-110mm




After the installation is complete, turn on the water source and try to see if the water is leaking or clogged.



Audio Line

6 Function thermostatic control shower valve

After Tilling

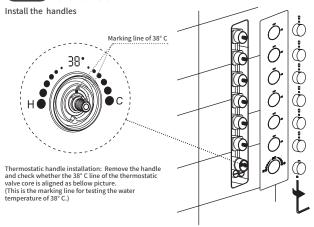

> Installation method

Fixing screw

5 Function thermostatic control shower valve

Wall

PIPE

NPT thread

Shower valve

· Please grooved and install the shower valve according to the size drawing, the depth of the groove is about 75-110mm




After the installation is complete, turn on the water source and try to see if the water is leaking or clogged.

Before Tilling




After Tilling

5 Function thermostatic control shower valve

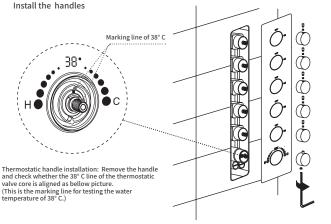

→ Installation method

4 Function thermostatic control shower valve

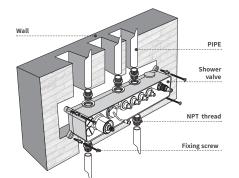


Before Tilling

· Please grooved and install the shower valve according to the size drawing, the depth of the groove is about 77-85mm




After the installation is complete, turn on the water source and try to see if the water is leaking or clogged.

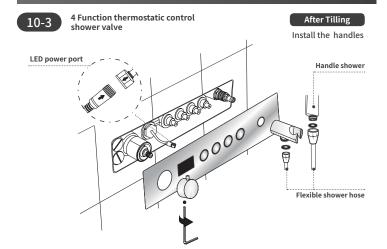

> Installation method




Body jets * 3




Before Tilling

- 1.Please grooved 110*100mm according to the embedded box size.
- 2. Wrap with the appropriate raw material and connect to the water inlet pipe.
- 3.Put the embedded box to the groove and fix the crews from back side.




After Tilling

- 1. Install the cover.
- 2. Fix the screws by using H10 hexagonal



After Tilling


- 1. Line up the Card slot and the outside double-steel-bars and then push in completely.
- 2. Using the M4*20 hexagon socket screw to tighten the component and the connector. Mare sure the cover component is not loose.



After Tilling

1. Install the components, make sure the components' steel-bars clip into the main body component's card slot. Then using the M4*12 hexagon socket screw to tighten them. Pay attention to prevent deformation of the cover when you tighten them.

2. Install the cover.

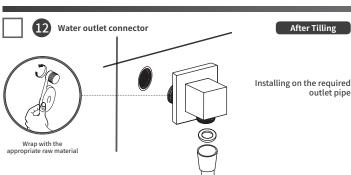


> Installation method





Sliding Bra

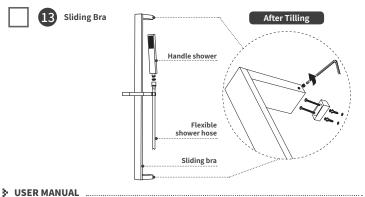

Main parameter:

Panel controller: Working Temp.:-20~60

Supply Voltage:DC12-24V

Size:L50*W35*H23mm

Output:3Channel

Output Current:<2A(each channel) Connection mode:common anode

Touch Remote:

Working voltage: 1.5V*3V Emission current:10mA Working Current:300uA Standby Current:3uA Standby time:6 mouths Control distanceL20M

Color pulley point:60



1.Turn ON/OFF

5.Mode Switch

2.Color Touch Ring

3/6.Color Temperature adjusting

4/8. Dynamic Speed adjusting

7/9. Dynamic Brightness adjusting

Touch remote use instruction:

1.Touch remote have 64 touch key, each keys function below:

Pause: on the dynamic mode, you can make the controller to stop the current state now.

2. Power supply management:

Stop to use the remote more than 20s, the remote will enter the stand by state(untouchable state):slightly shake once, then the remote will come back to the normal working state(touchable state)

3.Indicator light instruction:

Slightly shake once, then the remote will come back to the normal working state(touchable state)

1.the remote is idle or sent signal when the PWR bright, PWR is off, then means the remote is in standby state;

2.RF is bright,that means remote is sentting signal.off means there is no signal sending

Mode:

NO.	FUNCTION	REMOTE
1	Static red	Brightness is adjustable Speed is unadjustable
2	Static green	
3	Static blue	
4	Static purple	
5	Static blue-green	
6	Static yellow	
7	Static white	
8	R G B Jumping	Brightness is adjustable Speed is adjustable
9	R G B Gradual	
10	7-Colors Jumping	
11	7-Colors Gradual	

Controller connections shown:

Touch remote use instruction:

Remarks

- 1. This product should be commissioned and installed by qualified personnel.
- 2.2.This product can not be waterproof, need to avoid sun and rain, if installed outdoors, please use waterproof box.
- $3. Good\ heat\ dissipation\ conditions\ will\ extend\ the\ life\ of\ the\ LED\ controller, please\ install\ the\ product\ in\ a\ well-ventilated\ environment.$
- ${\Large 4. Please \ do \ not \ install \ or \ use \ such \ products \ in \ lightning, thunder, strong \ magnetic \ or \ high \ voltage \ applications.}$
- 5. Please check whether the output voltage of the LED power supply used meets the product voltage range requirements.
- 6.The diameter of the wire used must be sufficient to load the connected LED luminaire, and ensure that the wiring is firm, to avoid the wire overheating or poor contact triggers the accident. 7.Before power-on debugging, ensure that all wiring is correct to avoid damage to the luminaire due to wiring errors.

Safety warning notes:

Content for users as shown in the following major issues of, in order to prevent the occurrence of personal injury or property loss, be sure to respect. Please read the safety warnings and precautions, to be properly use of this product.



Warning

Be sure to respect the users, if ignoring the wrong side of this operation that may cause serious personal injury or significant property loss, resulting in the loss of no responsibility of the Company. Failure of this product must be carried out by professionals to repair and protect, to the demolition of this product is strictly prohibited.

If you ignore this marker, the possibility of a minor personal injury or property loss.

Please do not permission to demolish, repair, alteration of the products, such as the replacement of the power cord


The absolute prohibition of touch the electrical outlet with wet hands. Use wet hands to touch the power seat, there might cause an electric shock hazard.



Please do not connect water pipes outside the home, such as industrial sources.

It may lead insufficient water pressure or damage the skin.





Service Center for timely replacement.

It may lead to fire.



Implementation

Please take this as a specialized product in bathroom, not for other purposes.

It may lead to fire, leakage, injury.

No use this product for a long time, please unplug the power, let the water out completely to protect the motor.

It may lead to fire, leakage.

No implementation of water, it may lead to deterioration caysed by skin disease.



