
### **DOUBLE WARDROBE**


Stock number: 4207-82

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

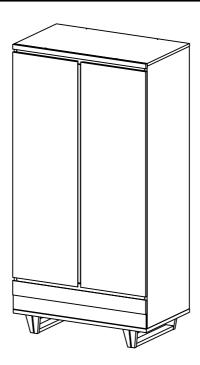

### **Pre-assembly preparation**

Please ensure instructions are read in full before attempting to assemble this product.

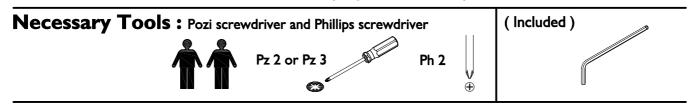

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product takes approximately 60 MINUTES to assemble with 2 PEOPLE.

All assembly should be performed on a flat, stable, clean and soft surface.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

The fitting pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.

**IMPORTANT:** Retain these instructions for future reference.

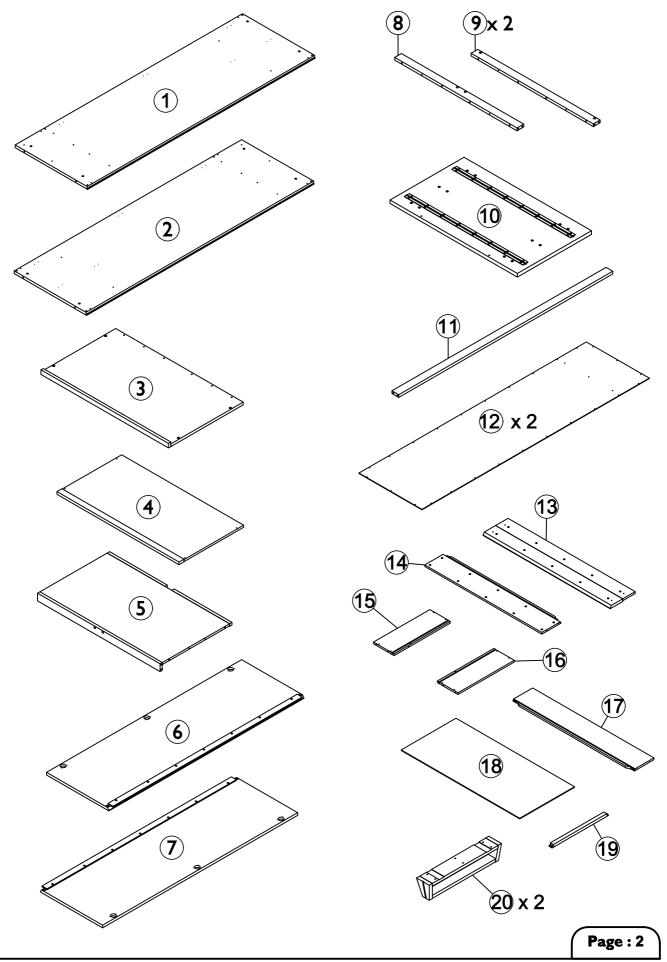

## **Parts checklist**

ltem	Description	Qty.	lte	m	Description	Qty.
1	Side panel left	x 1	1	1	Vertical back rail	x 1
2	Side panel right	x 1	1	2	Back panel	x 2
3	Top frame	x 1	1	3	Drawer front	x 1
4	Removable shelf frame	x 1	1	4	Drawer front inner	x 1
5	Fixed shelf frame	x 1	1	5	Drawer side left	x 1
6	Left door	x 1	1	6	Drawer side right	x 1
7	Right door	x 1	1	7	Drawer back	x 1
8	Inner front rail	x 1	1	8	Drawer bottom	x 1
9	Back rail	x 2	1	9	Support drawer	x 1
10	Bottom panel	x 1	2	0	Leg frame	x 2

# Fittings checklist

ltem	Description		Qty.	Item		Description		Qty.
Α	Steel dowel Ø7 x 70mm	O'ring	x 4		5	Hinge arm		× 6
В	Steel dowel Ø7 x 49.5mm	O'ring	x 4	F	2	Metric bolt M4 x 15mm		x 10
С	Grub screw Ø8 x 8.5mm		× 8	5	S	Confirmat screw Ø7 x 50mm	((((((((((((((((((((((((((((((((((((((	x 6
D	Cam lock (18/19mm panel)		× 6	٦	Г	Round head screw Ø3.5 x 15mm	<b>€0000</b>	x 58
Е	Cam lock (15/16mm panel)		x 4	ι	J	Left runner		x 1
F	Cam screw Ø7 x 44.5mm		x 12		/	Right runner		x 1
G	Hex head bolt M6 x 30mm		x 12	V	<b>V</b>	Round head screw Ø4 x 30mm	aaaaaaa(3)	× 4
Н	Wooden dowel Ø6 x 30mm		x 12	>	<b>&lt;</b>	Wood shelf support		x 4
J	Wooden dowel Ø8 x 30mm		x 24	\	<b>1</b>	Flat head screw Ø4 x 15mm	<uu(\$)< th=""><th>x 2</th></uu(\$)<>	x 2
K	Hanger rail support	Ø	x 4	7	Z	Round head screw Ø4 x 18mm	<aaaaaa(3)< th=""><th>x 2</th></aaaaaa(3)<>	x 2
L	Hanger rail		x 1	d	d	Allen key M4 x 30 x 110mm		x 1
М	Varianta screw Ø4.2 x 10.5mm		x 32	е	e	Felt Ø22 x 5		× 4
Z	Varianta screw Ø6 x 13.5mm		x 4	f	f	Cam lock (18/19mm panel)		x 2
Р	Hinge mounting plate		x 6					

- **Step** (1) 1.1: Lay all parts onto a flat, stable, clean and soft surface.
  - 1.2 : Attach 12x cam screws (F) into the pre-drilled holes on side panels (1) & (2) as shown. Use a pozi screwdriver to turn fittings (F) clockwise to fix.
  - 1.3: Attach 4x hanger rails support (K) onto the pre-drilled holes on side panels (1) and (2) using 8x varianta screws (M) as shown. Use a screwdriver to turn fittings (M) clockwise to fix.
  - 1.4: Attach left runner (U) and right runner (V) onto the pre-drilled holes on side panels (1) & (2) using 4x varianta screws (N) and 2x flat head screws (Y) as shown. Use a screwdriver to turn fittings (N) & (Y) clockwise to fix as shown.
  - 1.5 : Attach 6x hinge mounting plates (P) onto side panels (1), (2) using 12x varianta screws (M) as shown. Use a screwdriver to turn fittings (M) clockwise to fix.

Note: The metal edges may be sharp, please use care when attaching to the panels.

**Fitting** 

F x 12



**K** x 4



 $M \times 20$ 




**₹₩₩** 

 $Y \times 2$ 






 $U \times 1$ 

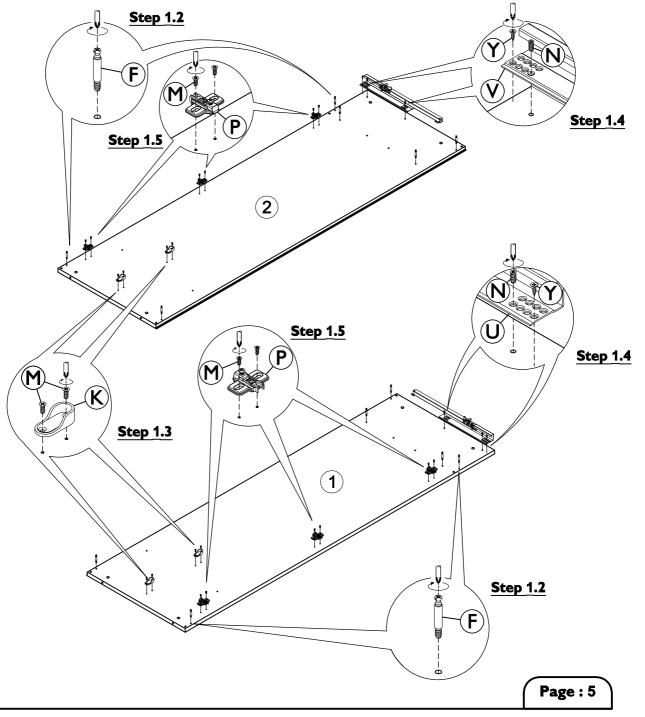

# Step (2)

: Attach 4x steel dowels (B) by screwing fittings (B) into the insert fitting onto that are located on top frame (3) as shown. Ensure the direction of the holes on fittings (B) are facing correctly as per diagram.




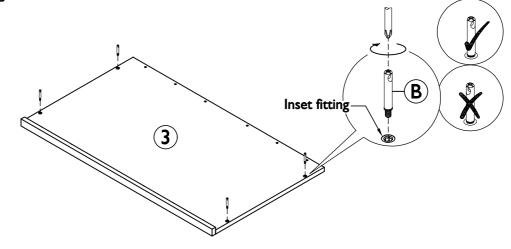

## Step




- 3.1: Insert 24x wooden dowels (J) into the pre-drilled holes on fixed shelf frame (5), inner front rail (8), back rails (9) and vertical back rail (11) as shown.
- 3.2: Insert 4x wooden dowels (H) into the pre-drilled holes on fixed shelf frame (5) as shown.

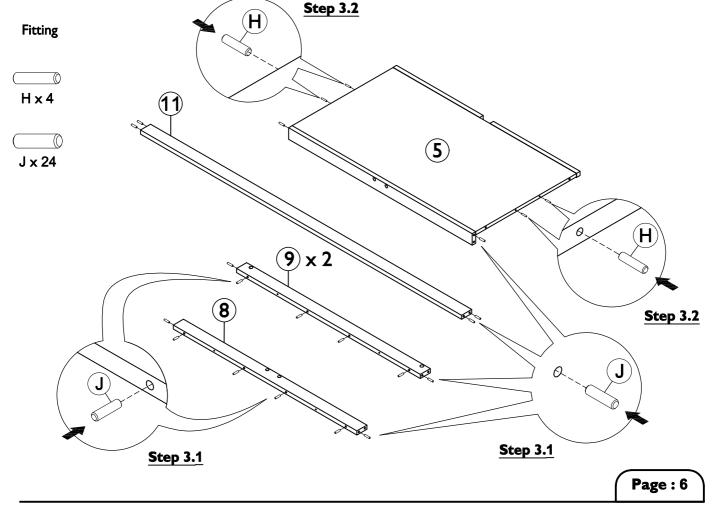

### **Step** (4)




: Attach back rails (9) onto vertical rail (11) as shown. Ensure wooden dowels (J) are aligned correctly with the holes of mating parts before attaching.

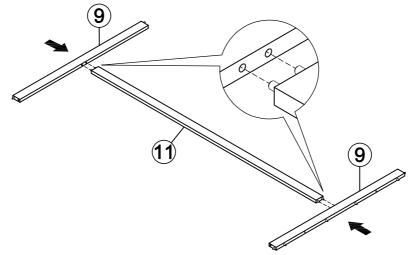



- Step (5) 5.1: Attach the structure assembled in Step 4, fixed shelf (5) and inner front rail (8) onto right side panel (2) as shown. Ensure cam screws (F) and dowels (J), (H) are aligned correctly with the holes of mating parts before attaching.
  - 5.2 : Secure all parts (8), (9) to part (2) using 3x cam locks (D) as shown. Use a pozi screwdriver to turn fittings (D) clockwise to fix.
  - 5.3 : Secure part (5) to part (2) using 2x cam locks (E) and 1x cam lock (ff) as shown. Use a pozi screwdriver to turn fittings (E), (ff) clockwise to fix.

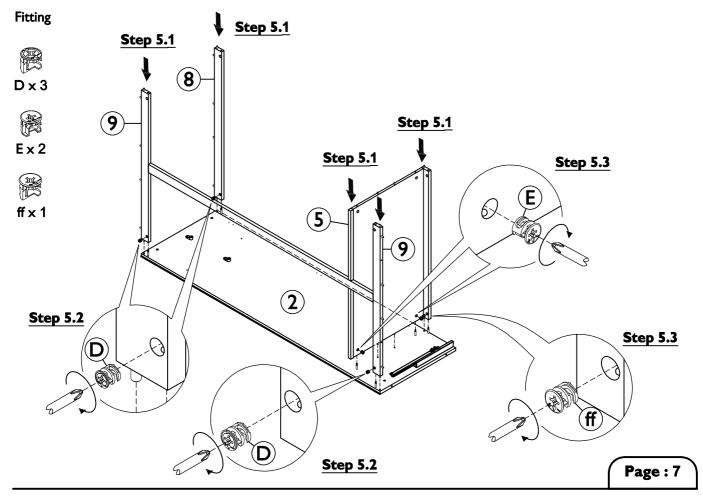

- Step (6) 6.1: Attach left side panel (1) onto the structure assembled in Step 5 as shown. Ensure cam screws (F) and dowels (J), (H) are aligned correctly with the holes of mating parts before attaching.
  - 6.2 : Secure part (1) to part (2) using 3x cam locks (D) as shown. Use a pozi screwdriver to turn fittings (D) clockwise to fix.
  - 6.3 : Secure part (1) to part (5) using 2x cam locks (E) and 1x cam lock (ff) as shown. Use a pozi screwdriver to turn fittings (E), (ff) clockwise to fix.

**Fitting** 




 $D \times 3$ 



Ex2




ff x 1

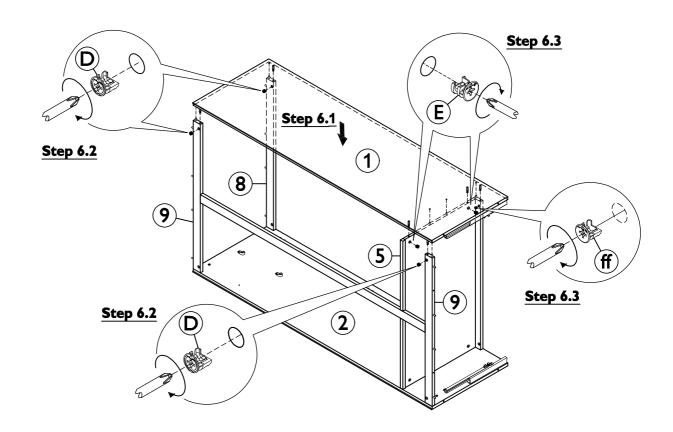


## **Step** (7)



: Attach 4x steel dowels (A) by screwing fittings (A) into the insert fitting onto that are located on part (10) as shown. Ensure the direction of the holes on fittings (A) are facing correctly as per diagram.

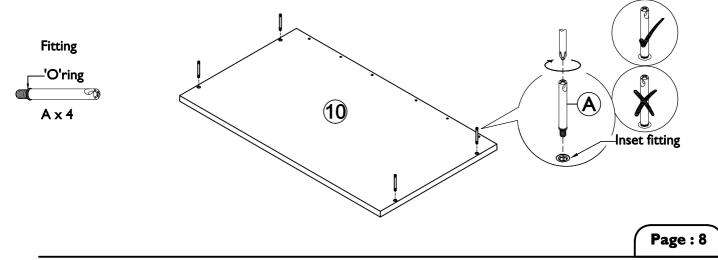

- Step (8) 8.1 : Attach top frame (3) onto the structure assembled in Step 6 as shown. Ensure steel dowels (B) and wooden dowels (J) are aligned correctly with the holes of mating parts before attaching.
  - 8.2 : Secure part (3) to parts (1) & (2) using 4x grub screws (C) as shown. Use a pozi screwdriver to turn fittings (C) clockwise to fix.
  - 8.3 : Secure part (3) to parts (8) & (9) using 4x confirmat screws (S) as shown. Use allen key (dd) to turn fittings (S) clockwise to fix,

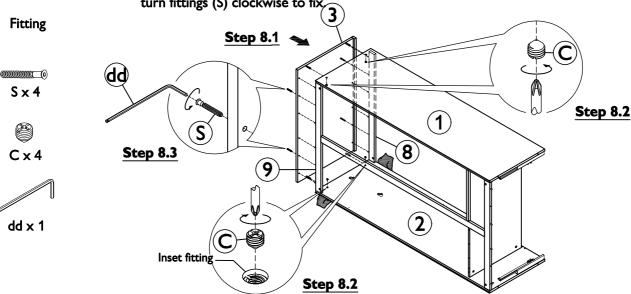


## **Step** (9)

**Fitting** 




- 9.1 : Attach bottom panel (10) onto the structure assembled in **Step 7** as shown. Ensure steel dowels (A) and wooden dowels (J) are aligned correctly with the holes of mating parts before attaching.
- 9.2 : Secure part (10) to parts (1) & (2) using 4x grub screws (C) as shown. Use a pozi screwdriver to turn fittings (C) clockwise to fix.

9.3 : Secure part (10) to part (9) using 2x confirmat screws (S) as shown. Use allen key (dd) to

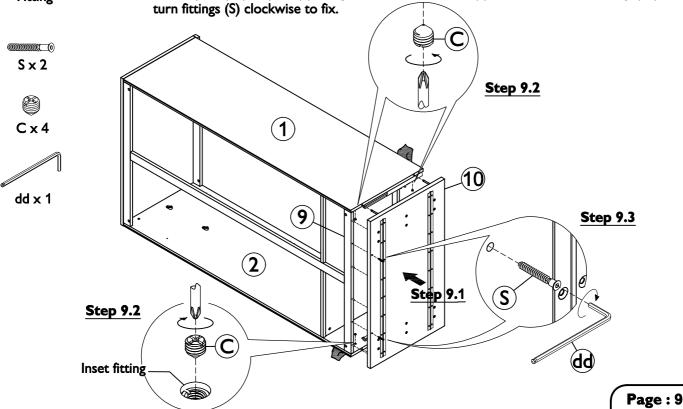


- Step (10) 10.1: Attach back panels (12) onto back side of the unit using 58x round head screws (T) as shown. Use a screwdriver to turn fittings (T) clockwise to fix.
  - 10.2: Attach leg frames (20) onto bottom panel (10) as shown.
  - 10.3 : Secure leg frames (20) to bottom panel (10) using 12x hex head bolts (G) as shown. Use allen key (dd) to turn fittings (G) clockwise to fix.
  - 10.4 : Remove the plastic from 4x felts (ee) and stick felts (ee) onto under legs as shown.

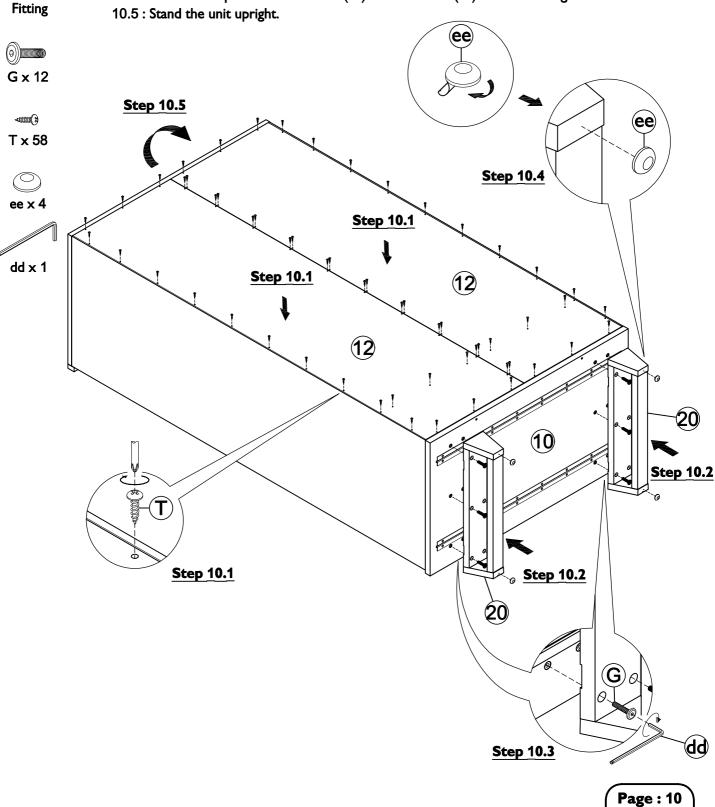




Step 11: Attach 6x hinge arms (Q) onto the pre-drilled holes on door panel left (6) & door panel right (7) using 12x varianta screws as shown. Use a screwdriver to turn fittings (M) clockwise to fix.

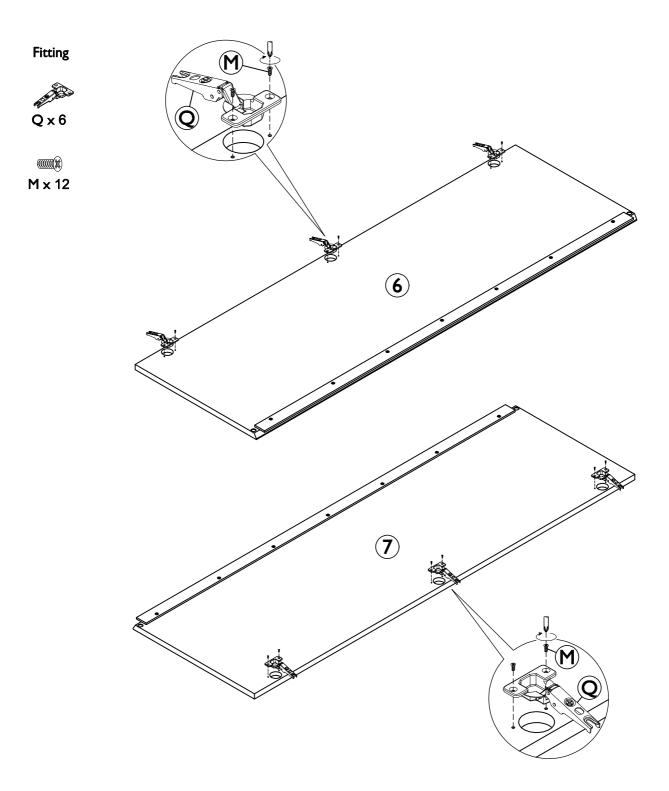

# Step 12




: Attach 2x door panels (6), (7) to side panels (1), (2) by sliding hinge arms (Q) on door panels (6), (7) onto hinge mounting plates (P) on parts (1), (2) as shown. Ensure the hinge arms and hinge mounting plates are aligned correctly before attaching. Use a screwdriver to turn screws on hinge mounting plates clockwise to fix.

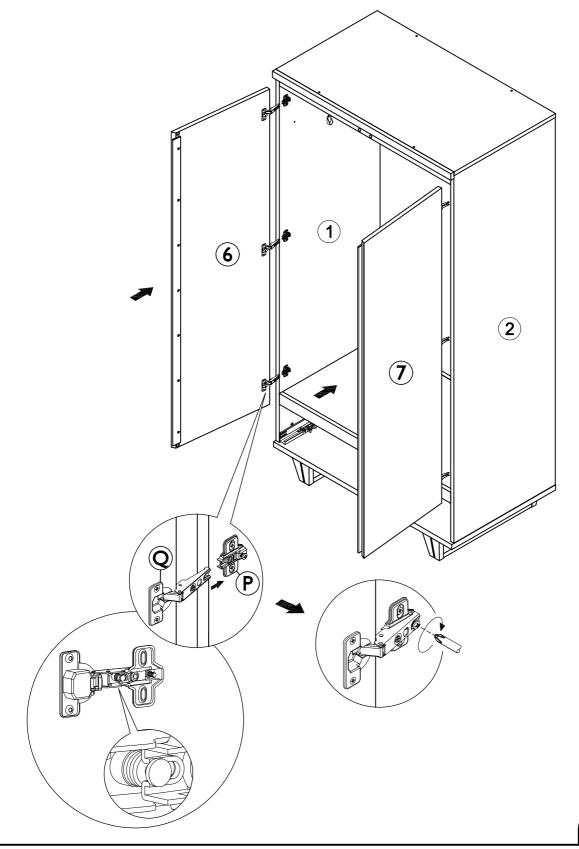

- Step (13) 13.1: Insert 2x wood shelf supports (X) into the pre-drilled holes on left and right side panels (1) & (2) as shown.
  - 13.2: Tilt removable shelf frame (4) to a suitable angle as shown in the picture so as to slide it in.
  - 13.3: Slide removable shelf frame (4) into the unit as shown. Ensure the holes on shelf are facing down, then place it onto the pins of wood shelf support (X) as shown.
  - 13.4: Insert 2x wood shelf supports (X) into the pre-drilled holes on left and right side panel (1) & (2) as shown. Lower removable shelf frame (4) onto the pins of wood shelf supports (X) as shown.


**Fitting** 

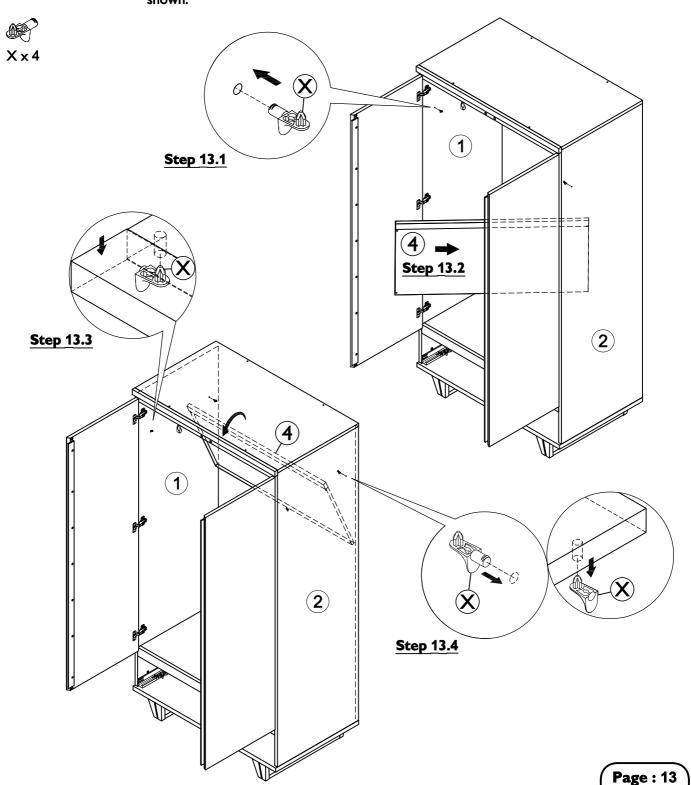



Step (14): Place 1x hanger rails (L) onto hanger rail supports (K) on side panels (2) & (3) as shown. Note: Hanger rail (L) can be installed in both up and down of the cabinet.




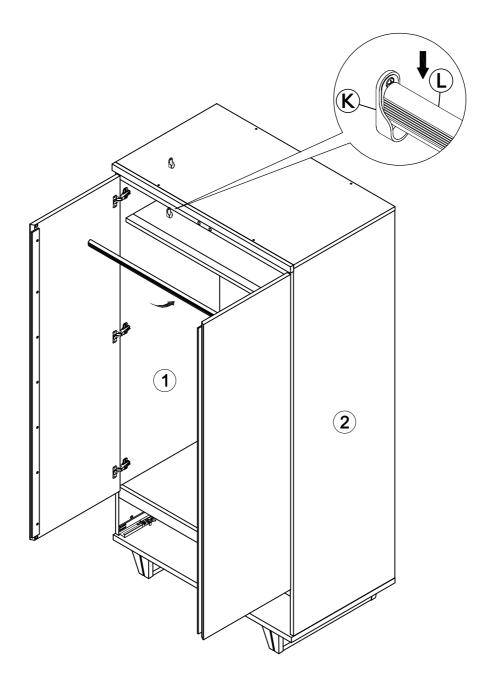

# Hinge adjustment instructions


### **LATERAL ADJUSTMENT**

by screw adjustment.

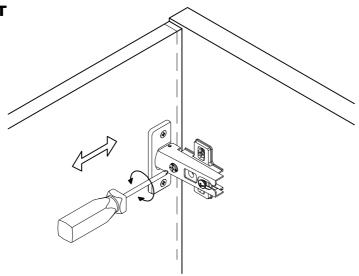


### FRONT-TO-BACK

by slackening and retightening the hinge-arm mounting screw.

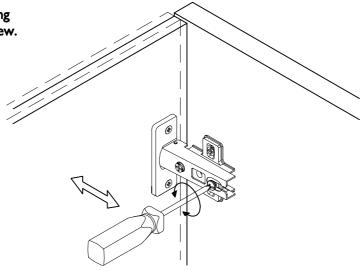


### **VERTICAL ADJUSTMENT**

via slots on mounting plate by slackening and retightening the screws on mounting plate

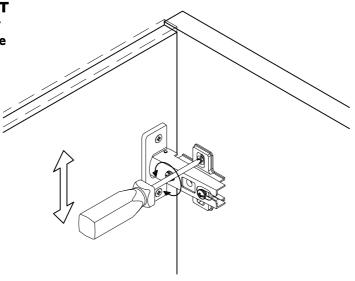

# Step (15)


: Attach 8x wooden dowels (H) onto drawer front inner (14), drawer side left (15) and drawer side right (16) as shown.

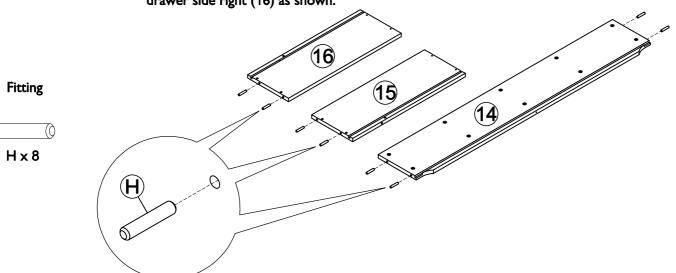

# Step 16



- 16.1: Attach drawer sides (15) & (16) onto drawer front inner (14). Ensure wooden dowels (H) are aligned correctly with the holes of mating parts before attaching.
- 16.2: Attach the structure assembled in Step 16.1 onto drawer front (13). Ensure wooden dowels (H) are aligned correctly with the holes of mating parts before attaching.
- 16.3 : Secure drawer front inner (14), sides drawer (15) & (16) to drawer front (13) using 10x metric bolt (R) as shown. Use a screwdriver to turn fittings (R) clockwise to fix.

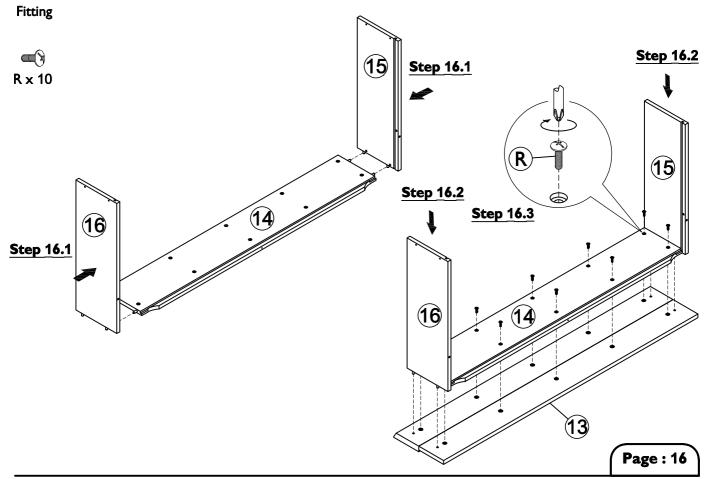

## **Step (17)**


**Fitting** 



- 17.1: Slide drawer bottom (18) into the slots inside drawer sides (15) & (16) as shown. Ensure the drawer bottom (18) are placed completely in the slot of drawer inner front (14).
- 17.2 : Secure support drawer bottom (19) onto drawer front inner (14) using 1x round hex screw (Z) as shown. Use a pozi screwdriver to turn fittings (Z) clockwise to fix.
- 17.3: Place drawer back (17) onto the top of constructed drawer box. Ensure the slot under drawer back (17) are aligned correctly with drawer bottom (18) before attaching.
- 17.4: Secure drawer back (17) to the drawer box using 4x round head screws (W) as shown. Use a screwdriver to turn fittings (W) clockwise to fix.


17.5 : Secure support drawer bottom (19) to drawer back (17) using 1x round head screw (Z) as shown. Use a screwdriver to turn fittings (Z) clockwise to fix.

<aaaaaaaaaaaaaa(3)  $W \times 4$ 

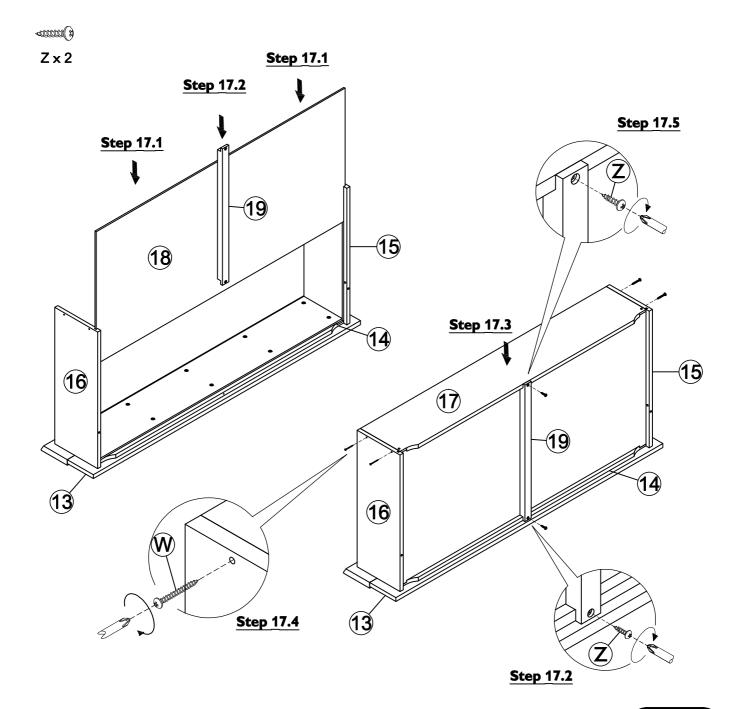





Step 15: Insert the assembled drawer into the unit as shown.

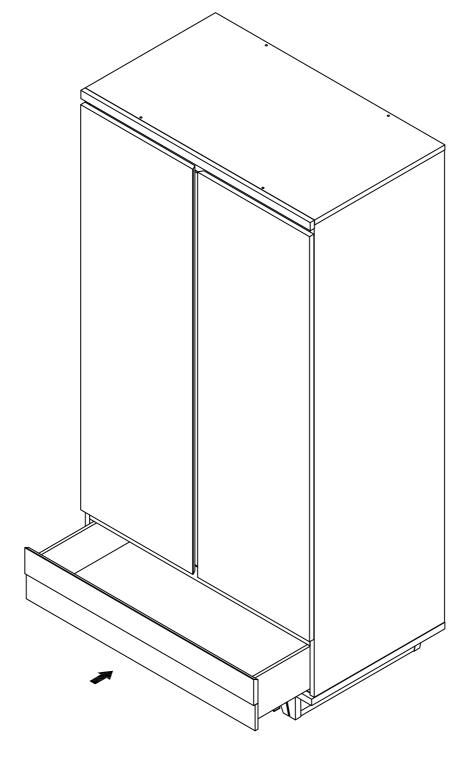

Assembly is complete.

# TANDEM RUNNER ADJUSTMENT INSTRUCTION

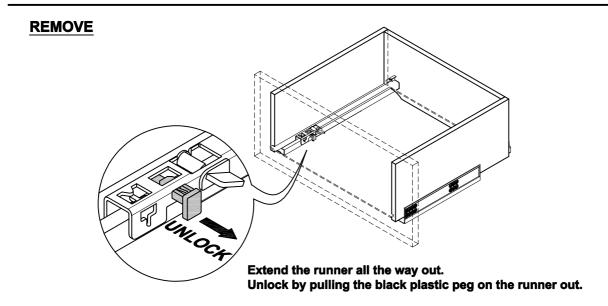


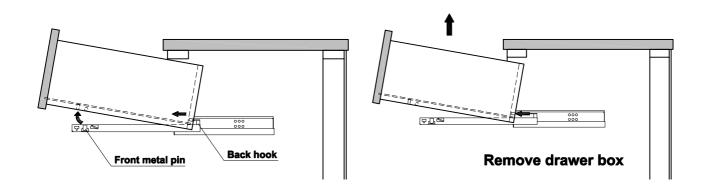


Hold runners with both of your hands.


Carefully lift the drawer front up from the front metal pin, then slide forward to remove from back hooks.


### **VERTICAL ADJUSTMENT (± 2.5 mm)**

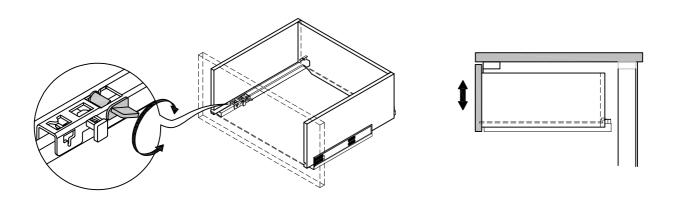

# TANDEM RUNNER ADJUSTMENT INSTRUCTION

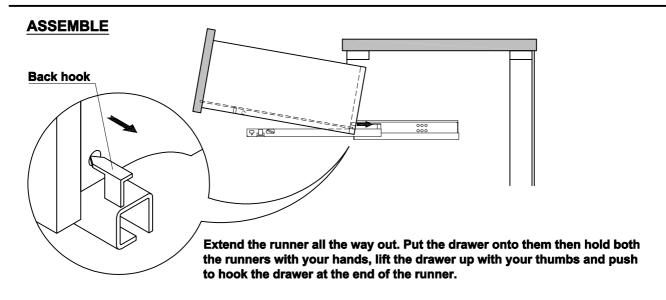

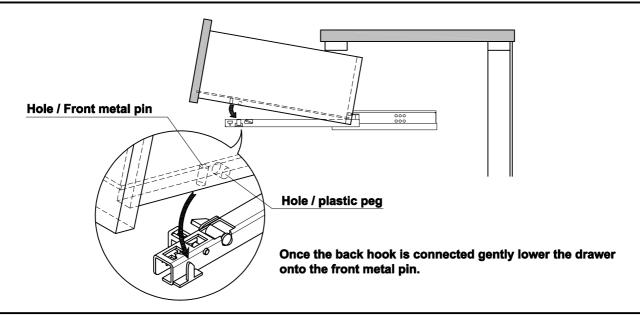

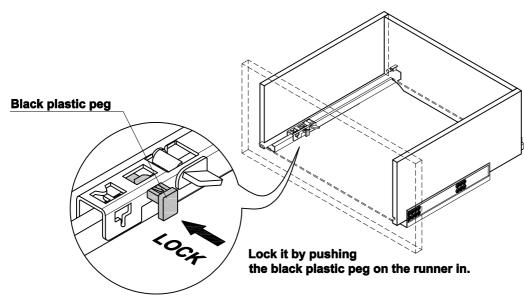

### **Care and Maintenance**

### **Wood Furniture**

Wood displays different grain patterns depending on which way they are cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood.

Some furniture is also deliberately aged and rustic.

Wood veneers also allow distinctive patterns to be created on some surfaces, such as table tops and drawer fronts by the way slivers are arranged.

All timber and veneer surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

### How to care for your wood furniture

Dust with a clean, damp, lint free cloth. Frequent dusting will remove abrasive build up, which can damage the finish over time.

Do not use a very wet cloth or allow any liquid to contact with the veneers for a long period of time as this can permanently damage the surface. Wipe up spills immediately.

Do not use any abrasive cleaner or harsh detergent as this can damage the surface of the furniture.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface when building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters.

Ensure that a mat or pad is placed under paper when you are writing on the furniture surface.

Do not place rubber, cork, vinyl or plastic materials on the wood finish as chemicals within may react with the finish if left in contact for an extended period of time.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by home heating can cause damage such as warping, cracking or splitting.

Excessive exposure to sunlight can cause fading of your furniture.

Avoid exposing your furniture to any liquids. All liquids should be wiped up immediately with a soft, slightly damp cloth in the direction of the wood grain. If sticky liquid residues do occur, they may be removed with a dilute solution of warm soapy water followed by a clean, damp sponge. The area should then be wiped immediately in the direction of the wood grain with a clean, soft white cloth until completely dry.

Nail polish remover, hairspray, perfume, potpourri & any other products that contains solvents can damage wood upholstery finishes.

### **Safety Instructions:**

Never drag furniture when moving it. Always lift it.

Periodically check all fixings to ensure none have come loose. Re-tighten when necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly assembled. Assembly should be carried out by a competent person.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

### Heavy item warning:

It is recommended to seek assistance when moving a heavy object. Take care when lifting to avoid personal injury and (or) damage to the product.

It is recommended that before moving a heavy object to a new location it is completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE