How to Update your Kestrel 5000 Series Firmware using Windows

- Requirements
 - NK <u>Bluetooth Dongle</u>*(if LiNK compatible) (or)
 - NK <u>USB Data Transfer Cable</u> (and)
 - Kestrel LiNK for Windows Program
 - Kestrel 5000 Series unit
 - Windows computer**


Ballistic users SHOULD save their guns prior to performing this update as they may be erased.




*You cannot use the same Bluetooth dongle that was used with 4000 series.


^{**} This process is only for LiNK for Windows. For LiNK for Android or LiNK for iOS, the process is automated when you open the application.

- 1) After downloading and installing LiNK for Windows, open the application.
- 2) First you will need to download the latest firmware to your computer. To do this, click on the Help Tab and open up *Update Your Kestrel*.

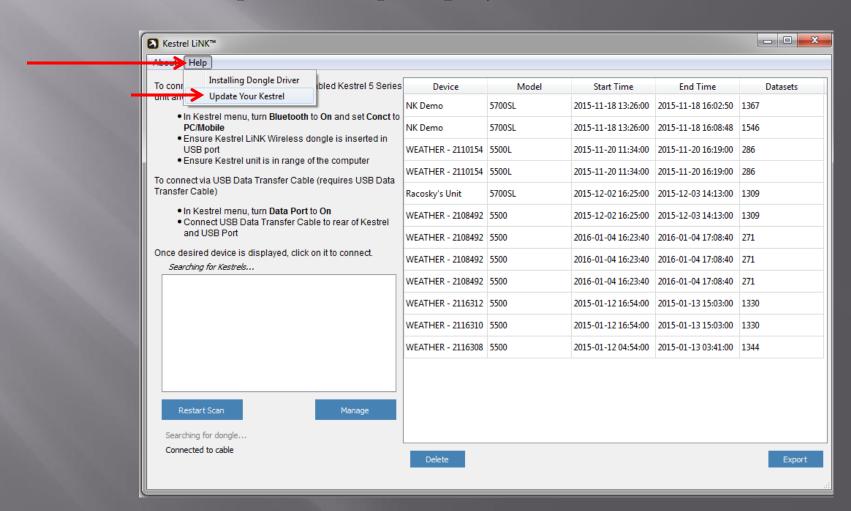


3) Click on the link in Step 1

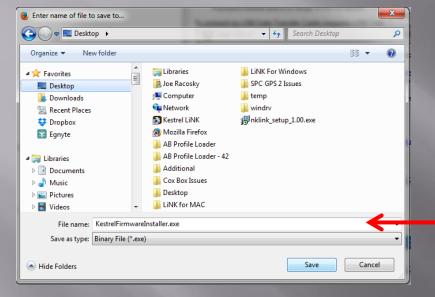


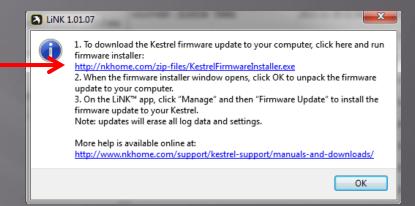

4) Save the file to a location where you can navigate to again. Easiest choice is Desktop.

5) Double click on the above file to run the firmware installer program. If a warning pops up like the one shown, you can ignore (Select Run).

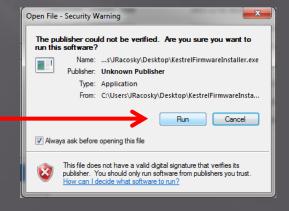

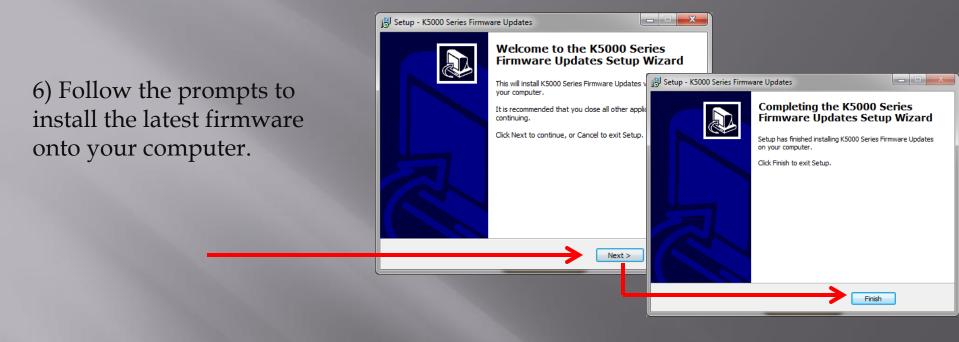

7) Next we will need to connect the Kestrel to the LiNK for Windows Application.

If you are using Bluetooth (i.e., LiNK Enabled):

On the Kestrel

- Turn Bluetooth to **ON**
- Press center button on Bluetooth and Set Conct to **PC/MOBILE**

- On the computer Insert Bluetooth dongle.
- On the application It should say "Connected to Dongle". If it still says "Searching for Dongle" please reinsert into a different USB port. If conditions continue, see guidance <u>here</u>.

If you are using USB Transfer Cable:

On the Kestrel

- Turn Data Port to ON.


- Plug USB cable into back of Kestrel

On the computer On the application


On the computer - Plug USB end of cable into computer.

On the application - It should say "Connected to Cable" (as shown below)

Please Note: The computer may take some time to install the driver the first time that the USB Data Cable or Bluetooth Dongle is inserted into the computer. Please allow some time for setup to occur. You may have to close and reopen the program after the driver is installed.

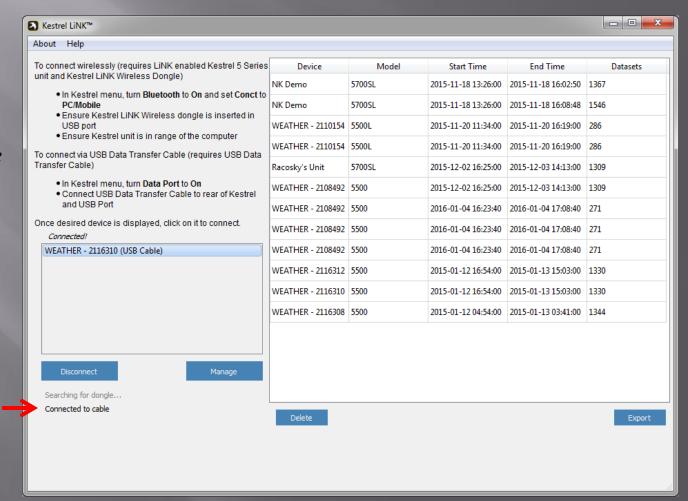

- 8) Select your Kestrel when it appears in the application.
- 9) Select the Manage Tab.
- 10) Select Firmware Update.

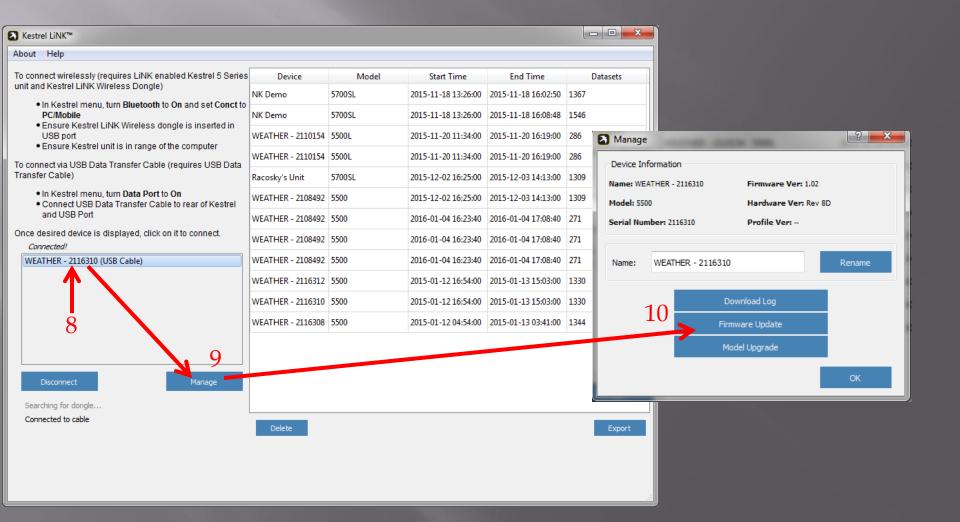

- 11) You will now be prompted if the latest firmware is not currently on your device. Please select Yes to update the firmware (it will erase your data on the device).
- 12) Please wait for the Kestrel to reboot after the progress bars are completed. Once the Kestrel reboots, the new firmware will be on your device.

