




MB444N – PE444

Stainless Steel Built-in Mixer Trim Parts

Installation Maintenance & Care

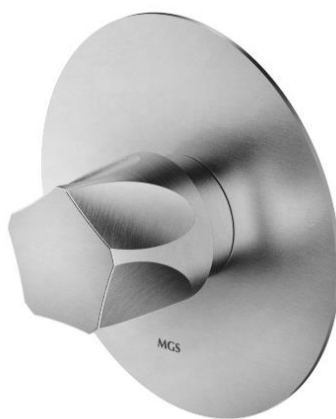



Dear Customer,

We thank you for choosing our product.

MGS Solid Stainless Steel faucets are manufactured in Italy by expert artisans. The product has been assembled, inspected and packaged with maximum attention and care.

The Matte and Polished finishes are obtained by hand polishing: a skilled touch to enhance the natural beauty of this noble metal.

All products are therefore alike, but not identical:
a synonym of exclusivity.

We use high grade AISI316L marine stainless steel that does not require any protective finish to be applied to the surface. Following the simple care instructions will allow you to keep your MGS faucet beautiful for a lifetime.


INSTALLATION WARNING

1. Observe all local plumbing codes.
 2. Inspect water supplies for signs of damage. Replace if necessary.
 3. Flush through the supply pipes.

Tools



#2 mm Allen Key

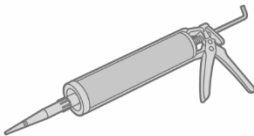


Silicone

Technical data

Operating Pressure:	max 145 PSI (10 bar)
Recommended operating pressure:	14 to 60 PSI (1 - 4 bar)
Maximum hot water temperature:	185 °F (85°C)
Recommended hot water temperature:	149 °F (65°C)

TRIM ASSEMBLY

Remove protection cover from Rough in valve.

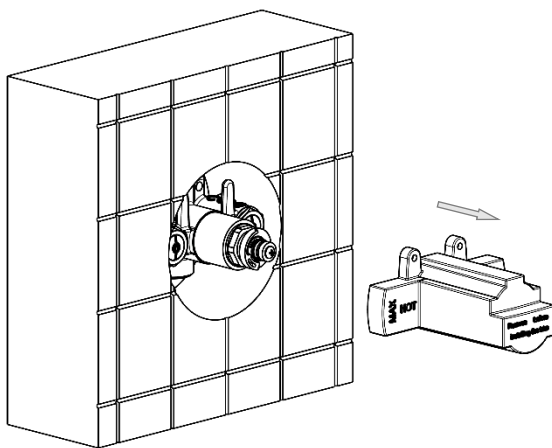

Temperature check - Temperature setting ring (cam)


Rotate insert **D** by using handle **E** for setting temperature at 38°C.
(check temperature with a thermometer).

Remove handle and insert cam **C** onto shaft **J**.

Assemble handle **E** with reference line in vertical position.


Fully rotate handle **E** counterclockwise and check that water temperature is around 42°C.

Remove handle **E** for fitting other trim parts as per further instructions.

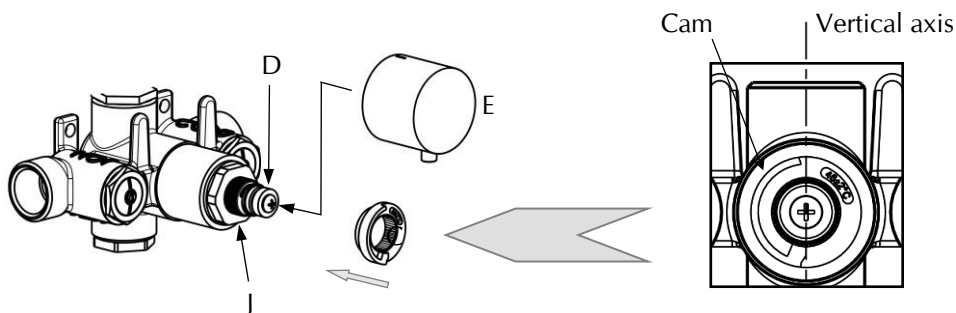


Fixing thermostatic valve trim ring

After checking the correct deepness of the valve in the wall so that no shaft extensions are necessary, fix trim ring onto valve's body with the Silicone supplied in the carton keeping the reference line in vertical position (12 O' Clock). Carefully remove with a blade any Silicone residuals.

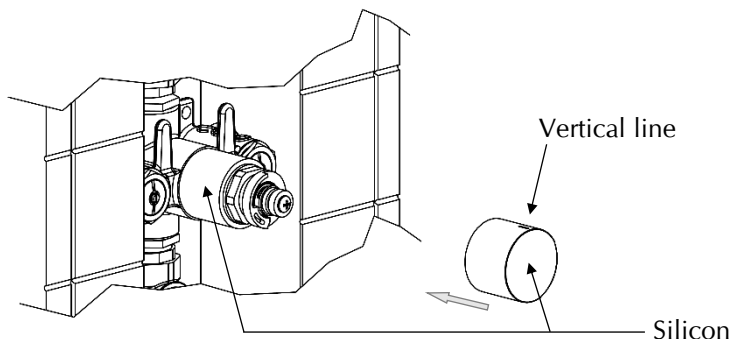

Fixing trim plate


Allow the Silicone of thermostatic trim ring to set.
Apply some Silicone on the trim plate and place it in position.

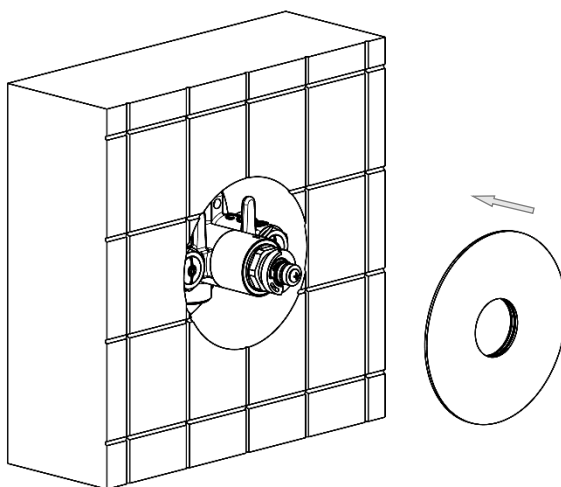

TRIM PARTS (guidelines valid for all models)

Fixing thermostatic valve handle


After positioning cam **C** as indicated in page 4, push handle **F** onto shaft insert **D** checking that the two reference lines coincide. Tighten grub screw with hexagonal key 2 mm (enclosed) and fully screw lever **L** (only for MB serie).

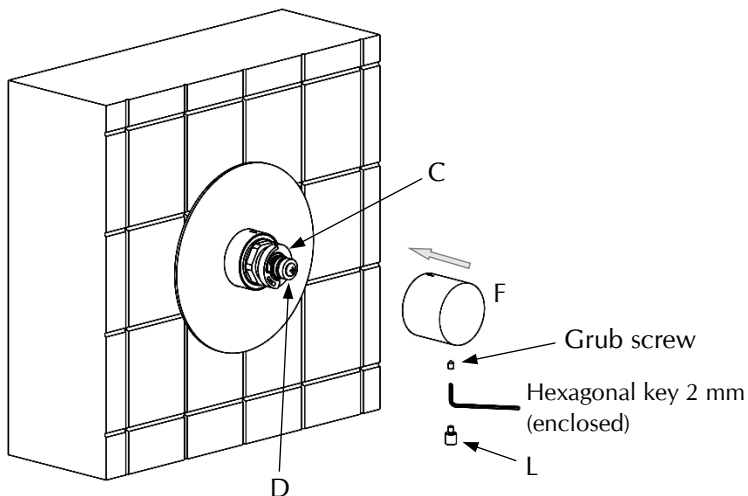


MAINTENANCE

Cleaning / replacing thermostatic valve

- 1) Close water mains.
- 2) Remove handles and eventually the trim rings from the plate depending from the model.
- 3) Remove trim plate.
- 4) Remove cam.

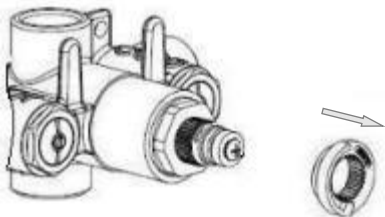

- 5) Unscrew valve counterclockwise with a 30 mm spanner.

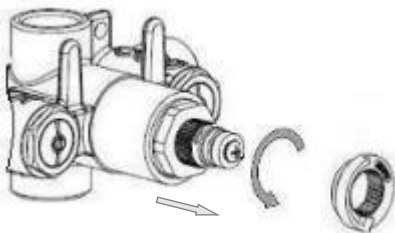


- 6) Remove thermostatic valve and clean filters under running water.

In the case of limescale, leave in vinegar for 12 hours.

Before reassembling in the body, lubricate O-ring gaskets.

If the O-ring gaskets are damaged, replace them by ordering part number O.062.

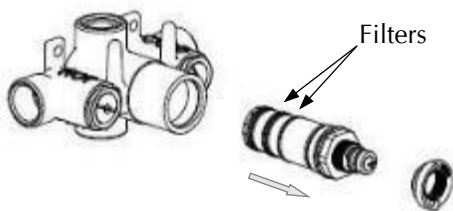


- 7) If the valve needs replacing, remove also screw **A** and insert **B** which are to be used on the new valve.




Cleaning filter / check valve

- 1) Close water mains.
- 2) Remove handles and eventually the trim rings from the plate depending from the model.
- 3) Remove trim plate.
- 4) Remove filter housing by unscrewing counterclockwise with spanner 27 mm.

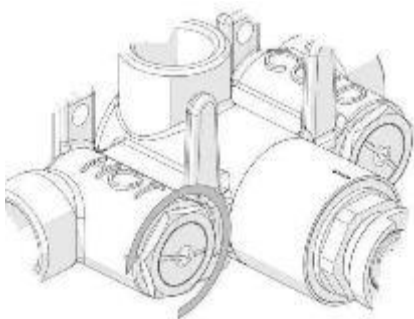


- 5) Clean filter under running water or leave it 12 hours in vinegar in the case of limescale.

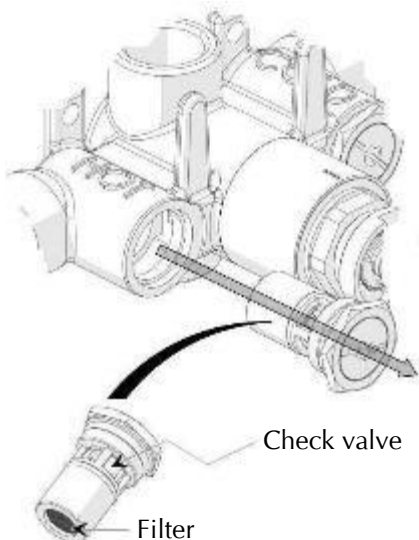


SPARE PARTS

MB444N

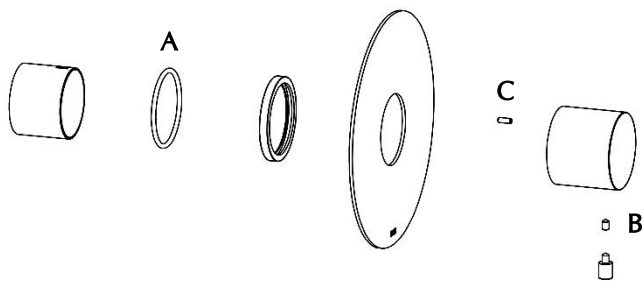


A = O.052
B = A.128
C = A.287

PE444

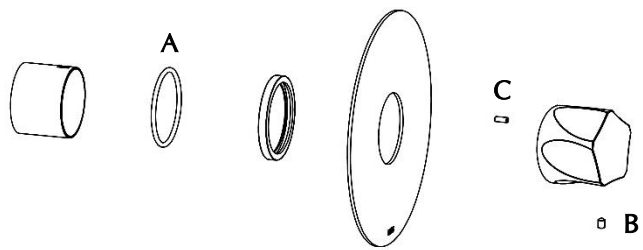


A = O.052
B = A.128
C = A.287

MB444N

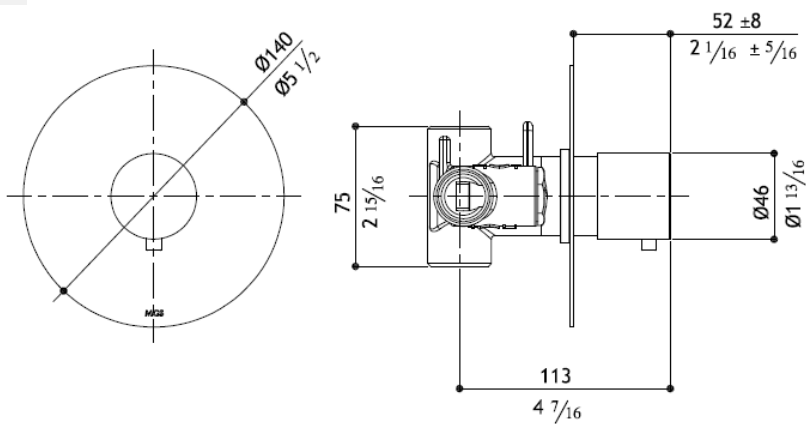

PE444

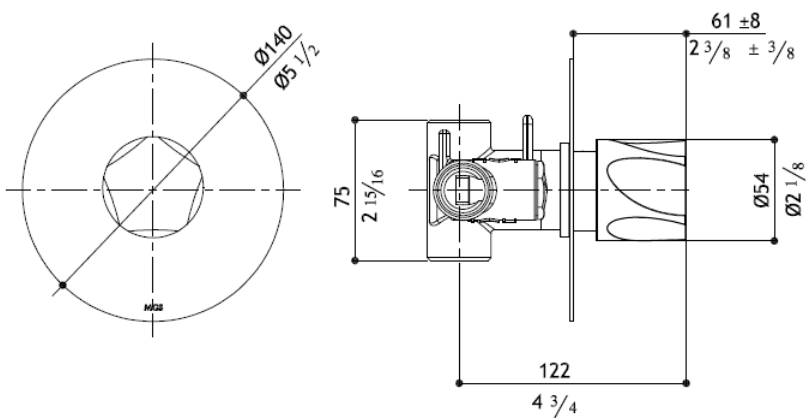

CARE & MAINTENANCE

Matte and Polished Stainless steel

In order to preserve the finish of your product, we recommend regular cleaning with a soft wet cloth. For regular cleaning it is not necessary to use detergents. In case of need, we recommend the use of a mild detergent or even better, a specific stainless steel detergent. In this case, please follow the specific instructions of the detergent manufacturer. When using a detergent rinse well with water immediately after cleaning, until all detergent is removed from the surface. Dry with a soft cloth.

PVD finishes (Black Steel / Titanium / Rose Gold / Gold)

PVD technology is used to create a smooth, resistant and long lasting finish. A soft wet cloth is sufficient for daily cleaning.

For resistant stains and fingerprints we recommend the use of a diluted mild soap and water solution to be applied using a soft cloth. Rinse thoroughly after cleaning. In order to avoid water stains we recommend to dry the surface with a soft cloth.

As it is not a coating but the result of a chemical reaction, a characteristic of PVD is that objects of different shapes and dimensions can absorb color differently, resulting in slight color variations. These are not to be considered defects.

All finishes:

DO NOT use bleach, caustic, ammonia or acid based cleaning materials or detergents containing chloride, or any other strong household cleaning products, even if organic. Even vapors of such products could damage the chemical balance of the stainless steel surface. When using strong chemical products in the room, we recommend to air it out. DO NOT use abrasive materials, cleaning pads, scouring sponges, files or other hard objects.

DO NOT use oily rags or greasy cloths when wiping the product surface.

Cleaning the aerator

Depending on the hardness and quality of water in your household, the aerator may become clogged. We recommend to clean the aerator the first time a few days after the installation, then every six to twelve months depending on the water quality.

To clean the aerator proceed by thoroughly rinsing it under running water until all debris is removed. In case of persistent limescale or debris, we recommend to immerse the aerator for several hours in a water and vinegar solution, or in anti-limescale solution.

Outdoor installation

Marine grade stainless steel is ideal for outdoor installation and it is extremely resistant to oxidation. Nevertheless, it is not oxidation proof or stain proof.

In order to maintain the long lasting beauty of the stainless steel surface it is necessary to regularly clean it. This is particularly important in marine environment where saline deposits over time will affect the surface and cause oxidation. In such conditions the surface must be cleaned more frequently in order to be preserved.

WARRANTY

MGS products installed in a residential indoor application are covered by a limited 5 year functional and finish warranty from purchasing date. During this period, parts with construction defects in material or workmanship will be replaced free of charge. This warranty is subject to the warranty conditions and limitations as set forth below. This warranty will not cover faults caused by unsuitable or improper use, incorrect installation, natural wear, improper or careless treatment, incorrect usage of cleaning or maintenance products.

MGS will not assume liability for labor expended, freight cost or damages accruing from the use of the material purchased from us. If material is defective, MGS will either supply the replacement part or it will reimburse the price of the defective material. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available to MGS for all warranty claims. The warranty is not transferrable and is extended solely to the original purchaser of the product.

MGS products installed outdoor and/or for commercial applications are covered by a 2 year functional and finish warranty from purchasing date. This warranty applies to MGS faucets installed in USA or Canada.