


## INSTALLATION INSTRUCTIONS

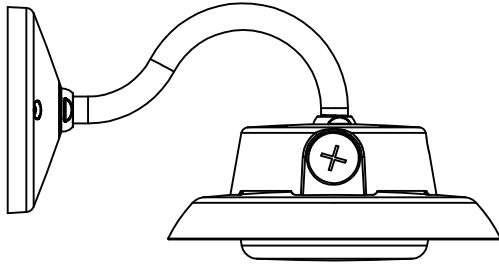

### ⚠ CAUTIONS

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED; CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.

CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR BEFORE INSTALLING.

"CONSULTER UN ÉLECTRICIEN QUALIFIÉ POUR VOUS ASSURER QUE LES CONDUCTEURS DE LA DÉRIVATION SONT ADÉQUATS".

1. Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
2. This fixture is designed for use in a 120VAC / 60Hz fused circuit. This fixture is not compatible with dimming circuit.
3. Some codes require installation by a qualified electrician.
4. This light fixture must be properly grounded.
5. Make sure connections are secure using included Wago connector, crimp-on lugs or other UL approved connecting devices.
6. Before installation or servicing, turn the power OFF at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is OFF at the light fixture.
7. This fixture is intended to be used for general outdoor lighting in dry, damp, or wet locations. For wet locations, fixture must be mounted at least 48 inches above ground level.
8. MIN 90 °C SUPPLY CONDUCTORS;  
 "LES FILS D'ALIMENTATION 90°C MIN".

**SAVE THESE INSTRUCTIONS  
 FOR FUTURE REFERENCE**

## MOUNTING

### A. Wall mounting instruction

1. Remove the mounting bracket (D) from the back of the fixture by removing the mounting bracket screws (F) (fig 1). Retain screws for later use.

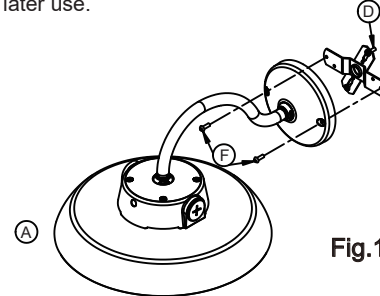


Fig.1.

2. Route the junction box wires through the large center hole in the mounting bracket (D). Align the holes on the mounting bracket (D) with the holes of the junction box. Use two #8 screws (AA) to secure it. (fig -2)

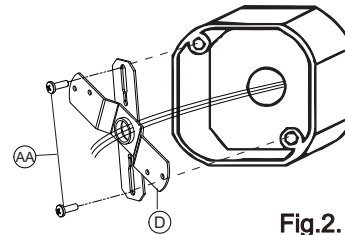


Fig.2.

3. Complete the electrical connections per the Fixture Wiring section
4. Once wiring is complete, mount the fixture by aligning the mounting holes in the cover plate (C) with the holes in the mounting bracket. Secure with mounting bracket screws (F) as shown in Fig.3.

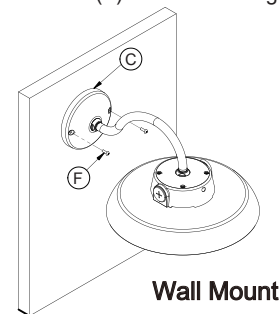


Fig.3.

Wall Mount

5. CCT switch is located on the side of the fixture (fig. 4). Adjust the switch to desired color temperature of 3000K, 4000K, or 5000K. Note: Fixture is preset to 3000K from factory.

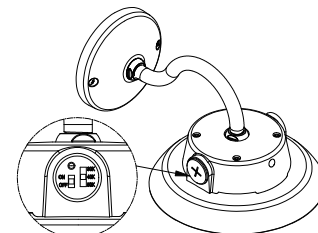


Fig.4.

6. Restore power at the fuse or circuit breaker box.

**B. Tenon mount instruction**

1. Remove the cover plate (C) from the arm of the fixture.

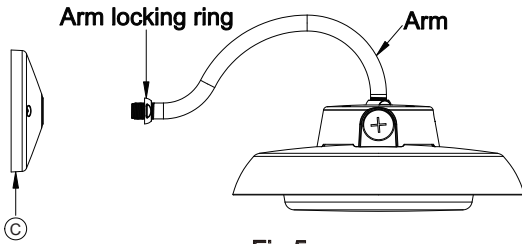


Fig.5.

2. Route the light fixture wires through the large center hole in the tenon adapter. Thread the tenon adapter onto the light fixture arm by rotating clockwise until hand tight against the arm locking ring. Ensure the set screws are down. Tighten locking ring to secure tenon mount adapter.

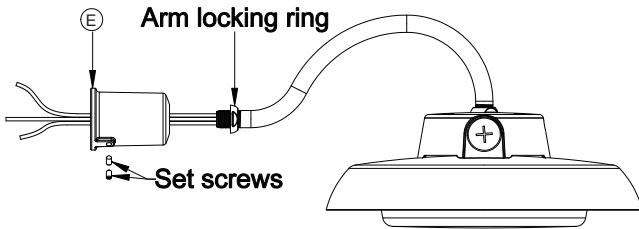


Fig.6.

3. Complete the electrical connections per the Fixture Wiring section
4. Feed the connected wires into the tenon pipe while aligning and inserting the pipe into the tenon adapter. (fig 7). Ensure no wires are pinched. To level the light fixture, tighten the two (2) head set screws. This secures the light fixture to the tenon pipe.

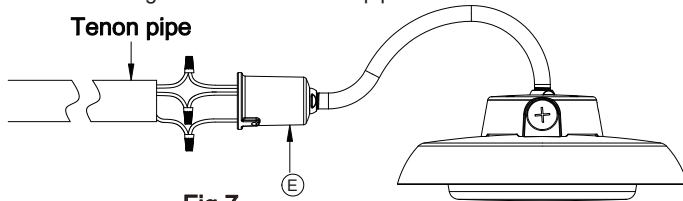


Fig.7.


5. Refer to the step 5 of the wall mounting for CCT adjustment.

**OPERATION**

**SELECT DUSK-TO-DAWN OR SWITCH CONTROL**

**OPTION 1: DUSK-TO-DAWN OPERATION**

To enable dusk-to-dawn operation, make sure the photocell switch is on.

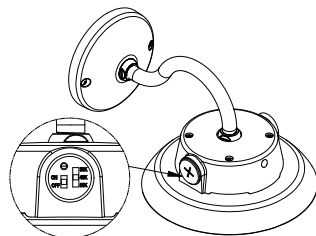

**Limited Factory Warranty**


AFX Inc. hereby warranty that this fixture is free from defects in materials and workmanship when installed and used under normal operating conditions for a period of 5 years from date of shipment from factory. This warranty covers all component parts and extends only to replacement of defective fixture or components; it does not cover failure due to improper installation, misuse, mishandling or damage incurred in transit.

**OPTION 2: SWITCH CONTROLLED**

To enable switch activated operation, make sure the photocell switch is off.

**WIRING**

Make all wire connections to appropriate wire. Secure with wire nuts (provided). Connect the white wire from the fixture to the white (N) wire from the supply power source. Connect the black wire from the fixture to the black (L) wire from the supply power source. Connect the ground wire from the fixture to the supply power source ground wire.

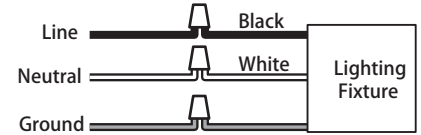

**CARE AND CLEANING**

1. Shut off the main power supply before cleaning the fixture. To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
2. Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty. Do not spray the light fixture with a hose or power washer.

**FCC NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help..

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received. Including interference that may cause undesired operation. The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.