

1718 W. Fullerton Chicago, IL 60614
Ph: 773.770.1195 ◆ Fax: 773.935.5613
www.PureEdgeLighting.com ◆ info@PureEdgeLighting.com
© 2016 PureEdge Lighting. All Rights Reserved.


# Installation Instructions for Flex Neon LRF7 24VDC Indoor Seamless, Tunable White

FN-LRF7-


#### **IMPORTANT INFORMATION**


- This instruction shows a typical installation.
- The Seamless Flex Neon is rated for Indoor Damp Locations **ONLY** and uses class 2 bare wire connectors.
- This product bends right to left or left to right.

## **SAVE THESE INSTRUCTIONS!**

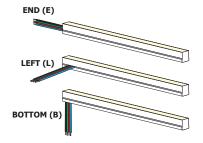


## Section One: Install the 1" Rectangle Junction Box (Optional)

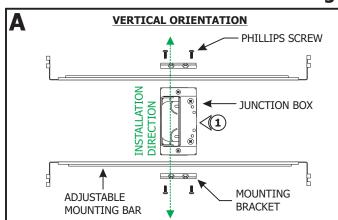

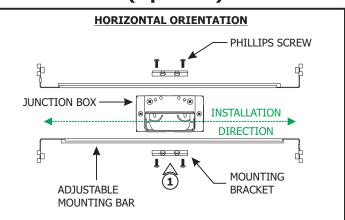

NOTE: Before beginning any electrical work, ensure that the power to the junction box is off.


1: Mount each adjustable mounting bar to one side of the junction box (mounts to any side of the housing depending on the orientation of the fixture) and secure them with the mounting brackets and two Phillips screws provided.

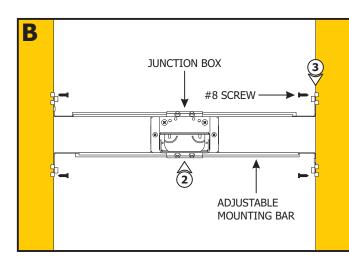

**NOTE:** The adjustable mounting bars mount to studs/joists that are spaced 15"-24" apart. If the span needs to be shorter than 15", then break the bar arms from dedicated lines.

**NOTE:** Ensure the opening of the junction box is aligned with the center of the desired fixture location. If necessary, adjust the junction box location by loosening the screws and sliding the junction box to the proper location. Tighten the Phillips screws after adjusting.

- **2:** Select the location between two studs/joists to mount the junction box.
- **3:** Place the lips of the adjustable mounting bar tabs against the studs/joists. Secure the adjustable bars to the studs/joists with the #8 screws.

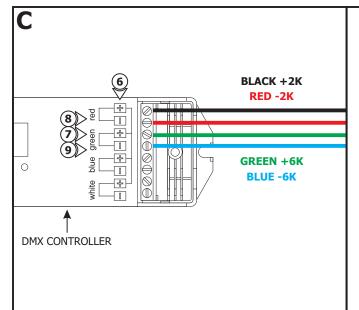



**NOTE:** Omit steps 4 through 9 if using two channel controls. Refer to wiring diagram on page 7.

- **4:** Use the "Low Voltage Wire Size Chart" on page 6 to determine proper wire size connecting to the DMX controller terminals.
- **5:** Run the proper size black, green, red and blue wires from the power supply enclosure to the fixture.
- **6:** Connect the black fixture wire to the red "+" DMX terminal and tighten the screw.
- **7:** Connect the green fixture wire to the green "+" DMX terminal and tighten the screw.
- **8:** Connect the red fixture wire to the red "-" DMX terminal and tighten the screw.
- **9:** Connect the blue fixture wire to the green "-" DMX terminal and tighten the screw.


- **10:** Remove a knockout to install a conduit into the junction box. Install conduit(s) (if required by local electrical code).
- **11:** Run the wires coming from the power supply to the junction box.

**NOTE:** Ensure remote power supply wires are present in the junction box. Refer to instructions provided with the power supply.

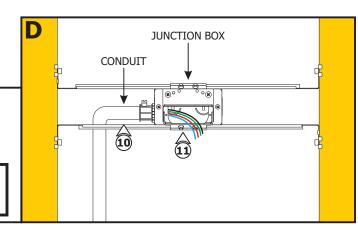

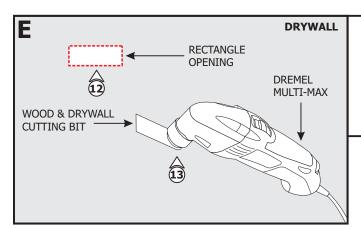


- **12:** Mark a rectangle shape on the drywall where the junction box opening will be located depending on selected position.
- **13:** Cut out the marked rectangle opening, using a "Dremel Multi-Max" with the "wood & drywall" cutting bit.
- 14: Install & finish drywall.

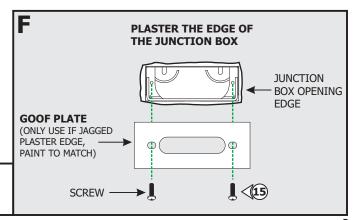

**15: Optional:** Use the Goof Plate if the junction box opening has imperfection/ jagged edges. Install the provided goof plate (paint to match prior) with the two screws.

## Section Two: Install the Flex Neon

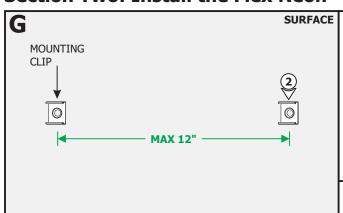


**NOTE:** If using 1RE Junction Box, the Flex Neon must pass through the center of the junction box.


 $\underline{\textbf{NOTE:}}$  Omit this Section if using the Flexible Aluminum Channel. Refer to Section Three.

- 1: Determine the location for the Flex Neon.
- **2:** Mark the location of the mounting clips. Mounting clips must be maximum 12" apart from each other (measure from the center of the mounting clip).

 $\underline{\textbf{NOTE:}}$  Steps 3 and 4 are for drywall mounting. Omit these steps if mounting to a wood surface directly.


- **3:** Tap the anchors onto the marked points up to the threaded portion with a hammer.
- **4:** Screw in the threaded portion of the anchors with a Phillips screwdriver.

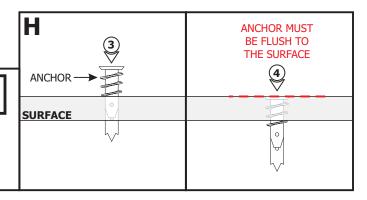


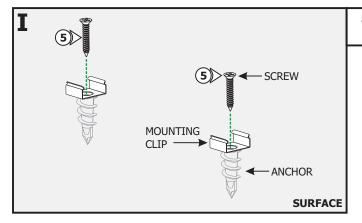


**5:** Line up the mounting clips to the anchors and secure it to the anchors by tightening the #8-32 screw to each clip.

**6:** If necessary, bend the Flex Neon **ONLY** right to left or left to right.

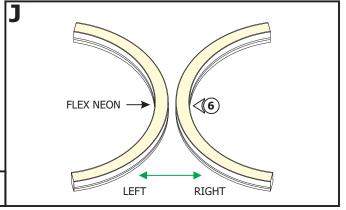

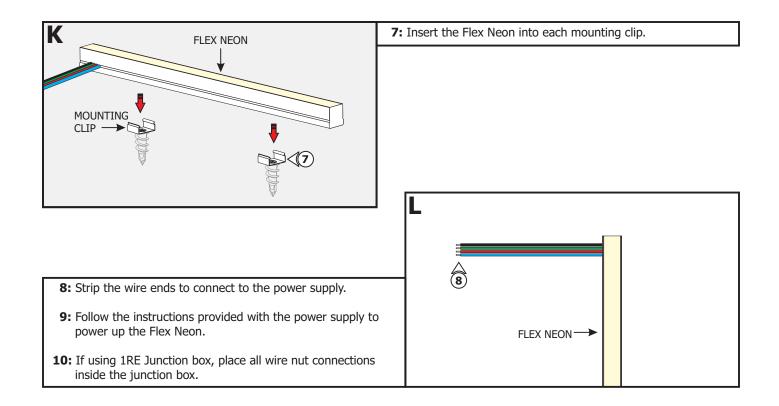


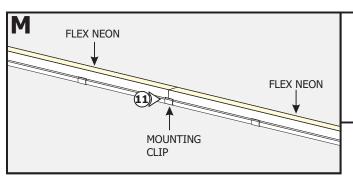


**11:** For seamless continuous runs, place a second seamless Flex Neon at one end of the first Flex Neon. Ensure that a mounting clip is in the center where the fixtures meet together.

**NOTE:** Ensure that additional Flex Neon are properly supported and powered.

# **Section Three: Install the Flex Neon with Flexible Aluminum Channel**

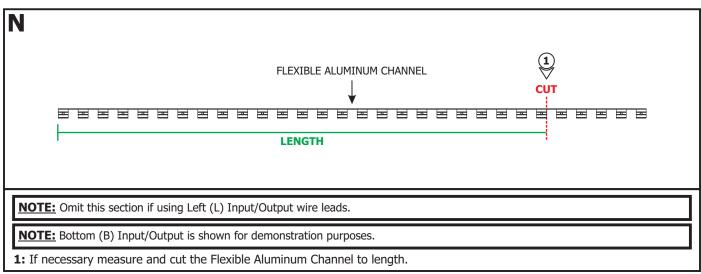

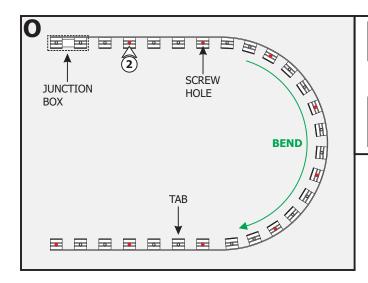


**NOTE:** If using 1RE Junction Box, the channel must pass through the center of the junction box.


**2:** Determine the location of the Flexible Aluminum Channel and mark every fourth tab screw holes.

**NOTE:** The Flexible Aluminum Channel bends in both directions. For simple curves or circles, it is recommended to bend the channel toward the tabs.

**NOTE:** Steps 3 and 4 are for drywall mounting. Omit these steps if mounting to a wood surface directly.


- **3:** Anchors are not provided. Tap the anchors onto the marked points up to the threaded portion with a hammer.
- **4:** Screw in the threaded portion of the anchors with a Phillips screwdriver.

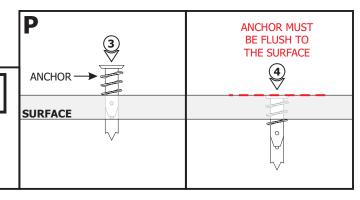


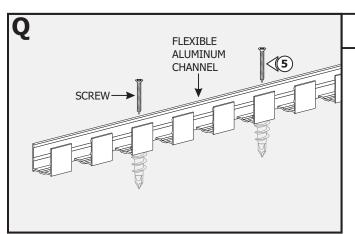


**5:** Secure the Flexible Aluminum Channel to the anchors using screws.

- **6:** Feed the power wires through the open space on the Flexible Aluminum Channel.
- **7:** Identify the thicker side of the Flex Neon that indicates the location of the LED Soft Strip.

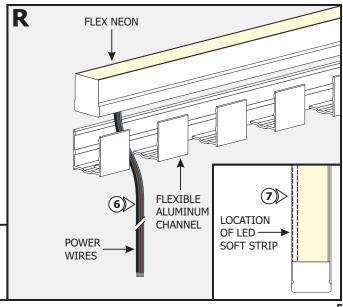


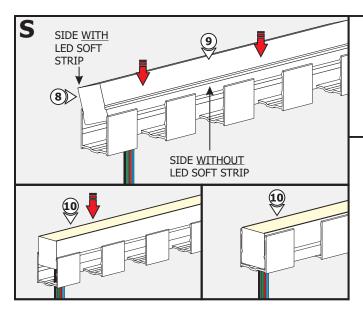

- **8:** Place the side <u>with</u> LED Soft Strip on an angle on top of the Flexible Aluminum Channel.
- **9:** Slightly push down the side <u>without</u> LED Soft Strip inside the Flexible Aluminum Channel.
- **10:** Carefully push the Flex Neon completely inside the Flexible Aluminum Channel.

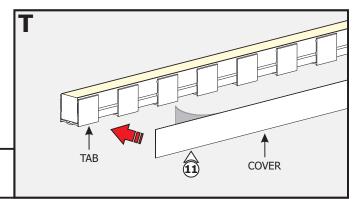

**11:** Remove the backing from the channel cover. Firmly press down on the Flexible Aluminum Channel tabs while removing the rest of the backing.

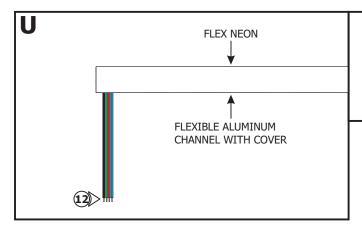

- **12:** Strip the wire ends to connect to the power supply.
- **13:** Follow the instructions provided with the power supply to power up the Flex Neon.
- **14:** If using 1RE Junction box, place all wire nut connections inside the junction box.

| 100W, 24VAC LOW VOLTAGE WIRE SIZE CHART |                               |            |           |           |            |
|---|-------------------------------|------------|-----------|-----------|------------|
| 3%<br>VOLTAGE<br>DROP                   | WIRE LENGTH<br>IN FT          | UP TO 31FT | 32FT-49FT | 50FT-81FT | 82FT-124FT |
|   | WIRE SIZE                     | 14 AWG     | 12 AWG    | 10 AWG    | 8 AWG      |
|   | VOLTAGE AT END<br>OF THE WIRE | 23.28 VAC  | 23.29 VAC | 23.28 VAC | 23.28 VAC  |

## **General Wiring Diagrams**

