

● Breakdown phenomenon and settlement

Phenomenon	Reasons	Maintenance
Without steam	\.steam generator without water. \.inside infrared pipe burn out of steam generator. \.block of steam spray mouth. \.probe out off control. \.the temperature inside steam room is over the temperature what were set. \.after fill into water it is still not the time for steam working. \.it is overtime for the setting time. \.unconnect with the control wire.	check if the switch of water in be. \ turn on or not. \.change the infrared pipe. \.get rid of mess. \.check the connection wire and change the probe. \.waiting decrease the temperature. \.be waiting few minutes. \.adjust the setting time. \.connect to control wire.
Without O ₃		
Water pump unworking	\.water pump without power. \.air pipe which connect with switch of air valve be insected untightly. \.switch of air valve out of control. \.air pipe leaking. \.rotor of water pump unworking. \.water pump be burned.	check if the power of water pump. \ get through. \.to insect the air pipe tightly. \.change the switch of air valve. \.change the air pipes. \.check if there are stems in the take apart those air pipes,water pump in order to get rid of stems. \.change the water pump.
Volume under control	\.suction of water pump is not enough. \.air adjustment valve working abnormal. \.block of jets.	\.check the water pump if it is working normally. \.change the air valve. \.get rid of mess.
Water pipe leaking	\.plastic seal ring be connected untightly. \.screws unlock. \.connection is glued not good. \.water pipe be damaged.	\.change the plastic seal ring. \.screws should be installed tightly. \.get rid of the PVC glue then stick the glue again till it is be well done. \.change the water pipe.
Computer panel under control	electronic,power not be connected well. \ leakage device without power. \.switch of control panel out of control.	\.get through the power again. \.change the computer panel.
Without lighting	\.bulb be burned. \.without power. \.switch of control panel out of control.	\.change bulb. \.get through power gain. \.maintain or change the computer panel.
Telephone connection unworking	telephone wire not connected well or be. \ damaged. \.telephone's device be blocked.	check the wires of telephone and. \ electronic box if get through or not, if there is something wrong replace by the similar wires. \.get rid of mess.
Without sounds	speaker be broken. \.without power \.switch of control panel out of control	change the speaker. \.get through power again \.maintain or change the computer panel

INSTALL DIRECTION

STEAM BATHROOM

MODEL : WS-701



Sanitary Ware Expert,
Your best choice!

- No advanced advice will be submit before we change our design and size.
- The pictures may be a little different from the real products.



Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

TECHNIQUE PARAMETER


Voltage	Frequency	Water Volatge	Power of steam generator	Power of water pump	Power of heat pump	Power of air pump
AC110V (±10%)	50/60Hz	0.1~0.2Mpa	4KW	1HP	1.5KW	0.2KW

CAUTIONS: Heat pump and air bubble pump is required by customers.

CONSTRUCTION SKETCH



Handrail

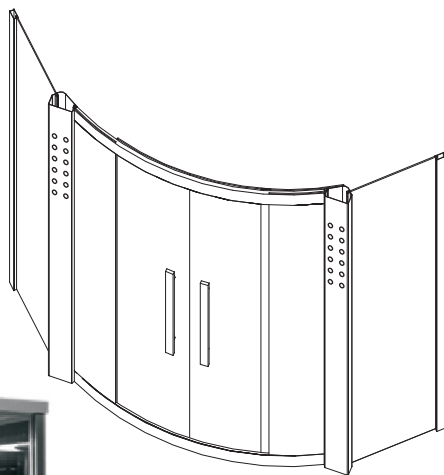

Glass door



SIZE 1660x1660x2250 mm




Shower moveable rail

7. Radio Channel

Press “” button will save the current frequency on the screen, 9 channels can be saved. To call out the saved channel by pressm “mem” button from 1m to 9m.

8. TAKING SHOWER AND WATER MASSAGE

Press the water switch and pour water . Get a suitable temperature , then choose The shower function according to your need . The function of the select shift (from left to right) is acupuncture sprayer roof shower、 moveable shower bath acupuncture sprayer moveable shower bath and waterfall. Turn the shift and select what you need .

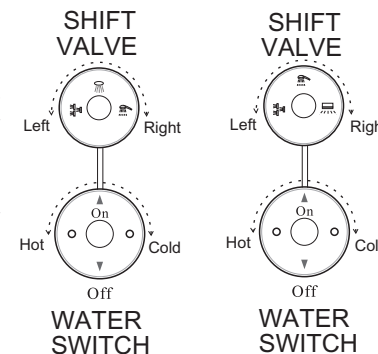

9. MASSAGE-BATH

- (1) Press the water switch, turn the select shift, pour " water " .
- (2) Water level should be 10-20mm higher than the sprayer.
- (3) Press "pump button", the water pump heat pump&air bubble pump will start to work and the bottom light will turn on. Then water will be out from massage jets and bleb will be out from air bubble jets. The heat pump keep the temperature of the water while recycling the water by jet. You can use the "air regulator" to adjust the jacuzzi.
- (4) Press the " pump button ", when stop.

10. Water Supply


Adjust the switch valve back to the original position. Turn off the hot-cold water supply, then switch off the external supply of hot-cold water.

ATTENTION FOR USAGE


1. Check if power and cold/hot water switch be turn on or be turn off each time before use this product.
2. Check if power of electronic leakage device be get through or not.
Checking way:
Press testing button, light of power be off, press button of restart then light of power be on. It is not being what mentioned above after operated step by step, then that shows the electronic protection device out off control or there is something wrong with the electronic leakage device, so should ask professional to check and maintain the product.
3. Turn off the main power of control panel after stop usage. The plug of power should be pull out because only turn off all the functions of control panel that is not stop the power.
4. People with hypertension or drunk are not allowed to have sauna steam bath.
5. Children should have sauna steam bath under adult's instruction.
6. Please don't shut the finger in the door in order to be hurt when get into the steam room.
7. In order to be tripped and fell down, pay more attention when get into the steam room.
8. keep clean of the tray in order to be tripped and fell down.
9. Pay attention to the steam sprayer and water tank drainage, they are in high temperature while working.


USAGE ILLUSTRATION

Operating manual. 1


Please connect to the power supply. Press “

Radio. r


When the system is on, press “


Press button “


Telephone. r

When system is turn on, the speaker will ring up the tone if there are any phone calls. To receive or hang up by pressing “

4.Steam

When the system turns on, press “

“

“

Beside all, the steam generator is made with Dry-proved and electricity leakage protection. If there are no water inside the steam generator or any electricity wastage occurs, the steam generator will automatically turn off.

Press “

5.Light


When the system is on, press “

6.Fans

When the system is on, press “


SANITARY WARE

CONSTRUCTION SKETCH

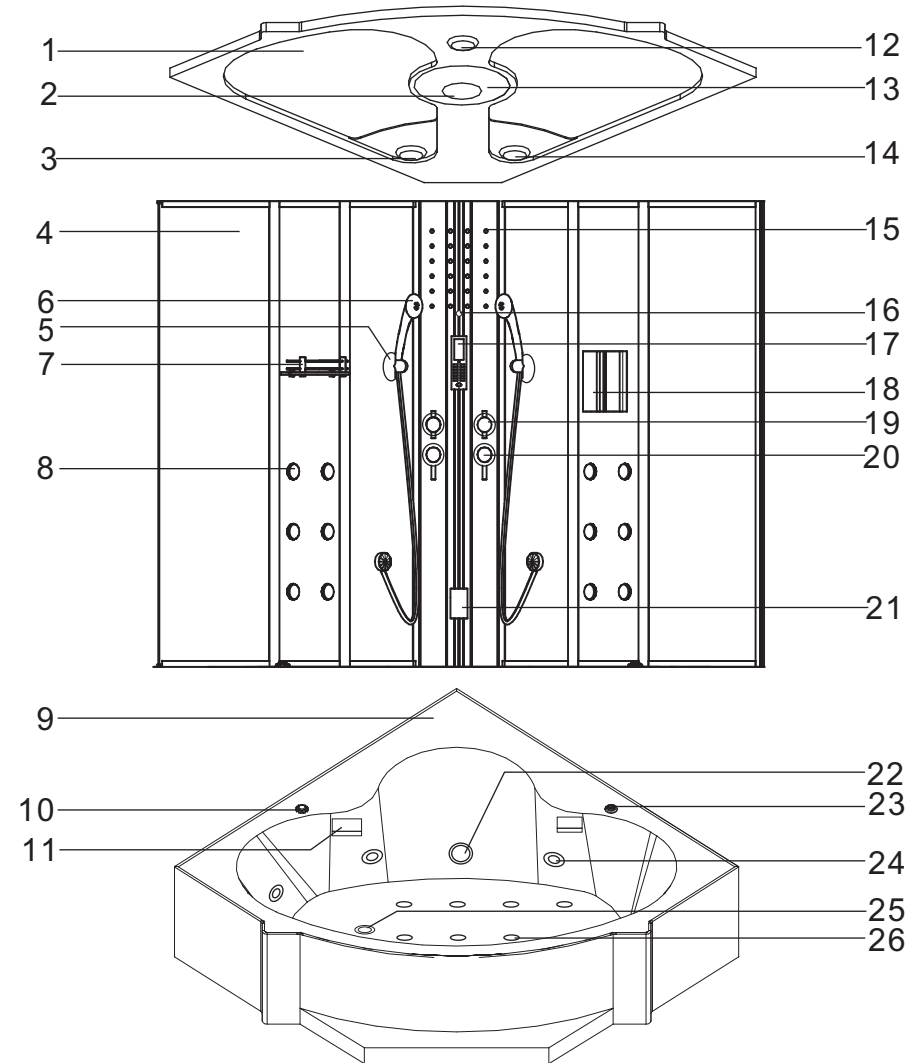

- | | | |
|-------------------|----------------------|--------------------------|
| 1.roof | 10.water pump switch | 19.switch |
| 2.top shower | 11.waterfall | 20.cold/hot water switch |
| 3.speaker | 12.exhaust fan | 21.steam out |
| 4.room body | 13.top light | 22.water in |
| 5.movable arm | 14.ozone | 23.air conditioning |
| 6.moveable shower | 15.decorated light | 24.water jet |
| 7.handrail | 16temperature needle | 25.drainage |
| 8.nozzle | 17.control panel | 26.air bubble jet |
| 9.bottom bathtub | 18.soap box | |

INSTALLATION SKETCH

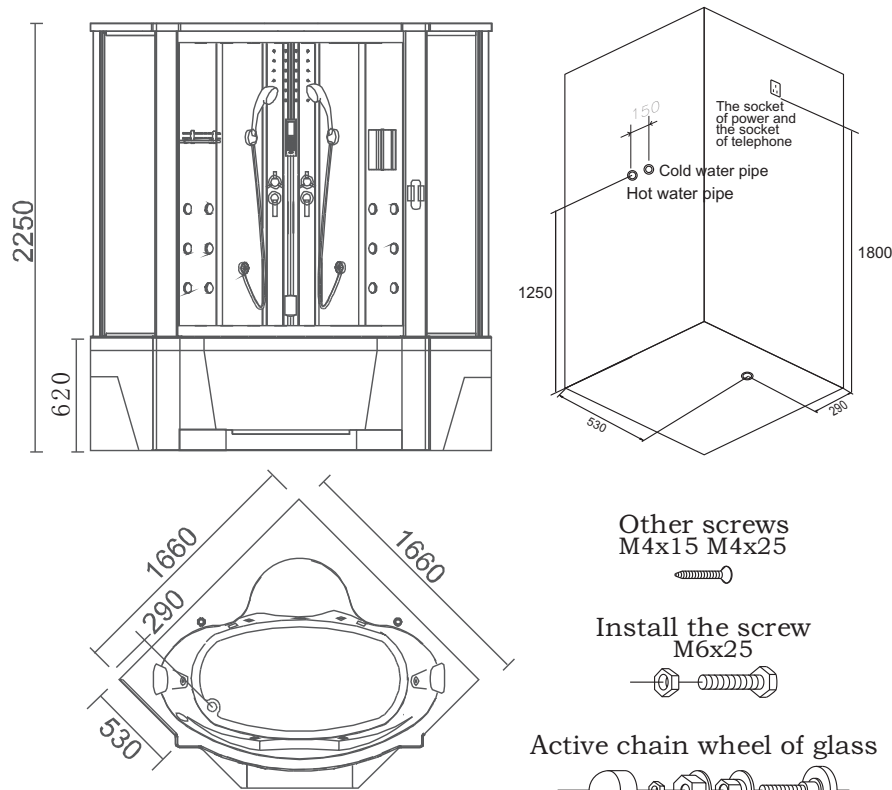


SIZE: 1660×1660×2250mm

ILLUSTRATION OF INSTALLATION

1. The products should be installed by technical guy who are got the certificate or those technical who are assign by dealers. The main power switch and electronic leakage device should be installed.
2. The plug of electronic should be installed above the steam generator and the length of electronic wire not less then 1800MM from the earth.
3. There are should be with main power switch for hot and cold water pipe of steam room and the water pipe should be connect to drainage water pipe.
4. Install the products according to the diagram of installation When fixed the place for the products.


MANUAL

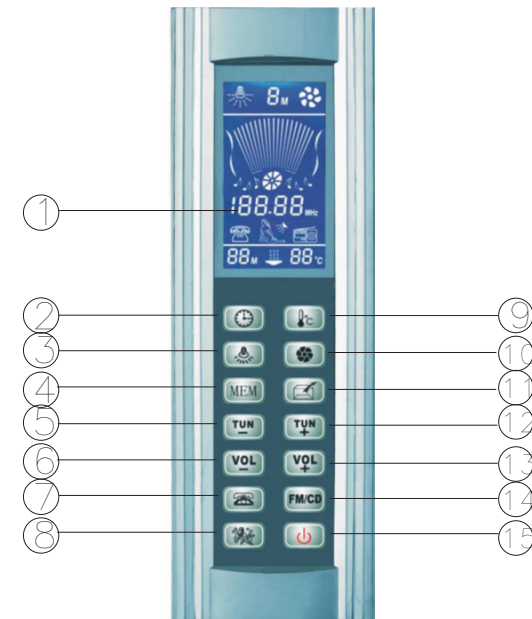

- | | |
|------------------|-----------------|
| ① Screen | ⑨ Temperature |
| ② Time setting | ⑩ Fans |
| ③ Top lamp | ⑪ Radio channel |
| ④ Memory | ⑫ Frequency up |
| ⑤ Frequency down | ⑬ Volume up |
| ⑥ Volume down | ⑭ Radio/CD |
| ⑦ Telephone | ⑮ On/Off |
| ⑧ Steam | |


DRAWING OF WATER CONNECTION

As the “” “” from the picture, please make the connection according to the serial number v1,v2,etc.

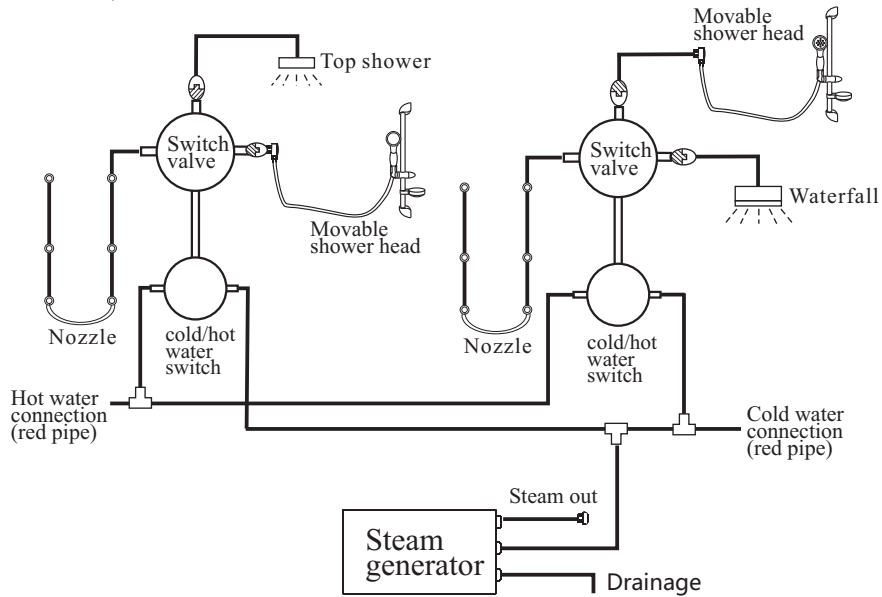



ELECTRIC CIRCUIT SKETCH

Please install the earth line safely by professional technician.

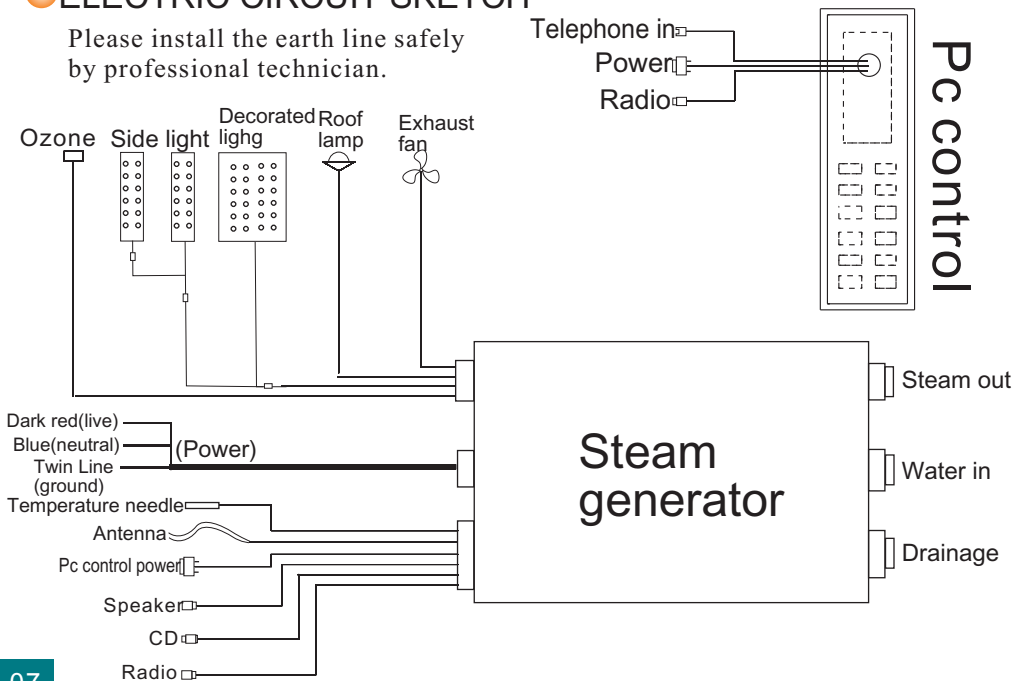


INSTALLATION PROCESS


STEP 1

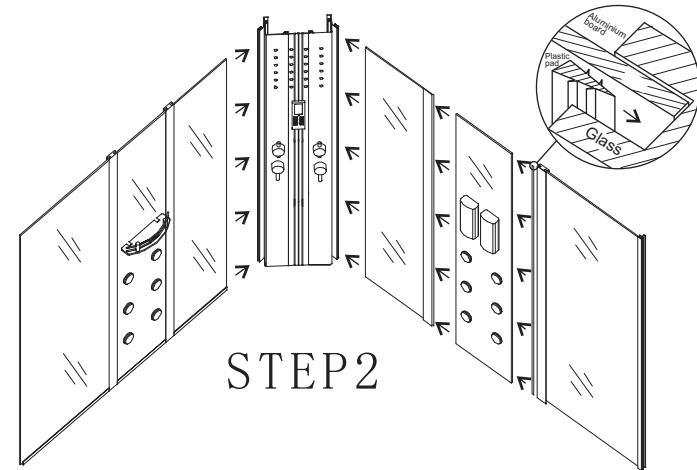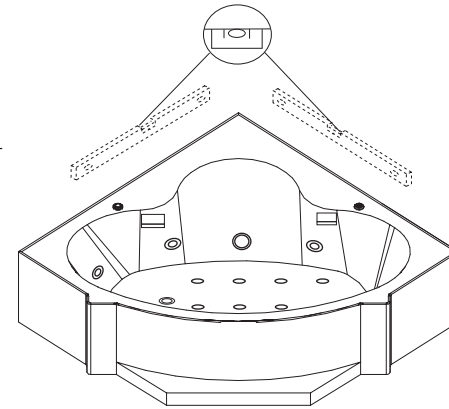

STEP 2

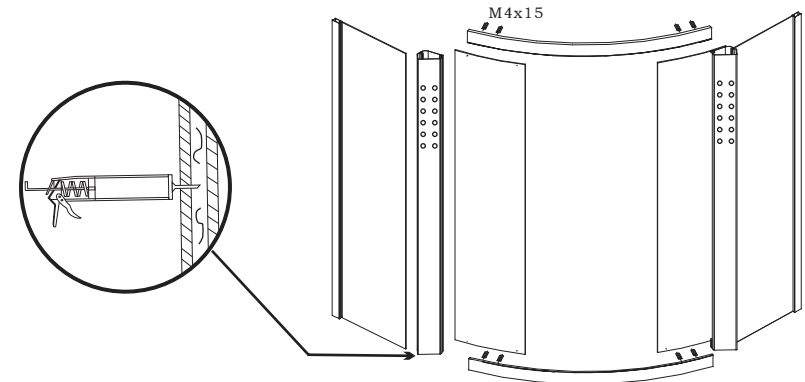


STEP 3

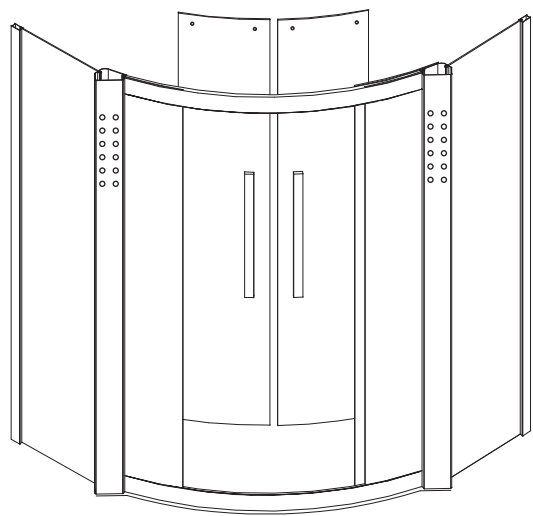


STEP 4


Active chain wheel of glass

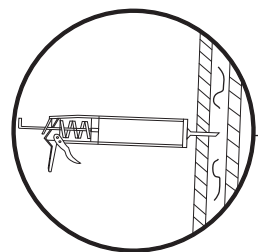

M4x15

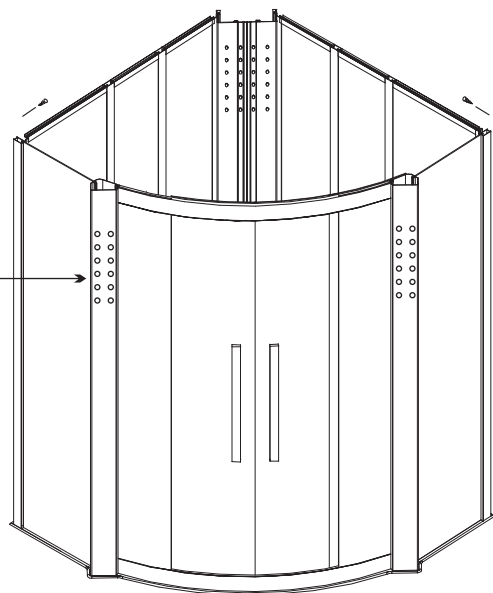


STEP 5

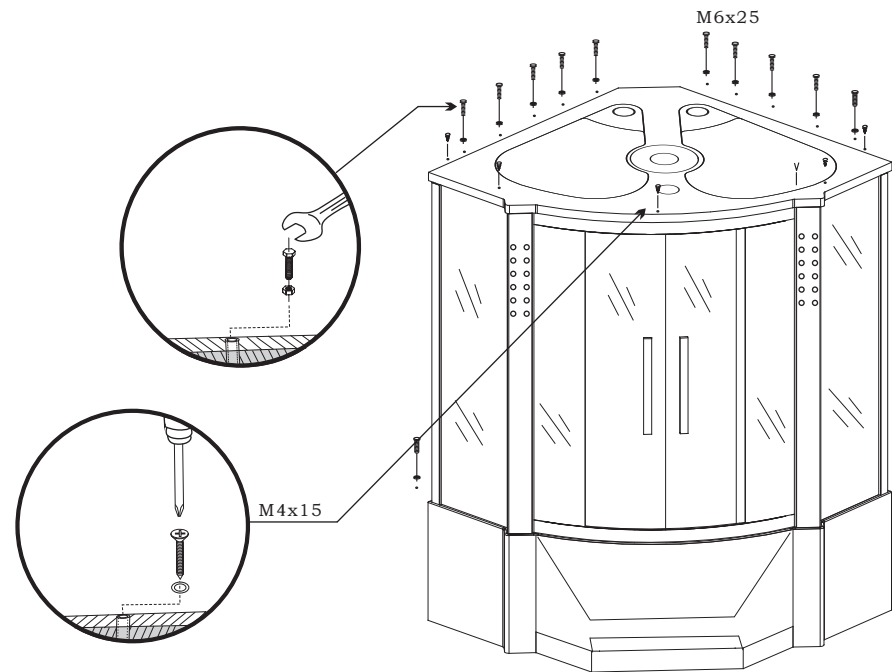

M6x25

M4x15

STEP 6

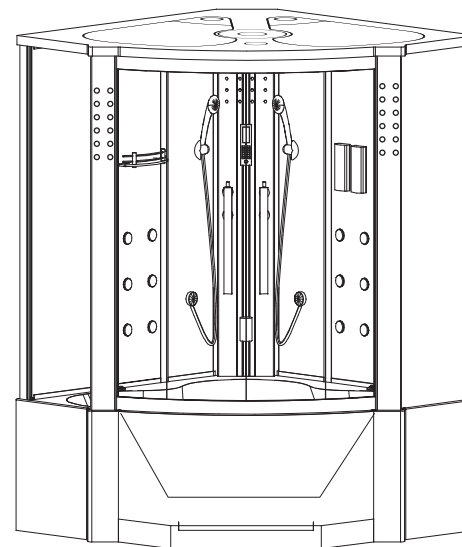

STEP 7