Luxé Rosé XT 200Z RGBW

200w RGBW Fresnel with Motorized Zoom





User Manual

Luxé Rosé XT 200Z RGBW GAMMA LED Vision

Table of Contents

1.	Introduction and Setup	3
	Unpacking and In the Box	3
	Mounting and Operation	3
	Features	
	Safety Precautions	4
	Customer Support	5
2.	Setup and Operation	6
	Using the LCD Menu and Buttons	6
	Menu Operation	6
	DMX Setup	7
	DMX Basics	7
	DMX Wiring	7
	DMX Modes and Configuration	9
3.	Maintenance	9
	Routine Maintenance	9
	Troubleshooting Problems	10
4.	Technical Specifications	11
	Photometric Reports	12

1. Introduction and Setup

Unpacking and In the Box

Thank you for choosing our Luxé Rosé XT 200Z RGBW. For your own safety, please read this manual before installing or using the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual for future needs.

In the box you will find:

Rosé LED 200 RGBW Zoom Fixture: 1
PowerCon Cable: 1
DMX Signal Cable 1

Mounting and Operation

Use a clamp rated for the full weight of the Luxé Rosé XT 200Z RGBW to hang the fixture from the mount on the fixture's yoke.

As an added safety measure be sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the base assembly or on the yoke.

Features

Voltages: AC 100V-240V, 50/60Hz

• Power Consumption: 250W@230V

• LED: Light Source: 200W

RGBW LED

Manufacturers Rated LED Life: 50000 Hours

Full RGBW Color Mixing

• Dimming: 0-100%

• Strobe: Electronic Variable Strobe 0-25hz

• Zoom Angle: 5°-60°

Control: DMX512 3 pin w/RDM Control Protocol

Control Mode: DMX512 / Master-Slave / Auto / Sound

Housing: Cast aluminum, IP20 Indoor

Working Environmental Temperature: -10°C-40°C

• Net weight: 7.50Kg

Safety Precautions

Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction manual.

Caution: For added protection mount the fixtures in areas outside walking paths, seating areas, or in areas were the fixture might be reached by unauthorized personnel.

Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 items the device's weight.

Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.

Never stand directly below the device when mounting, removing, or servicing the fixture.

From a ceiling, or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5ft) away from any flammable materials (decoration etc.).

Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

DO NOT connect the device to any dimmer pack.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, and it will decrease gradually within 15 minutes.

Don't try to modify the fixture without any instruction by the manufacturer.

Warranty is voided if there are any malfunctions from not following the user manual while operating or any hazardous operation, like shock short circuit, electronic shock, lamp broken, etc.

Customer Support

WARRANTY POLICY

GAMMA LED Vision warrants its products for the periods set below from the date of purchase to be free of manufacturer and workmanship defects. Warranty does not cover normal wear and tear caused by force, negligence or misuse of products. GAMMA LED Vision is not responsible for any damages or injury caused by misuse or improper handling of the products and in accordance with instructions and specifications of manual.

Warranty terms are as follows:

LED Fixtures:

Indoor: 2 Years

Outdoor (IP 54 or higher): 1 Year

Lamp Fixtures: 1 year / excludes the lamp

LED Video Products:

Indoor: 2 Years

Outdoor (IP 54 or higher): 1 Year

Controllers: 2 years

Batteries: 6 months

All Trussing Related Products and Accessories: 1 Year

Please visit WWW.GAMMALEDVISON.COM for complete Limited Warranty terms and


contact information.

2. Setup and Operation

Using the LCD Menu and Buttons

Turn on the light, press the **MENU** button to enter the menu mode, use the **UP** and **DOWN** buttons to find the menu,

When the preset menu is displayed on the display screen, press the **ENTER** button to confirm, use the **UP** and **DOWN** buttons to select the sub menu, press the **ENTER** button to save the settings or automatically return to the previous menu.

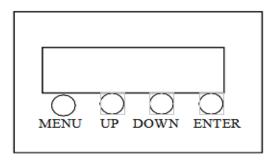

Press the **MENU** button to return, or wait for one minute and then exit the menu mode automatically. When there is no power connection, press the **UP** button for 1 minute to enter the menu mode. After setting, press **MENU** button to return to the previous menu.

Menu Operation

MENU	A001	Set DMX Address, 1-512	
	CC99	Automated programs, color chasing. Up/Down	
		keys change speed from 01-99.	
	DE99	Automated programs, color pulsing. Up/Down keys	
		change speed from 01-99.	
	BE00	Automated programs, sound-active mode.	
		Up/Down keys change sensitivity from 01-99.	
	R/B/G/W 255	White Dimmer (Manual Mode) 000-255	
	F255	Linear Zoom (Manual Mode) 000-255	
	N000	Strobe (Manual Mode) 000-255	

DMX Setup

DMX Basics

DMX512 stands for digital multiplex 512. This means that 512 channels are controlled digitally through 1 data cable.

A channel is a set of 255 steps that are assigned to control attributes in each light. This may be a color like red, green or blue, and intensity, strobe, pan/tilt or other attributes.


Multiple sets of 512 "universes" may be used. Only 1 universe will travel on a DMX cable, but through networked DMX (Art-Net or sACN E1.31), many universes can travel over a network.

DMX Wiring

DMX works by connecting 1 or multiple lights to the output of a DMX lighting console or software with a DMX interface.

DMX lights connect in what is called a "daisy-chain". Your first DMX cable will plug it's male DMX connector into the female DMX connector on your lighting console. The remaining female connector will then connect to the DMX input on your first light.


You may then connect your next fixture to the output of your first light, and continue the chain.

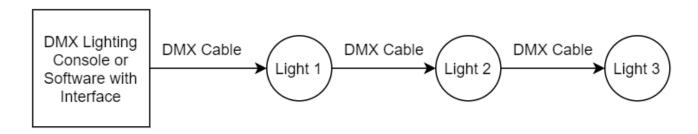


32 Fixture Rule – DMX only allows you to connect up to 32 fixtures in a single daisy chain for signal strength. Sometimes, depending on the fixtures and cable length, this number is less (or more).

DMX Cables can be 3-pin or 5-pin. These use the same type of data, and in the 5-pin only pins 1, 2, and 3 are used. The cable should be a 2 conductor, shielded cable of at least 110 ohms resistance. Microphone cable is not DMX cable.

Please refer to the diagram below:

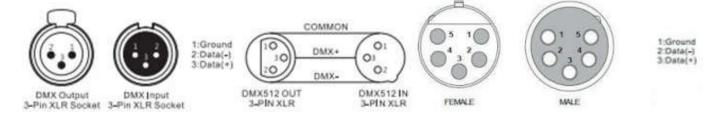

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise and reflections. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below:

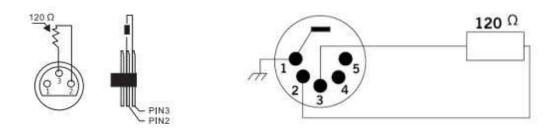

DMX Modes and Configuration

The Luxé Rosé XT 200Z RGBW offers 5 and 9 channel DMX modes.

DMX Channel Mode Sheet:

5CH	9СН	Function	Channel Value	Description
1	1	Red	0-255	Red Dimming
2	2	Green	0-255	Green Dimming
3	3	Blue	0-255	Blue Dimming
4	4	White	0-255	White Dimming
5	5	Zoom	0-255	Zoom Control, 5°-60°
	6	Dimmer	0-255	Dimmer Control
	7	Strobe	0-255	Strobe, 0-25hz
	8	Macro – 6CH	0-9	No Function
		Dimmer	10-50	Jump Changing
		mode can change the	51-100	Shade Changing
		effect	101-150	Pulse Changing
			151-200 201-255	Jump Changing+Shade changing +pulse changing Sound-Active
	9	Macro Speed		Speed, Slow to Fast

3. Maintenance

Routine Maintenance

The cleaning of lens must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smokey, or particularly dirty surrounding can cause greater accumulation of dirt on the fixture's optics.

- Clean with a damp, soft cloth...
- Always dry the parts carefully.
- Clean the external optics at least every 20 days in demanding environments.

Troubleshooting Problems

The following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

A. The unit does not work:

- Check that the unit is plugged in to a working power connector.
- Press the menu button to confirm that the unit is powered on. If the screen does not light up, the unit has no power.

B. Not Responding to the DMX Controller

- Check DMX cables to verify that they are plugged in and functional.
- Check the DMX address and mode does it match the address and mode patched in the lighting console or software?
- Plug the light directly into the DMX controller with a cable that you know is good.
 Unplug all other lights does it work?
- Try to use another DMX controller.

4. Technical Specifications

- Voltages: AC 100V-240V , 50/60Hz
- Power Consumption: 250W@230V
- LED: Light Source: 200W RGBW COB LED
- Manufacturers Rated LED Life 50000 Hours
- Colors: linear color mixing with Macro
- Dimmer: 0-100% linearly adjustable
- Strobe: Electronic Strobe 0-25hz
- Zoom Angle: 5 -60°
- Control: DMX512, 3 pins interfaces RDM Control Protocol
- 3 Channels in standard mode Master/Salve Synchronous
- Control Mode: DMX512 / Master-Slave / Auto / Sound
- Housing: Cast aluminum, IP20 Indoor
- Working Environment: -10°C-40°C
- Fixture Dimension 280*185*380mm / 8.1"x7.2"x14.9"
- Net weight: 7.50Kg / 16lbs


Photometric Reports

Zoom Out (60°)

Photometric	Full White - FC		
Data			
5'	399		
10'	125		
15'	59		
20'	34		
25'	14		

Zoom In (5°)

Photometric	Full White - FCTuned White		
Data		-CRI 82, 3948k	
		- FC	
5'	3430	2300	
10'	977	572	
20'	437	265	
25'	232	57	
30'	98	50	

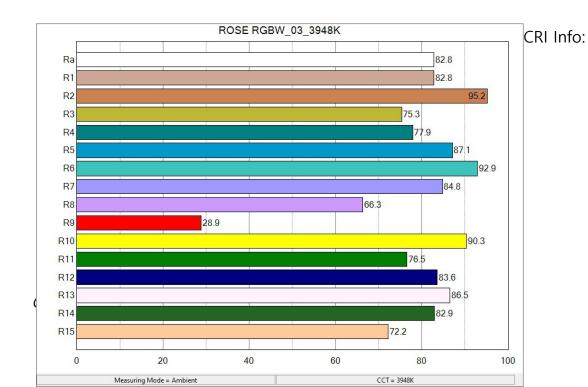

Page 12 of 12