

User Guide

Z1 Tripla Series

Quick Twist Filter System with Tripla LED Mixer Tap





What's Inside

Operation	3
Cartridge Replacement	3
Servicing	4
Technical Information	4
Recommended Working Pressures	4
PART 1 Mixer Tap Assembly	
Mixer Tap Installation Guide	5
Assembly	6
Water Connection Patterns	7
Battery Installation	9
Replacement of Ceramic Disc Cartridge(s)	10
PART 2 Filter Cartridge Installation	
Installation Requirements	11
Installation Procedure	11
Cartridge Installation/Changeout	12
Assembly	14
WELS Ratings	15
Tripla T1 Parts Description	16
Tripla T2 Parts Description	17
Tripla T3 Parts Description	18
Tripla T4 Parts Description	19
Tripla T5 Parts Description	20
Tripla T6 Parts Description	21
Performance Data	22
Warranty	23



Puretec Customer Service

Thank you for purchasing Puretec Z1 Tripla water filter system. Your system is a proven performer manufactured from only quality materials and components and will give years of 'spring fresh' water free of impurities if maintained properly.

The Puretec Z1 system cartridges need replacing regularly to maintain optimum performance. This is a simple procedure when following instructions. For cartridge replacements contact your nearest Puretec stockist.

The system is designed for metropolitan supply water but can be used in other situations. For other types of water supply please contact your local Puretec stockist or call our Puretec Customer Service Helpline prior to installing the tap.

Customer Service Helpline 1300 140 140 (Australia) 0800 130 140 (New Zealand).

Caution: Do not use with water that is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the system. This product must be installed in accordance with local plumbing regulations by a licensed plumber.

Operation

The Puretec Z1 Tripla system is designed to run economically for many years, dependent on the initial installation and periodical maintenance.

Flush systems for 10 minutes after any period of non-use more than 2 days. For a period of non-use of 2 weeks or more, it may be necessary to replace cartridge.

Chrome Plated Surface - should only be cleaned with liquid detergent or soap and water. Under no circumstance should any abrasive or acid base cleaning agents be used.

Cartridge Replacement

To maintain the high quality of the purified water the cartridges need changing every 6 months (dependent on water quality and usage).

When replacing cartridge, ensure you reset the LED reminder light by removing/replacing the battery from the rubber seat. Please refer to page 8 for a detailed diagram.

Order **Z1-R** for a replacement cartridge to suit your Z1 Tripla system.



Servicing

Periodically clean the aerator for any lodged sediment that may restrict flow. A Puretec water filter is highly recommended on all incoming lines for product longevity.

Should it be necessary to have your mixer serviced while under warranty, please carry out the following procedure:

- Firstly call the plumber, preferably the one that has installed it, (most problems are caused by the supply lines not being cleaned out properly, prior to connecting the mixers).
- 2. Make sure that the plumber has installed your mixer according to the Instruction Guide.
- If the plumber is satisfied that he cannot rectify the problem then contact your plumbing supply store or your local Puretec stockist.

Important: We do not recommend the dismantling of any internal part of the mixer as this will breach your warranty.

Technical Information

Puretec mixers can be used in conjunction with:

- Pressure storage hot water system
- Any mains water pressure not exceeding 500 kPa
- Maximum hot water temperature of 60°C
- Instantaneous hot water system
- Any filtered water supply

Recommended Working Pressures

- Minimum working pressure 50 kPa (7.5 psi)
- Maximum working pressure 500 kPa (72.5 psi)


It should be noted that water mains pressure builds up during off peak periods, mainly at night, sometimes doubling or trebling normal daytime pressures.

Note: Not suitable for unequal pressure. On high pressure areas where the pressure exceeds the recommended working pressure as indicated above pressure limiting valves must be installed or warranty is voided.



PART 1

Mixer Tap Installation Guide

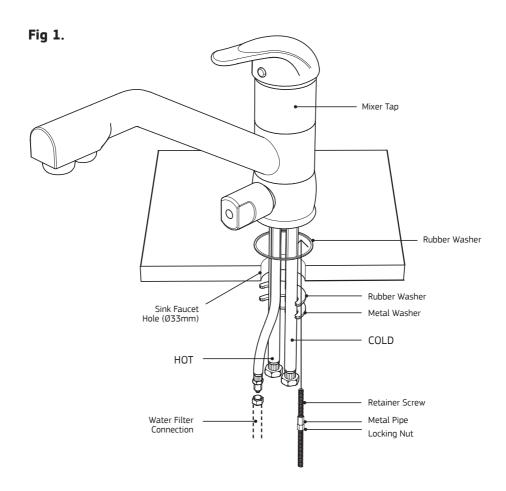

Note: It is important to flush out the supply pipes to the mixer before connecting the flexible hoses, with the initial installation, so no foreign matter can enter into the cartridges.

A Puretec Water Filter is highly recommended for product longevity.




Assembly

Fig 2.


Step 1. Connect the hoses to the faucet and tighten them. Refer to page 7 for connection patterns.

Only use hand to screw the flexible hose. Do not over tighten. Don't use any tools.

Step 2. Put brass base with o-ring to the bottom of the faucet.

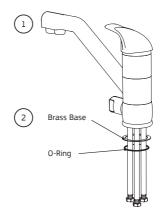


Step 3. Put the hoses through the basin or sink. Required through hole size is Ø33mm.

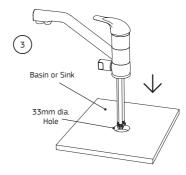

Step 4. Place the retainer screw through the hole in each spacer and screw to the hole on the bottom of the faucet.


Then, use a wrench to lock the locking nut.

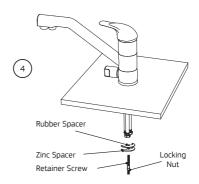



Water Connection Patterns


Fig 3.

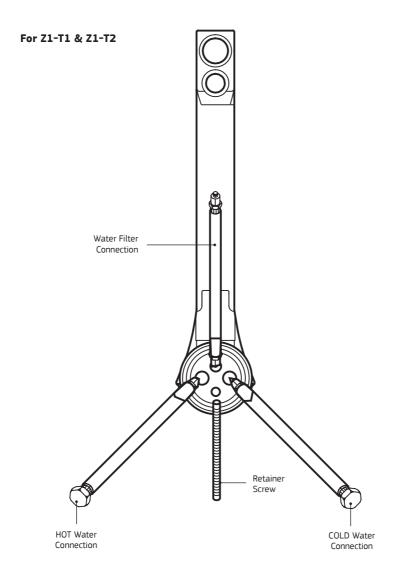



Water Connection Patterns

Fig 4.

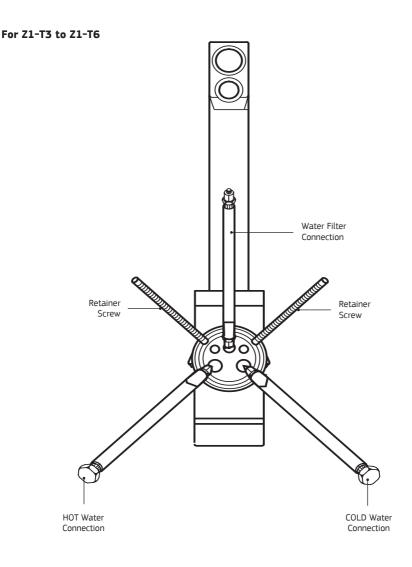



Battery Installation - LED reminder light

Important note: Battery must be replaced when changing cartridges.


1. Remove the black battery seat from the faucet canopy.




Note: Red light flashes twice and then followed by the blue light.




Reinstall battery seat assembly into the faucet canopy.









 Red light flashes indicates your cartridges are due to be changed (usage has exceeded 3,000 minutes or 12 months).
Please change the battery when changing the filter cartridge(s).



WARNING!

This product contains a button battery. Accidental ingestion may occur and can be fatal. Please keep out of reach from infants. If you suspect an accidental ingestion please contact emergency services.



Replacement of Ceramic Disc Cartridge(s)

1. Hot/Cold Outlet

- Remove hot and cold water indicator then release screw in lever and lift lever off, now you can unscrew dome cap and loosen the cartridge lock nut.
- Lift out old cartridge and clean inside making sure no old O-rings are still stuck inside cartridge housing.
- Insert new cartridge making sure O-rings on bottom of new cartridge have not fallen off and lugs in bottom of cartridge line up with holes in cartridge housing.
- Now you can tighten lock nut with a torque wrench to 14 newton meters, then reinstall dome cap, lever screw and hot and cold water indicator.

2. Filtered/Rain Ancillary Outlet

- Remove front button cover using fine-edged 1.2mm screwdriver.
- Unscrew handle then remove cartridge by unscrewing it anti-clockwise, using 5/8" socket. Install cartridge by completing removal instructions as above, in reverse order.
- Ensure cartridge is firmly tightened not over tightened.



PART 2

Filter Cartridge Installation

This system comes complete with an installation kit enabling it to be connected to 15mm (½") male thread.

Installation requirements

- 1. 15mm (½") Cold water line mains only
- 2. Supply pressure: 100-875 kPa.
- Supply temperature 0° 38°C (protect from freezing).
- Suitable location for faucet.

Alternative fittings may be required if being connected to anything other than 15mm (½") copper pipe. No electrical or drainage requirements needed.

Installation Procedure

- Select suitable location that is close to the point of filtered water delivery (eg. sink). Remember to allow access room for changing filters and a suitable place where water spillage will not cause damage. Location should not be in direct sunlight.
- Isolate water supply and cut copper pipe ready to install the tee adaptor and ballvalve.



- 3. Connect the ballvalve to the multivalve with a piece of white tubing (see Fig 1).
- Install filter cartridge by positioning it in the desired location, marking the position of fixing hole and fixing with bracket screw. Z1 Tripla Series can be mounted horizontally or vertically. Allow room for the connecting tubes. Ensure flow arrow on cartridge is in direction of water flow.
- Fit tubing into connectors (for quick-connect fittings see Fig 2). Allow slack in the tubing. Connect the tubing into the filtered water flexible hose (plain).
- Connect cold water flexible hose (blue streak) to cold mains water supply and the hot water flexible hose (red streak) to the hot water supply.
- 7. Restore water supply & check for leaks, rectifying them, if any, before leaving the unit.
- Run the system for at least 5 minutes to remove carbon fines. Water may appear milky, but this is normal and is only tiny air bubbles that will clear after a short period.

Cartridge Installation/Changeout

- Rotate the old cartridge counterclockwise 1/4 turn, pull it out and dispose of it. 1.
- 2. Remove all packaging from the new cartridge, including any wraps or caps (if applicable).
 - Replacement cartridge: Z1-R
- 3. Insert the new cartridge into the filter head and rotate clockwise 1/4 turn.
- 4. Reset LED indicator by following instructions on page 6.
- 5. Turn on the water and check for leaks. If leaks occur, repeat step 3. If leaks persist, discontinue use and call your supporting dealer.
- 6. Flush filter for 5 minutes before use or until water runs clear.



Use Guidelines

- Minimum operating pressure 172 kPa.
- Maximum operating pressure 500 kPa.
- Do not allow exposure to temperatures below 0°C, protect from freezing.
- Maximum operating temperature 38°C.
- Nominal flow rate 5.5 Lpm.
- This system must be installed according to local plumbing codes on the cold water line - mains only.
- Replacement Cartridge: Z1-R
- This system requires regular replacement of the filter cartridge to maintain proper operation. Varying chlorine, sediment, or organic substance levels may affect replacement frequency.
- Be sure to change the filter cartridge at least every 23,000 litres or 6 months which ever occurs first; or whenever you detect a change in taste, odour, or decrease in flow.

Caution: Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.



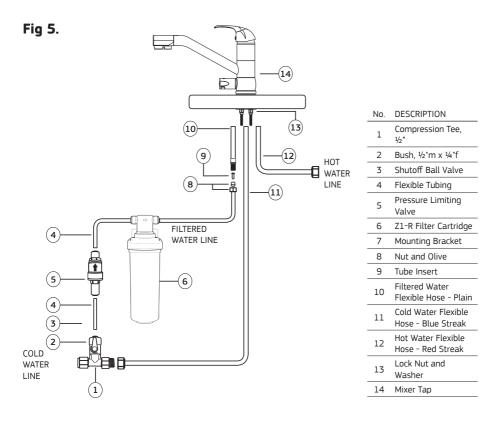


Fig 6.

HOW TO USE QUICK CONNECT FITTINGS




1. Cut the tube square and push in to the tube stop. For metal tube remove burrs and chamfer tube end to prevent O-Ring seal being damaged.



3. Tube is secured in position.



2. Fitting grips before it seals. Ensure tube is pushed in to tube stop.




DISCONNECTION PROCEDURE


4. Push collet against body and slide tube out of fitting.



WELS Rating for Tripla Taps








TRIPLA-T2

























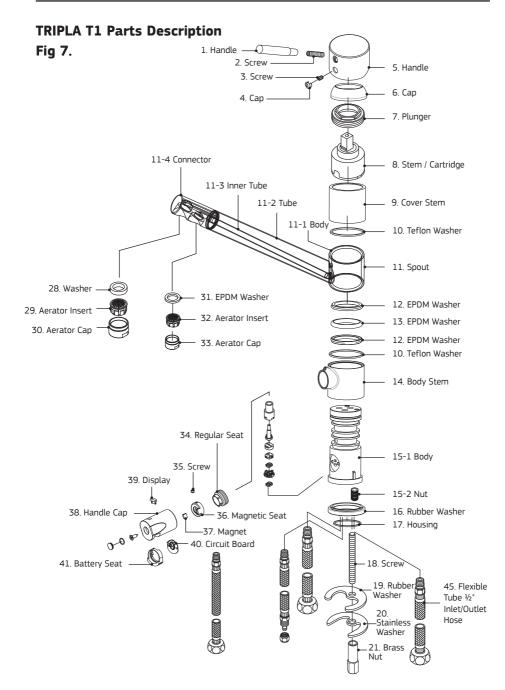



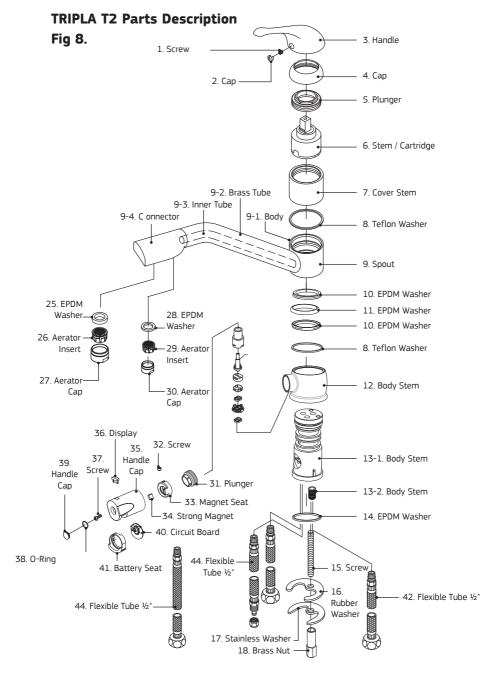



TRIPLA T3 Parts Description

Fig 9. 23-4 Connector 23. Spout 23-3 Inner Tube 23-2 Tube 23-1 Body 1. W asher 4. Washer 24. Cap 9. Display 7. Handle 2. Aerator 25. Washer Insert 8. Screw 26. O-Ring 27. O-Ring - 11. Screw 3. Aerator Cap 12. Strong 5. Aerator Insert Magnet 6. Aerator Cap 13. Magnet Seat -28. Body 10. Handle Cap-29. O-Ring 33. Handle 15. Circuit 30. Connector Board 30-2. Cartridge 14. Battery Seat 31. Plunger 32. Cap 38. Housing 35. Body 39. O-Ring 34. Canopy-36. Nut 37. Stopper 40. Screw 41 washer 44. Flexible Tube 42. Washer rass Nut 47. Wrench




TRIPLA T4 Parts Description Fig 10. 1. Spout 1-3. Inner Tube 1-4. Connector - 2. Washer 1-2. Tube 3. Aerator Insert 16. Screw 4. Aerator Cap 1-1. Body 10. Cap 13. Display 5. Gasket 6. Washer 11. O-R ing 14. Handle Cap 7. O-Ring 12. Screw 15. Washer 8. O-Ring 9-1. Washer 20. Magnet 9-2. Gasket Seat 17. Circuit . 9-3. Gasket Board 19. Strong 28. Screw 29. Body Magnet 35. Handle 30. O-Ring 18. Battery 31. Connector Seat 32. Stem 21. Plunger 33. Plunger 34. Cap 22. Turn Stem Body 36. Screw 38-1. Body 23. Stem Post 24. Upper 38-2. Nut 25. Lower 26. Seat 37. Handle Cap 27. Stopper 39. Stopper 26. Seat 40. Washer 41. Screw 42. Washer 45. Flexible Tube 43. Washer Brass


Nut



TRIPLA T5 Parts Description Fig 11.

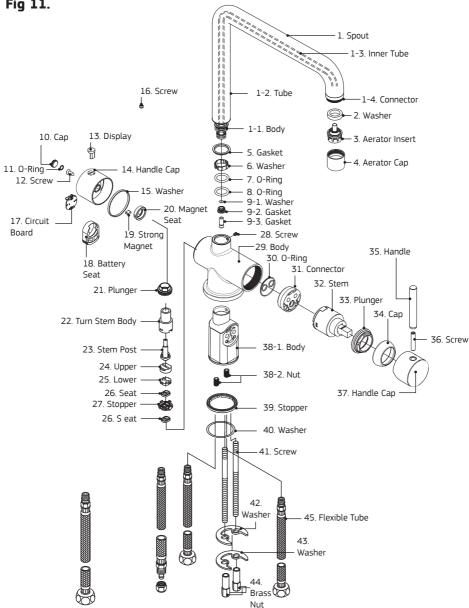



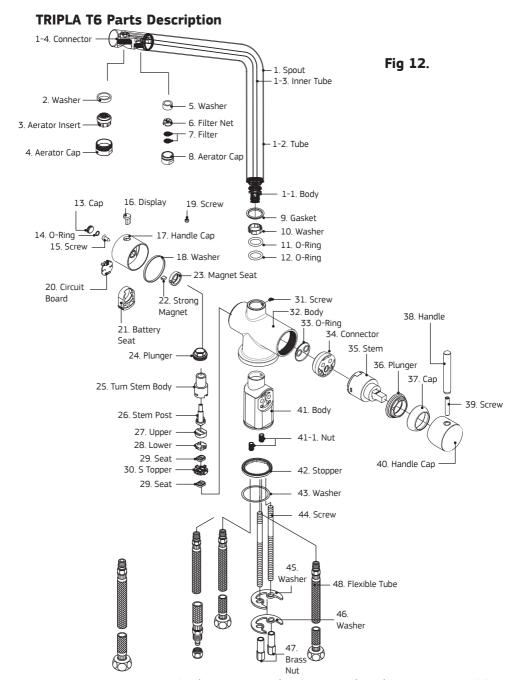



Performance Data

Substance	Guidelines*	Average Influent Concentration	Max Effluent Concentration	Min Percent Removal	Average Effluent Concentration	Average Percent Removal		
NSF Standard 42 Drinking Water Treatment Units								
Chlorine (23,000 L)	5 - Health 0.6 - Aesthetic	2.1	0.3	50%	0.25	>94%		
Standard 53 Cyst Live Cryptosporidium POU/POE								
Cyst	<1	100,000	ND (1)	99.98% +	ND (1)	99.99%		

Test Parameters	
Hardness, Total mg/L	120
TDS mg/L	290
Temp deg C	21°C
Turbidity NTU	0.1
pH	7.57

^{*}Australian Drinking Water Guidelines - 1996 ND = Not Detected

This appliance meets the domestic water treatment appliance Standards AS/NZS3497 for the following water treatment processes:

Class	Treatment type	Function	Pass
1	Microbiological Status		
	Bacteriostatic	Will stop bacteria increasing, but will not remove them unless II(a) is passed	N/A
II	Microbiological Treatment		
II (a)	Bacteria Removal	Will remove or inactivate bacteria	YES
II (b)	Virus Removal	Will remove or inactivate virus	YES
II (c)	Protozoa Removal	Will remove or inactivate Cryptosporidium and Giardia, but will not remove or inactivate bacteria and virises unless II(a) and II(b) is passed	YES
Ш	Turbidity & Particulate Reduction	Reduces cloudiness	YES
IV	Taste & Odour Reduction	Reduces taste & odours	YES
V	Chemical Treatment	Decreases chlorine	YES



Notes

Puretec water care products are designed, manufactured and supported by Puretec Pty Ltd the name you can trust for viable and proven water solutions. The complete range of Puretec products are developed, refined, made to meet and exceed stringent specifications for the worldwide market.

Important: Sales of products are subject to our Terms and Conditions which are available upon request. All specifications, information and photos are a guide only and are subject to change without notice. Please ring to confirm details. Warning: For correct operation of this appliance it is essential to observe manufacturer's instructions.

Warranty

Any claim under this warranty must be made within 6 Years of the date of purchase of the product. This product is warranted to be free of defect of material and workmanship for 6 Years from date of purchase. Warranty is 6 years parts, 1 year parts and labour, excludes cartridge.

To make a claim under the warranty, take the product and proof of purchase to place where you purchased the product, and they will lodge a Warranty Request with Puretec.

Puretec will pay your reasonable, direct expenses of claiming under this warranty. You may submit details and proof of your expense claim to place of purchase for consideration.

The warranty only applies if the product was used and/or installed in accordance with the user guide and/ or installation instructions. This warranty is given in lieu of all other express or implied warranties and manufacturer shall in no circumstance be held liable for damages consequential or otherwise or delays caused or faulty manufacturing except as excluded by law.

Applicable to all above, is that the warranties need to be approved by Puretec to ensure product was not incorrectly used, installed or claimed. False and incorrect claims will be pursued at Puretec's discretion, including chargeable inspection and labour costs incurred.

Warranty/Australia

This warranty is given by Puretec Pty Ltd, ABN 44 164 806 688, 37-43 Brodie Road, Lonsdale SA 5160, telephone no. 1300 140 140 and email at sales@puretec.com.au.

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with quarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty/New Zealand

This warranty is given by Puretec Ltd, Reg. No 4464398, Level 2, 40 Onehunga Mall, Auckland 1061, telephone no. 0800 130 140 and email at sales@puretec.co.nz.

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with quarantees which cannot be excluded under the Consumer Guarantees Act. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

