



# Quick Installation Guide

Wi-Fi 5 1300Mbps Gigabit Wall-plate Wireless Access Point

WI-AP417P

www.wireless-tek.com

## Package Contents



1 x WI-AP417P




2x Screw



1x Quick Installation Guide


## Interface and Indicators

### LED Indicator Instructions

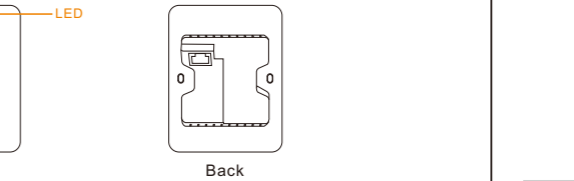


Name	Status	Description
LED Light	RED LED light blinking	System is starting
	Green/Blue LED light is always on	2.4G/5G started successfully
	LED lights off	Working abnormally/Power off/LED is turned off.
RJ45 LED Light	Yellow left LED light blink	Link established
	Green right LED light on	PoE is working
LED Light	LED lights off	Working abnormally/Power off

### Ports Instructions

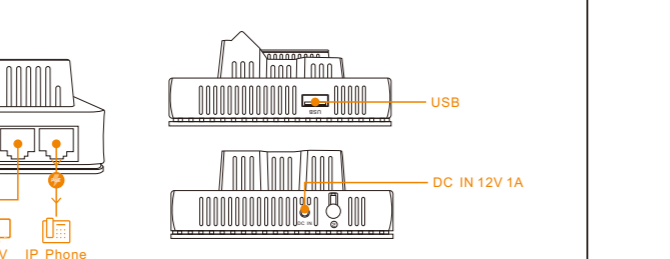


Action	Description
PoE Out	The port is used to connect to the PoE switch, for both data transmission and power over Ethernet(PoE) through an Ethernet cable.
LAN	10/100/1000Base-T LAN port
USB	USB port which can provide 5V 1A to charge the device
DC IN	12V 1A

### Button Instruction

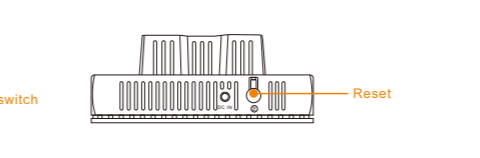

Action	Description
Reset	With the device powered on, press and hold the reset button for about 8 seconds, then release the button. The device will restore to factory default settings.
FIT-FAT	A FIT-FAT switching is implemented by loading the system software file of the fat AP or fit AP.


## Typical Connection

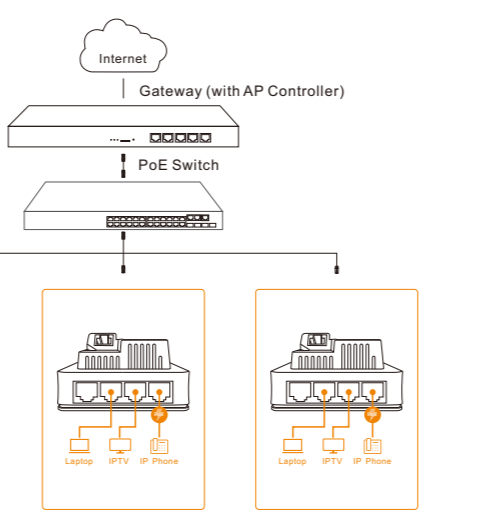


## Device Installation

### Wall Plate Installation


Detach the faceplate of the AP with a screwdriver.

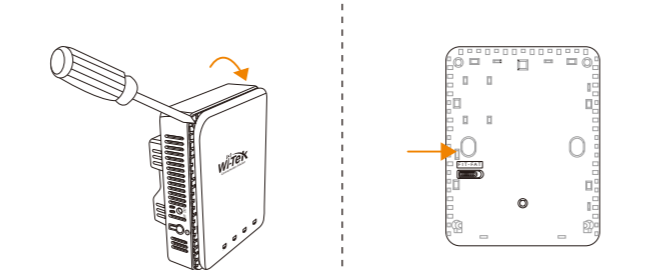

Select FIT-FAT mode

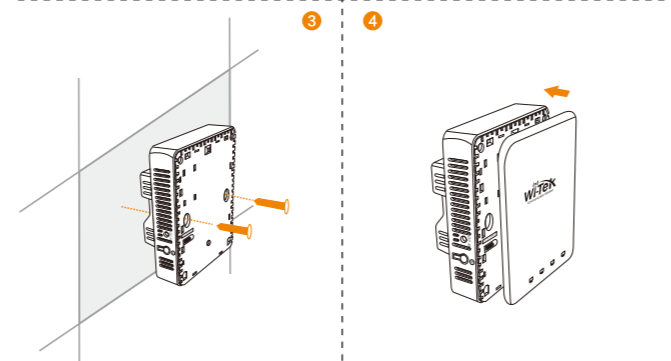


Insert the enclosed screws and tighten them with a screwdriver to secure the mounting bracket.

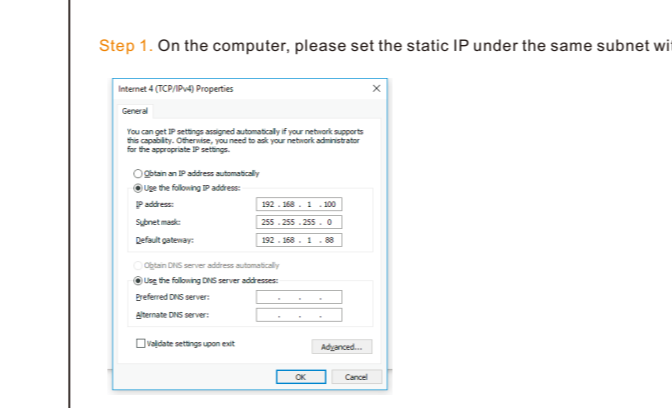


Press the faceplate of the AP back into position.

## Configuration Method


### Method 1. Connect computer to the wireless signal of AP, the default SSID is "Wi-TEK xxxx". Password is 88888888

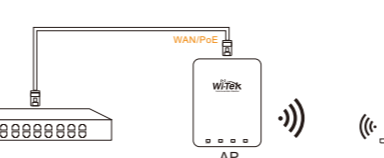

### Method 2. Connect computer to the AP by Ethernet cable.

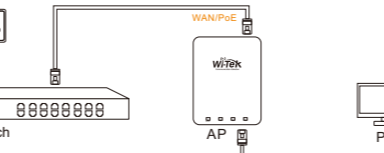

### Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx.

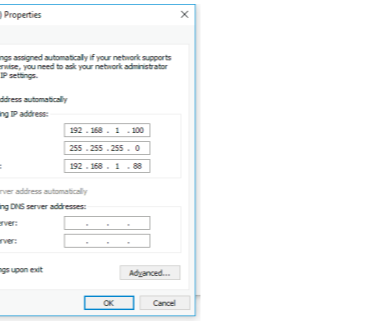

Step 2. Please launch a browser such as Google Chrome or Firefox, type 192.168.1.88 into address bar and click on enter to get in the login page of wireless access point. The default login password is "admin".



Step 3. After get in the management page, On the left side menu, please go to [Wizard] to setup the access point.



Step 4. Select the appropriate operation mode and follow the instruction of wizard to finish the settings. If already exist a Router in your network, please choose, Fit AP mode; If not, you can choose Wireless Router mode.

Notice: if you do a reset, AP will recovery to Fit AP mode.

• Fit AP Mode Default Login IP: 192.168.1.88 admin/admin


• Wireless Router Mode Default Login IP: 192.168.11.1 admin/admin

## Cloud Management Settings

### Step 1. Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.


### Step 2. Register an account password by user name or email.

### Step 3. log in to the cloud account with the account password after registration.

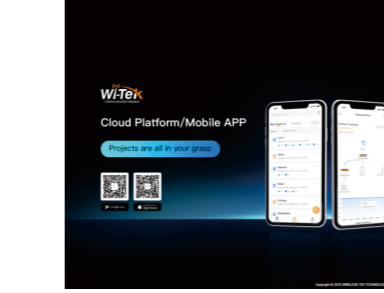

After the login is successful, the steps to bind the device on the cloud account are as follows:

### (1) Click ADD NETWORK

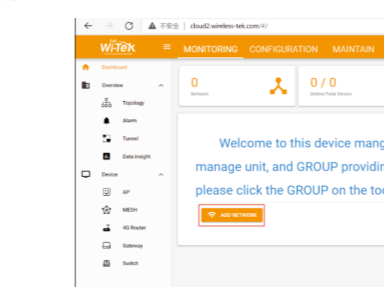

(2) Fill in the group name and location, click save.



(3) And click next.




(4) Enter serial number, click ADD to create and click FINISH, the configuration is complete.




Note: The 17-digit SN code of the Add device is shown on the sticker on the back of the device.




### (5) In the relevant device options, you can see the bound device information.

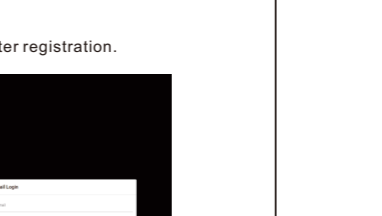

### (6) Click Tunnel, Select binding device type, click EWEB to log in to the device.

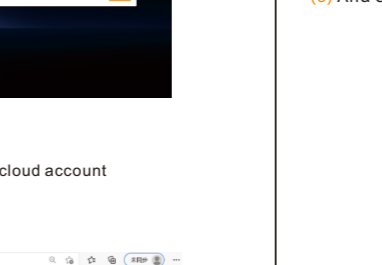

### (7) Click ADD NETWORK

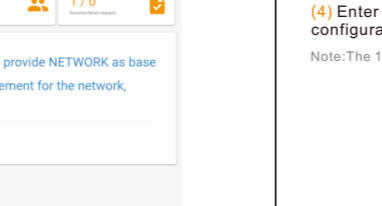

(8) Enter serial number, click ADD to create and click FINISH, the configuration is complete.



Note: The 17-digit SN code of the Add device is shown on the sticker on the back of the device.



## Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

• If the product defects within three months after purchase, we will provide you a new product of the same model.  
 • If the product defects within the three-year warranty period, we will provide the professional maintenance service.  
 • Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.  
 • Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited  
 Address: Biaofang Technology Building 402, Bao'an street,  
 Bao'an District, Shenzhen City, Guangdong, China  
 Website: www.wireless-tek.com  
 Tel: 86-0755-32811290  
 Email: sales@wireless-tek.com  
 Technical Support: tech@wireless-tek.com

