

TESEI

MILLE METRI

GMT AUTOMATIC

This Limited Edition timepiece is equipped with a Swiss Made self-winding Mechanical Automatic movement manufactured by ETA.

It does not need a battery. It is powered by the motions of the user's own wrist during the wear of the watch.

You may also choose to wind the watch manually.

For more details on operating this timepiece please refer to the enclosed booklet or visit : spinnaker-watches.com

TESEI

MILLE METRI

SWISS MOVEMENT
GMT AUTOMATIC

WATER RESISTANT


1000

METERS

SPINNAKER

Instruction Manual


Vol. 1.04 EN

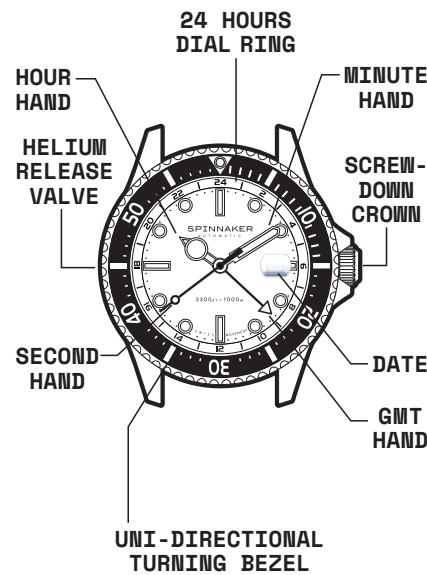

PLEASE READ THE FOLLOWING BEFORE UNSCREWING THE CROWN

Screw-down Crown


Screw-down crowns are used to ensure water resistance. **ALWAYS** be certain that your crown is securely screwed down (Position [0] is secured. Positions [1], [2] and [3] are not secured for water resistance). Do **NOT** unscrew your crown while you are in any environment where moisture is present.

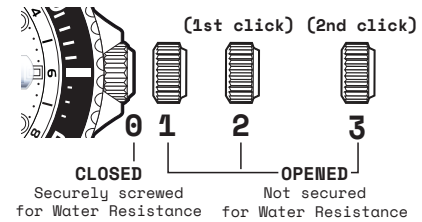


1

USING THE SCREW-DOWN CROWN

Do **NOT** pull the crown unless it is **UNSCREWED** first:

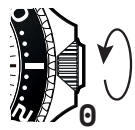

TO UNSCREW: Turn the crown anti-clockwise until it turns freely without tension. GENTLY pull the crown out to the other desired positions for watch setting (see specific operating instructions on the following pages).

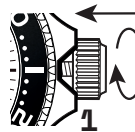

TO SCREW: Push the crown ALL THE WAY IN (towards the watch) THEN begin to turn clockwise until it is securely screwed down.

NOTE: Failure to SECURELY screw down the crown after setting the watch may affect its water resistance.

2

Before you use this watch, It is recommended that you manually wind the mainspring to start it moving.

This Watch Is An Automatic Watch Equipped With A Manual Winding Mechanism.

WINDING THE MAINSPRING



1. Unscrew the crown by turning it anti-clockwise.



2. When it is in position [1], turn the crown clockwise to wind. Wind 5-10 times and it will start to move naturally after shaking slightly.



3. Push the crown in then screw it securely.

3

* This watch **MUST** be worn for at least 8 (Eight) hours each day to ensure it is fully wound. An automatic watch will only wind when the watch is on your wrist and your arm moves. Winding the watch by the crown will put power on the spring but not enough to allow the watch to function fully. If your watch stops overnight or loses time it means it is not being fully wound.

IMPORTANT NOTE


- If your watch is running smoothly, please do not wind the crown to avoid overwinding the movement. Provided you are wearing the watch frequently, your watch should have sufficient power to operate without any fuss.
- If your watch has stopped running after a period of not wearing the watch, gently move the watch side to side 20 to 30 times to move the rotor or gently turn the crown 5 to 10 times to get the second hand run at its normal speed.

4

5

HOW TO SET THE TIME

- Unscrew the crown and pull it out to position [3] - (2nd click).
- Turn the crown **anti-clockwise** to set the correct time.
- Push the crown in then screw it securely.

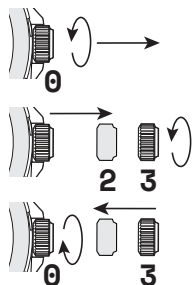


* Take a.m./p.m. into consideration when setting the hour and minute hands to the desired time.

* Always be certain that your crown is **SECURELY SCREWED**; this will prevent moisture from entering in.

6

HOW TO SET THE DATE

- Unscrew the crown and pull it out to position [2].
- Turn the crown **anti-clockwise** to set the correct date.
- Push the crown in then screw it securely.

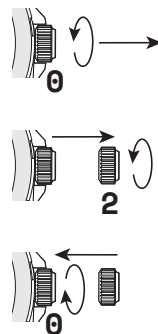


* Do not set the date between 9:00 P.M. and 4:00 A.M.


7

HOW TO SET THE SECOND TIME ZONE

You may wish to set your main time to your current location and the second time read out via the GMT hand to another location for at a glance read out of two timezones at the same time.

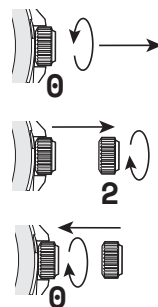

- Unscrew the crown and pull it out to position 2
- Turn the crown **clockwise** to set the correct time in the second timezone by pointing the GMT hand to the correct timezone on the 24 Hours Dial ring.

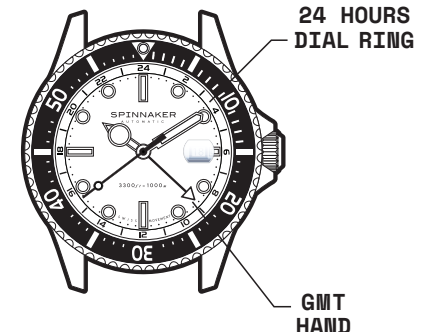

8

9

HOW TO READ THE SECOND TIME ZONE

The GMT function allows travellers to simultaneously read their local time and a second timezone.

The local time is indicated by the conventional hour and minute and seconds display.

The second timezone is indicated by the triangle tipped GMT hand read against markings on the 24 Hours Dial ring.

Example :
You are travelling to Hong Kong from Zurich.

You will adjust the local time once in Hong Kong with the conventional hour and minute hands.

You are able to adjust the GMT hand to read off the time in Zurich by setting it 6 hours behind the time in Hong Kong.

10

Example:

Local Time:
Hong Kong:
5pm


Second Timezone:
Zurich:
11am




The triangle tipped GMT hand is always indicating Zurich time during your trip in Hong Kong.

11


HOW TO CHANGE BRACELET TO RUBBER STRAP

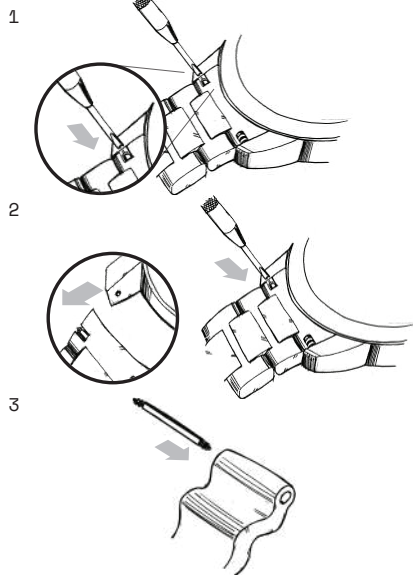

4

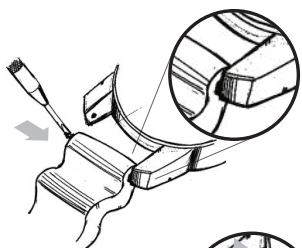

5

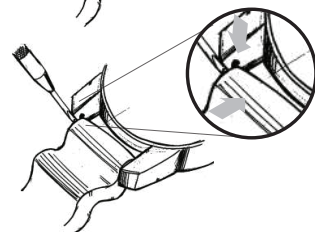

6



WATER RESISTANCE

Note that the water resistance chart serves only as a guide (please refer to the water resistance chart on the next page). Actual water resistance may vary depending on a number of factors including water temperature, water salinity and use under water.

The water resistance of your timepiece may eventually be compromised over time with general wear and tear and use of your timepiece under adverse conditions.

Always remember to employ the screw down crown if available to maintain the water resistance of your timepiece. Warranty may be voided if the screw down crown has not been properly employed.

Note that you should **NEVER** wear your watch in a jacuzzi, hot shower or steam room where steam may enter the case despite the water tight seals used to protect your watch.

This may cause condensation inside your watch, which may effect and damage the inner workings of your watch.

HELIUM RELEASE VALVE

The Helium release valve provides functionality for professional divers operating at great depths for prolonged periods of time.


Divers operating in such conditions often spend prolonged hours in diving bells under pressure breathing a gas mixture of helium or hydrogen. Since helium atoms are the smallest natural gas particles found in nature, these gas atoms are able to work their way inside the watch, around any o-rings or other seals the watch may feature.

This is not a problem as long as the divers stay under pressure, but when the decompression stops during resurfacing a pressure difference builds up between the trapped gas inside the watch case and its environment.

The Helium release valve safely allows the trapped gas to exit the case safely, without any damage to the integrity of the watch case.

The Helium Release valve does not need any manual intervention or adjustment.


Please make sure to employ the screw down crown on your timepiece for maximum water protection.

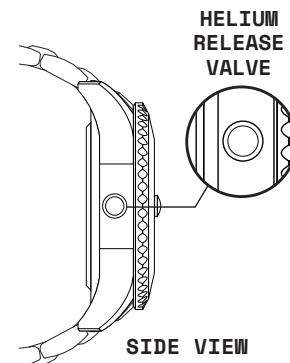


SIDE VIEW

HOW TO USE THE MICRO ADJUSTMENT ON YOUR BRACELET


1. Press buttons to release.

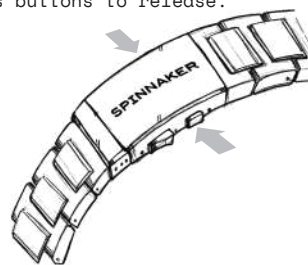

2. Pull open the clasp.

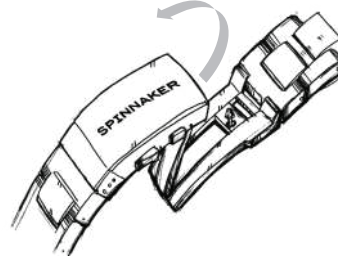

3. There are five micro adjustment positions, which allows for a maximum extension of 12mm. To extend, pull the level to unlock and simultaneously pull on the bracelet into the desired position.

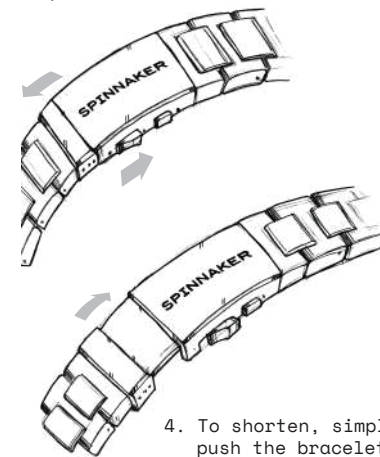

4. To shorten, simply push the bracelet back into the clasp.

WATER RESISTANCE CHART	50M/ 5ATM	100M/ 10ATM	200M/ 20ATM	500M/ 50ATM	1000M/ 100ATM
SPLASH/ SHOWERING	☑	☑	☑	☑	☑
SWIMMING/ BATHING	☑	☑	☑	☑	☑
BRIEF SWIMMING/ WATER SPORTS	☒	☑	☑	☑	☑
PROLONGED SWIMMING/ FREE DIVING	☒	☒	☑	☑	☑
SCUBA DIVING	☒	☒	☒	☑	☑
PROFESSIONAL DEEP SEA DIVING	☒	☒	☒	☑	☑