

OWNERS MANUAL

SP12VSWP / SP24VSWP

Submersible Well Bore Pump

WARNING

DO NOT use any Submersible pump for petrol/gasoline, petroleum products.solvents, thinners or ANY other flammable liquid with flash point below 82°(180°F). NOT FOR USE where flammable vapors are present.

Note:

BEFORE CONNECTING OR OPERATING THIS PRODUCT, PLEASE READ THESE INSTRUCTIONS COMPLETELY.

TABLE OF CONTENTS

	PAGE(S)
INTRODUCTION	2
COMPONENTS NEEDED FOR INSTALLATION	2
PUMP CONNECTIONS & INSTALLATION INSTRUCTIONS	3-5
PARTS LIST and REPLACEMENT PART KITS	6
SUBMERSIBLE PUMP ASSEMBLY DRAWING	7
BEFORE REQUESTING SERVICE "Helpful Hints"	8
PUMP REMOVAL and DISASSEMBLY	9-10
PUMP RE-ASSEMBLY	11-13
APPLICATION WORKSHEET	14
TECHNICAL SPECIFICATIONS	15-17
TOOLS REQUIRED FOR INSTALLATION & MAINTENANCE	18
WARRANTY	19

INTRODUCTION

This manual has been provided as an aid to the operator with information about installing, operating, and servicing of the Submersible Pump. The engineers and technicians who designed and manufactured these pumps have developed these instructions from their experiences.

These instructions should be read completely before installing your new pump. Keep this manual readily available at all times for use when installing, operating, or servicing your pump. For proper placement in the well refer to the application worksheet on pages 14-15. This pump is not to be used with flammable liquids.

$\overline{\mathbf{Z}}$	COMPONENTS NEEDED FOR INSTALLATION	PAGE(S)
	CABLE TYPE	3
	COUPLER AND DISCHARGE FOR OUTLET	4
	SAFETY LINE	5
	POWER SUPPLY	15-17
	FUSE: RECOMMENDED SIZE AND TYPE	15-17
	TOOLS REQUIRED	18
	CONTROLLER: Use of an LCB (Linear Current Booster) Unit is required for optimum performance of the control of t	mance.
	COMPLETE APPLICATION WORKSHEET	14

I. PUMP CONNECTIONS & INSTALLATION INSTRUCTIONS

WARNING: IMPROPER INSTALLATION WILL VOID WARRANTY.

1) Select proper jacketed cable size (Fig.1).

Note: DO NOT select cables with irregular shapes, rough or grooved surfaces.

Use a #10 AWG jacketed Submersible cable that fits into the general size requirements shown (Fig 1).

RECOMMENDED CABLE TYPE	MINIMUM DIMENSION OF CABLE	MAXIMUM DIMENSION OF CABLE
FLAT PARALLEL	.22 IN (5.5 mm)	.32 IN (8.0 mm)
ROUND	.35 IN (9.0 mm)	.45 IN (11.5 mm)

FIGURE 1

2) Assemble Cable Boot (Fig. 2, 3, 4).

- a) Strip the outer cable jacket (Part A not included) 2.0 in. (5 cm) (Fig. 2).
- b) Cut one of the lead wires 1.0 in. (2.5 cm) (Fig. 3).
- c) Wrap electrical tape around the cable. Start 2 in. (5 cm) below outer cable jacket and continue to taper a point past the end of lead wires (Fig. 4).

Generously lubricate the cable 4 to 6 in. (10 to 15 cm) with supplied O-Ring grease.

- d) Slide the cable boot components over the cable (Part A) in the following order (Fig. 4).
 - 1) Nut (Part D). Make sure threads are toward pump end of cable.
 - 2) Outer Cable Boot (Part C). Small end first.

2.0 (5 CM)


FIGURE 2



NOTE: Re-lubricate cable as necessary.

3) Inner Cable Boot (Part B). Small end first.

e) Remove tape and cut the lead wires back leaving about .50 in. (1.3 cm) exposed. Strip the inner conductor jacket .50 in. (1.3 cm) (Fig. 5).

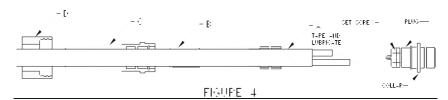

- f) Insert the wire leads into Plug (Cable Adapter) connectors. Using a 5/64" Allen Wrench tighten the set screws (Fig. 6).
- g) Slide the Inner Cable Boot (Part B) over the plug until it is flush with the first step on the collar (Fig. 6).

Wipe the grease from the surface of Inner Cable Boot and cable.

Tape end of Inner Cable Boot tightly to the cable.

Be sure to tape 4 in. (10 cm) below the Inner Cable Boot on the cable.

Note: This taped area allows the Outer Cable Boot (Part C) to slide freely over the Inner Cable Boot. DO NOT REMOVE THE TAPE.

- h) Lubricate the outer surface of the Inner Cable Boot and tape with supplied O-Ring grease. Slide the Outer Cable Boot (Part C) over the Inner Cable Boot until it is flush with the second step on the collar (Fig. 6).
- i) Push the Plug (Cable Adapter) into the Receptacle (Cable Adapter) until the collar is seated flush.

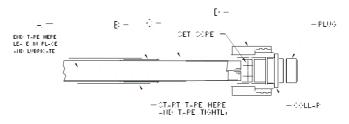


FIGURE 6

NOTE: The orientation of the Plug(Cable Adapter) will not effect the pumps performance.

j) Push the Nut (Part D) over the Plug (Cable Adapter) and then finger tighten the nut.

<u>NOTE:</u> Before continuing, operate the pump to check all electrical connections, using the correct power supply. Refer to Technical Specifications (Pg. 14).

If pump does not operate Refer to "Helpful Hints" (Page 8) before continuing.

- 3) Install the 6 in. hose and fitting (1/2" NPT X 1/2" BARB) (Fig. 7, page 5).
 - a) Press the fitting into the 6 in. hose, slide the clamp on the hose and over the fitting and tighten the clamp securely.
 - b) Slide another clamp on the 6 in. hose, slide the assembly over the barbed fitting on the pump, and tighten the clamp securely.

Note: Select the proper adapter hose and accessories for the pump.

USE OF DISCHARGE PIPE LARGER THAN 3/4" IS NOT RECOMMENDED..

Use 150 P.S.I. Min. (10 bars) working pressure rated 1/2 in. I.D. (12.7 mm I.D.) smooth bore hose (Part not included.). Use All-Stainless Steel hose clamp (Part not included.)



4) Hook-up Safety Line (Sling) (Fig. 7).

<u>CAUTION:</u> Safety line (Sling) should be Corrosion resistant.

- a) Insert safety line (Part not included) through lift plate holes.
- b) Fasten line with appropriate connection approximately 1-2 ft (30 60 cm) above the pump.

5) Band the Hose, Safety Line, and Electrical Cable (Fig. 8).

Tie the drop lines together using tie wraps every 6ft. (1.8 m).

This banding will prevent unnecessary damage to the lines during Installation and Removal of pump.

6) Install Pump (Fig. 8).

Note: Prior to installing the pump, fill in the application worksheet on pages 14-15.

The application worksheet is a guide to make sure that the pump is installed properly in the well.

Following the guidelines laid out in the application worksheet will allow the pump to perform efficiently and extend the life of the unit.

SOLAR PANELS CONTROLLER DISCHARGE LINE TO STORAGE JACKETED CABLE BAND NG 6 FFFT (1.8 METERS) **APART** STATIC WATER LEVEL 230 FEET (70 METERS) 1/2"ID TUBING MAXI MUM LIFT DROUGHT SOIAR PUMP 2440 SERI ES SUBMERSI BLE

Refer to "Helpful Hints" if you experience any difficulties.


PARTS LIST

ITEM	DESCRIPTION	QUANTITY
A	CABLE [NOT INCLUDED]	1
В	INNER CABLE BOOT	1
C	OUTER CABLE BOOT	1
*	PLUG (CABLE ADAPTER) [NOT SHOWN]	1
•	SCREW (PLUG) [NOT SHOWN]	2
D	NUT	1
E	SCREW (LIFT PLATE)	6
F	LIFT PLATE	1
G	OUTLET FITTING	1
H	O-RING (OUTLET FITTING)	1
I	O-RING (LIFT PLATE)	3
J	RECEPTACLE (CABLE ADAPTER)	1
K	SET SCREW (RECEPTACLE)	2
L	SCREW (MOTOR)	3
M	FILTER SCREEN	1
N	UPPER HOUSING	1
0	O-RING (UPPER HOUSING)	2
P	SPRING (BYPASS)	3
Q	POPPET (BYPASS)	3
R	VALVE HOUSING ASSEMBLY	1
S	LOWER HOUSING ASSEMBLY	1
T	MOTOR	1
U	CANISTER	1
V	SCREW (CANISTER)	3
\mathbf{W}	LOCK WASHER (MOTOR SCREW)	3

REPLACEMENT PART KITS

24-135-00	LIFT PLATE *[E,F,I]
24-136-00	CABLE PLUG KIT *[B,C,D,J,K,PLUG(CABLE ADAPTER) W/ SET SCREWS]
24-137-00	VALVE ASSEMBLY KIT *[O,P,Q,R]
24-138-00	LOWER HOUSING ASSEMBLY KIT *[O,S]
24-139-00	MOTOR KIT *[O,T]
24-140-00	CANISTER KIT *[O,U,V]
24-141-00	FILTER SCREEN KIT *[M]
24-142-00	O-RING KIT *[H,I,O,O-RING(VALVE HOUSING ASSEMBLY)]
24-143-00	TOOL KIT *15/64" 5/32" and 3/16" ALLEN WRENCHES #1 and #2 PHILLIPS SCREWDRIVER

* | DENOTES PARTS INCLUDED IN KITS.

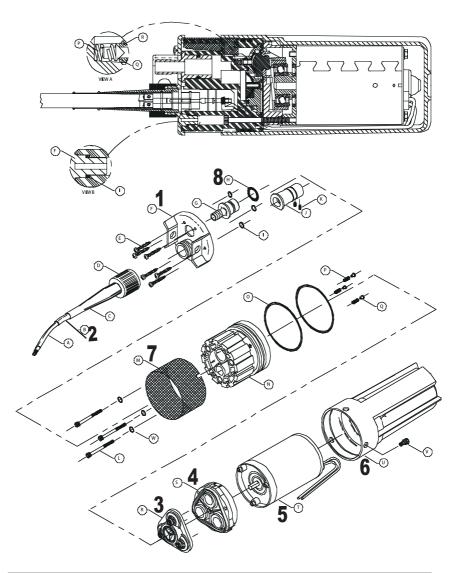

1	2	3	4	5	6	7	8
Lift Plate	Cable Plug	Valve	Lower	Motor	Canister	Filter Screen	O-Ring
LIII Plate	Cable Plug	vaive	Housing	IVIOLOI	Carrister	Screen	O-King
24-135-00	24-136-00	24-137-00	24-138-00	24-139-00	24-140-00	24-141-00	24-142-00

BEFORE REQUESTING SERVICE "Helpful Hints"

<u>SYMPTOM</u> I	PROBABLE CAUSE CO	RRECTION
PUMP OPERATES but NO FLOW or REDUCED FLOW	: 1) LOW VOLTAGE	1) CHECK POWER SUPPLY FOR PROPER VOLTAGE. REFER TO TECHNICAL SPECIFICATIONS (Pg. 16).
REDUCED FLOW	2) NO WATER AT PUMP	2) MAKE SURE THE PUMP IS INSTALLED BELOW THE LOWEST ANTICIPATED WATER LEVEL. REFER TO INSTALLATION SECTION (Pg. 5).
	3) PUMP LOCATED TOO DEEP	3) REFER TO INSTALLATION SECTION (Pg. 5) FOR PUMP OPERATING RANGE.
	4) CLOGGED FILTER SCREEN	4) REMOVE FILTER SCREEN AND RINSE. REFER TO REMOVAL AND DISASSEMBLY SECTION (Pg. 9).
	5) FLUID PATH IN PLUMBING RESTRICTED	5) CHECK FOR PINCHED HOSE, CLOGGED LINES.
	6) LOOSE CONNECTIONS or PUNCTURED HOSE.	6) CHECK HOSE CLAMPS or REPLACE HOSE (Pg. 4).
PUMP WILL NOT OPERATE:	1) INCORRECT POWER SUPPLY	1) CHECK POWER SUPPLY. REFER TO PUMP TECHNICAL SPECIFICATIONS (Pg. 16).
	2) WIRE CONNECTIONS	2a) CHECK ELECTRICAL CONNECTIONS ON SYSTEM.
		2b) CHECK THE PLUG(CABLE ADAPTER) ELECTRICAL CONNECTION MADE DURING THE INSTALLATION IS NOT CORRODED OR LOOSE.
		REFER TO CABLE BOOT INSTALLATION INSTRUCTIONS FOR DISASSEMBLY AND REASSEMBLY(Pg. 3-4).

2c) CHECK FOR BLOWN FUSES IN-LINE.

II. PUMP REMOVAL AND DISASSEMBLY

For servicing using Replacement Part Kits.

<u>Warning:</u> Make sure all electrical power is off and the Hose (Pipe) is not under pressure.

<u>Warning:</u> Canister maybe pressurised, disassemble the pump in proper order. Follow the manual directions carefully.

Note: Keep all of the parts clean after disassembly.

Upper Housing Assembly contains small parts.

Be careful not to lose parts after removing Upper Housing (Part N) step 9.

1) Remove the Pump from the well.

To prevent damaging the Electrical Connection during removal from well **DO NOT** PUT STRESS ON THE ELECTRICAL CORD.

2) Disconnect the Hose.

Remove the Hose clamp, pull and twist the hose to remove it from the fitting.

3) Unplug the Cable Adapter Assembly (Fig 9).

Remove the Nut (Part D) unscrewing it counterclockwise and pull the plug up.

4) Remove the Lift Plate (Part F) (Fig. 9).

Using a #2 Phillips Screwdriver remove the screws (Part E) from 6 places and pull up the Lift Plate.

Note: Be sure to put the O-Rings (Part I) back on the Lift Plate Posts (Fig. 9, View B) before continuing to step 5. If necessary, the filter screen may be removed for cleaning at this stage of the disassembly.


5) Remove the Outlet Fitting (Part G) (Fig. 9).


Remove the fitting from the Upper Housing (Part N) by pulling it straight out.

6) Remove the Receptacle (Cable Adapter) (Part J) (Fig. 9).

Note: DO NOT PULL ON THE ELECTRICAL PRONGS.

- a) Using pliers carefully pull up on the shoulder of the Receptacle (Cable Adapter) and pull it completely out of the Upper Housing (Part N).
- b) Using a 5/64" Allen Wrench, loosen the screws holding the motor leads (Part k) from 2 places and disconnect the Receptacle (Cable Adapter).

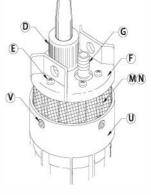

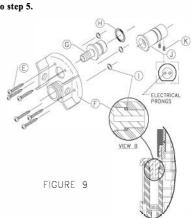

7) Slide off the Filter Screen (Part M) (Fig. 10).

8) Remove the Canister (Part U) (Fig. 10).

- a) Using a 3/16" Allen Wrench remove the screws (Part V) from 3 places.
- b) Place one hand on the Upper Housing and the other on the Canister. Twist and pull the Assembly apart.


9) Remove Upper Housing (Part N) and Motor (Part T) (Fig. 10).

Note: Keep all parts clean after disassembly.

The Upper Housing Assembly contains small parts. Be careful not to lose parts after removing Upper Housing.

- a) Using a 5/32" Allen Wrench remove the screws (Part L) from 3 places.
- b) Before separating the Upper Housing from the Motor, place the assembly on the Upper Housing(Down) and the Motor facing up.
- c) Separate the Upper Housing, Valve Housing and Lower Housing Assembly (Parts R, S), Poppets (Part Q), and Springs (Part P).

10) Contact an authorised distributor for assistance with diagnosis and replacement Parts (Refer to page 6 for replacement part kit list).

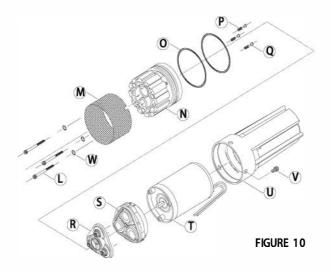

III. PUMP RE-ASSEMBLY

Warning: The order of Assembly is important to ensure proper sealing.

1) Install the Upper Housing Large O-Rings (Part O) (Fig. 11).

a) Remove the existing Large O-Rings and thoroughly clean the O-Ring grooves with a dry cloth and a cotton tipped applicator.

Note: Lubricate the O-Rings with the Supplied O-Ring Grease. DO NOT USE PETROLEUM BASED LUBRICANT.

- b) Slide the two new Large O-Rings over the Upper Housing (Part N) and into the O-Ring grooves.
- c) Place the Upper Housing down with the internal cavities exposed.
 Turn the Upper Housing until the motor wire holes are directly in front.

2) Install the Bypass Assembly (Parts P and Q) (Fig. 11).

a) Place the Poppets (Part Q) into the Springs (Part P).

Note: Make sure that the Poppets are seated flush against the Springs.

b) Locate the three bypass cavities and place the Spring/Poppet Assembly into the cavities with the **Poppet up**.

3) Install the Valve Housing Assembly (Parts R) (Fig. 11).

Place the Valve Housing Assembly into the Upper Housing (Part N).

Note: Make sure that the inlet valves are centered on top of the bypass Poppets (Part Q).

4) Install the Lower Housing Assembly (Part S) (Fig. 11).

a) Place the Lower Housing Assembly onto the Valve Housing Assembly (Part R) (Fig. 11).


Note: DO NOT FORCE THE ASSEMBLY.
IT SHOULD SNAP TOGETHER EASILY IN
ORDER TO SEAL PROPERLY.

5) Install the Motor (Part T) (Fig. 11).

- a) Lubricate the motor shaft with a small amount of general purpose grease.
- b) Align the "D" flat of the motor shaft with the "D" flat on the Lower Housing Assembly (Part R).
- c) Align the motor lead wires with the Upper Housing (Part N) wire holes.
 Align the three tabs on the motor with the holes on the
 Lower Housing Assembly (Parts R) and set the motor onto the Lower

Housing.

d) Insert the motor lead wires into the Upper Housing motor wire holes.
 Push the wires until they touch the surface that the Upper Housing is resting on.

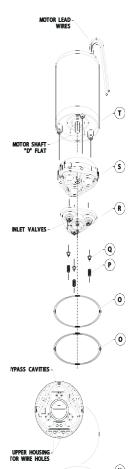





6) Install the Canister (Part U) (Fig. 12).

- a) Clean the inside of the Canister with a dry cloth.
- b) Align the wire channel in the canister with the motor lead wires.
- c) Slide the canister over the entire assembly .
- d) Twist the canister to align the screw holes and carefully press on end to seat properly.

7) Install the Screws (Part V) (Fig. 12).

Note: DO NOT USE MORE THAN 15 (±5) in lb [1.7 Nm (±5)] torque TO PREVENT STRIPPING.

Using a 3/16" Allen Wrench tighten the screws in 3 places into the Upper Housing (Part N).

8) Turn the assembly over as shown in Figure 13.

9) Install the Lock Washers (Part W) and Screws (Part L) (Fig. 13).

a) Slide the three Lock Washers onto the screws and place the screws in 3 places into the Upper Housing (Part N).

Note: DO NOT COMPLETELY TIGHTEN ONE SCREW AT A TIME.

TIGHTEN THE SCREWS WITH TWO PASSES SLOWLY COMPRESSING THE ASSEMBLY TOGETHER.

- b) Using a 5/32" Allen Wrench tighten the screws on the first pass with 25 (\pm 5) in lb [2.8 Nm (\pm .5)] torque.
- c) Tighten the screws on the second pass with 65 (\pm 5) in 1b [7.3 Nm (\pm .5)] torque.

10) Connect the Receptacle (Cable Adapter) (Part J) (Fig. 14, page 13). Note: The orientation of the motor lead wires will not effect the pumps performance.

- a) Pull the motor lead wires up through the Upper Housing (Part N) and insert them into the Receptacle (Cable Adapter).
- b) Using a 5/64" Allen Wrench hand tighten the screws on the Receptacle (Cable Adapter) for both wires.

Note: DO NOT TIGHTEN WITH A POWER TOOL.

- c) Lubricate the outer surface of the Receptacle (Cable Adapter) with the Supplied O-Ring grease.
- d) Match the flat side of the Receptacle (Cable Adapter) with the flat side of the hole in the Upper Housing.
- e) Push the Receptacle (Cable Adapter) into the hole in the Upper Housing until it is seated flush.
- f) Spread each Receptacle (Cable Adapter) electrical prong slightly to insure the electrical connection.



11) Install the Filter Screen (Part M) (Fig. 15).

- a) Slide the Filter Screen onto the Upper Housing (Part N).
- b) Align the slots in the Filter Screen with the screws (Part V) in the Upper Housing and slide the Filter Screen over the screws.

12) Install the Outlet Fitting (Part G) (Fig. 15).

- a) Lubricate the O-Ring (Part H) and slide it into the O-Ring groove on the Outlet Fitting.
- b) Push the Outlet Fitting into the hole in the Upper Housing (Part N).

13) Install the Lift Plate (Part F) with three the O-Rings (Part I) on the posts (Fig. 15).

a) Align the three posts with the Upper Housing (Part N) screw holes and press on the Lift Plate until it is flush against the Upper Housing.

Note: DO NOT USE MORE THAN 20 (±5) in lb [2.25 Nm (±.5)] TORQUE TO PREVENT STRIPPING.

b) Using a #2 Phillips Screwdriver install the screws (Part E) 6 places into the Lift Plate.

14) Install the Plug (Cable Adapter) Assembly.

Note: The orientation of the Plug(Cable Adapter) will not effect the pumps performance.

Note: IF IT BECOMES NECESSARY TO REASSEMBLE
THE PLUG (CABLE ADAPTER) ASSEMBLY, REFER
TO PUMP CONNECTIONS & INSTALLATION INSTRUCTIONS (Pg. 3-5).

- a) Align the Plug (Cable Adapter) connector holes with the electrical prongs in the Receptacle (Cable Adapter).
- b) Push the Plug (Cable Adapter) into the Receptacle (Cable Adapter) until the collar is seated flush.
- c) Push the Nut (Part D) over the Plug (Cable Adapter) and finger tighten the nut.

Note: Before placing the pump back into the well, operate the pump to check all electrical connections using the correct power supply.

Refer to Technical Specifications (Pg. 14).



FIGURE 14

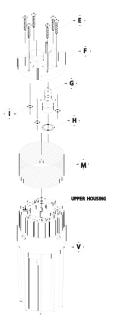



FIGURE 15

APPLICATION WORKSHEET

Please fill in for your records. PUMP DISTRIBUTOR: MODEL NUMBER SERIAL NUMBER_____ Name MFG. DATE Address PURCHASE DATE_____ City___ TOTAL WELL DEPTH FT(M) Phone(WELL RECOVERY RATE **SOLAR ARRAY INFORMATION:** MAKE/MODEL WATTS AVAILABLE (NO. OF PANELS X WATTS PER PANEL=) CONTROLLER INFORMATION:

NOTE: Use of an LCB (Linear Current Booster) Unit is required for optimum performance.

MAKE/MODEL

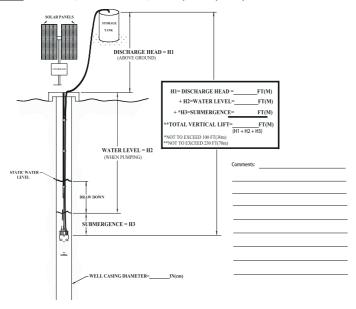

TECHNICAL SPECIFICATIONS:

MODEL NUMBER: SP12VSWP / SP24VSWP

PUMP DESIGN: Positive Displacement

3 Chamber Diaphragm Pump

CAM: 3.0 Degree

MOTOR: Permanent Magnet, P/N 11-175-00

Thermally protected

VOLTAGE: 12V / 24 VDC Nominal

WATTS: 120W

AMPS: 12V 10.0MAX / 24V 5.0 MAX

FUSE: 7.5 AMP (Automotive)

INTERNAL BYPASS: 130-150 P.S.I. MAX (9.0-10.0 bars)

MAXIMUM LIFT: 230 ft (70 M)

MAXIMUM SUBMERSION: 100ft (30 M)

OUTLET PORT: 1/2" (12.7 mm I.D.) Barbed Fitting

for 1/2" I.D. (12.7 mm I.D.) Tubing.


INLET: 50 MESH STAINLESS STEEL SCREEN

MATERIALS: STAINLESS STEEL304

and STAINLESS STEEL FASTENERS

TYPICAL APPLICATIONS: Potable water well pump.

NET WEIGHT: 7.16 lbs (3.25 kg)

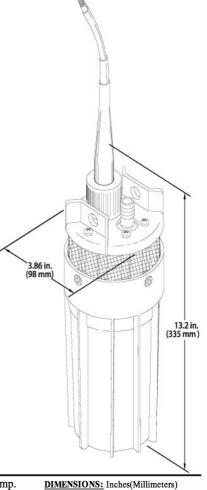

<u>DIMENSIONS:</u> Inches(Millimeters) Design and specifications are subject to change w/o notice.

TOOLS REQUIRED FOR INSTALLATION & MAINTENANCE

*#1 and #2 Phillips Screwdriver Wire Cutters *5/64" Allen Wrench *5/32" Allen Wrench Wire Strippers

Pliers

*3/16" Allen Wrench Dry Cloth or Cotton Tipped Applicator for cleaning O-Ring grooves

Electrical Tape Tie wraps

*Note: A tool kit is available, components included are listed above.

NOTES:	