
Installation

Tools

Adjustable Wrench(2)

Teflon Tape

- Groove Joint Plier
- Phillips Screwdriver
- · Silicone Sealant
- · Basin Wrench



Maintenance

Your new faucet is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

- If you use soldering for the installation of the faucet, the seats, cartridges and washers will have to be removed before using flame. Otherwise, the warranty will be void on these parts.
- Protect your eyes with safety glass when cutting or soldering water supply lines.
- Cover your drain to avoid losing parts.

Important Points

Prior to beginning installation, turn off the cold and hot water lines and turn on the old faucet to release built-up pressure. When installing your new faucet, turn the connector nuts finger tight, then use a wrench to anchor the fitting and a second wrench to tighten the nut one additional turn. Connections that are too tight can compromise the integrity of the system. Wrap all threaded connections with a teflon tape. Always wrap in a clockwise direction.

Need Help

For Models: A-6550

Single Handle Lavatory Faucet





(571) 291-3484

www.allorausa.com

Preparation/Assembly

- 1. Shut off water supply before installation. Remove current faucet and clean and dry the sink surface the new faucet will be installed on.
- 2. For Deck Plate installation Place silicone sealant beneath the gasket (#21) and install faucet lines through the middle hole on the sink. See diagram for visual. (This faucet fits 3cm countertop.)

3. For single hole installation - Place silicone sealant beneath the base and install the faucet through the single faucet hole.

4. From underneath the sink, assemble screw (#14) to the base of faucet, and assemble rubber washer (#15) and clamp (#16) to screw (#14). Then assemble lock nut (#17) by basin wrench to screw (#14) to fix the faucet.

Preparation/Assembly


5. Connect the water supply lines to water supply valve (not included), and tighten it with adjustable wrench. DON'T OVER TIGHTEN!


Caution: make sure connect the hot and cold


supply lines to supply valves correctly.

Warning: The supply valves are not included,

please purchase them in plumbshop.

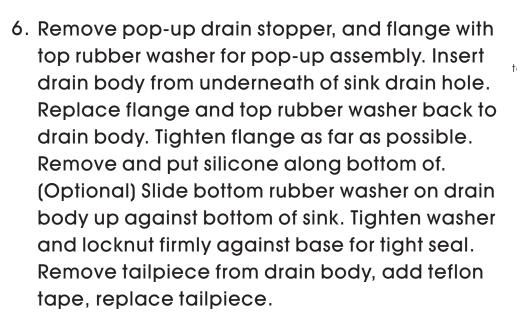

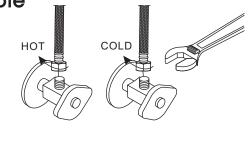

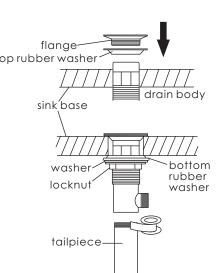

Step 1-4

Have a question? Just call (571) 291-3484 or send emails to customerservice@allorausa.com


Step 5-6

Have a question? Just call (571) 291-3484 or send emails to customerservice@allorausa.com


Preparation/Assembly

Parts Diagram / List

7. Replace pop-up drain stopper to drain body with o-ring in place, and align stopper hole with guide rod opening.

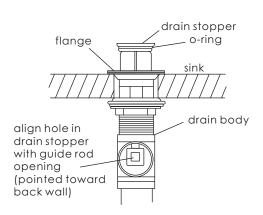

8. Remove rod guide nut and rod ball plastic gasket. Insert horizontal rod into drain body and through hole in drain stopper. Replace rod guide nut with rod ball plastic gasket and tighten it.

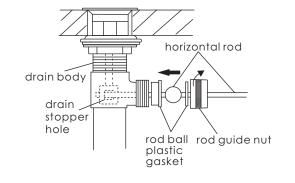

9. Place one end of the spring clip on the end of the horizontal rod. insert the ball rod through a hole on the lift rod strap, then slide the other end of the spring clip over the horizontal rod. See diagram for visual. Hint - Be sure to move the ball rod up and down a few times to make sure the drain stopper opens and closes before going to the next step.


on the faucet. Underneath the sink insert the lift rod through the lift rod strap. Tighten the thumb screw on the lift strap.


Please Note: Be sure to ensure there is enough

room to lift the lift rod up and down to open and close the pop-up drain.

Have a question? Just call (571) 291-3484 or send emails to

customerservice@allorausa.com

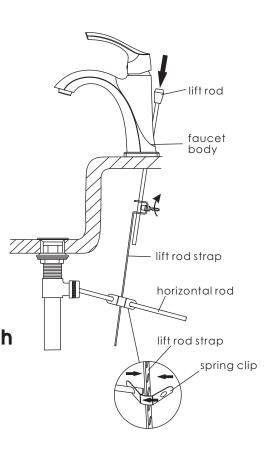

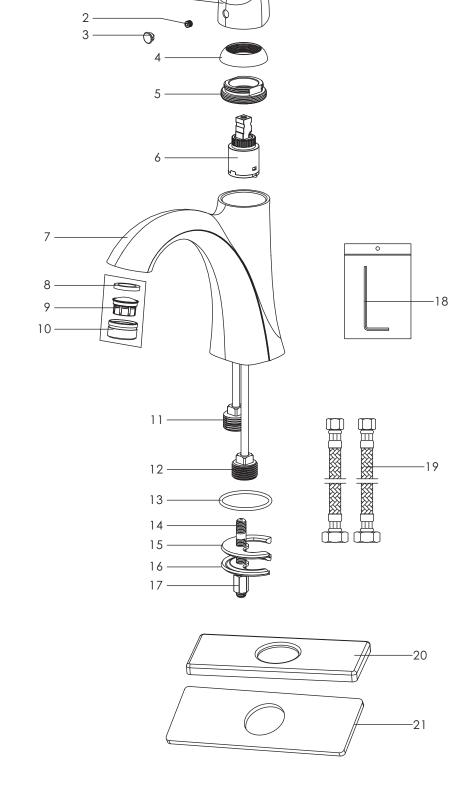

No.	Part Name
1	Handle
2	Screw
3	Index
4	Trim cap
5	Cartridge lock nut
6	Cartridge
7	Body
8	Washer
9	Aerator core
10	Aerator
11	Copper tube
12	Copper tube
13	O-ring
14	Screw
15	Rubber washer
16	Clamp
17	Lock nut
18	Hex wrench
19	Water supply lines
20	Deck plate
21	Gasket

Replacement Parts

Part No	Name
AL1-05	Medium Cartridge
AL4-09	Aerator
AL4-01	Hot/Cold Indicator



FAUCETS

FOR RESIDENTIAL INSTALLATIONS: ALLORAUSA warrants this product to be free from defects in materials or workmanship for as long as the original consumer purchaser owns this product. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available to ALLORAUSA for all warranty claims. This warranty is non transferable. It does not apply in the event of product damage due to the use of other than genuine ALLORAUSA replacement parts, installation error, abuse, misuse or improper care and maintenance (whether performed by a plumber, contractor, service provider or member of the purchaser's household). The warranty excludes damage due to aggressive air or water conditions, or harsh or abrasive cleaners and/or materials. ANY PART OR PRODUCT REPAIRED OR ALTERED IN ANY MANNER WITHOUT WRITTEN AUTHORIZATION FROM ALLORAUSA WILL VOID THE WARRANTY. YOU MUST HAVE THE FAUCET BOX.FOR COMMERCIAL INSTALLATIONS: For all industrial, commercial and business usage the warranty period is five years, from date of purchase and except for duration, all other aforementioned warranty terms apply. For both Residential and Commercial warranties, batteries are not included in the warranty.

ALLORAUSA will provide free of charge, at it's sole option, replacement part(s) or product (or if no longer available, a comparable product) to replace those which have proven defective in materials or workmanship. The warranty does not cover shipping cost of parts. This warranty does not cover labor charges incurred and/or damage sustained in installation, repair or replacement, nor incidental or consequential damages. This warranty is applicable only to ALLORAUSA faucets manufactured after June 1, 1996 and installed in the United States, Mexico and/or Canada.

THIS WARRANTY IS EXCLUSIVELY IN LIEU OF ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

This warranty gives the original consumer purchaser of an ALLORAUSA faucet specific legal rights which may vary from state to state or from province to province. In some states or provinces the exclusion or limitation of incidental or consequential damages is not allowed, so those exclusions may not apply to you.