



# Owner's Manual

F-MO063W

ΕN







QUESTIONS? PROBLEMS? MISSING PARTS? For FAQ, Manuals, Videos or Spare Parts, please visit www.the-mspa.com/support

PLEASE DO NOT RETURN THE PRODUCT TO THE STORE



## **ENTER THE WORLD OF MSPA**

Welcome,

Thank you for choosing MSpa and for your confidence in our brand. We believe that you will enjoy many benefits of using MSpa products for years to come.

To guide you in your initial MSpa experience, we are pleased to present you with this instruction manual. Please read this manual carefully before using the product for the first time.

We are delighted to welcome you to the MSpa family, and look forward to sharing with you the full spectrum of our expertise.

Enjoy your MSpa!







MSpa Set up videos



MSpa Service Center List



MSpa Owners Manual (Multi-language)

## CONTENT

| Safety precautions                    | 3  |
|---------------------------------------|----|
| Specifications                        | 7  |
| Product overview                      | 7  |
| First use and set-up preparation      | 9  |
| Spa set-up                            | 10 |
| ALL-IN-ONE control operation          | 12 |
| Vater maintaince and chemicals        | 13 |
| Orainage, cleaning and storage        | 16 |
| Disposal and environmental protection | 17 |
| Froubleshooting                       | 17 |
| MSPA limited warranty                 | 19 |

## IMPORTANT SAFETY INSTRUCTIONS

For your own safety and that of your product, make sure to follow the safety precautions below. Fail to follow the instruction may result in serious injury, property damage or death. Improper installation or operation will void the warranty.

## READ AND FOLLOW ALL INSTRUCTIONS

## **A** DANGER

**DANGER:** Risk of accidental drowning. Extreme caution must be exercised to prevent unauthorized access by

children. To avoid accidents, ensure that children can not use this spa unless they are supervised at all

times.

DANGER: Risk of injury.

a) Replace damaged cord immediately.

b) Do not bury cord.

c) Connect to a grounded, grounding type receptacle only.

DANGER: Risk of Injury. The suction fittings in this spa are sized to match the specific water flow created by the

pump. Should the need arise to replace the suction fittings or the pump, be sure that the flow rates are compatible. Never operate spa if the suction fittings are broken or missing. Never replace a suction

fitting with one rated less than the flow rate marked on the original suction fitting.

DANGER: Risk of Electric Shock. Install at least 5 feet (1.5 m) from all metal surfaces. As an alternative, a

spa may be installed within 5 feet of metal surfaces if each metal surface is permanently connected by a minimum 6 AWG solid copper conductor to the wire connector on the terminal

box that is provided for this purpose.

DANGER: Risk of Electric Shock. Do not permit any high voltage electric appliance, such as a light,

telephone, radio, or television, within 5 feet (1.5 m) of a spa.

## **WARNING**

WARNING: The spa only for use in single-family dwellings.

**WARNING:** Risk of electric shock. Insert the plug only to a properly grounded socket.

**WARNING:** The spa must be supplied by an isolating transformer or supplied through a ground-fault circuit

interrupter (GFCI) having a rated residual operating current not exceeding 30mA.

WARNING: GFCI must be tested before each use.

**WARNING:** If the supply cord is damaged, it must be replaced immediately by the manufacturer, its service agent or

similarly qualified person in order to avoid a hazard.

**WARNING:** To reduce the risk of electric shock, do not use extension cord to connect unit to electric supply; provide

a properly located receptacle.

**WARNING:** No part of the appliance is to be located above the bath during use.

WARNING: Parts containing live parts, except parts supplied with safety extra-low voltage not exceeding 12V, must

be inaccessible to a person in spa pool; Earthed appliance must be connected to the fixed receptacle which is permanently connected to fixed wiring. Parts incorporating electrical components, except

remote control devices, must be located or fixed so that they cannot fall into the spa pool.

**WARNING:** The plug of spa shall be more than 3.5m away from the pool.

**WARNING:** Spray head must not be used.

**WARNING:** The outlet of Spa must not be connected to any tap or fitting other than those specified.

**WARNING:** Electric installations should fulfill the requirements of local standards.

WARNING: To avoid the electric shock, do not use the spa when it is raining.

**WARNING:** To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.

**WARNING:** Water attracts children. Always have the Spa locked with its cover after each use.

**WARNING:** Do not bury cord. Locate cord to minimize abuse from lawn mowers, hedge trimmers, and other equipment.

**WARNING:** Pets should be kept away from spa to avoid damage.

**WARNING:** When the bubble function is going to be in function, make sure the cover of Spa must be opened first.

**WARNING:** Do not switch on if there is any possibility that the water in the spa is frozen.

**WARNING:** Use only approved accessories. Use of non-approved accessories could void the warranty.

**WARNING: RISK OF ELECTRIC SHOCK.** A wire connector is provided on this unit to connect a minimum 6 AWG solid copper conductor between this unit and any metal equipment, metal enclosures of electrical equipment, metal water pipe, or conduit within 5 feet (1.5 m) of the unit.

**WARNING: RISK OF ELECTRIC SHOCK.** Never operate any electrical appliance when in your spa or when your body is wet. Never place any electric appliance, such as a light, telephone, radio, or television, within 1.5m of spa. During pregnancy, soaking in hot water may cause damage to the fetus. Limit use to 10 minutes at a time.

**WARNING:** Do not expose spa under direct sunshine.

WARNING: This product is provided with a ground-fault circuit-interrupter in the plug. The GFCI must be tested before each use. With the product operating, open the service door. When the product stops operating, this merely indicates that the door is equipped with an electrical interlock. Next, push the test button on the GFCI and close the service door. The product should not operate. Now open the service door, push the reset button on the GFCI and close the service door. The product should now operate normally. When the product fails to operate in this manner, there is a ground current flowing indicating the possibility of an electric shock. Disconnect the power until the fault has been identified and corrected.

## TO REDUCE THE RISK OF INJURY:

- A. The water in a spa should never exceed 104°F (40°C). Water temperature between 100°F (38°C) and 104°F (40°C) are considered safe for a healthy adult. Lower water temperature is recommended for young children and when spa use exceeds 10 minutes.
- B. Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa water temperature to 100°F (38°C).
- C. Before entering a spa, the user should measure the water temperature with an accurate thermometer since the tolerance of water temperature regulating devices varies.
- D. The use of alcohol, drugs, or medication before or during spa use may lead to unconsciousness with the possibility of drowning.
- E. Obese person and person with a history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before use a spa.
- F. Person using medication should consult a physician before using a spa since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.

A green coloured terminal or a terminal marked G, GR, Ground, Grounding, or the symbol\* is located inside the electric box. To reduce the risk of electric shock, this terminal must be connected to the grounding means provided in the electric supply service panel with a continuous copper wire equivalent in size to the circuit conductors supplying this equipment.

\* IEC Publication 417, Symbol 5019.

At least two lugs marked "BONDING LUGS" are provided on the external surface or on inside the electric box. To reduce the risk of electric shock, connect the local common bonding grid in the area of the hot tub or spa to these terminals with an insulated or bare copper conductor not smaller than No. 6 AWG.

All field—installed metal components such as rails, ladders, drains or other similar hardware within 3 m of the spa or hot tub shall be bonded to the equipment grounding bus with copper conductors not smaller than No. 6 AWG.

## **SAVE THIS INSTRUCTIONS**

WARNING: CHILDREN SHOULD NOT USE SPAS OR HOT TUBS WITHOUT ADULT SUPERVISION.

WARNING: DO NOT USE SPAS OR HOT TUBS UNLESS ALL SUCTION GUARDS ARE INSTALLED TO

PREVENT BODY AND HAIR ENTRAPMENT.

WARNING: PEOPLE USING MEDICATIONS AND/OR HAVING AN ADVERSE MEDICAL HISTORY SHOULD

CONSULT A PHYSICIAN BEFORE USING A SPA OR HOT TUB.

WARNING: PEOPLE WITH INFECTIOUS DISEASES SHOULD NOT USE A SPA OR HOT TUB.

WARNING: TO AVOID INJURY EXERCISE CARE WHEN ENTERING OR EXITING THE SPA OR HOT TUB.

WARNING: DO NOT USE DRUGS OR ALCOHOL BEFORE OR DURING THE USE OF A SPA OR HOT TUB TO

AVOID UNCONSCIOUSNESS AND POSSIBLE DROWNING.

WARNING: PREGNANT OR POSSIBLY PREGNANT WOMEN SHOULD CONSULT A PHYSICIAN BEFORE

USING A SPA OR HOT TUB.

WARNING: WATER TEMPERATURE IN EXCESS OF 100°F(38°C) MAY BE INJURIOUS TO YOUR HEALTH.

WARNING: BEFORE ENTERING THE SPA OR HOT TUB MEASURE THE WATER TEMPERATURE WITH AN

ACCURATE THERMOMETER.

WARNING: DO NOT USE A SPA OR HOT TUB IMMEDIATELY FOLLOWING STRENUOUS EXERCISE.

WARNING: PROLONGED IMMERSION IN A SPA OR HOT TUB MAY BE INJURIOUS TO YOUR HEALTH.

WARNING: DO NOT PERMIT ELECTRIC APPLIANCES (SUCH AS A LIGHT, TELEPHONE, RADIO, OR

TELEVISION) WITHIN 1.5 M OF THIS SPA OR HOT TUB.

CAUTION: MAINTAIN WATER CHEMISTRY IN ACCORDANCE WITH FACTURER' S INSTRUCTION.

Hyperthermia occurs when the internal temperature of the body reaches a

level several degrees above the normal body temperature of 98.6°F (37°C).

The symptoms of hyperthermia include drowsiness, lethargy, and an increase in the internal temperature of the body. The effects of hyperthermia include

- (a) unawareness of impending hazard;
- (b) failure to perceive heat:
- (c) failure to recognize the need to exit spa;
- (d) physical inability to exit spa;
- (e) fetal damage in pregnant women;

(f) unconsciousness and danger of drowning.

WARNING: THE USE OF ALCOHOL OR DRUGS CAN GREATLY INCREASE THE RISK OF FATAL

HYPERTHERMIA IN HOT TUBS AND SPAS

**WARNING:** TO REDUCE THE RISK OF INJURY: Never pour water which higher than 104°F (40°C) into the spa

pool directly.

**WARNING:** The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia.

Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F (37°C). The symptoms of hyperthermia include an increase in the internal temperature of the body, dizziness, lethargy, drowsi-ness, and fainting, The effects of hyperthermia include failure to perceive heat; failure to recognize the need to exit spa; unawareness of impending hazard; fetal damage in pregnant women; physical inability to exit the spa; and

unconsciousness resulting in the danger of drowning.

**WARNING: Warning Label Instruction** 

Please carefully read the warning label at the first time you are going to use MSpa.

Please post this warning label on where is at a distance to MSpa within 1.5m/5', people in spa can see it clearly.

Please retain this information for future reference.

If the warning label is damaged or missing, please contact your country MSpa service center to get a new one.

## **A** CAUTION

#### CONSULT YOUR PHYSICIAN FOR RECOMMENDATIONS.

**CAUTION:** The spa should not be setup or left out in temperature lower than 39°F (4°C).

**CAUTION:** Do not use the spa alone.

**CAUTION:** People with infectious diseases should not use a spa.

**CAUTION:** Do not use the spa immediately following strenuous exercise.

**CAUTION:** Always enter and exit the spa slowly and cautiously. Wet surfaces are slippery.

**CAUTION:** To avoid damage to the pump, the spa must never be operated unless the spa is filled with water.

**CAUTION:** Immediately leave spa if uncomfortable or sleepy.

**CAUTION:** Never add water to chemicals. Always add chemicals to water to avoid strong fumes or violent

reactions that may result in hazardous chemical spray.

**CAUTION:** Place only on surface that can withstand the floor loading requirement of your Spa.

**NOTE:** Please examine equipment before use. Notify after service center listed on this manual for any damaged or missing parts at the time of purchase. Verify that the equipment components represent the

models that you had intended to purchase.


## **SPECIFICATIONS**

| BUBBLE SPA          |       |                     |                     |                    |                   |             |                    |                      |
|---------------------|-------|---------------------|---------------------|--------------------|-------------------|-------------|--------------------|----------------------|
| Model No.<br>/ Code | Shape | Seating<br>Capacity | Water<br>Capacity   | Outside Dimensions | Inside Dimensions | Height      | Weight             | Temp Increasing Rate |
| F-MO063W<br>Mono    | Round | 6 <b>†</b>          | 245 Gal.<br>(930 L) | Ø68" (1.73 m)      | Ø64" (1.63 m)     | 26" (0.65m) | 80.9 lbs (36.7 kg) | 1.8-2.7 °F/h         |

| Control System Specs       |  |
|----------------------------|--|
| Control System             | AC 110-120V/60Hz, 12A                                  |
| Heater                     | 675W x 2   |
| Massage Air Blower         | 3 Levels (Level 1: 300W, Level 2: 450W, Level 3: 700W) |
| Filter Pump                | 1800L/hr   |
| Integrated Ozone Generator | 5.5W, 30-50mg/hr                                       |
| UVC Radiant flux           | 2000uW   |
| Top Lid                    | Rhino-Tech™ reinforced PVC                             |
| Liner Material             | Drop-stitch material                                   |

# PRODUCT OVERVIEW

## Packaging content – MONO

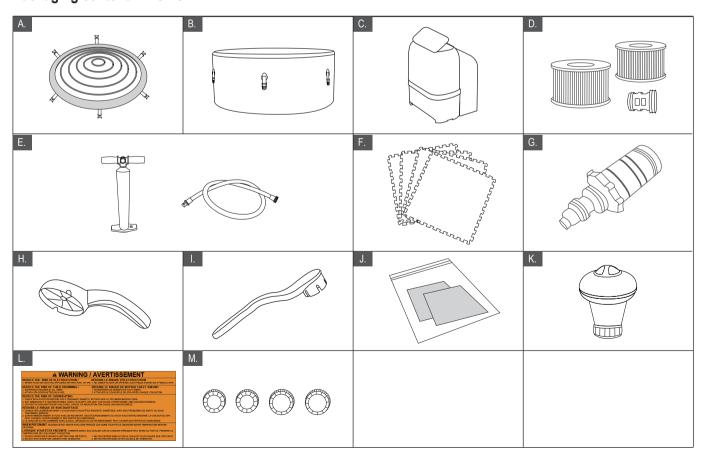

| REF. NO. | PARTS DESCRIPTION                                |
|----------|--|
| Α        | SPA cover with buckle and inflatable bladder     |
| В        | Spa tub  |
| С        | All-in-one control box + U-shape cover           |
| D        | Filter cartridge * 2 + Filter cartridge base * 1 |
| E        | 23.5" high-pressure pump, inflation hose         |
| F        | Heat-preservation foam mat                       |
| G        | Garden hose adaptor                              |
| Н        | Wrench for inlet and outlet                      |
| I        | Wrench for inflation valve                       |
| J        | Repair kit                                       |
| K        | Chemical Dispenser for 1" tablets                |
| L        | Warning label                                    |
| М        | Water / air channel stoppers                     |

## NOTE:

The drawings are for reference only. Actual products may vary. Not to scale. Use accessories exclusively provided by MSpa for safety reasons. When ordering parts, be sure to quote the MSpa model number and description.

## FIRST USE AND SETUP PREPARATION

### Site preparation and requirements

- The spa can be installed indoors or outdoors in around 10 minutes by one or more persons. For household use only.
- The spa must be set up on a flat, smooth and supporting surface that is able to bear the maximum load of the filled spa with the listed maximum number
  of occupants. Check with a qualified contractor or structural engineer to verify the requirement.
- Make sure the area is free of sharp objects under or around the spa. Uneven or unsound surface can damage the spa and void your warranty. Level the surface before filling the spa with water.
- Provide an adequate drainage system around the spa to deal with overflow water and splashes. Provide a convenient water supply for filling the spa
  that complies with any local water regulations, and whose parameters shall be adjusted with the requirements of the water treatment section.
- Make sure there is enough clearance around the spa for full access to the equipment for maintenance and/or servicing.
- Consider positioning the spa to minimize noise disturbance as much as possible.

## Additional requirements for indoor installation

- Humidity is a natural side effect of indoor spa installation. The room must be properly ventilated to allow moisture to escape. Install a ventilating system
  to prevent excess condensation moisture in the room.
- Ensure the spa can be removed from the building without destroying any part of the built structure.
- Consider any local regulations on these topics.
- Consider not to install the spa on carpet or other floor materials that promote or harbor moisture and bacterial, or that could be affected by water treatment chemicals used in the spa.

### Additional requirements for outdoor installation

- Do not set up the spa on grass or dirt, as this will increase the amount of debris entering the spa and will damage the floor.
- To ensure a longer lifespan, do not leave the spa tub exposed to direct sunlight.
- Always keep the manometer within the yellow section when using the spa at a temperature higher than 68°F (20°C) or when exposing it to sunlight for a short time.
- Do not install or use the spa outdoors at a temperature lower than 39°F (4°C). Do not use the spa when the water inside the circulation system, pump, or pipework is frozen. Put a heat preservation mat between the base of the spa and the ground to prevent heat loss from the bottom of the spa and to provide better heat retention.
- Consider local environmental conditions, such as ground water and risk of frost.

## **GFCI Testing**

## **A** WARNING


Risk of electric shock: This product is provided with a GFCI located at the end of the power cord. The GFCI must be tested before each use. Do not use the spa if the GFCI does not function properly.


Disconnect the power cord until the fault has been identified and corrected. Contact a licensed electrician to correct the fault. There are no serviceable parts inside the GFCI. Opening the GFCI will void the warranty.

- 1. Plug the machine into the mains.
- 2. The GFCI plug might automatically reseted. If the RESET indicator is not red, press the RESET button.
- 3. Press the TEST button on the GFCI. The GFCI indicator should shut off. If the GFCI indicator does not turn off, the GFCI is faulty. Do not use the spa. Contact a qualified electrician to correct the fault.
- 4. Press the RESET button on the GFCI again. The indicator should turn red. If yes, the spa is ready for use.





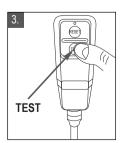

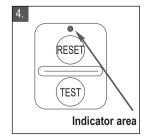

## Spa Control Unit Connected External Equipotential Bonding Conductors

A qualified electrician should wire the spa control unit to the household equipotential terminal using a minimum 1.5mm² solid copper conductor

**NOTE:** Move the entire package to the selected site. Do not drag the spa tub across the ground as this can cause damage and leakage. Open the carton carefully as this can be used to store the spa over long periods or when not in use.

**NOTE:** Lay out all the parts on the ground and make sure they are all accounted for. For missing or damaged parts contact the appropriate MSpa after-sales service center.

## **SPA SETUP**


## **ASSEMBLY**


## **Spa Control Unit Assembly**


1. Take out the foam mat and spread it over the cleared area. Then spread out the spa tub over the ground mat and point the connection tubes towards the corner where you intend to set up your external control box.

- 2. Ensure all the rubber sealing rings are in place.
- 3. Connect the control box to the spa by lining up the numbers (1 to 1, 2 to 2 and 3 to 3). Securely hand-tighten the connectors.

NOTE: Do not use tools to tighten.

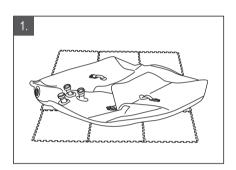

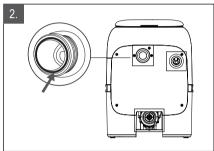

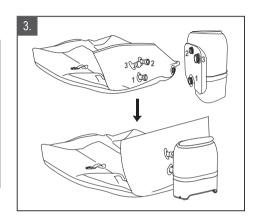


## Inflating the Spa Tub Wall


- 1. Attach the pump hose to the hand pump and tighten it securely.
- 2. Open the valve cap by twisting it counter-clockwise. Ensure the valve is clear from debris, sand, or dirt before releasing.
- 3. Push the valve button in and turn it counter-clockwise 90 degrees so it pops up and is in the "OUT" position.
- 4. Connect the pump nozzle to the valve receptacle on the spa body, and tighten it clockwise.
- 5. Start pumping air into the SPA tub by sliding the pump piston up and down, inflate the spa to 12 PSI (only the spa tub, not the bladder).


NOTE: Gauge will not respond until reaching 4psi. Just keep pumping for 2-3 minutes!


6. Attach the U-shape cover to the spa control box.


NOTE: The U-shape cover must be installed before using the spa. CAUTION: Do not sit on, lean on, cover or place any objects over the spa control unit.

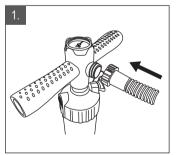


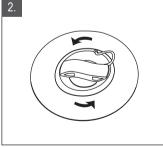

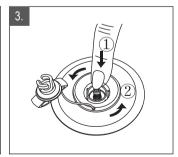

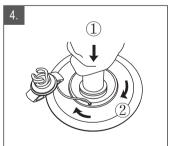

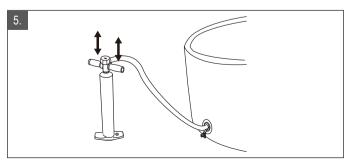


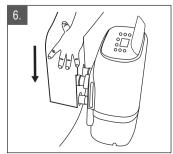


### Inflating the Spa Air Bladder

- 1. Open the inflation valve and insert the inflation hose into the valve.
- 2. Slide the pump piston up and down to inflate until it is firm to the touch but not hard.
- 3. Disconnect the inflation hose from the valve, then close and push in the inflation valve.

**NOTE:** If you need to add some air to the spa tub wall or air bladder after they have been set up, please see the "Inflating the spa tub wall" section above or refer to this "Inflating the spa air bladder" section again. The air bladder is preinstalled inside the spa cover in MONO models. If it needs to be reinstalled, place the deflated air bladder inside the spa cover lip before inflating the bladder.

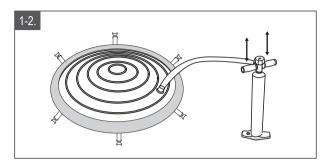

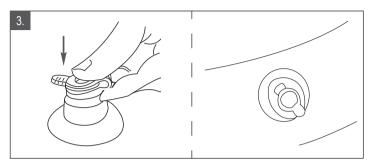


## Installing the Filter Cartridge

- 1. Attach the filter cartridge base to the spa tub inlet grid (upper position) and turn it slightly to secure. **NOTE:** The filter cartridge base is designed to be screwed on and off. Never exert force as this could cause damage.
- 2. Attach the filter cartridge to the base.

**NOTE:** Inflate the spa tub first before installing the filter cartridge.

**NOTE:** Always use a filter cartridge when the spa is in use and filled with water.

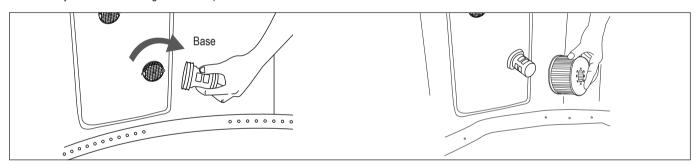

## Filling the Spa with Water

- 1. Before filling with water ensure the bottom drain valve cap is securely closed.
- 2. Fill the spa tub with fresh water to a level between MIN and MAX marked on the inside of the spa wall.


#### WARNING:

Do not overfill the spa.

Do not operate the spa until the water reaches the MIN mark.

Never move the spa tub when there is water inside it and/or when the control box is attached, as this may damage the spa or control box.


Never pour water with a temperature higher than 104°F (40 °C) into the spa directly. We recommend that you fill the spa tub with lukewarm water to heat it more quickly and save energy. Use tap water for spa filling to minimize the influence of unwanted content, such as minerals.

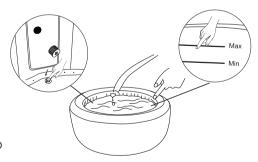


## **Heating the Water**

- 1. Place the spa air bladder and spa cover over the spa tub, and make sure the spa cover buckles are locked.
- 2. Ensure the spa is plugged into an electrical socket and see the "ALL-IN-ONE CONTROL PANEL" section for further details on operation.

NOTE: Always keep the spa cover on to minimize heat loss when heating the water.



## **ALL-IN-ONE CONTROL PANEL**

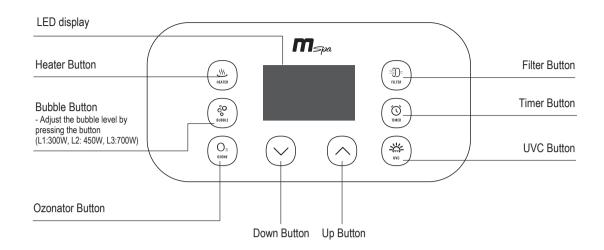



#### LED display

Once powered-up, press the RESET on the GFCI. The LED displays the current water temperature automatically.

NOTE: The actual water temperature may vary from the temperature displayed on the LED screen by as much as approximately 33.8°F (1°C).



#### **HEATING**

1. Press the HEATER button to turn the heating system on/off. The HEATER icon shown on the LED display means the heating system is activated. The flashing HEATER icon means the spa is at the set temperature and the heating system is at rest.

68-104°F (20-40°C)

2. Pressing the Oup or Output Down button to adjust the water to the desired temperature setting from 68°F to 104°F (from 20°C to 40°C). The new and desired temperature setting will remain on the LED display for 3 seconds to confirm the new value.

NOTE: The default temperature is 104°F (40°C).

**NOTE:** If the heating system is turned on, the filtration system will automatically start.

NOTE: When the water temperature is below 33.8°F (1°C), the anti-icing system will be activated automatically to heat the water to 37.4°F (3°C).

#### IMPORTANT: The following conditions will lead to slow water heating

- An ambient temperature lower than 50°F (10°C).
- An outdoor wind speed above 3.5-5.4m/s (8-12mph).
- If the air bubble function is activated when the heater is on.
- If the spa cover is not properly in place when the heater is on.



### **FILTRATION**

Press the ( D) FILTER button to turn the function on/off. The FILTER icon shown on the LED display means the function is activated.

NOTE: The filtration system will automatically start when the heating, Ozone or UVC sanitizing system is activated.

NOTE: After turning off the heating system, the filtration system will automatically stop in 30 seconds.

**Filter Cartridge Cleaning Reminder:** When the FILTER icon flashes continuously, the filter cartridge must be cleaned or replaced. Once this has been done, press the FILTER button for 3 seconds to reset the reminder.

Auto-filtration: When the spa is in stand-by mode, the filtration system will operate automatically for 60 minutes every 8 hours.



## **BUBBLE MASSAGE**

Press the (2) BUBBLE button to turn the function on; hold down the BUBBLE button for 3 seconds to turn the function off.

The bubble setting can be adjusted to three different levels. The default setting is at level 2 \_\_\_ (450W). Press the **BUBBLE** button to switch the setting to level 3 \_\_\_ (700W). Press it again to switch to level 1 \_\_ (300W).

**IMPORTANT:** Do not turn on the massage system when the cover is attached. Air can accumulate inside the spa and cause irreparable damage and bodily harm.

**NOTE:** The bubbling massage function will shut down automatically after every 20 minutes of operation as a safety precaution. This can be reactivated after 10 minutes by pressing the BUBBLE button again.



#### **HEATING TIMER**

To set the number of hours FROM NOW when the heater will activate: 1. Press the ( TIMER button to enter pre-setting mode. The TIMER icon shown on the LED display.

2. Pressing the (\infty UP or \infty DOWN button will cause the LED to flash. While it is flashing, you can adjust the number of hours before heater activation (from 1 to 99 hours). The desired timer setting will remain on the LED display for 3 seconds to confirm the value.

To modify the timer setting: Press the Timer button again and use the UP or the DOWN button to adjust.

Cancel the setting: Press the TIMER button for 3 seconds.

NOTE: Activating the heating system or rebooting the spa will cancel the timer setting.



#### **UVC SANITIZER**

Press the (\*) **UVC** button to turn the UVC sanitizing system on/off. The UVC icon shown on the LED display means the UVC sanitizing system is activated.

NOTE: The UVC emitter is built inside the control box. Therefore, the function can be turned on at any time, even with people inside the spa.



#### **OZONE**

Press the (2) **OZONE** button to turn the function on / off. The Ozone icon shown on the LED display means the function is activated. The Ozonator will shut down automatically after operating for 2 hours.

NOTE: For bathers' safety concern, please do not soak in the spa when the Ozone is on. The Ozone function cannot be turned on when BUBBLE function is on. We suggest to turn on the function after using the spa.

#### **SAFETY LOCK**

Press the (>) UP and (>) DOWN buttons at the same time for 3 seconds to lock/unlock the controller. In safety lock mode, the controller is disabled and the spa retains all previous settings.



#### Celsius/Fahrenheit Toggle Button


The temperature can be displayed in either Celsius or Fahrenheit. Press the ( $\vee$ ) **DOWN** button for 3 seconds to toggle between the two options.


## WATER MAINTENANCE AND CHEMICALS


CAUTION: ALWAYS ENSURE THE SPA IS UNPLUGGED BEFORE BEGINNING ANY MAINTENANCE WORK TO AVOID THE RISK OF INJURY OR DEATH.

#### FILTER CARTRIDGE MAINTENANCE

1. Inspect and clean the filter cartridge gently after each use. Follow the steps below:

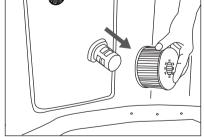

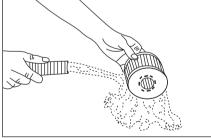

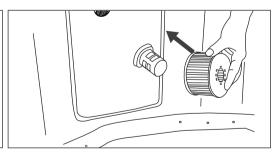


NOTE: Change the filter cartridge every 3-5 days, or if the filter cartridge remains soiled and discolored.

NOTE: When the spa is filled with water, there should always be a filter cartridge installed on the base.

NOTE: Turn off all the functions before changing or cleaning the filter cartridge.

2. If the spa's inlet or outlet becomes clogged with dirt, use the wrench to unscrew the cap and then clean as necessary.

NOTE: Before unscrewing the part, make sure the spa is empty. Never unscrew it when the spa is filled with water!



#### **SPA WATER**

- 1. Change the spa water every 3-5 days depending on use. If dirt is visible in the water or if the water becomes cloudy and the correct water chemistry does not clear it up, change the water and clean the spa tub. See the "Cleaning, draining and storage" section for instructions.
- 2. We recommend taking a shower before using the spa, as cosmetic products, lotions and other residues on the skin can quickly degrade the water quality.
- 3. When the spa is not in use, cover it with the buckle cover to prevent pollution.
- 4. Use spa chemicals to maintain the proper water conditions. Spa damage resulting from the misuse of chemicals or the mismanagement of spa water is not covered by the warranty. Consult with your local spa or pool retailer for more information on chemical use.

#### **Water Sanitation**

The spa owner must regularly check and keep the spa water sanitized with scheduled maintenance (daily, if necessary). Adding sanitizer or other chemicals will control bacteria and the reproduction of viruses in the spa water. Maintaining the correct water balance through the appropriate use of sanitizers is the most important factor in maximizing the life and appearance of the spa and ensuring clean, healthy and safe water.

Adopting the proper technique is important for testing and treating the spa water. Contact your spa professional if you have any questions on chemicals, sanitizers, test kits or test procedures.

#### **Water Balance**

Follow the instructions below to maintain your spa water.

| PARAMETER             | TEST FREQUENCY | CORRECT LEVEL  |
|-----------------------|----------------|--|
| рН                    | Daily          | 7.2-7.6 when using Chlorine;<br>7.2-7.8 when using Bromine |
| Free Chlorine         | Daily          | 3-5 ppm  |
| Bromine residual      | Daily          | 2-4 ppm  |
| Total Alkalinity (TA) | Weekly         | 80-120 ppm   |
| Total Hardness (TH)   | Weekly         | 200-500 ppm  |

#### NOTE


- A low pH will damage the spa tub and pump. Any damage resulting from a chemical imbalance will void the warranty.
- A high pH (hard water) will result in white coagulations inside the filter pump, which may lead to pump damage.

#### **Water Treatment:**

- It is good practice with an existing spa to keep all air jets open and valves closed to allow chemically treated water to flush through all pipework.
- Always follow the chemical manufacturer's directions, and the health and hazard warning.
- Never mix chemicals together. Add the chemicals to the spa water separately. Thoroughly dissolve each chemical before adding it to the water.
- Please note that chlorine and bromine products should never be mixed. This is extremely dangerous. If you usually use chlorine-based products and
  you want to switch to bromine-based products, or vice versa, it is essential that you change the spa water first.
- Do not add chemicals if the spa is occupied. This can cause skin or eye irritation.
- Do not overuse chemicals or use concentrated chlorine. This can damage the spa tub and cause potential hazard to your skin. Improper chemical use
  will void the warranty.

### **Floating Dispenser**

Your spa comes with a standard chemical dispenser: This dispenser only applies to 1" tablet. Do not pour liquid or granules into the dispenser.



Rotate the upper cap counter-clockwise until two arrows meet. Remove the cap.



Put in chemical tablets. Please refer to the package or manual of the chemical you purchased for proper dosage.



Rotate the upper cap clockwise.
Adjust the dosage by rotating the bottom cover to open or close the dispenser holes.




Put the dispenser in the spa. Make sure the filter pump is running during the sanitizing process.


## DRAINAGE, CLEANING AND STORAGE

#### Spa Drainage


- 1. Turn off all the functions.
- 2. Connect the drain valve adaptor to a garden hose and point the other end of the garden hose to a suitable draining area.
- 3. Remove the drain valve cap from the outside of the spa tub and attach the drain valve adaptor to the drain valve.
- 4. On the inside of the spa tub, open the drain valve cap. Water will start flowing out from the garden hose.
- 5. When the water stops draining, lift the spa tub wall from the side opposite the drain, directing any remaining water to the drain and emptying the spa completely.
- 6. Press the BUBBLE button to dry the spa pool.
- 7. Disassemble the control box. Pour out any water from the piping system.
- 8. Use a clean towel to wipe up any remaining water and moisture on the spa tub and spa control unit. Ensure the spa tub and spa control unit are thoroughly dried.

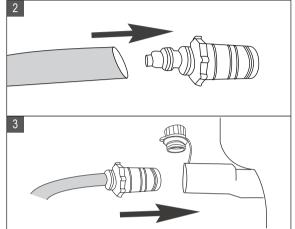



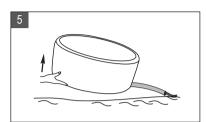








## Cleaning The Spa Tub

If dirt is visible in the water or if the water becomes cloudy and the correct water chemistry does not clear it up, change the water and clean the spa tub. See the "Spa tub drainage" section on how to drain the spa. While empty, clean and/or replace the filter cartridge. Use a sponge and mild soap solution to wipe away any soil or stains on the inside of the spa wall. Rinse thoroughly before refilling with clean water.

IMPORTANT: Do not use steel wool, hard brushes or abrasive cleaners.

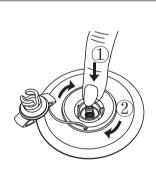

### **Deflation Instructions**

#### Spa deflation

- 1. Open the valve cap by twisting it counter-clockwise. Ensure the valve is clear from debris, sand, or dirt before releasing
- 2. Push the valve button in and turn it clockwise to lock it in the DOWN position.
- 3. Once deflation is completed, re-place the cap.

#### **Spa Bladder Deflation**

- 1. Open the valve cap to deflate the bladder. For quick deflation, insert the straw (included in the repair kit) into the valve.
- 2. Once the deflation is completed, re-place the cap back.


## Spa Tub and Air Bladder Repair

Use the enclosed repair patch to repair any puncture:

- 1. Clean and dry the area to be repaired thoroughly
- 2. Apply the glue to the PVC patch and quickly attach it onto the damaged surface. (Glue is not included)
- 3. Smooth the surface to remove any air bubbles and allow it to dry for 5-10 minutes

NOTE: Glue is not included.




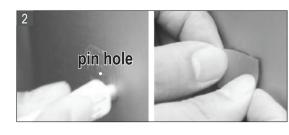



## How to fix a leaking valve


### A. Try to tighten the valve

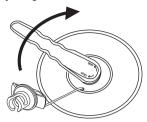


- 1. Inflate your spa to the max air pressure
- 2. Insert your valve wrench into the valve and turn the wrench clockwise to tighten the valve onto the spa


#### B. Re-install or replace the valve



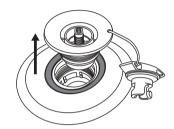

- 1. Completely deflate your spa
- 2. Remove the dust cap, insert the valve wrench into the valve and turn counter-clockwise to remove the valve

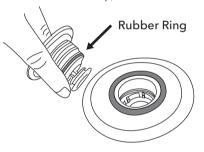

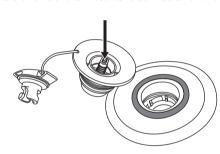

- 3. Check the rubber ring to make sure that it is in the correct position, secured tightly around the valve, and check that there is no debris in the way
- 4. Ensure that the pin spring is functioning properly and that there are no cracks along the edges

## Water Outlet & Inlet Cap And Air Inlet Cap Instructions


For Spa models with external control box, the following caps are offered in the repair kit:



1. Air inlet cap x 2pcs



2. Water outlet & inlet cap x 2pcs

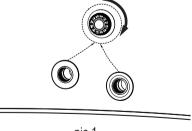


pic 1

# These caps are used to prevent water leakage when taking off the control box without draining the water. Please refer to below instructions:

- 1. Use the wrench to take off the water outlet and inlet covers from the spa tub inner wall, then screw the water outlet & inlet caps on and tighten. (pic 1)
- 2. Separate the control box and spa tub by screwing off connection nuts.
- 3. Then screw the air inlet cap onto air pipe and tighten. Please make sure the gasket is on its place to avoid water leakage. (pic 2)


## NOTE:

- 1. Please make sure to unplug the power pack from the electrical receptacle before above actions.
- 2. In order to ensure proper work, please take off all caps when re-installing the control box.

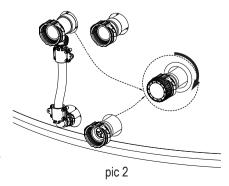

## Storage and Preparation for Future Use

- 1. Drain and clean the spa by following the "Drainage" and "Spa Cleaning" sections.
- 2. Refer to the instructions to deflate the spa tub and air bladder.
- 3. Make sure all the spa components and accessories are thoroughly clean and dry before storage. Air-dry the spa tub in the mild sun for an hour before folding.
- 4. Fold the spa tub loosely and avoid any sharp corners to prevent damage or leakage to the spa liner.
- 5. Prepare new additional cartridge for next time use.
- Store the spa and accessories in a dry, temperature-controlled environment, between 32°F - 104°F (0°C and 40°C). We recommend storing the spa with desiccant.
- 7. The original packaging is recommended for storage.
- 8. After long-term storage, fill the spa with clean water and sanitizer, and turn on the FILTER for at least 1 hour before use.

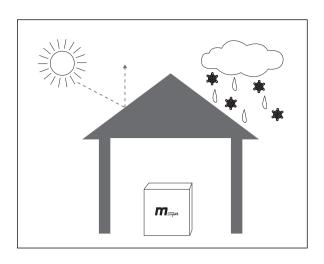

## **DISPOSAL AND ENVIRONMENTAL PROTECTION**



This marking indicates that the product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle the product responsibly to promote the sustainable reuse of material resources. Information on disposal can be obtained from your local authorities.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased for environmentally safe recycling.

## **TROUBLESHOOTING**


### **ERROR CODE CHART**

| LED READING | CAUSE  | SOLUTION  |  |  |
|-------------|--|---|--|--|
| / 888 / EEP | Signal wire is loose                                       | Contact local MSpa Service Center                     |  |  |
|             | Communication failed                                       | Contact local MSpa Service Center                     |  |  |
| F0          | Water or ambient temperature is below 32°F (0°C)           | 01 11 1   |  |  |
|             | or exceeds 122°F (50°C)                                    | Change the water                                      |  |  |
|             | Temperature sensor failure                                 | Contact local MSpa Service Center                     |  |  |
| F1          | F1 immediately shows after pressing FILTER, HEATING or UVC | Clean the parts and tubes that the water goes through |  |  |
|             |  | Add more water to the minimum line                    |  |  |
|             | F1 shows 15s after pressing FILTER, HEATING or UVC         | Clean the parts and tubes that water goes through     |  |  |
|             |  | Contact local MSpa Service Center                     |  |  |

| PROBLEM                         | CAUSE   | SOLUTION  |  |  |
|---------------------------------|---|---|--|--|
| NO DISPLAY ON THE CONTROL PANEL | Power socket failure                                | Change a socket or repair the socket before use   |  |  |
|                                 | GFCI is off   | Reset the GFCI by following the GFCI Testing section  |  |  |
|                                 | Press the Reset button, controller is not displayed | Contact local MSpa Service Center   |  |  |
|                                 | GFCI broken   | Contact local MSpa Service Center   |  |  |
| 224 1 5 1/(1)2                  | Spa in&outlet connection not securely tight         | Tighten the in&outlet connection  |  |  |
| SPA LEAKING                     | Drainage valve is not closed completely             | etely Close the drainage valve. Contact the MSpa Service Center, if spa is still leaking  |  |  |
|                                 | Water leaks from the spa pool body                  | Repair the leaking hole/split with the repair kit material  |  |  |
|                                 | Temperature set too low                             | Set a higher temperature  |  |  |
| NOTUEATING                      | Dirty filter cartridge                              | Clean or replace the filter cartridge   |  |  |
| NOT HEATING<br>PROPERLY         | Water level is not at the minimum water line        | Add more water to the minimum line  |  |  |
|                                 | Heater failure                                      | Contact local MSpa Service Center   |  |  |
|                                 | Filter pump DOES NOT WORK                           | Refer to the "FILTER PUMP DOES NOT WORK" section  |  |  |
|                                 | Air valve is loose                                  | Make sure the valve is screwed tightly. Replace the valve if necessary. Inflate the spa to 12 PSI.  |  |  |
| SPA LOSES AIR                   | Hole or split on the spa tub                        | Fill a squirt bottle with soapy water and spray on the seams. If there is a leak, small bubbles will come out. When you have located the leak, clean and dry the leaking area, then use the repair patch supplied with your spa. Check the repair section on P15. |  |  |
|                                 | Water has been used for long period of time         | Change the water  |  |  |
| WATER NOT CLEAN                 | Insufficient filteration time                       | Extend the filtration time  |  |  |
|                                 | Dirty filter cartridge                              | Clean or replace the filter cartridge in time   |  |  |
|                                 | Improper water maintenance                          | Refer to the chemical manufacturer's instructions   |  |  |
| SPA TUB IN AN<br>ABNORMAL SHAPE | Extra air pressure due to strong sunlight           | Check the air pressure and release air if necessary  During hot weather, it is advisable to check whether some air should be released to avoid any possible damage to the spa pool.   |  |  |
|                                 | Auto-off 10 minutes                                 | Wait for 10 minutes and turn on the Bubble button again   |  |  |
| NO BUBBLE                       | Internal parts damaged                              | Contact local MSpa Service Center   |  |  |
|                                 | One-way valve broken                                | Contact local MSpa Service Center   |  |  |
| FILTER PUMP DOES<br>NOT WORK    | Filter cartridge clogged by dirt or other objects   | Clean or replace the filter cartridge   |  |  |
|                                 | Filter system failure                               | Contact local MSpa Service Center   |  |  |
|                                 | Water level is below the minimum water line         | Add water above the minimum line  |  |  |
| OZONATOR FAILURE                | Internal parts damaged                              | Contact local MSpa Service Center   |  |  |
|                                 | Filter pump does not work                           | Refer to "FILTER PUMP DOES NOT WORK" section  |  |  |

Where can I find the serial number?

At the back of control box. Or at the foot of the control box.

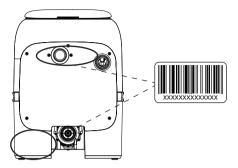

How can I find my service contact?

- \* Scan the QR code below or visit https://www.the-mspa.com/after-sales.
- 1. Input the serial number of your spa.
- 2. The corresponding service provider will be displayed.



\* You can find the contact information of local service center on the back of the warranty card

CONTACT YOUR LOCAL MSPA DEALER OR SERVICE CENTER FOR ANY PRODUCT-RELATED QUESTIONS OR PROBLEMS.

#### **MSPA LIMITED WARRANTY**

MSpa® has been manufactured with reliability and simplicity in mind. All products have been inspected and found free of defects prior to leaving the factory.

MSpa guarantees this product against any defects identified in the material or workmanship for a period of:

Spa pool liner – twelve (12) months from the original date of purchase.

Electrical parts (control box) - twelve (12) months from the original date of purchase.

Spa rigid wall frames - twenty-four (24) months from the original date of purchase.

The warranty period begins on the date of purchase and MSpa requires presentation of the original proof of purchase to ascertain the date. During the warranty period, MSpa will either repair or replace, at its discretion, any defective products. Replacement products or repaired parts will be warranted for only the unexpired portion of the original warranty.

#### **Shipping Policy**

Consumers are responsible for the shipping/freight when return the defect parts to MSpa authorized service center or ORPC-Oriental Recreational Products (Shanghai) Co., Ltd.

#### **Warranty Policy**

- This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or any other reason beyond MSpa's reasonable control, included but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance; connection to an improper power supply; chemical water damage, loss of pool water, unauthorized product modification or repair; use for commercial purposes; fire, lightning, flood or other external causes.
- This warranty is valid only in the country of purchase in such countries where MSpa sells and services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Where the cost of repairs or replacement is not covered by this warranty, MSpa will advise the owners and the cost shall be charged to the owner.
- This warranty only applies to the original purchaser and terminates upon any transfer of ownership.
- All repairs for which warranty claims are made must be pre-authorized by ORPC through an accredited distributor or agent provided that the
  defective part be
  - returned to the distributor or agent Transportation Prepaid, if requested.
- The authorized selling dealer is responsible for all in-field service work carried out on your MSpa product. ORPC will not be liable for the cost of any workmanship carried out by an unauthorized service person.
- Products marked with both MSpa and importer are governed exclusively by the warranty provided by the importer.

### **Warranty Registration**

Please Always keep the purchase receipt and warranty card in case of a future warranty inquiry. All claims must be submitted to an MSpa authorized dealer or service partner. It is essential that all submitted claims provide all the necessary information, including Customer name, Purchase receipt, Serial No., Product No., Problem, and Parts requested.