



Continuous Band Sealer Instruction Manual

Distributed By:

Version 2.8
Last Updated: 2/14/2023

Copyright © 2013 by Stephanie Hwang

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law. For permission requests, write to the publisher, addressed "Attention: Permissions Coordinator," at the address below.

Sealer Sales, Inc.
8820 Baird Avenue
Northridge, Ca 91324
www.sealersales.com

Printed in the United States of America

General Information

Thank you for purchasing our CBS-880 continuous band sealer.

This owner's manual contains information relating to your band sealer machine. The manual will provide you with basic information concerning both operation and maintenance of your new machine. Please read it carefully as failure to do so may result in bodily injury and/or damage to the equipment.

Please fill in the information below. You will find the information on the machine identification plate. You will need this information when ordering replacement parts or making technical inquiries.

No part of this manual may be duplicated, reproduced, stored in a retrieval system, translated, transcribed, or transmitted in any form without the express prior written permission of Sealer Sales.

CBS-880 EQUIPMENT INFORMATION

❖ Model #

❖ Serial #

❖ Purchase Date:

❖ Reference # (found on packing slip)

❖ Owner:

Table of Contents

Safety Instructions	1
Introduction.....	3
Warranty.....	7
Operating your Band Sealer.....	10
Vertical Configuration Set-up.....	21
Maintenance.....	26
Parts Diagram.....	32
Troubleshooting.....	47
Spare Parts List.....	52
Quality Control Testing.....	53


Safety Instructions



WARNING! Below are general safety precautions and warnings that should be understood prior to setting up or operating your equipment. Read and fully understand all instructions and warnings prior to using this unit. Your safety is most important! Failure to comply with procedures may result in serious injury or property damage. Remember: **Your personal safety is your responsibility.**

Unsafe practices or unauthorized modifications could result in accidents or property damage. Failure to follow these safety rules and take necessary precautions can result in serious injury as well as damage to equipment.

- ❖ Never operate or service your band sealer until you have read this manual completely and understand it fully.
- ❖ Plug the band sealer into a standard 120 Volt, 60Hz wall outlet or surge protector. We highly suggest using a surge protector. Some special order units are 220 Volt, 50Hz. Please confirm the machine voltage prior to use.
- ❖ Do not use the band sealer if the power cord, plug or any other parts are damaged. Be sure not to allow the power cord to drape into your work area. Check that all parts are operating properly and perform the intended functions. Check for all other conditions that may affect the operation.
- ❖ Reduce risk of unintentional starting. Make sure the power switch is in the "OFF" position before attaching to the power source.
- ❖ Always disconnect sealer from power source before servicing, changing accessories or cleaning the unit.
- ❖ To provide protection against the risk of electrical shock, the power connection must be properly grounded at all times.
- ❖ Do not leave the sealer unattended when in use. Disconnect the sealer from the power source before leaving the work area.
- ❖ Band sealer is used solely for sealing thermoplastic materials. Using the machine for any other purpose can cause damage to the machine and operator. Do NOT use the machine for any other purpose other than to seal thermoplastic materials. Doing so may result in damage to the machine and injury to the operator.
- ❖ Always operate machine on a flat stable surface.
- ❖ While operating machinery, wear close-fitting clothing and tie back long hair to prevent any external items from getting caught in the machine. Do not wear jewelry when operating the band sealer.

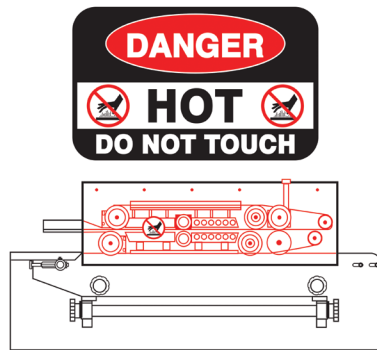

- ❖ While machine is operating do not touch the heating and/or cooling blocks. Blocks are extremely hot and may burn your hands.



- ❖ While machine is in operation, do not place fingers, tools, or other foreign objects on or into the machine. Do not touch any moving parts while machine is operating. Fingers may get caught in between the gears /pinch points and cause significant injury.
- ❖ Thermoplastic bags and material are hand fed into the machine. Place bag on the guide and carefully feed the bag through the band sealer. Fingers may be placed on the guide but do not allow fingers to touch any of the moving parts on the band sealer.
- ❖ Use emergency stop to turn off machine should material/bags get jammed into the machine. Carefully pull material out of the band sealer. Do NOT use fingers to touch any part of the machine.
- ❖ The band sealer is not water resistant or water proof. Spraying down the machine will damage machine or cause electrical shock. Do not submerge the band sealer into water or liquid.
- ❖ Do not operate band sealer in a corrosive or humid environment. This machine is intended to be operated at room temperature and not for use above 86°F (30°C) or under 41°F (5°C).
- ❖ Always keep the machine clean, lubricated and in good working condition. Follow any maintenance and lubrication procedures outlined in this manual. Make sure unit is disconnected from power source before cleaning
- ❖ NEVER use any accessories or parts from other manufacturers. Machine should not be altered or modified using parts that are not genuine authorized parts. Doing so will VOID YOUR WARRANTY.
- ❖ Never leave the band sealer unattended. Be safe, disconnect the band sealer from power source before leaving work area.
- ❖ Close supervision is necessary when any appliance is near children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge. This sealer is NOT to be used by children or by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
- ❖ DO NOT use the band sealer outdoors.
- ❖ DO NOT use the band sealer while under the influence of drugs, medications or alcohol.

SAVE THESE INSTRUCTIONS - REFER TO THEM OFTEN AND USE THEM TO INSTRUCT OTHERS.

Introduction

CBS-880 is equipped with an electronic temperature controller and variable speed conveyor to seal all types of thermoplastic materials (PP, PE, stand up pouches, gusseted bags, moisture barrier bags, etc.). Seals are created using PTFE bands which maintain high seal quality and produce consistently strong, clean seals on all heat sealable bags. Because bags are placed on a conveyor system, the width of the bag does not matter. These versatile machines offer several adjustments which allow them to be used for a wide range of applications. These machines are used extensively in the food/produce, medical, chemical, cosmetic, and electronic industries. The CBS-880 band sealer will significantly increase efficiency of packaging your products.

There are two configurations for the CBS-880 band sealer. The horizontal configuration (CBS-880I) is primarily used for sealing dry materials and when you can lay flat your pouch. We also carry an optional stand for the CBS-880I which allows the unit to be mobile. The vertical configuration (CBS-880II) typically seals small solid products (ex: powders, grains, coffee) and liquids. In addition, sealing using the vertical configuration also works best with stand up pouches.

Features of the CBS-880 Band Sealer

Your band sealer is equipped with a wide range of standard features and capabilities.

- ❖ Simple to use – minimal operator training
- ❖ Rust inhibiting stainless steel construction
- ❖ Unit feeds right to left; Optional left to right feed available (refer to model: FR-770)
- ❖ Equipped with electronic adjustable speed control
- ❖ Equipped with bag entry guide for easy bag feeding and straight seals
- ❖ Control panel includes industrial grade safety emergency stop switch
- ❖ 10amp protection power surge breaker
- ❖ Wide seal (8mm) to assure airtight seal / Optional 15mm width sealer model available
- ❖ PTFE sealing belts
- ❖ Extended forced-air cooling system with extra wide cooling bars and 6 heat transfer orifices
- ❖ One pair of brass sealing bars
- ❖ Sealing method – constant heat
- ❖ Adjustable 2-way pulley system for optimal stability and embossing clarity
- ❖ Knurled pressure rolls with variable pressure adjustment
- ❖ Fast warm up time
- ❖ PID digital temperature controller 0-300°C (572°F) with dual alphanumeric displays (target & current temp)
- ❖ Motorized rubber conveyor with speed control
- ❖ Capable of speeds up to 472 inches/minute
- ❖ Pressure embossing printing coder included

❖ Optional stand for CBS-880I available

How Does the CBS-880 Work?

Basic Principles

CBS-880 is easy to use. To seal, adjust temperature and place bag on conveyor

CBS-880 is comprised of a stainless steel frame, speed adjusting mechanism, sealing temperature control system and transmission system. Turning on the heat for the band sealer will cause a rapid rise in the temperature of the heating blocks. Required temperature and speed can be adjusted via the temperature controller and speed adjusting device. Plastic material to be sealed is placed on the guide and conveyor. Conveyor will then take the material between the two heating blocks to fuse the material together. Material will then pass through the cooling blocks to allow the material to congeal. Finally, material will then pass through the embossing wheel for a meshed seal line.

The motor drives the sealing belts, drive belts and conveyor simultaneously.

Specifications

	CBS-880I (Horizontal)	CBS-880II (Vertical)
Power	110V/60Hz	
Motor Power	50W	
Sealing Power	300W x 2	
Sealing Speed	0-630 inches/minutes	
Sealing Width	8mm (Optional 15mm or 30mm width available)	
Temperature Range	0-300°C (572°F)	
Conveyor Size	38" x 7"	
Max Conveyor Load	22-lbs	
Min/Max Height of Bag <i>(Vertical Only)</i>	N/A	6" / 12"
Character Size	3x4x9mm / 18PT	
Embossing <i>(Optional Feature)</i>	1 line embossing (2 lines available) 3 sections w/ 15 characters/line	
Dimensions	33" x 17" x 13"	33" x 17" x 22"
Weight	60-lbs	66-lbs

CBS-880 Diagram

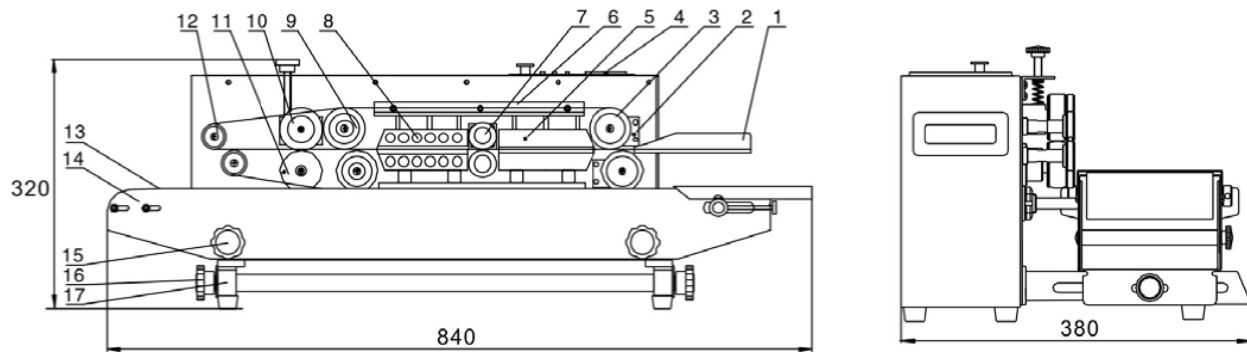


Figure 1. Horizontal Band Sealer (1) Guide, (2) Driven Wheel Seat (Adjusting Block), (3) Driven Wheel, (4) Control Panel, (5) Heating Block, (6) Holding Plate, (7) Pinch Roller, (8) Cooling Block, (9) Driving Wheel, (10) Embossing Roller, (11) Silicone Wheel, (12) Guiding Wheel, (13) Conveyor Belt, (14) Conveyor Table, (15) Fastening Knob for Elevating Table, (16) Transverse Tightening Knob for Conveyor Table, (17) Conveyor Support

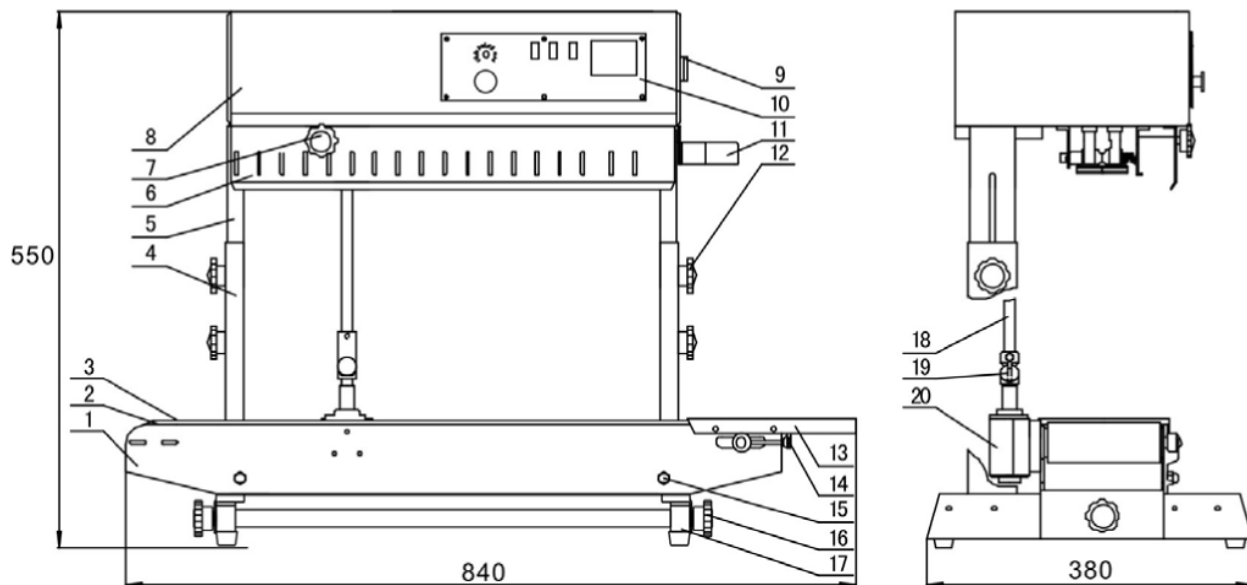


Figure 2. Vertical Band Sealer (1) Conveyor Table, (2) Driving Roller, (3) Conveyor Belt, (4) Fixed Bracket, (5) Slip Bracket, (6) Safety Cover, (7) Adjusting Knob for Embossing Roller, (8) Housing, (9) Circuit Breaker, (10) Control Panel, (11) Feed Opening, (12) Fastening Knob, (13) Worktable, (14) Adjusting Knob for Conveyor Belt, (15) Tightening Nut, (16) Transverse Tightening Knob for Conveyor Table, (17) Conveyor Support, (18) Vertical Shaft, (19) Gimbel Assembly, (20) Umbrella Gear Shaft

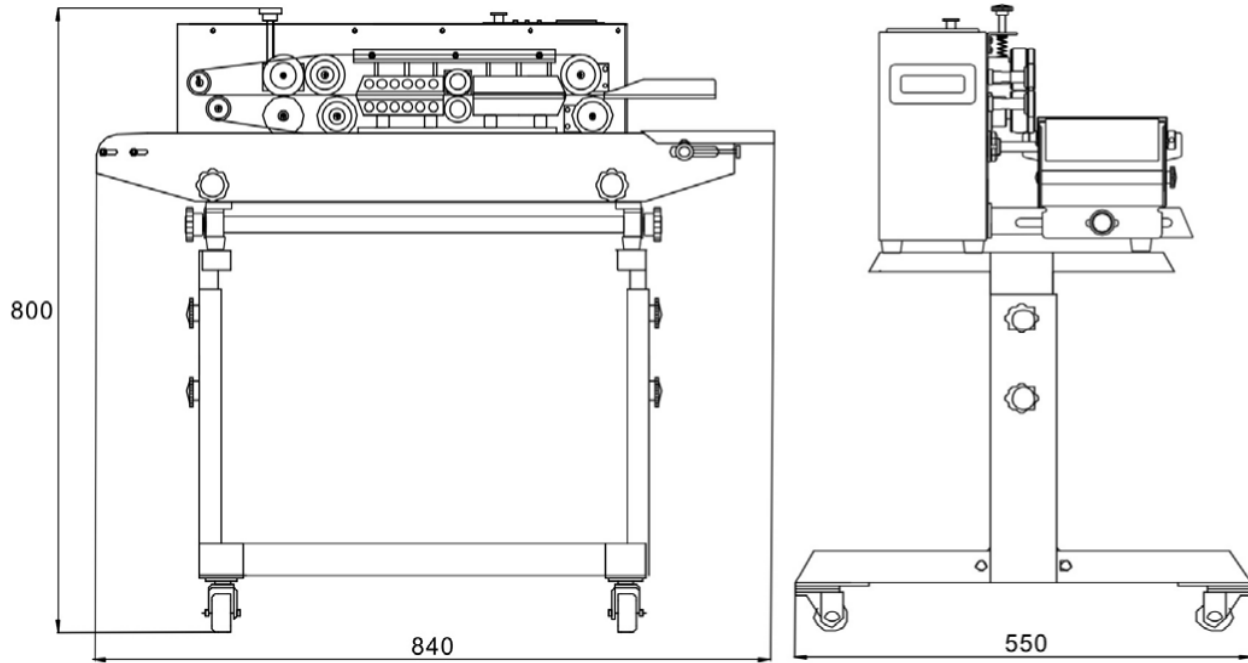


Figure 3. Horizontal Band Sealer with Stand. Optional stand available for CBS-880I. This is not available for . Please ask your distributor.

Getting to Know your Band Sealer



Warranty

Sealer Sales ("Sealer") provides limited warranties for its non-consumable products subject to these Terms and Conditions. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Any warranties implied by law shall in no event extend beyond the duration of the express warranty offered, if any. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some products may also be covered by a manufacturer's warranty that requires these items to be sent directly to the manufacturer for replacement or repair.

Sealer warrants its non-consumable products against defects in materials and workmanship under normal use for the following warranty periods:

- ❖ 180 (one hundred eighty) days for equipment, excluding portable sealers and heat guns
- ❖ 90 (ninety) days for portable sealers and heat guns
- ❖ 60 (sixty) days for non-consumable parts and repairs

The warranty period begins on the date of purchase by the initial purchaser.

Sealer does not warrant consumable parts or products, including, but not limited to, replacement kits, heating elements, PTFE insulators, silicone/compression rubber, and flexible packaging.

Service Provided

Sealer has no obligation to repair, replace, or refund a product until the customer returns the product in question to Sealer. If a defect arises and a valid claim is received within the warranty period, Sealer will, at its option and to the extent permitted by law either: (1) repair the hardware defect at no charge, using new or refurbished replacement parts; (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts; or (3) provide a refund. Sealer, to the extent permitted by law, shall have the sole discretion to determine which service option it will provide and is not obligated by the terms of this warranty to provide more than one service option.

Exclusions

This Limited Warranty only applies to products purchased directly from Sealer. Sealer does not warrant that the operation of the products will be uninterrupted or error free. Sealer is not responsible for damage arising from failure to following instructions related to the use of the products.

The Limited Warranty does not apply to: (a) damage caused by use with products not approved by Sealer; (b) damaged caused by accident, abuse, misuse, improper storage, theft, vandalism, natural acts of God, or other external causes; (c) damage caused by operating the product outside of its permitted or intended uses; (d) damaged caused by service performed by anyone other than Sealer or an authorized representative of Sealer, (e) damaged caused by improper maintenance or lack of maintenance; (f) damage or loss in functionality caused by modification or alteration of any parts without Sealer's permission; (g) consumable parts; (h) cosmetic damage; or (i) ordinary wear and tear.

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product

Limitation of Liability

THE MAXIMUM LIABILITY OF SEALER UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, SEALER IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. THIS LIMITED WARRANTY GIVES THE CUSTOMER SPECIFIC LEGAL RIGHTS. THE CUSTOMER MAY ALSO HAVE RIGHTS WHICH VARY FROM STATE TO STATE. IN SOME STATES, CERTAIN DISCLAIMERS AND LIMITATIONS MAY NOT APPLY TO YOU. TO THE EXTENT THIS LIMITED WARRANTY IS INCONSISTENT WITH LOCAL LAW THIS STATEMENT SHALL BE MODIFIED TO BE CONSISTENT WITH SUCH LOCAL LAW. If any term or condition of this warranty is held to be illegal, unenforceable or against public policy, the legality or enforceability of the remaining terms shall not be affected or impaired.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW; SEALER IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF ITS PRODUCTS OR ANY BREACH OF WARRANTY OR CONDITION, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY AND REGARDLESS OF WHETHER SEALER WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, SEALER SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF SEALER CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

Obtaining Warranty Service

If you believe the product you purchased is not functioning properly due to a defect covered by this warranty, please contact Sealer directly via telephone, U.S. mail, or e-mail using the contact information listed on our website. A Sealer representative will help determine whether your product requires service and, if it does, will inform you how service will be provided. You must assist in the diagnosis process by providing any information or requested documentation required by Sealer.

Sealer may (a) provide warranty at its headquarters location, (b) request that you ship the product to its headquarters for service, or (c) ship you new or refurbished replacement products or parts to enable you to complete repairs on your own. Sealer does not provide on-site warranty service for any products or parts. If a product is shipped to Sealer for warranty repair, the customer must pay for shipping costs. If it is decided that a product should be returned directly to Sealer, the product should be properly packed, preferably in the original packaging, for shipping.

When a product or part is exchanged or replaced, any replaced item becomes the property of Sealer.

Service options and service times may vary depending on the complexity of the product, the nature of the defect, and/or the availability of replacement parts. Sealer may require proof of purchase details before providing warranty service.

Operating Your Band Sealer

Important

Read this manual carefully, and make it available to everyone connected with the supervision, maintenance, or operation of this machine. Additional copies are available at your request. Be very careful when operating, adjusting, or servicing this equipment. If in doubt, stop and obtain qualified help before proceeding.

Installation

Scan QR Code for Video Demo



Place the band sealer in the desired location with the required electrical power source available. (See power requirements.) Make certain that proper electrical wiring is provided to guard against low voltage. If the voltage is too low, the equipment will not function properly.

Finding the proper location is a most important function of the initial set-up. One must take several factors into consideration:

- ❖ Adequate power source
 - ❖ Relationship to source of product
 - ❖ Relationship to band sealer
 - ❖ Relationship to any conveyors necessary to transport finished product
 - ❖ Convenience of operator
1. Your new CBS-880 band sealer comes packaged in a heavy duty carton to protect it. If your machine does not arrive in this condition, write on shipping paperwork that outside of box is damaged. Concealed damage may have occurred.
 2. Two foam pieces hold and protect the band sealer. Remove the two foam pieces.



- Carefully check the contents against the spare parts list (see Spare Parts List on page 52). Once you have determined that all of the parts have arrived in good order set up can proceed. If any parts are missing or appear to be damaged, please notify your distributor or Sealer Sales AND your freight company at once.

Initial Set-up

Scan QR Code for Video Demo



If you have not already done so, please unpack your machine, carefully checking the contents against the spare parts list (see Spare Parts List on page 52). Once you have determined that all of the parts have arrived in good order set up can proceed. If any parts are missing or appear to be damaged, please notify your distributor or Sealer Sales AND your freight company at once.

To prevent damage to the band sealer, the band sealer body and conveyor are shipped disconnected. Please follow these simple steps to connect the drive shaft (Figure 37, Item #17) on the band sealer body with the conveyor middle post (Figure 43, Items #5, 14-18) on the band sealer conveyor. **Please disregard if you purchased the CBS-880II vertical band sealer and follow the vertical configuration set up instructions.**

1. Loosen the knobs for the conveyor table to move the conveyor table forward.

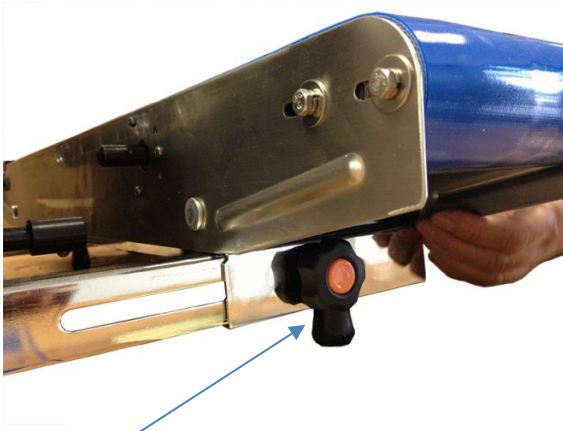


Figure 4. Two flower shaped knobs are found under conveyor.

2. Loosen the screw on the drive shaft and insert the conveyor middle post (found on the conveyor table) to the drive shaft. Be sure the groove on the conveyor middle post lines up along the screw on the drive shaft. Move the conveyor belt as needed to allow the conveyor middle post to meet with the drive shaft. Once the conveyor middle post is in place, tighten the screw on the drive shaft to lock the conveyor middle post in place.



Figure 5. Insert the conveyor middle post in drive shaft. Make sure grooves are aligned.


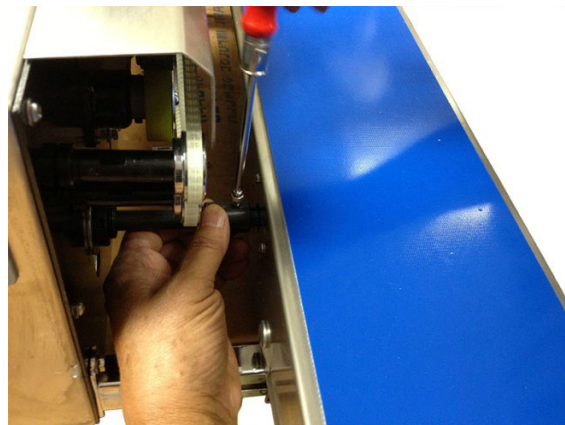



Figure 6. Tighten the screw on the drive shaft to lock the conveyor middle post in place.

3. Tighten the round nut (Figure 37, Item #18) along the drive shaft as well as the knobs and in front of the band sealer (Figure 43, Item #12). The drive shaft can be moved up or down by adjusting the round nut using the special tool found in the spare parts kit.

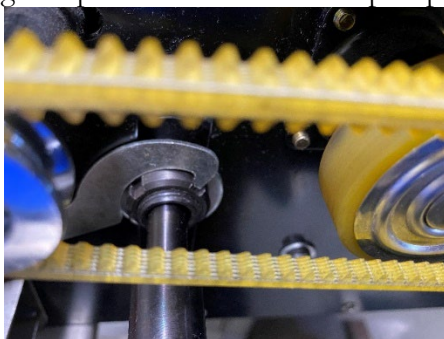

Operation Set-up

1. Our machines are equipped with a three-prong grounded plug. Make sure the plug is well-connected in the socket to ensure safe operation.
 - a. Check that the power supply voltage is consistent with the voltage of the machine
 - b. Ensure the machine is properly connected to a grounded receptacle. (grounding line is yellow green double color line)
 - c. Make sure there is nothing impeding movement of the cable. If the cable appears damaged, replace immediately

	WARNING! Ensure that the socket has protective grounding wires Please check the voltage by referring to machine nameplate Please comply with safety guidelines
---	--

2. First time operation. Allow the machine to pre-heat by running at a low temperature for a few minutes. This would apply if the machine has not been in operation for a long time. The machine can sometimes be damp from storage or shipment and running at a low temperature will dry out any residual moisture.
3. Make sure the circuit breaker is in the “ON” position. (Levers pointing up)
4. To adjust the conveyor position forwards or backwards. Refer to **Figure 7** for knob adjustments.


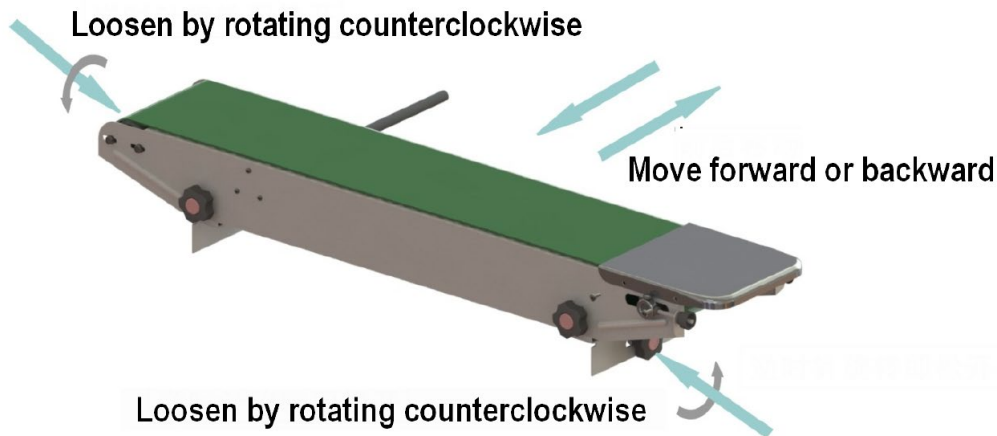


Figure 7. Adjusting conveyor forward or backwards

5. To adjust the conveyor height (horizontal configuration), adjust the height by the adjusting knob in front of the conveyor table and tighten after adjustment. Refer to **Figure 8** for knob adjustments. For vertical configuration only, adjust the height of the band sealer appropriate for your bag to be sealed.

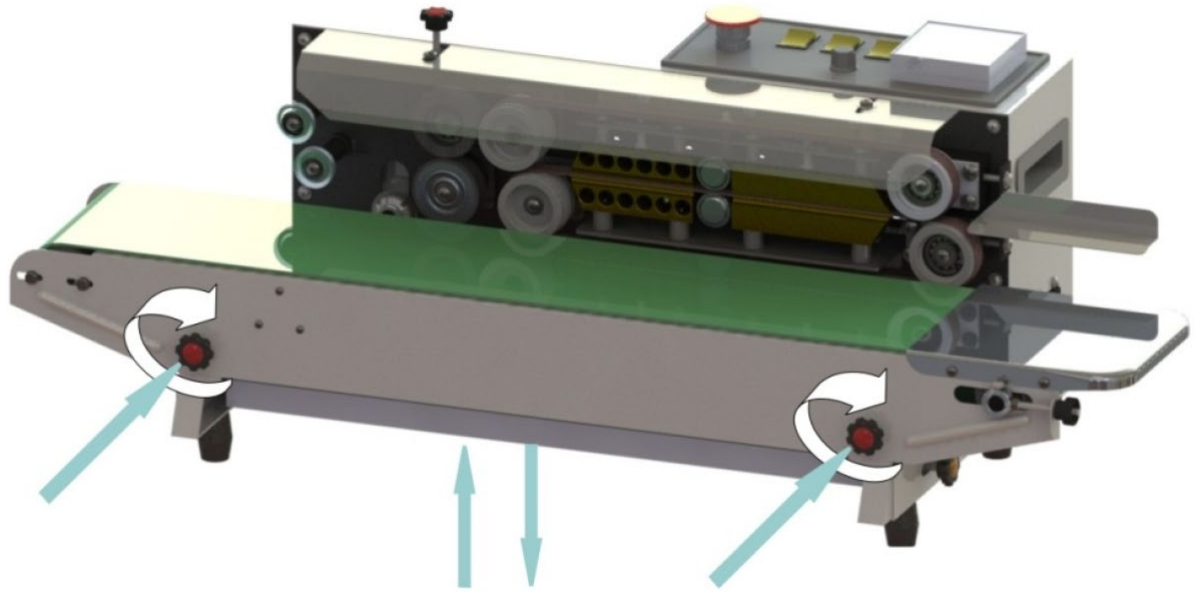

Loosen counterclockwise to adjust conveyor table height.

Figure 8. Adjusting the conveyor height of horizontal configuration

6. Adjust the guide to adjust seal width and position of seal line on your material.

Operation

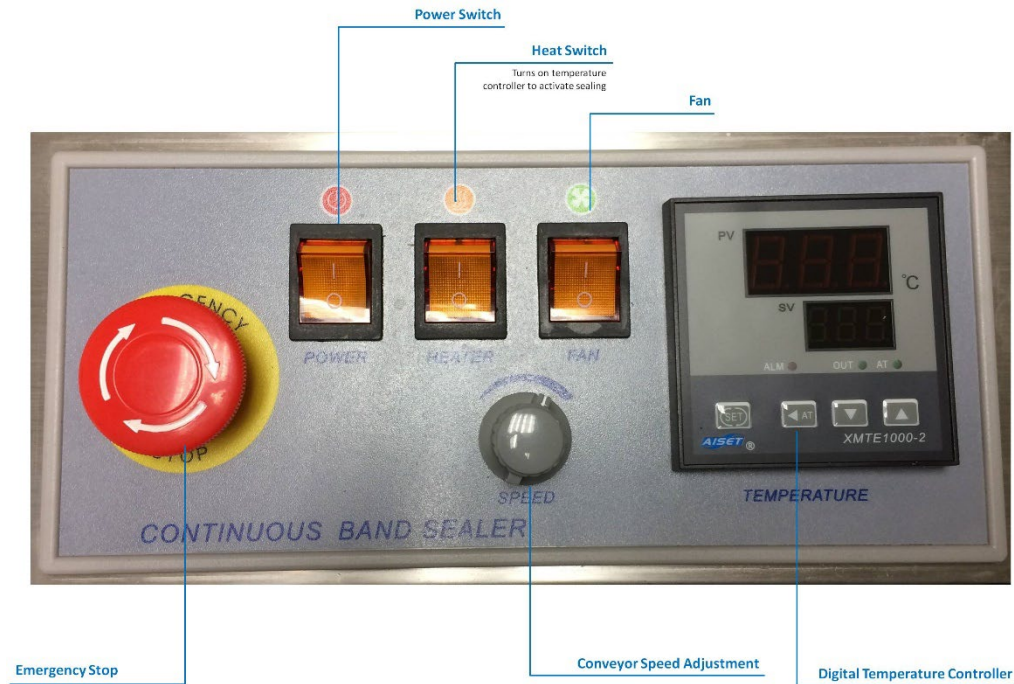


Figure 9. Control Panel of CBS-880

1. Switch the circuit breaker (**Figure 46 , Item #9**) to the "On" position.
2. Turn Power, Heater, and Fan switches to the "On" position. Belts and conveyor will begin to move simultaneously.
3. Emergency Stop – Press the emergency stop to turn off the machine. In order to restart the machine, you must release the emergency stop by turning the knob 120° clockwise.
4. Adjust the conveyor speed using the conveyor speed adjustment knob. Turn clockwise to increase the speed and counterclockwise to decrease the speed.
5. Adjust the temperature controller to the temperature desired to seal your material. Temperature settings will vary based on bag material and thickness. If you are unsure what temperature setting to use, we recommend starting at a low temperature (150°C) and gradually increase to a temperature that will seal your material. We highly discourage sealing material at a temperature above 200°C. **Please note: Temperature will be in Celsius, not Fahrenheit.** The temperature controller cannot be displayed in Fahrenheit.

The PV value (red light) is the actual temperature and the SV value (green light) is the desired temperature setting.

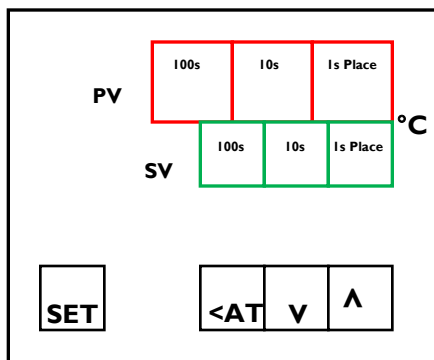




Figure 10. CBS-880 Temperature Controller

- a. To set the temperature, press the SET button.
- b. Press the <AT (auto tuning) button to move from the ones, tens, and hundreds place. Adjust the value using the up and down arrows.
- c. Press the SET button to save the temperature settings. Your desired temperature setting should appear in green in the SV Value.
- d. Wait until the PV temperature matches the SV temperature which should take approximately 5-10 minutes.
- e. **Please note:** Temperature will be in Celsius, not Fahrenheit. Do not attempt to make additional adjustments to the temperature controller besides the temperature. The temperature controller CANNOT be displayed in Fahrenheit and is ALWAYS in Celsius. **Please do not set the temperature controller above 200°C.** Please contact your local distributor if you need assistance.



WARNING!
When the machine is running, the temperature outside of the surface of the heating block can reach over 400°F. Even after cooling down the machine, the heating blocks will remain hot to touch.

2. Place material on the guide (**Figure 37, Item #1**) and allow the band sealer to pull your material through. Make sure your material is flat on the guide. While the material is moving through the band sealer, do not push or pull the material as this will cause irregular sealing.



WARNING!
When the machine is running, do not put your hands near any of the wheels and gears

- Adjust the pressure knob **Figure 11** to change the pattern of the embossing wheel on your band sealer.

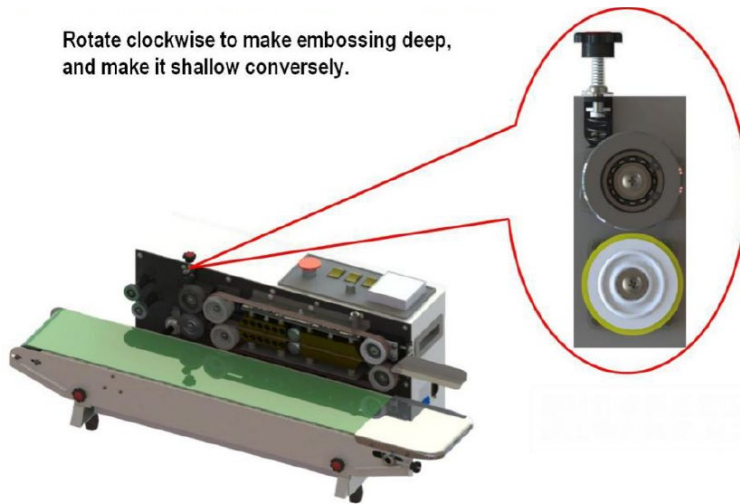


Figure 11. Adjusting the embossing wheel

- If the sealing belt is running off the guide wheels, make adjustments to the screws that are found on the driven wheel set. See **Figure 12**.

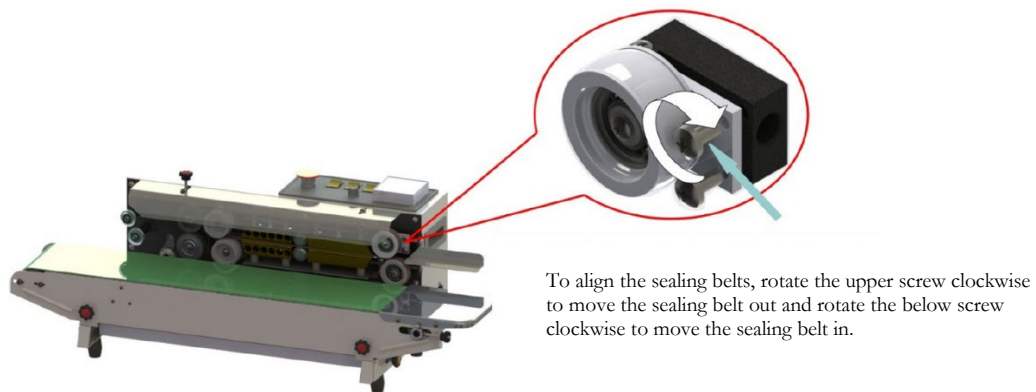


Figure 12. Adjusting sealing belts

- To shut down, turn off the heater switch and allow the temperature of the machine to drop before turning off the power and fan switches. *Following the shut down procedure will significantly prolong the life of machine and sealing belts.*

Installing the Embossing Wheel (Optional Feature)

CBS-880 can be equipped with an optional embossing function. The embossing coder will continually emboss characters directly on your bag. The coder uses pressure and does not use ink to print. The CBS-880 embossing wheel is equipped for 1-line embossing with 15 characters. There are three sections so three sets of characters are needed. Please note that all 15 characters in the three sections must be filled with a typeset. Optional feature: 2-line embossing which can be purchased separately.

1. Place the key in the groove of the embossing wheel plate and turn counter clockwise to loosen the wheel plate. (Figure 13) Remove the embossing wheel plate, as well as the o-ring (Figure 14)



Figure 13



Figure 14

2. Carefully install typesets in each of the three cavities. Once all cavities are filled, place the O-ring and wheel plate back in place. Using the key, carefully turn clockwise to lock wheel plate. Make sure none of the typesets are pushed out of the cavity by holding the typesets in place as you turn the key.

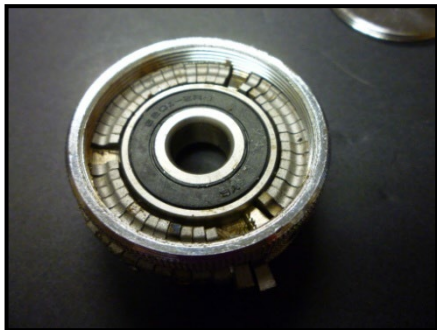


Figure 15



Figure 16

3. Unscrew and remove the pattern knurled wheel on the sealer. Replace with the embossing wheel by lifting the embossing wheel seat and pushing the embossing wheel in place. Please note: remove safety cover before accessing the embossing wheel.

Sealing & Printing Optimization

1. Sealing performance can be adjusted with the sealing temperature and sealing speed. The higher the speed the less exposure the material and therefore a higher temperature will be required to seal the material.
2. Try a variety of different sealing temperatures and conveyor speeds to get the optimal seal for your material.
3. Based on the thickness of your sealing material, adjust the clearance between upper and lower heating blocks, adjust the pressing force of the retaining washer to control the clearance between the two sealing belts, adjust clockwise to left (increase clearance) and counterclockwise (narrow clearance). The clearance between the two sealing belts is about equal to the thickness of one layer of bag.
4. Make adjustments to the pressing wheel with the pressure knob **Figure 18** to ensure a good quality seal as well as a clear and visible embossed image.

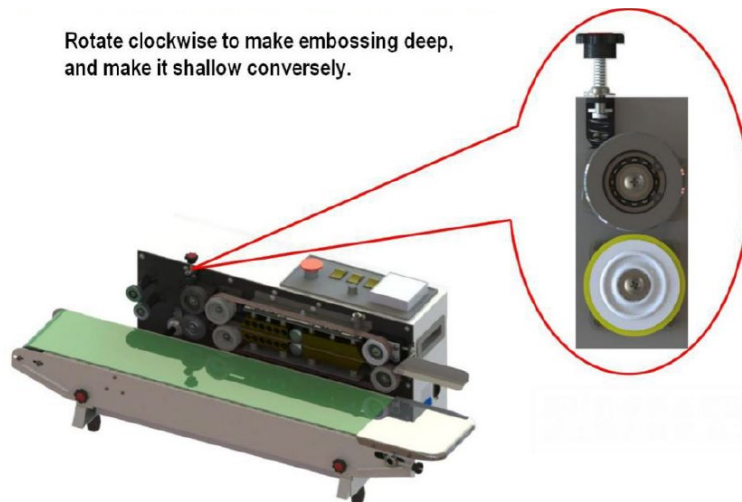


Figure 17. Adjusting the embossing wheel

Please note that unreasonable parameter settings may damage the machine or increase servicing needs.

	<p>WARNING! DAMAGE! Unreasonable parameter settings may damage the machine or increase servicing needs.</p>
--	--

The default settings on the band sealer are adjusted so that it is suitable for most bags. See our material heat sealing temperature reference table below:

Material	Thickness (μm)	Recommended Temp Settings ($^{\circ}\text{C}$)	Heating Sealing Speed
LDPE	30 - 60	105 - 150	6 - 10
MDPE	40 - 120	115 - 120	7.2 - 10.2
HDPE	40 - 90	125 - 150	7.2 - 10.2
PP	40 - 60	135 - 160	7.2 - 10.2

Vertical Configuration Set-Up

To use the CBS-880 in its vertical configuration, please follow the instructions below. If you purchased the CBS-880I horizontal band sealer and wish to use your band sealer in the vertical configuration, please order the conversion kit (Part # CBS-880-72) from your distributor.



Figure 18. CBS-880II – Vertical CBS-880 Band Sealer for sealing liquids and stand up pouches

1. Detach the conveyor table by removing the two knobs underneath the conveyor table. Slide the conveyor table off the conveyor support.
2. Remove the drive shaft (Figure 37 , Item #17) and loosen the round nut (Figure 37 , Item #18).

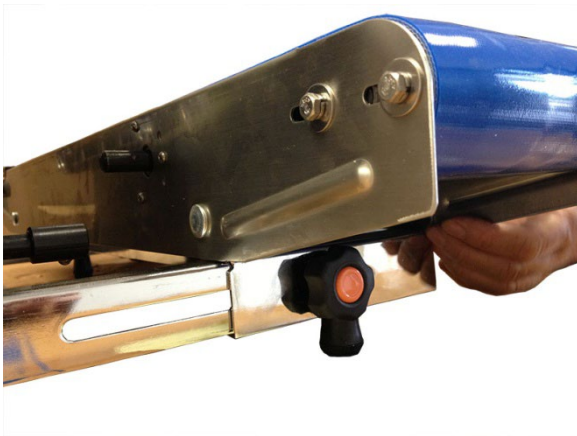


Figure 19. Remove the two knobs underneath the conveyor to slide the conveyor off the conveyor support.

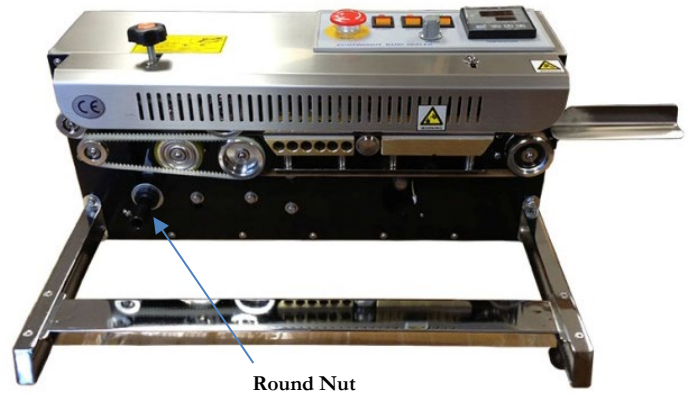


Figure 20. After removing the conveyor, remove the drive shaft and loosen the round nut.

3. Assemble the vertical stand as in the diagram below.

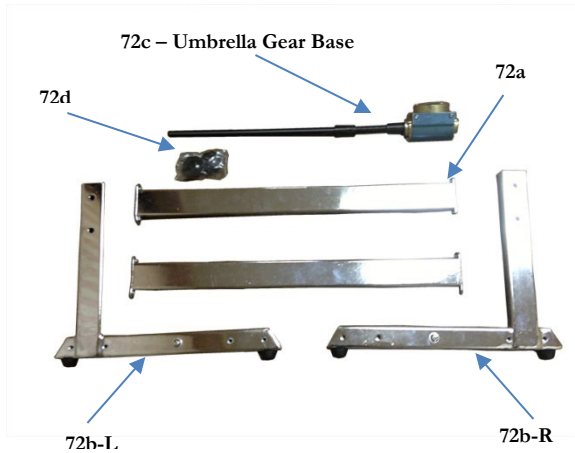


Figure 21. Parts needed to convert to the vertical configuration.

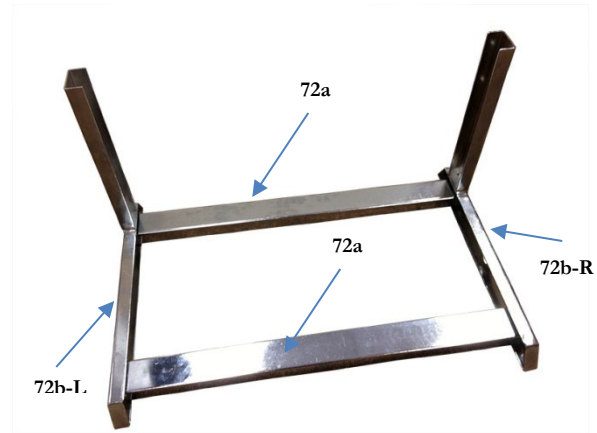


Figure 22. Assemble vertical stand as shown above.

4. Remove the cover from the Umbrella Gear (Figure 48, Item #4). Set aside for later.



Figure 23. Remove the cover from the umbrella gear by removing the four screws on the side of the gear.



Figure 24. Umbrella Gear without the cover.

5. Turn the umbrella gear over and remove the three screws/nuts. Keep screws aside for later.



Figure 25. Remove the three screws and nuts on the umbrella gear.



Figure 26. Umbrella Gear without the screws.

6. Insert the long drive shaft of the Umbrella Gear into the axis hole. Take note of the alignment groove.



Figure 27. Insert umbrella gear into the axis hole.

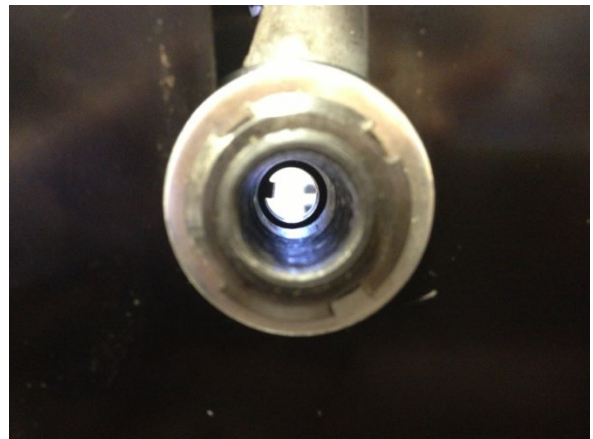


Figure 28. Take note of the alignment groove in the axis hole.

7. Insert the vertical stand from step 3 into the conveyor support. Tighten both sides with screw and knob. (Note: this is the sealing height regulator).

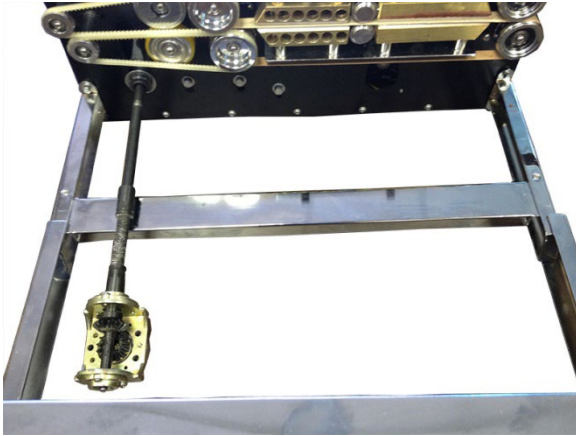


Figure 29. Insert the vertical stand on the conveyor support.

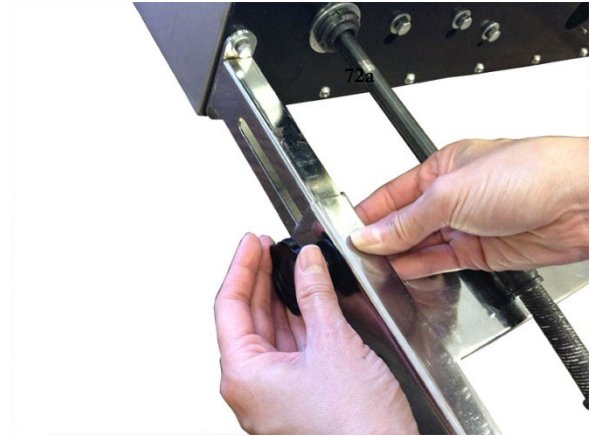


Figure 30. Tighten both sides with screw and knob. You can make adjustments to the height of your band sealer.

8. Position the groove of the short drive shaft on the conveyor table into the groove of the umbrella gear. Do not lock the umbrella gear to the conveyor table yet. Tighten the knobs under the conveyor to lock the conveyor in place.

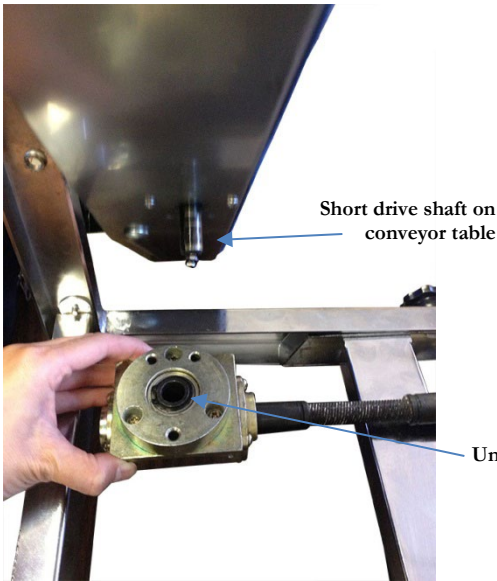


Figure 31. Insert the short drive shaft on the conveyor into the groove of the umbrella gear.



Figure 32. Tighten screw and knob on both sides under the conveyor to lock conveyor in place.

9. Position the band sealer in the upright position. The height between the sealing bars and the conveyor table can be adjusted using the sealing height regulator. In some cases, the drive shaft may protrude from the back cover.
10. Move the conveyor belt until the groove of the short drive shaft on the conveyor table is locked in place with the groove of the umbrella gear. Be sure there is no space in between as it should fit exactly (moving the conveyor belt will turn the long shaft.) Set the three screws.

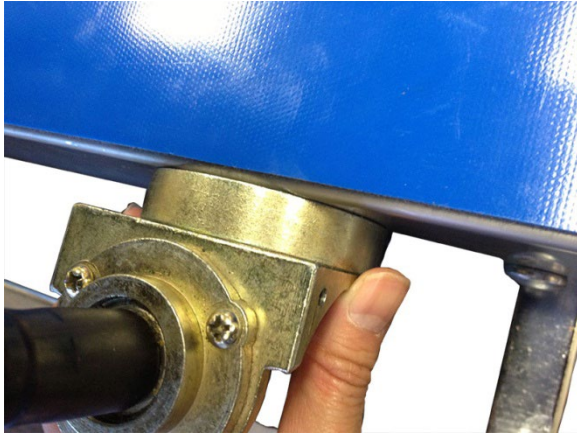


Figure 33. Umbrella gear and the conveyor should be flush against each other. Move the conveyor belt in order to align the grooves.



Figure 34. Set the three screws back on the umbrella gear.


11. Replace the cover on the Umbrella Gear.

12. Final tuning:

- a. To adjust height, use the sealing height regulator.
- b. To adjust conveyor table, use knob under the conveyor table. **(Figure 46, Item #14)**

Maintenance

The following maintenance procedures should be followed to ensure the longevity of your CBS-880 band sealer. *Always disconnect sealer from power source before servicing, changing accessories or cleaning the unit.*

	<p>WARNING!</p> <p>Disconnect the machine from power before any maintenance</p>
---	--

Inspection and Cleaning

1. Inspect your machine daily. Daily maintenance is necessary to lengthen the life of the machine and to achieve the best seal. If the machine is frequently used (more than four hours/day), it is suggested you service the machine at least every three months. If the machine is used less than four hours/day, it is advisable to service every six months. Please make adjustments as necessary for your machine.
2. Check if there is any foreign matter or dirt adhering to the band sealer.
3. To clean your band sealer, wipe down your sealer with silicone spray and a shop cloth. Do not apply silicone directly to your sealer. Definitely DO NOT wash down your machine with water.

Maintenance Schedule

Refer to the below maintenance schedule for your band sealer.

Schedule	Maintenance
Daily	<ol style="list-style-type: none"> 1. Use a brush to remove any substance that is attached to the sealing or guide belts 2. Use a shop cloth and silicone to clean the conveyor belt
Monthly	<ol style="list-style-type: none"> 1. Check the condition of the sealing belt. Replace if needed. 2. Check the condition of the drive belt. Replace if needed. 3. Clean the motor carbon brush
6 Months	<ol style="list-style-type: none"> 1. Check the condition of the motor brush. Replace if needed. 2. Add lubricating grease to the gears.
Yearly	<ol style="list-style-type: none"> 1. Check all above items 2. Check the condition of the rubber wheel. Replace if needed. 3. Check the temperature controller. If the set temperature is no reached within ten minutes, you should change the temperature controller. 4. Check the electronic parts such as the emergency stop, buttons, potentiometer, and fan. If parts are not working properly, replace if needed. 5. Check and add lubricating greas to the transmission parts including gears, shafts and joints. If there are any worn parts, replace as needed. 6. Clean the turbocase and change the oil in it.

Sealing and Drive Belts

Scan QR Code for Video Demo



1. Check and replace the belts as necessary. Both the sealing and drive belts are consumable items. Replace sealing belts when there are burn marks or if the belts become hard and brittle. Replace drive belts when the belts break or become badly cracked.
2. To change out the belts, make sure the machine is turned off.
3. Remove the safety cover ([Figure 37, Item #6](#)).
4. Remove the two drive belts.
5. To remove the sealing belts, push on the adjustment blocks ([Figure 37, Item #3 & 30](#)) and the sealing belts should easily slip off. Our newer units now have a latch which will hold the adjustment block in place while you remove and replace the sealing belts.

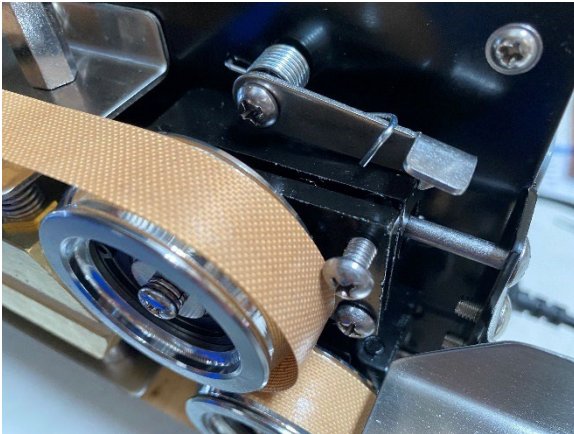


Figure 35.

- a. You may also need to rotate the retaining washer by 90 degrees on both upper heating blocks and upper cooling blocks to lift both blocks.

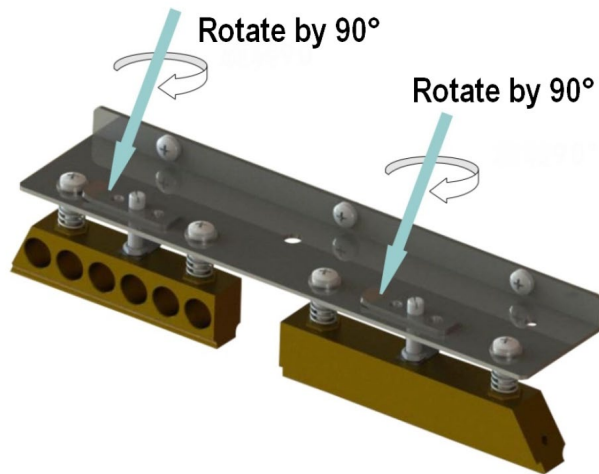


Figure 36. Adjusting Retaining Washer

6. Put new sealing and/or drive belts back on the machine. Test the machine, making adjustments as necessary.
7. Replace the safety cover.
8. Check our YouTube channel (<https://www.youtube.com/user/sealersales>) for a video demo.

Turbocase & Motor Maintenance

1. Remove dust and clean motor at regular intervals. Avoid contact with alcohol, gasoline and benzene chemicals.
2. The turbocase should be oiled as needed with 50g 20# oil by:
 - a. Remove the back cover.
 - b. Locate the turbocase and unscrew the cap. Replenish any depleted gear oil with 50g 20# oil.
3. The motor brush (**Part#BS-29A**) is designed to be used 2,500 hours continuously. Replace carbon brush at regular intervals.


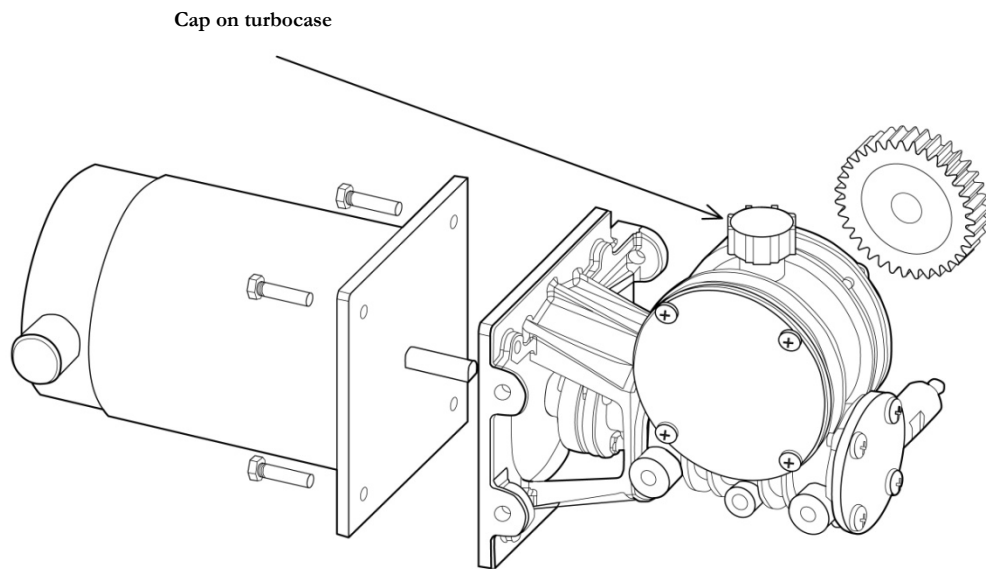


Figure 37. Turbocase cap.

Conveyor

If the conveyor belt is not tracking correctly, the conveyor belt can be adjusted by adjusting screws on the right side of the conveyor table. Keep the conveyor belt under tension state when adjusting.

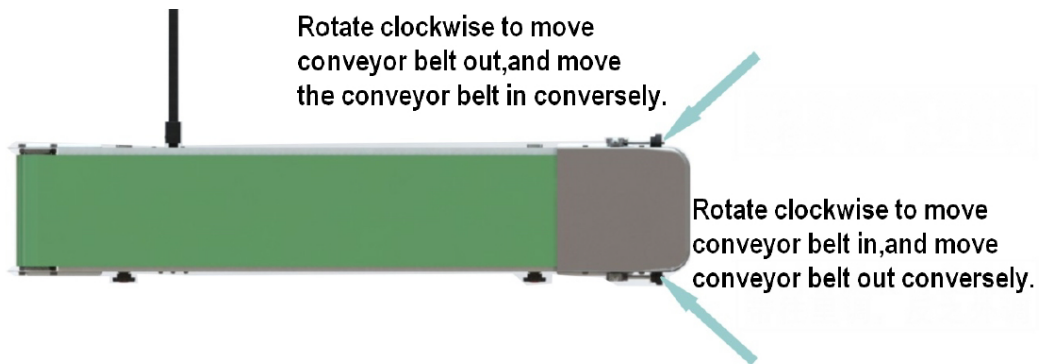

Parts Diagram

To order spare parts, please use diagram and part #s below:

Figure 37 – Spare Parts Diagram Overview

Figure 39 – Heating / Cooling Blocks

Figure 41 – Gears

Figure 43 – Conveyor Table

Figure 45 – Motor / Turbocase

Figure 46 – Sealer Body

Figure 48 – Umbrella Gear (only in CBS-880II units)

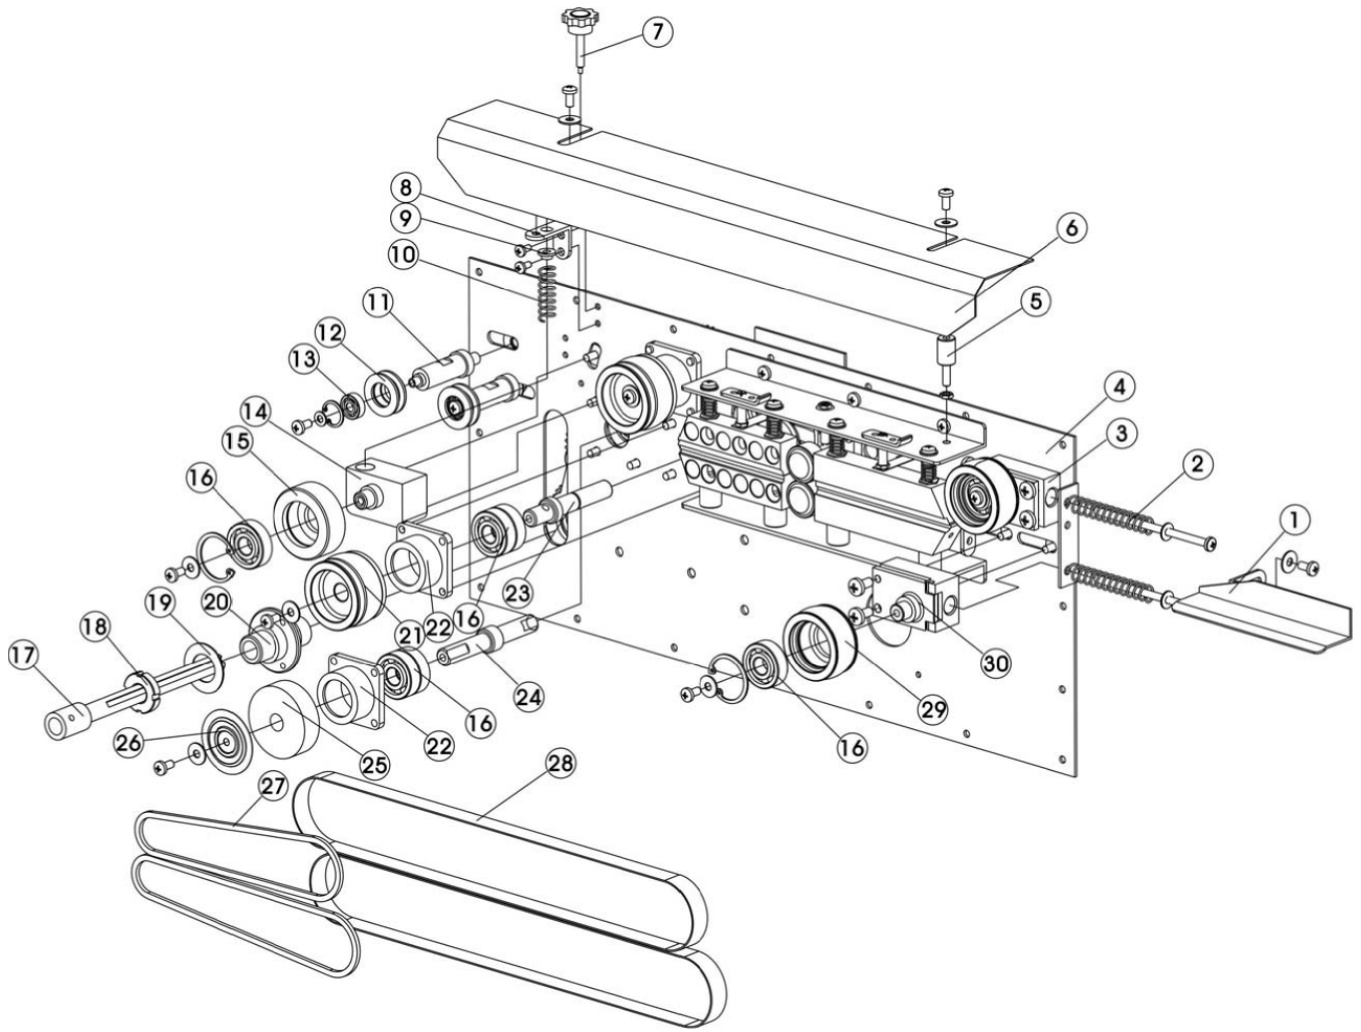


Figure 38. Spare Parts Diagram Overview

Figure 39. Spare Parts Diagram Overview

Item	Part #	Quantity	Description	Comments
1	CBS-880-44	1	feed opening	
2	CBS-880-13A	2	spring for driven wheel seat	
3	CBS-880-13	1	upper driven wheel seat	
4	CBS-880-84	1	bottom board	steel: 102102-3
5	CBS-880-8-5	1	support for safety cover	
6	CBS-880-7	1	safety cover	
7	BS-5	1	672 corrugated knob (M8X35)	
8	BS-5B	1	supporting board for adjusting embossing roller	
9	BS-5C	1	spring seat of embossing roller	
10	BS-5A	1	spring of embossing roller	
11	CBS-880-6B	2	small pulley shaft	
12	CBS-880-6A	2	small pulley	Includes #12, #13
13	CBS-880-6A	2	606-2Z bearing	Includes #12, #13
14	CBS-880-4	1	embossing roller seat	
15	CBS-880-3	1	embossing roller w/ cavities for types	Includes #15, #16
15	CBS-880-3A	1	embossing roller, knurled wheel / meshed	Includes #15, #16
16	CBS-880-6-26	9	6201-Z bearing	
17	CBS-880-40	1	drive shaft	
18	CBS-880-42	1	round nut	Includes #18, #19
19	CBS-880-42	1	big washer	Includes #18, #19
20	CBS-880-42a	1	connection shaft	
21	CBS-880-6	2	driving wheel	
22	CBS-880-6-27A	3	square bearing seat	
23	CBS-880-6-25	2	driving wheel shaft	
24	CBS-880-2-31	1	silicone wheel shaft	
25	CBS-880-2	1	silicone wheel	
26	CBS-880-2-33	1	silicone wheel cover	
27	CBS-880-26	2	guiding belt	428X6X4(40)
28	CBS-880-10	2	sealing belt	770X15X0.2
	CBS-880-10-15mm	2	sealing belt for 15mm seal width (special order)	
	CBS-880-10-30mm	2	sealing belt for 30mm seal width (special order)	
29	CBS-880-12	2	driven wheel	
30	CBS-880-13	1	bottom driven wheel seat	

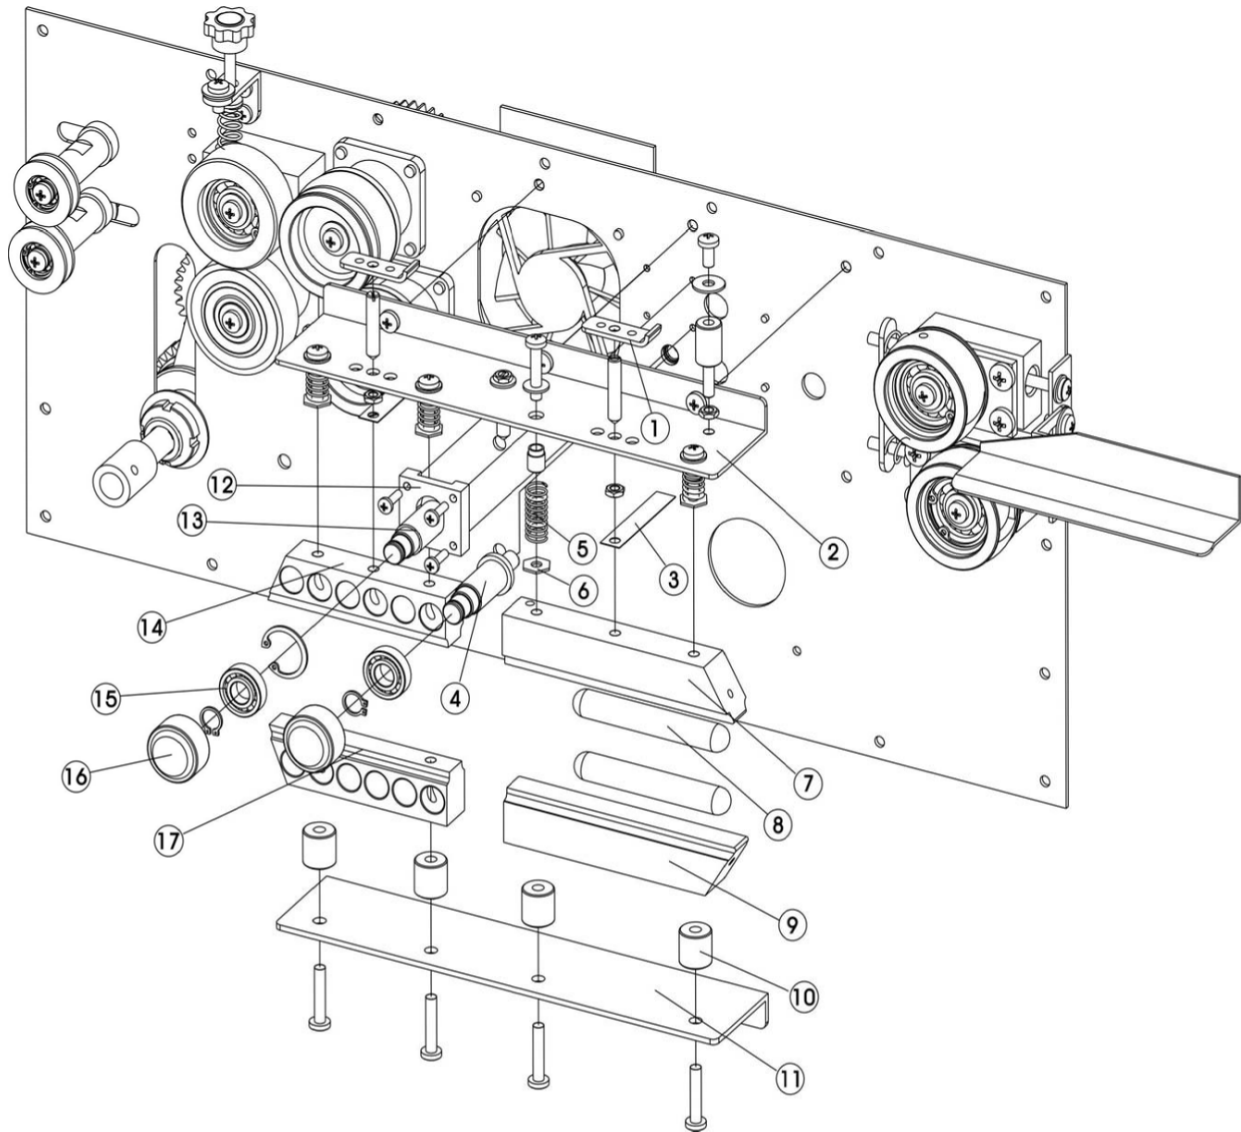


Figure 40. Heating / Cooling Blocks

Figure 41. Heating / Cooling Blocks

Item	Part #	Quantity	Description	Comments
1	BS-9I	2	stopping flake	
2	CBS-880-9-2	1	upper holding plate	
3	BS-9J	2	hanger plate of copper block	
4	CBS-880-21-19	1	lower pressing wheel shaft	
5	BS-9D	4	spring for copper block	
6	BS-9F	4	self-made hexagon thin nut	
7	CBS-880-9A	1	upper heating block (770)	Includes #7, #9
8	BS-9B	2	300W/110V(Φ12X95) heating pipe for sealing	
9	CBS-880-9A	1	bottom heating block (770)	
10	CBS-880-9-10	4	copper block cushion	
11	CBS-880-9-11	1	bottom holding plate	
12	CBS-880-21-23	1	slide seat for pressing wheel	
13	CBS-880-21-24	1	upper pressing wheel shaft	
14	CBS-880-8	1	upper cooling block	Includes #14, #17
15	CBS-880-21	2	61900-2Z bearing	Includes #15, #16
16	CBS-880-21	2	pressing wheel / pinch roller	Includes #15, #16
17	CBS-880-8	1	bottom cooling block	Includes #14, #17
	CBS-880-21uppercomplete		upper pressing wheel shaft assembly	Includes #12-13, 15-16
	CBS-880-21lowercomplete		lower pressing wheel shaft assembly	Includes #4, 15-16

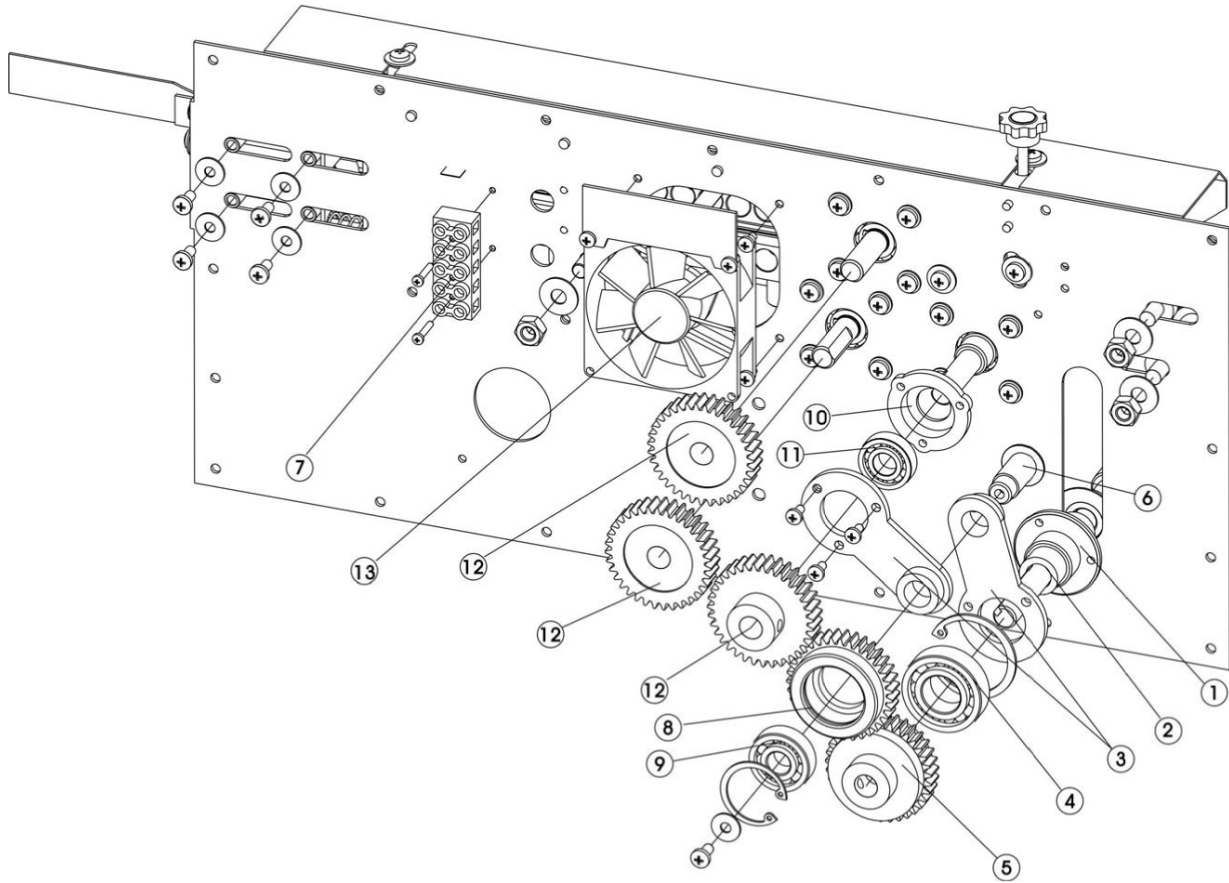


Figure 42. Gears

Figure 43. Gears

Item	Part #	Quantity	Description	Comments
1	CBS-880-42a	connection shaft	1	
2	CBS-880-40	transmission shaft	1	
3	BS-35A	connection board II	1	Includes #3-6,#8-11
4	BS-35A	6004-2Z bearing	1	Includes #3-6,#8-11
5	BS-35A / BS-35A-1	steel gear	1	Includes #3-6,#8-11
6	BS-35A	gear shaft	1	Includes #3-6,#8-11
7	BS-33B	10 pin wiring terminal (orange)	1	
8	BS-35A	middle gear	1	Includes #3-6,#8-11
9	BS-35A	6201-Z bearing	1	Includes #3-6,#8-11
10	BS-35A	bearing seat(three-hole)	1	Includes #3-6,#8-11
11	BS-35A	6001-2Z bearing	1	Includes #3-6,#8-11
12b	BS-35B	driven gear	1	
12c	BS-35C	driven gear	2	
13	CBS-880-32	axial fan	1	

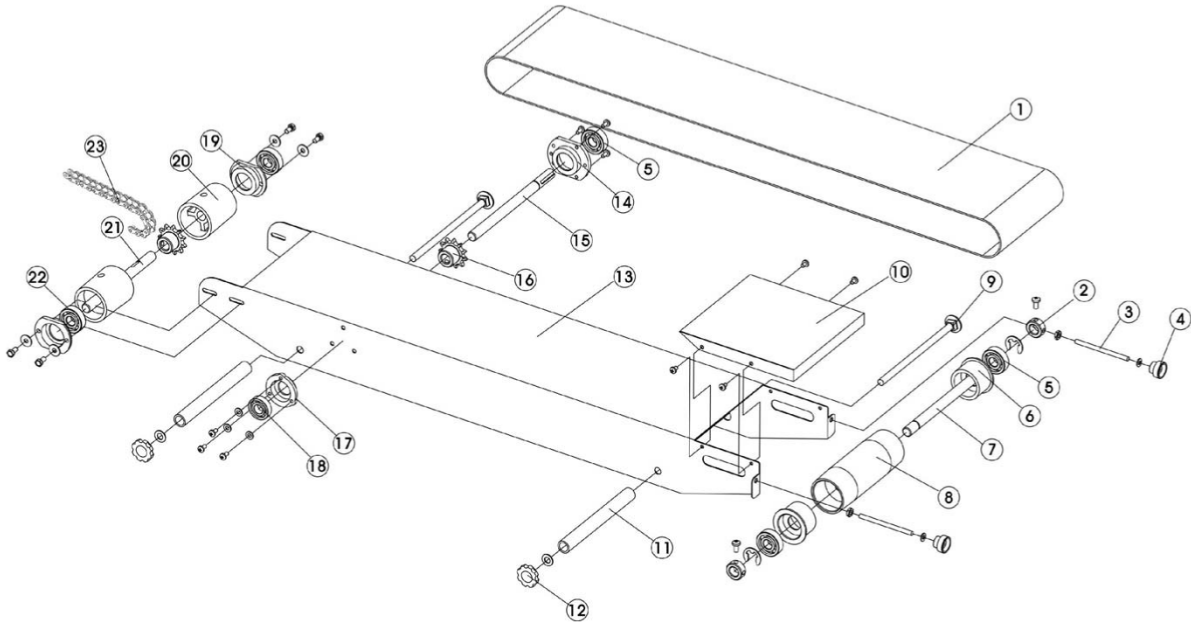


Figure 44. Conveyor Table

Figure 45. Conveyor Table

Item	Part #	Description	Quantity	Comments
1	CBS-880-1	conveyor belt	1	
2	BS-16	adjusting block for conveyor belt	2	Includes #2, 3, 4
3	BS-16	double end bolt	2	Includes #2, 3, 4
4	BS-16	adjusting knob for conveyor table	2	Includes #2, 3, 4
5	CBS-880-41	6201-Z bearing	3	Includes #5, 14-18
6	CBS-880-36	bearing seat of rear roller	2	Includes #5, 6, 7, 8
7	CBS-880-36	rear shaft of conveyor table	1	Includes #5, 6, 7, 8
8	CBS-880-36	rear roller of conveyor table	1	Includes #5, 6, 7, 8
9	CBS-880-18 / CBS-880-18B	half-round square neck bolt	2	Includes #9, 11, 12
10	CBS-880-15	worktable	1	specify flat or curved edges
11	CBS-880-18	plastic spacer	2	Includes #9, 11, 12
12	CBS-880-18 / BS-17	knob	2	Includes #9, 11, 12
13	CBS-880-20	conveyor table	1	
14	CBS-880-41	bearing seat	1	Includes #5, 14-18
15	CBS-880-41	middle shaft of conveyor table	1	Includes #5, 14-18
16	CBS-880-41a	sprocket of conveyor table	2	Includes #5, 14-18
17	CBS-880-41	bearing seat (three-hole)	1	Includes #5, 14-18
18	CBS-880-41	6001-2Z bearing	1	Includes #5, 14-18
19	CBS-880-37	two-eye bearing seat	2	Includes #19, 20, 21, 22
20	CBS-880-37	front roller of conveyor table	2	Includes #19, 20, 21, 22
21	CBS-880-37	front shaft of conveyor table	1	Includes #19, 20, 21, 22
22	CBS-880-37	6201-2Z bearing	2	Includes #19, 20, 21, 22
23	CBS-880-38	chain (48 segments)	1	

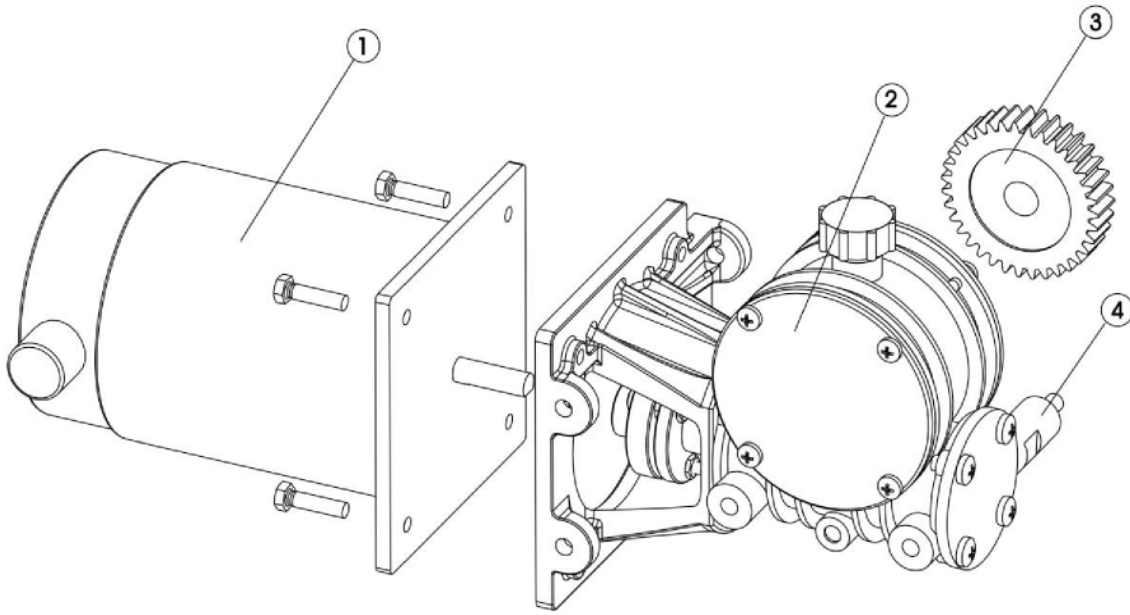


Figure 46. Motor / Turbocase

Item	Part #	Description	Quantity	Comments
1	CBS-880-29	110V DC motor	1	
	BS-29A	motor brush	2	Not shown. In motor.
2	CBS-880-30	worm-gear case assembly	1	
3	BS-35B	driving gearwheel	1	
4	CBS-880-12-4	pig iron gearwheel / turbocase support	1	

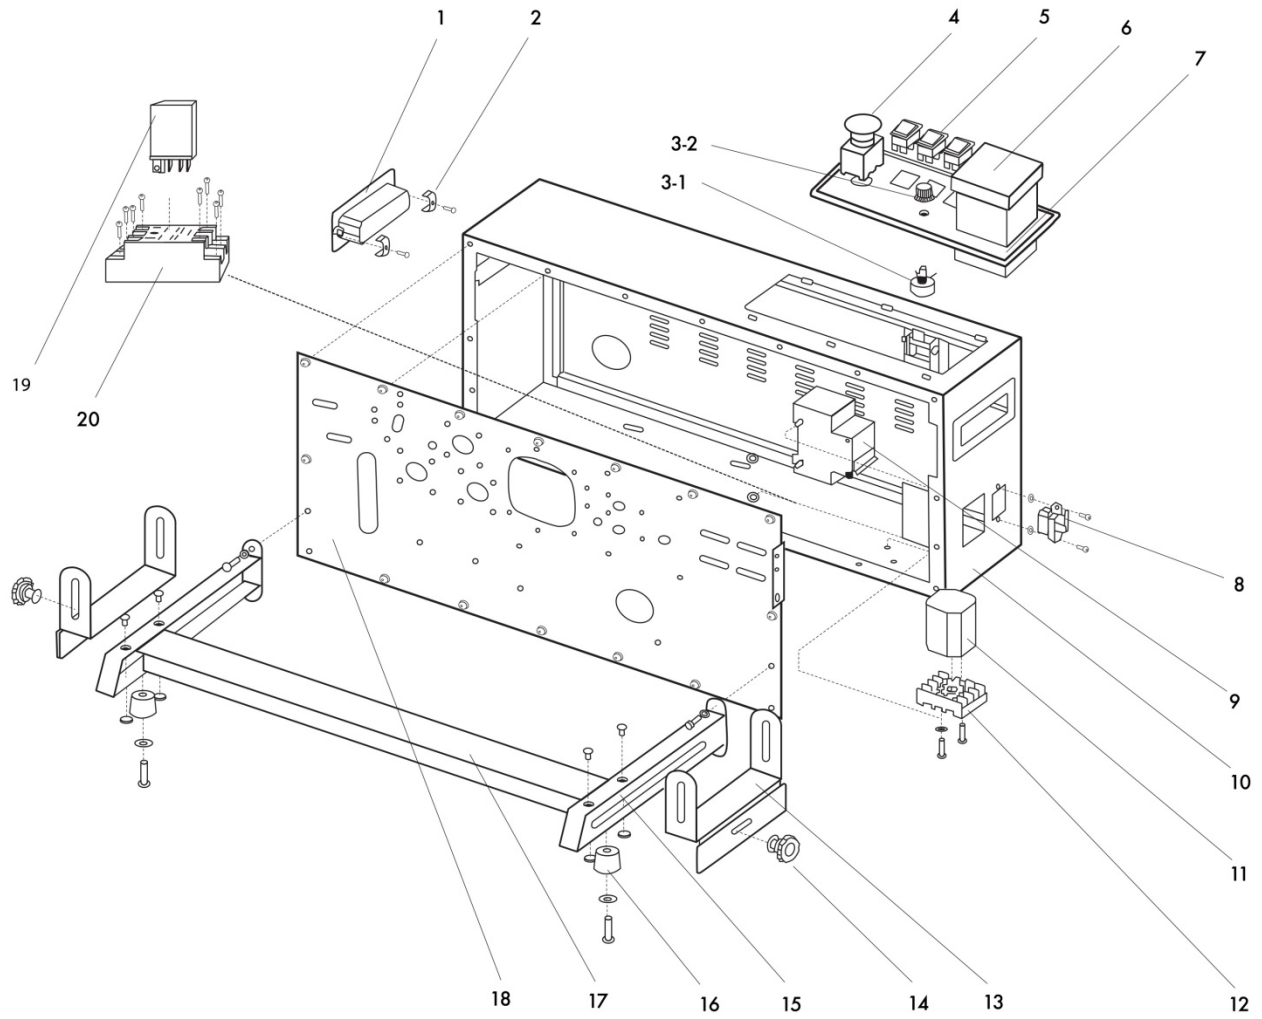


Figure 47. Sealer Body

Figure 48. Sealer Body

Item	Part #	Description	Quantity	Comments
1	CBS-880-88-1	handle support	2	Includes #1, #2
2	CBS-880-88-1	handle clamp	4	Includes #1, #2
3-1	BS-25	carbon-film potentiometer 220K	1	
3-2	BS-25A	K18-2 knob	1	
4	BS-22A	emergency stop switch	1	
5	BS-22	springboard switch	3	specify large or small
6	TMC-XMTE-1000-2	temperature controller - gen 1.0	1	determine version by taking temperature controller out
	TMC-XMTE-1000-2-O	temperature controller - gen 2.0		determine version by taking temperature controller out
7	CBS-880-83	plastic panel	1	A: old gen / B: new gen
8	BS-14	10 ^a socket		
9	BS-27	DZ47-2P/5A breaker	1	
10	CBS-880-88	housing	1	
11	BS-52A	speed-regulating PC board	1	
12	BS-45A	PF083A socket	1	
13	CBS-880-18	transition table support	2	Includes #13, #14
14	CBS-880-18	(674 Knob) handle	2	Includes #13, #14
15	CBS-880-68	foot	2	specify left or right
16	BS-67B	rubber foot pad	2	specify A or B
17	CBS-880-68B	rail	1	
18	CBS-880-88-18	soleplate (electrophoresis)	1	Steel: 102102-3
19	R-JQX-13F	relay	1	

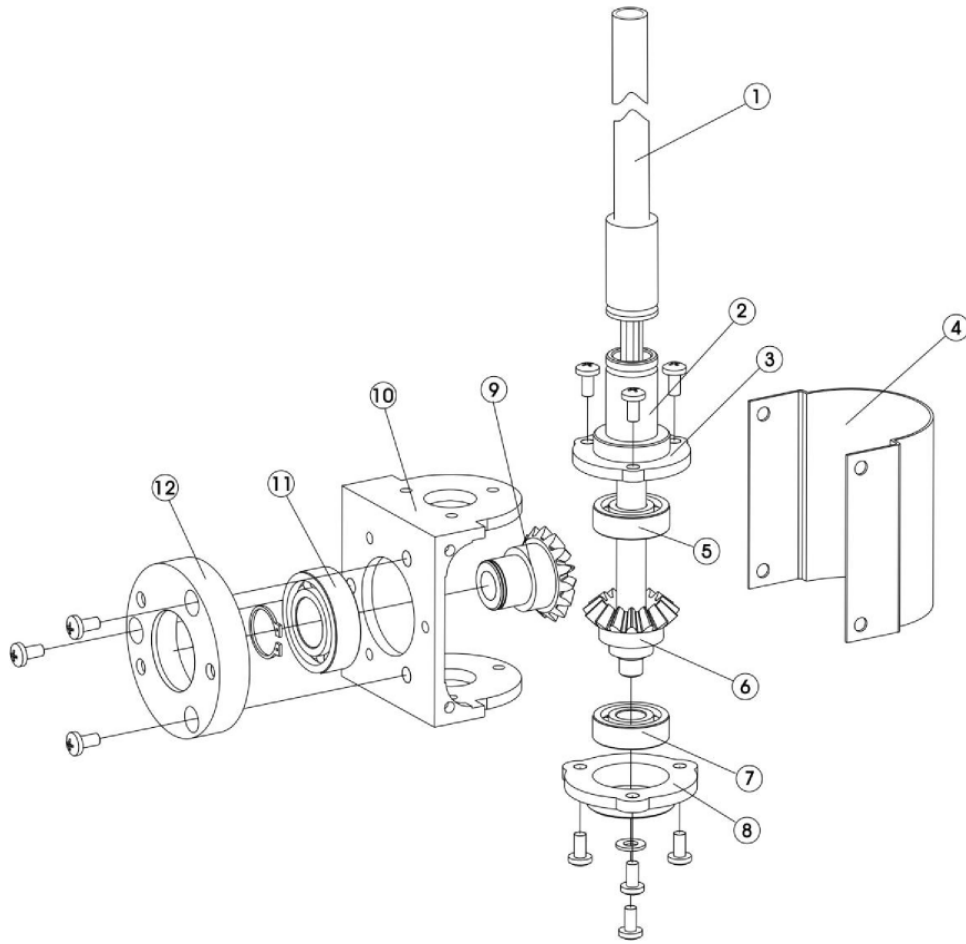


Figure 49. Umbrella Gear (only in CBS-880II units)

Item	Part #	Description	Quantity	Comments
1	CBS-880-72c	driving shaft I	1	Umbrella Gear Base - Parts #1-12
2	CBS-880-72c	driving shaft II	1	Umbrella Gear Base - Parts #1-12
3	CBS-880-72c	bearing support (big)	1	Umbrella Gear Base - Parts #1-12
4	CBS-880-72c	conical gear support cover	1	Umbrella Gear Base - Parts #1-12
5	CBS-880-72c	6000-2Z bearing	1	Umbrella Gear Base - Parts #1-12
6	CBS-880-72c	short conical gear	1	Umbrella Gear Base - Parts #1-12
7	CBS-880-72c	608 bearing	1	Umbrella Gear Base - Parts #1-12
8	CBS-880-72c	bearing support (small)	1	Umbrella Gear Base - Parts #1-12
9	CBS-880-72c	long conical gear	1	Umbrella Gear Base - Parts #1-12
10	CBS-880-72c	conical gear support	1	Umbrella Gear Base - Parts #1-12
11	CBS-880-72c	6003-2Z bearing	1	Umbrella Gear Base - Parts #1-12
12	CBS-880-72c	double-purpose bearing support (big)	1	Umbrella Gear Base - Parts #1-12

Electrical Circuit Diagram

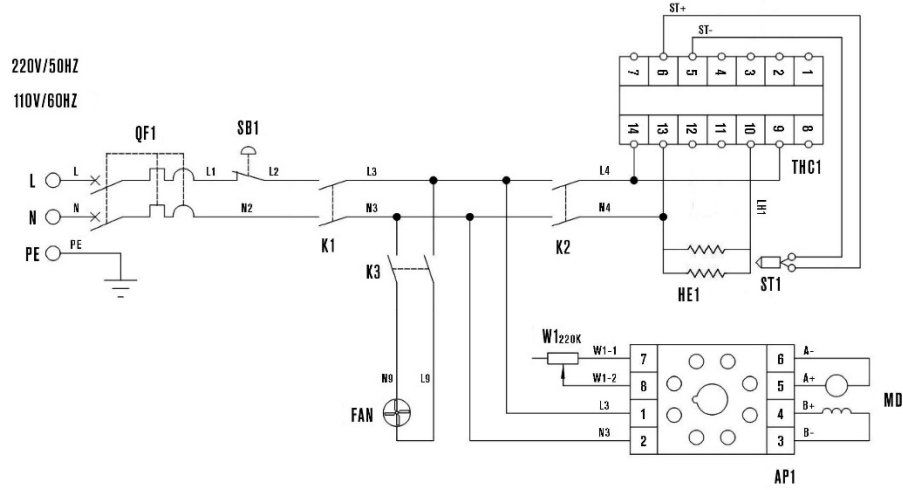


Figure 50. Electrical Circuit Diagram. (QF1) Breaker, (SB1) Switch/Emergency Stop, (K1) Switch/On-Off, (K2) Switch/Seal, (K3) Switch/Fan, (MD) DC Motor, (FAN) Axial-Flow Fan, (THC1) Temperature Controller, (ST1) Thermocouple, (HE1) Heating Element, (W1) Potentiometer, (AP1) Speed-Regulating PCB

Troubleshooting

Changing Emergency Stop

Always unplug the unit from the power source when making adjustments.*

Problem: The emergency stop (Part #BS-22A_Gen3.0) needs to be replaced




Remove the control panel plate from the band sealer. Place the control panel on top of the band sealer for better viewing.

For our larger band sealers (FRM-1120C, FRS-1120W, HL-M1120LD units), remove the control box cover to access the back of the control panel.

1. To remove Gen 3.0 emergency stop, click the yellow tab in release position.





Locked position

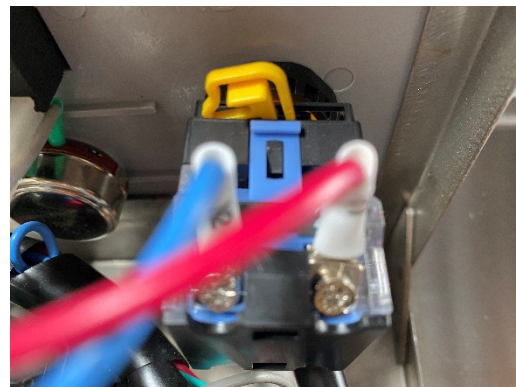

Release Position


2. Remove the contact block from the push button. The push button can be removed by loosening the black nut.

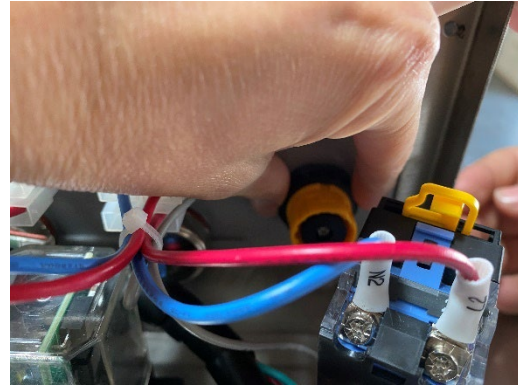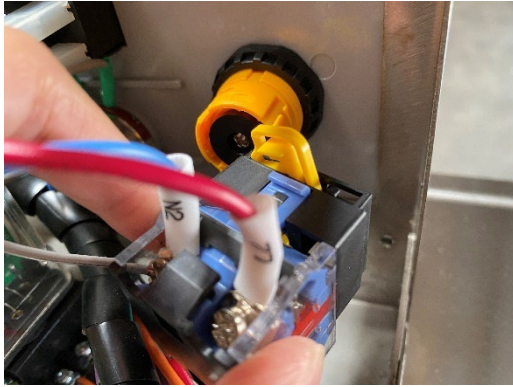

3. Make note of the wiring on the emergency stop and reconnect the new emergency stop. Blue wires connect to 11 and 12 and the red wires connect to 21 and 22





4. Connect the contact block to the push button. Match the two pieces where they are labeled top. Push the yellow tab into the locked position.

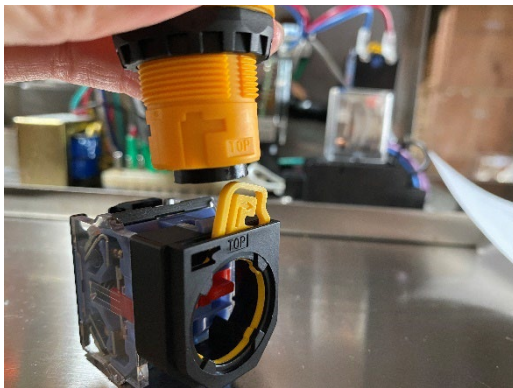

Changing Rocker Switch

Always unplug the unit from the power source when making adjustments.*

Problem: The rocker switch (Part #BS-22A_Large) needs to be replaced

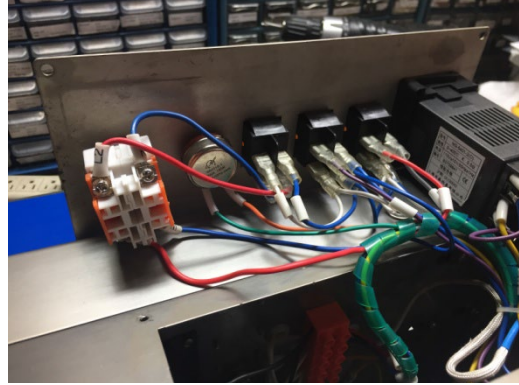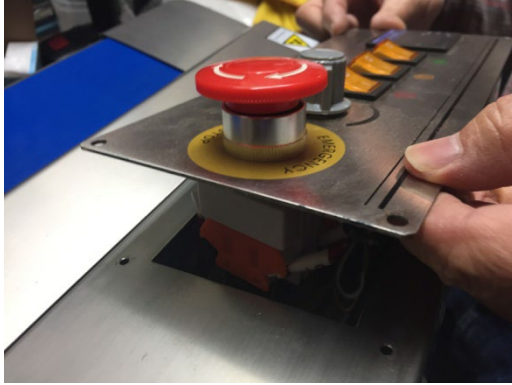

Remove the control panel plate from the band sealer. Place the control panel on top of the band sealer for better viewing.



Remove the rocker switch by placing downward pressure on the switch at the back. Switch will pop out.

To replace, unplug the wires and replace with a new rocker switch **EXACTLY** as the old switch.

Problem	Possible Causes	Solution
Sealing belt is off tracking.	Driving wheel shaft is not parallel to driven wheel shaft	Adjust two adjusting screws on the adjusting block seat (Part# CBS-880-13)
Sealing belts are tearing	<ol style="list-style-type: none"> 1. Too much tension on sealing belt 2. Sealing belt is off tracking 3. Creases on the sealing belt 4. Residual film or other debris attached to the sealing belt 	<ol style="list-style-type: none"> 1. Adjust the vertical adjusting screw on driven wheel seal to decrease tension on sealing belt 2. see above 3. When installing belt, make sure no creases are found on belt 4. Clean surface of belt with cloth
Seal is crumpled and film sticks to sealing belts	<ol style="list-style-type: none"> 1. Temperature is too high 2. Guide belt is not correctly in place 3. Plastic melted on the sealing belt 4. Sealing belt is easily scorched 5. Too much tension on sealing belt 	<ol style="list-style-type: none"> 1. Reduce temperature 2. Adjust guide belt 3. Clean or replace sealing belt <p>If any plastic melts on the sealing belt, your bags will stick to the melted plastic</p> <ol style="list-style-type: none"> 4. Clearance between two heating blocks is too small or temperature is too high 5. Adjust the vertical adjusting screw on driven wheel seat
Embossing is not clear	<ol style="list-style-type: none"> 1. Embossing roller is worn out 2. Pressure spring on embossing roller needs to be tightened 	<ol style="list-style-type: none"> 1. Replace embossing roller 2. Adjust the embossing roller spring (Part# BS-5)
Material will not pass through sealing blocks	Clearance between heating blocks or cooling blocks may be too small	Adjust the clearance between blocks by adjusting the springs and stopping flakes found above the blocks
Conveyor belt is off tracking	<ol style="list-style-type: none"> 1. Driving roller shaft is not parallel to the driven roller shaft 2. Active axle is not parallel to the driven axle 	<ol style="list-style-type: none"> 1. Adjust using the conveyor belt adjustment (Part# BS-16) 2. Adjust two adjusting screws on driving wheel seat
Conveyor and sealing belt are not moving at same speed	Not enough tension on conveyor belt	<ol style="list-style-type: none"> 1. Tighten the chain of driving roller shaft (front shaft) and middle shaft. (Parts # CBS-880-37 and CBS-880-41) 2. Tighten the conveyor belt
Temperature doesn't rise or cannot be controlled	<ol style="list-style-type: none"> 1. Heat switch is damaged 2. Heater (BS-9B) is damaged 3. Temperature Controller 4. Coupling 	<p>Replace:</p> <ol style="list-style-type: none"> 1. Heat switch (BS-22-Large) 2. Heater (BS-9B) 3. Temperature Controller 4. Thermocouple (CBS-880-34)

Problem	Possible Causes	Solution
Motor runs at a high speed and cannot be regulated	Speed controller has malfunctioned	Replace the speed controller (BS-52A)
Power, heater, and or fan switches do not light up	<ol style="list-style-type: none"> 1. No AC Voltage 2. Open Fuse 3. Emergency stop is set 4. Emergency stop is damaged 5. Rocker switch is damaged 	<ol style="list-style-type: none"> 1. Check power source / power cord 2. Replace the circuit breaker 3. Release the emergency stop 4. Replace the emergency stop 5. Replace the on/off rocker switch
Machine does not run	<ol style="list-style-type: none"> 1. Board for speed regulation is abnormal 2. Doesn't connect well 3. Brushes in the motor are too short because of friction 	<ol style="list-style-type: none"> 1. Replace the speed board (BS-52A) 2. Tighten the connecting screws 3. Replace motor brushes (BS-29A) <p>If the temperature controller works and the power lamp illuminates but the motor does not move, start off by checking the motor and turbocase connection. Remove the back of the machine and you will see bushing where the motor connects to the gear box. Ensure the bushing is not broken. There is also a set screw that connects the bushing to the gear box / motor shafts. Ensure that these are tight so that when the motor turns, the turbocase turns as well.</p> <p>If the turbocase is noisy before it stopped working, the gear box could be broken inside. Lack of oil could cause this.</p> <p>If the lamp illuminates and the motor does not turn, the motor speed controller may need to be replaced.</p> <p>Other things could be faulty or wires to the motor or the brushes in the motor are worn.</p>
Noise in the gear box	The lubricating oil of the turbocase needs to be changed	Use 000# super pressure lithium grease

Spare Parts List

Spare Parts List

Included with your band sealer are the following parts. Please note that spare parts included with your band sealer are subject to change without notice.

- ❖ Power Cord (Part# PWC-CBS)
- ❖ PTFE Sealing Belts (Part# CBS-880-10)
- ❖ Drive Belts (Part# CBS-880-26)
- ❖ Speed Adjusting PC Board (Part# BS-52A)
- ❖ Screwdriver, allen wrench and special tool
- ❖ Optional: Typeset Box which includes numbers (0-9), Letters - EXD, embossing wheel, and key wrench

Quality Control Testing

Our band sealers are manufactured in a facility which is certified in accordance with ISO 9001:2008. In addition, we quality test all of our band sealers in our facility following a rigorous and exacting standard to ensure that the product you purchased is a high quality reliable machine.

✓ Steps	Description
	Inspect all wiring on the unit, nothing is loosely attached. Make sure all wires are connected correctly.
	Make sure all connections are tight and properly mounted. (Ex: PC Board, Relay)
	Check parts to ensure they are in proper working order (ex: wheels, belts, knobs, etc)
	CBS-880 only - Attach the conveyor to the body via the drive shaft (Part #40). Detach after testing.
	Turn on machine - start, seal, fan, printer Check all knobs to make sure they start and end in the correct position
	Make adjustments as necessary if there is any unusual noise. Noise should be under 80db.
	Check fan - There should be air coming out of the cooling blocks
	Check motor - motor brushes should be held in tightly
	Check conveyor belt to make sure the belt is running smoothly and evenly
	Run machine for at least 20 minutes - after the seal temperature has been reached, seal bag sample to ensure good quality seal
	Clean machine
	Enter serial # of the unit in the manual
	Repackage sealer w/ QC form, sealed bag / printed sample and manual.

Date:
Technician

