

Salad/Sandwich Prep Refrigerators

1, 2, 3 Door Models



Mega Top Salad/Sandwich Prep Refrigerators

1, 2, 3 Door Models



Undercounter Refrigerator/Freezer

1, 2, 3 Door Models



Refrigerated Pizza Prep-tables

1, 2, 3 Door Models



Instruction Manual

This manual contains important information regarding your unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty.

WARNINGS

- To minimize shock and fire hazards, be sure not to over load the outlet. One outlet should be designated to the unit only.
- Do not use extension cords.
- Do not put hands under the unit when moving.
- When the unit is not being used for an extended period of time, unplug the unit from the outlet.
- After unplugging the unit, wait at least 10 minutes before re-plugging it. Failure to wait the allotted time may cause damage to the compressor.
- To minimize shock and/or fire hazards, be sure not to plug or unplug the unit with wet hands.
- Before any maintenance or cleaning, unplug the unit as a precaution.
- To minimize shock and fire hazards, make sure that the unit is properly grounded.
- Do not attempt to remove or repair any component.
- Make sure that the unit is not resting on or against the electrical cord or plug.
- Do not hang or lean against door as this may cause personal injury or damage to the door hinge.
- Do not store any flammable and/or explosive gas or liquids inside the unit.
- Do not attempt to alter or tamper with the electrical cord.
- Do not set the desired temperature out of the recommended temperature range:

(REFRIGERATOR:32F–55F) (FREEZER:-15F–20F)

INSTALLATION

- If the unit has recently been transported do not use for a minimum of 24 hours before installing.
- Make sure that the unit is at the desired temperature before loading it with product.
- Ensure that the unit will have proper ventilation in the area that it will operate.
- Inspect the unit to verify all accessories (shelves, shelf clips, casters) are equipped with the unit before proceeding with installation.
- Review the entire manual in its entirety. Lack of maintenance or misuse of the unit will void the warranty. Please fill out the registration card and send back to the manufacturer.

Cabinet Location Guidelines

- **Install the unit on a flat sturdy surface**
 - Unit may make abnormal noises if surface is uneven
 - Unit may malfunction if surface is uneven
- **Install the unit in an indoor, well-ventilated area**
 - Unit performs more efficiently in a well-ventilated area
 - Maintain a clearance of at least 4” for the back of the unit
 - Outdoor use may cause decreased performance and may damage the unit
- **Avoid installing the unit in a high humidity and/or dusty area**
 - Exposure to humidity may cause the unit to rust and/or decrease the efficiency of the unit.
 - Dust build up on the condenser coil will cause the unit to malfunction. Clean the condenser at least once a month with a brush or clean cloth. Neglect of maintenance will void the warranty.
- **Select a location away from heat and moisture generating equipment**
 - High ambient temperatures will cause the compressor to overcompensate, leading to higher energy bills and eventual break down of the unit.
 - Malfunction due to high temperatures will void the warranty.



ELECTRICAL

Please ensure that the required voltage of the compressor is constant at all times. Low or high voltage can detrimentally affect the unit and there by void its warranty.

All units should be plugged into a grounded and properly-sized electrical outlet with an appropriate over current protection. Please refer to the electrical requirements on the serial tag located inside the unit. Please make sure that the unit has its own dedicated outlet. Do not use an extension cord.

TEMPERATURE CONTROLS

The temperature controls are factory set to maintain an average temperature of 38F. To set a different temperature, adjust the control knob located inside the unit. To decrease the temperature (cooler), turn clockwise. To increase the temperature (warmer), turn counter-clockwise—see diagram below.

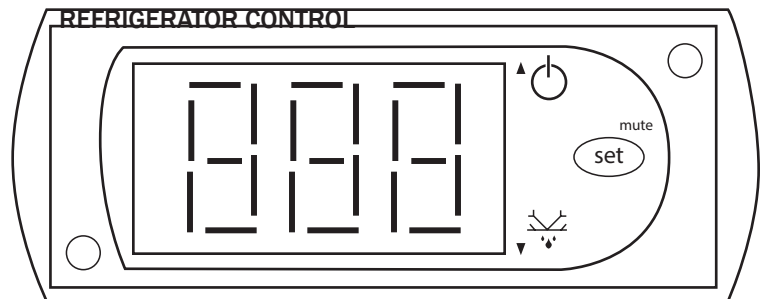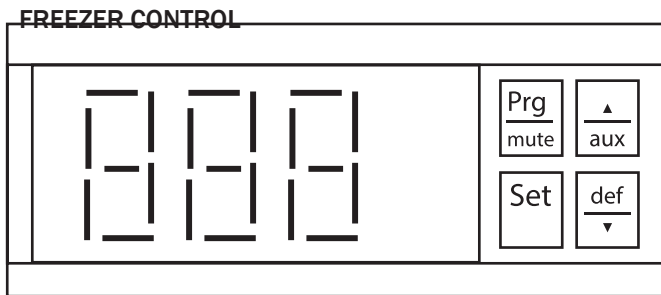

OPERATIONS

Regulating the Temperature

Your new freezer or refrigerator is now manufactured to run at ideal temperatures for food quality and should not require any alterations.

Refrigerators are set to cycle between a base temperature of 33 degrees Fahrenheit and a temperature maximum of 40 degrees Fahrenheit.

Freezers are set to cycle between a base temperature of - 7 degrees Fahrenheit and a greatest temperature of 0 degrees Fahrenheit.

Altering the temperature changes the base temperature your unit will keep running at. Your unit won't run always at this setting. To change it, take after these guidelines:

DIGITAL CONTROLS

- Hold "SET" for 1 sec. The display will flash the temperature that the refrigerator is currently set to.
- Use the arrow buttons to adjust the temperature.
- Press "SET" to save your settings.

Never forget to ascertain the differential in the event that you change the base temperature setting. The cabinet temperature will change up to +7 degrees over your set least temperature as the compressor runs and stop. Setting the temperature too high will bring about risky temperatures and potential health code violations.

LOADING PRODUCT

Shelves have been pre installed. Before loading shelves with products, ensure that all shelf clips are completely fastened in their correct locations. All shelves should be completely level before stocking the cabinet with product. In order to maintain correct air flow inside the unit, keep at least 2" to 4" of space between the back wall and the product. Blocking the evaporator fans may cause a warmer cabinet temperature and cause damage to the compressor.

DEFROST SYSTEMS

Refrigerator coils are kept below the freezing point (32F). During compressor down time, the evaporator fan continues to circulate air through the evaporator coil. This air circulation raises the coil temperature above the freezing point, melting any accumulated frost. Run-off water is drained in to the evaporator pan and evaporated. Freezer coils are defrosted electrically. Automatic defrost timers are built in to their refrigeration system and may not be adjusted. The defrost timers automatically initiate at pre-set intervals and for a pre-determined duration.

NOTE: We strongly recommend that any servicing be performed by an authorized service technician.

PLEASE NOTE: Excessive door openings should be avoided in order to maintain cabinet temperature and to eliminate the possibility of coil freeze up.

LOADING FOOD PANS

Pizza prep units and sandwich prep units are designed to function with all pans in place, even if some pans are not in use. For optimal food freshness, fill the pans only with an amount that can be used in specific usage period. During non-use, close the insulated lid cover.

RUNNING A MANUAL DEFROST CYCLE

This unit is pre-programmed to run automatic defrost cycles at preset intervals. However, if you would like to run a manual defrost cycle at any time, please follow the steps below:

Refrigerators: Press the defrost button (snowflake symbol and down arrow) for approximately 3 seconds. Repeat to stop the defrost cycle.

TROUBLESHOOTING

Before requesting any service on the unit, please check the following chart. Service calls resulting from lack of maintenance or misuse is not covered under the warranty and may also void the warranty.

Please note that this guide serves only as a reference for solutions to common problems.

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
Compressor not running	Blown fuse or circuit breaker tripped Unplugged power cord Thermostat set too high Cabinet in defrost cycle	Replace or reset circuit breaker Plug in power cord Set thermostat to lower temperature Wait for defrost cycle to finish
Condenser runs for long Periods of time	Excessive amount of warm Products placed in cabinet Prolonged door opening or door left open Door gasket(s) not creating a proper seal Dirty condenser coil Evaporator coil iced over	Allow adequate time for Product to cool down Ensure doors are closed. Avoid leaving the door open for long periods of time Ensure gasket is installed correctly and that it is clean Replace gasket if necessary Clean the condenser coil Unplug unit and allow coil to defrost. Ensure that the thermostat is not set to cold Ensure that the door gasket is creating a proper seal

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
Cabinet temperature is too warm	Thermostat set too warm Blocked air flow Excessive amount of warm products placed in the cabinet Blown fuse or circuit breaker tripped Dirty condenser coil Prolonged door open or door left open Evaporator coil iced over	Set thermostat to lower temperature Re-arrange products to allow proper air flow. Make sure there is at least four inches of clearance from evaporator Allow adequate time for products to cool down Replace fuse or reset circuit breaker Clean the condenser coil Ensure doors are closed. Avoid leaving the door open for long periods of time Unplug unit and allow coil to defrost. Ensure that the thermostat is not set to cold. Ensure that the door gasket is creating a proper seal
Cabinet is noisy	Loose parts Tubing Vibration	Locate and tighten loose parts Ensure tubing is free from contact with other tubing or components.

REGULAR MAINTENANCE

WARNING: Disconnect power cord before cleaning any parts of the unit.

CLEANING THE CONDENSER COIL

For efficient operation, it is important that the condenser surface be kept free of dust, dirt, and lint. It is highly recommended that the condenser coil be cleaned at least once a month. Clean with a commercial condenser coil cleaner and brush the condenser fins from top to bottom. After cleaning, straighten any bent fins with a fine comb.

CLEANING THE FAN BLADES AND MOTOR

If needed, clean the fan blades and motor with a soft cloth if there is any build up. If it is necessary to wash the fan blades, cover the fan motor first to prevent any kind of moisture damage.

CLEANING THE INTERIOR OF THE UNIT


When cleaning the cabinet interior, use a mixture of mild soap and warm water. It is not recommended to use steel wool, caustic soap, abrasive cleaners, or bleach as this may cause damage to the stainless steel surface.

Wash door gaskets on a weekly basis. Remove the door gasket from the frame of the door, soak in a mixture of mild soap and warm water for 30 minutes and dry with a soft cloth.


- Place back on the door and check that the gaskets form a proper seal after they are replaced.
- Periodically remove the shelves and pilasters from the unit and clean them with a mild soap and water mixture.
- To remove the pilasters, first remove the shelves and shelf brackets. Then lift the pilaster up and out.

Food Pan Layouts- Pizza Prep Table


(6) 1/6 Size, (2) 1/9 Size

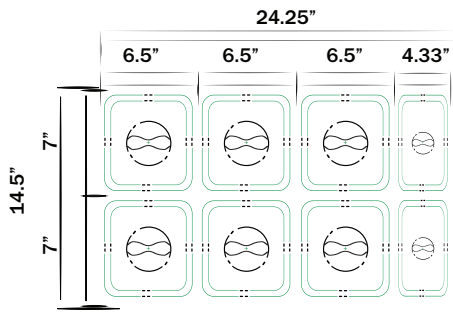


(10) 1/6 Size

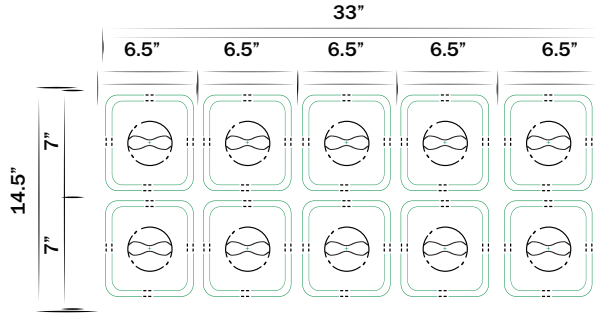


(12) 1/6 Size, (6) 1/6 Size

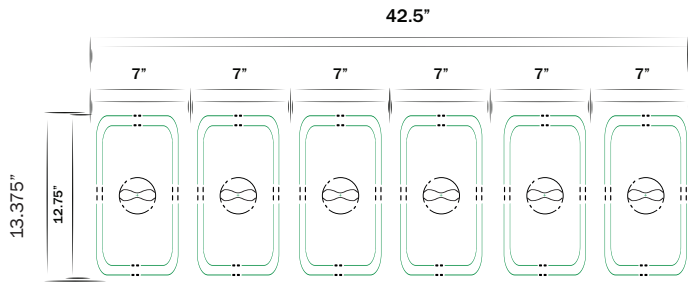

(16) 1/6 Size, (6) 1/3 Size

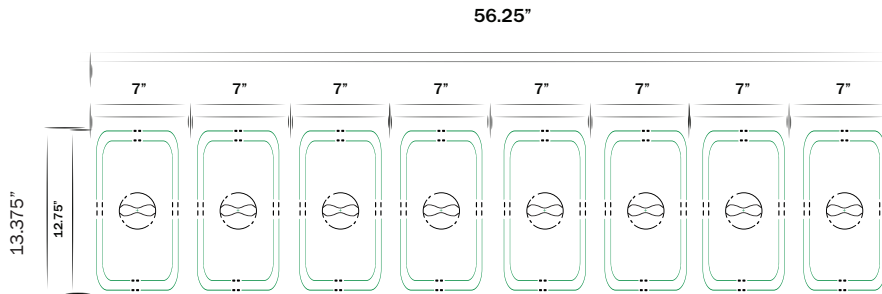


(18) 1/6 Size, (9) 1/3 Size

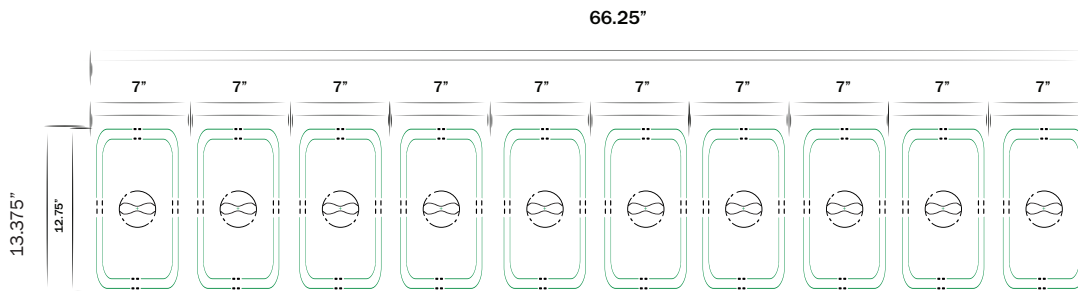


Food Pan Layouts- Mega Top Prep Table


(9) 1/6 Size, (3) 1/9 Size

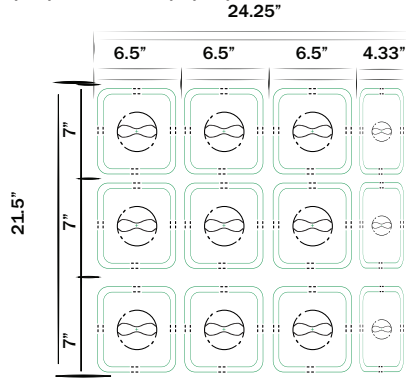


(15) 1/6 Size

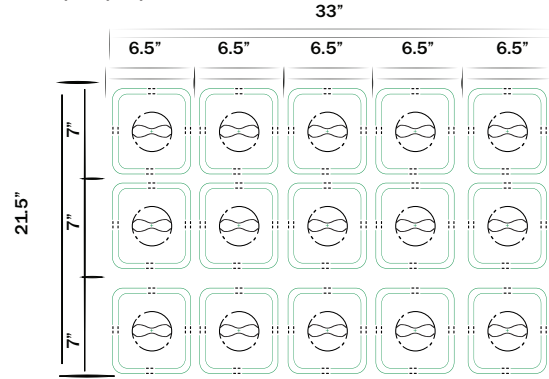


(18) 1/6 Size

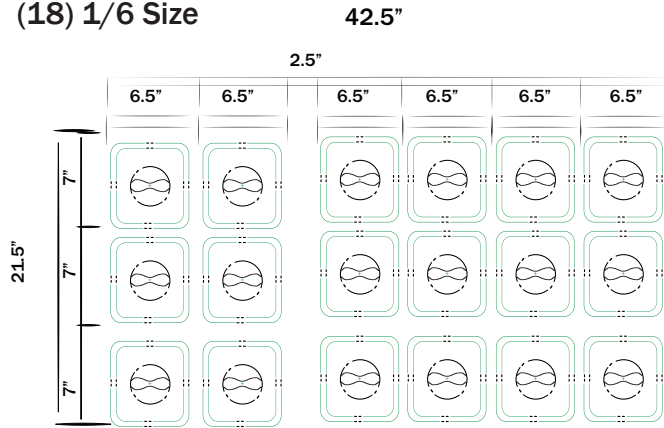

(24) 1/6 Size

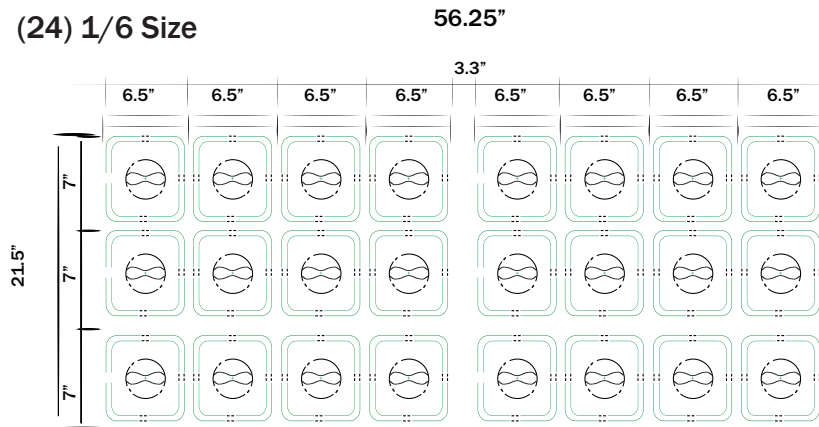


(30) 1/6 Size

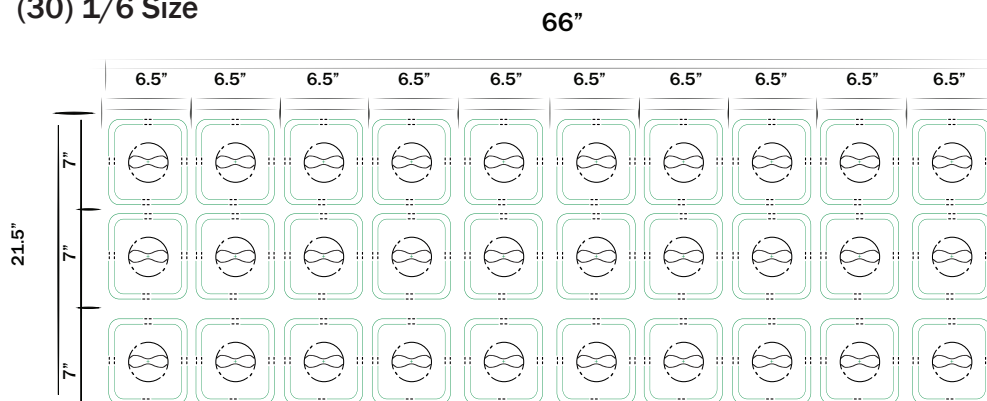


Food Pan Layouts- Salad/Sandwich Prep Table


(6) 1/3 Size

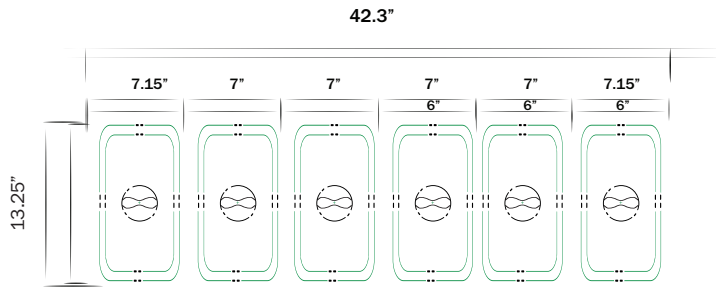

(9) 1/3 Size

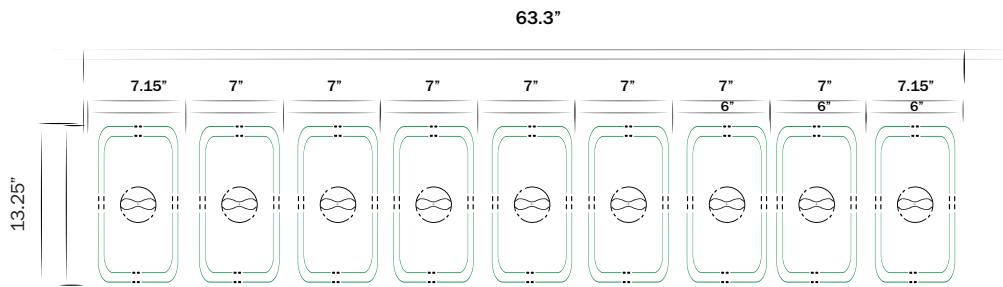

(12) 1/3 Size

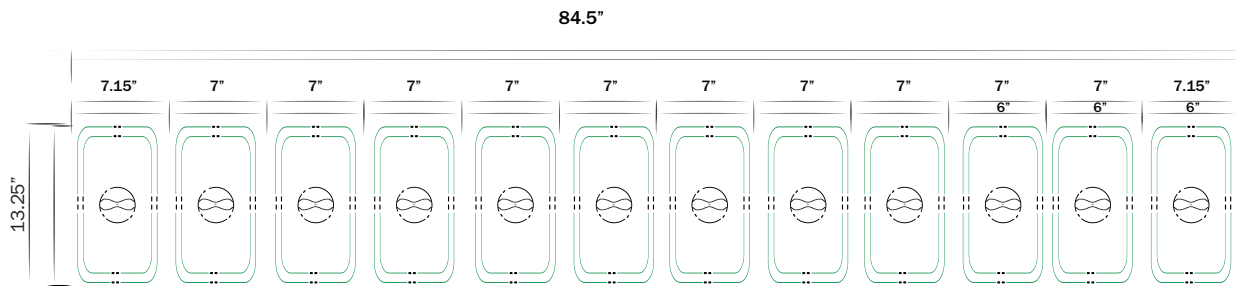

WARRANTY

ONE YEAR WARRANTY

Warrants to the original purchaser of this unit, the cabinet and all parts thereof, to be free from defects in material or workmanship, under normal use and service, for a period of one (1) year from the date of original installation or 15 months after shipment date, whichever occurs first.

Any parts covered by this warranty that are examined and determined to have been defective within one (1) year of original installation or fifteen (15) months after shipment date from manufacturer, whichever occurs first, shall be repaired or replaced as stated below. Shall be deemed to have fully complied with its obligation under the foregoing warranties by electing either one of the following procedures

- 1.Furnishing a replacement part, freight collect, in even exchange for the returned part, freight collect.
- 2.Receiving the defective part, freight collect; repairing it; and returning it, freight collect.

ADDITIONAL FOUR YEAR COMPRESSOR PART WARRANTY

In addition to the (1) one year warranty stated above, warrants its hermetically and semi-hermetically sealed compressor to be free from defects in both material and workmanship under normal use and service for a period of four (4) additional years from the date of original installation but not to exceed five (5) years and three (3) months after shipment from manufacturer.

Compressors determined to have been defective within this extended time period will be either repaired or replaced with a compressor or compressor parts of similar design and capacity.

The four (4) year extended compressor warranty applies only to hermetically and semi-hermetically sealed parts of the compressor and does not apply to any other parts or components, including, but not limited to, cabinet, paint finish, temperature control, refrigerant, metering device, driers, motor starting equipment, fan assembly any other electrical component, etc.

134A (404A) COMPRESSOR WARRANTY

The four year compressor warranty detailed above will be voided if the following procedure is not carefully adhered to:

- 1.This system contains R134A (R404A) refrigerant and polyol ester lubricant. The Polyester lubricant has rapid moisture absorbing qualities. If long exposure to the ambient conditions occur, the lubricant must be removed and replaced with new. Failure to comply with recommended lubricant specification will void the compressor warranty.
- 2.Dryer replacement is very important and must be changed when a system is opened for servicing. Dryer must be used with XH-9 desiccant.
- 3.Micron level vacuums must be achieved to insure low moisture levels in the system. 500 microns or lower must be obtained.

WHAT IS NOT COVERED BY THIS WARRANTY

Obligation under warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

- 1.WARRANTY IS NOT TRANSFERABLE. This warranty is not assignable and applies in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, express or implied, including any warranty of merchantability or fitness for a particular purpose.
- 2.NO CONSEQUENTIAL DAMAGES. Not responsible for economic loss: profit loss or special, indirect, or consequential damages, including without limitation, losses or damages arising from food or product spoilage claims whether or not on account of refrigeration failure.
- 3.ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD. Not responsible for the repair or replacement of any parts that have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or an Act of God.
- 4.NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. There are no other warranties, express, implied or statutory, except the one(1) year warranty and the additional four(4) year compressor warranty as described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.
- 5.TRANSPORTATION COSTS. Will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.
- 6.WARRANTY CLAIMS. All claims should include: model number of the cooler, the serial number of the cabinet, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect. Any action or breach of these warranty provisions must be commenced within one (1) year after that cause of action has occurred.

WARRANTY REGISTRATION CARD

MAIL CARD IMMEDIATELY



This card must be mailed immediately after installation date for warranty to be in effect.

National Service America • 230 Park Ave, Suite 1000 • New York, NY • 10169

_____		_____	
(Name of Business)		(Dealer Purchased From)	

(Address)	(City)	(State)	(Zip Code)
_____		_____	
(Model Number)		(Serial Number)	

This is to inform that I, _____
(Please print name of individual who owns business)
have had the above installed in my place of business _____
(Date of Purchase)

_____	_____	_____
(Contact Phone Number)	(Contact E-mail)	(Signature of Individual Who Owns Business)

The above warranties are in effect from this installation date, or 90 days, which ever comes first.