



SPECIFICATIONS : -

- 1. DISPLAY TYPE** : 16 x 2 Character LCD
- 2. STATUS LED'S** : OP1 : Control Output Status
 OP2 : Output 2 Status
 ST : Soak Time Status
 AT : Tune Status

- 3. _____**
- Sensor input : TC:J,K & RTD Pt-100
 Analog input : 0 - 10 VDC, 0 - 20 mA, 4 - 20 mA
 Range : Refer below Table.

Sensor Type	Range	Resolution	Accuracy
Fe-k(J) T/C	0 ~ 760°C	1 °C	} ± 1 °C
Cr-AL(K) T/C	-99 ~ 1300°C	1 °C	
Pt-100(RTD)	-100 ~ 450°C	1 °C	
Pt-100(RTD 0.1)	-99.9 ~ 450.0°C	0.1 °C	± 0.3 °C

- Sampling Time : 125 msec.
 Resolution : 1°C
 CJC for TC : Built in automatic
 LWC for Pt-100 : Built in up to 18E max.
 Digital Filter : 1 to 10 Sec.

- 4. _____**
- Contact type : N/O, COM
 Contact Rating : 5A @ 250VAC or 30 VDC
 Life expectancy : > 5,00,000 operations
 Isolation : Inherent

- 5. SSR DRIVE OUTPUT**
- Drive Capacity : 12V @ 30mA.
 Isolation : Non-Isolated.

- 6. FUNCTION**
- Output 1 : Main Control output (Factory Set)
 1) Relay 2) SSR
- Output 2 : Programmable
 1) Auxiliary control 2) Alarm
 3) None
- Output 3 : 1)Auxiliary Control 2) Alarm
 3) Soak Timer 4) None
- Control Action : ON-OFF/PID (Select)
 Control Mode : Heat/Cool (Select)

- 7. ENVIRONMENTAL**
- Operating Range : 0 ~50°C, 5~90% Rh
 Storage Humidity : 95% Rh (Non-condensing)

- 8. POWER SUPPLY**
- Supply Voltage : 90~270VAC, 50/60Hz.
 Consumption : 4W Maximum.

INSTALLATION GUIDELINES

1. Prepare the cut-out with proper dimension as shown in figure.
2. Remove clamp from Controller.
3. Push the Deep freezer through panel cut-out and secure the Controller in its place by tightening the side clamp.

SAFETY INSTRUCTION

MECHANICAL

- ❖ Ambient temperature and relative humidity surrounding the Controller must not exceed the maximum specified limits.
- ❖ The Controller in its installed state must be protected against excessive electrostatic or electromagnetic interferences.

ELECTRICAL

- ❖ The Controller must be wired as per wiring diagram & it must comply with local electrical regulation.
- ❖ The Electrical noise generated by switching inductive loads might create momentary Fluctuation in display, latch up, data loss or permanent damage to the instrument. To reduce this use snubber circuit across the load.

POWER UP: At power on, following sequence will be prompted on the display till it reaches to Home display mode.

UPPER DISPLAY	version 1 . 0 . 4	»	pv : 25
LOWER DISPLAY	VERSION		sp : 100

PROGRAMMING

USER LIST : To access the user list Press & Release SET key once.

Para Meter	Upper Display	Lower Display	Range	Description	Default
Control Set Point	Control SP	0	LSPL ~ HSPL	User can change the SP1 value using UP/ DOWN and SHIFT keys. Holding the key will change the value at a faster rate. Press SET key to store the desired value.	0 °C
Auxiliary 1 Set Point	Auxiliary 1 SP	0	LSPL ~ HSPL -99 to 99 °C	This parameter will be prompted if Output 2 is configured as AUCn and SP2 is Enabled (1) Either absolute auxiliary control mode. (2) Either deviation auxiliary control mode.	0 °C
Auxiliary 2 Set Point	Auxiliary 2 SP	0	LSPL ~ HSPL -99 to 99 °C	This parameter will be prompted if Output 3 is configured as AUCn and SP3 is Enabled (1) Either absolute auxiliary control mode. (2) Either deviation auxiliary control mode.	0 °C
Ramp Rate	Ramp rate	5	0.0 °C to 25.0 °C	This parameter will be available only if Enabled in Configuration List. User can set ramp rate/min for SP1 (Set Point) to minimize overshoot.	Disable
Output 2 Mode	Output 2 mode	auto	-----	This parameter is prompted only if Control Logic for Output1 is configured for Heat-Cool. OP 2 will be automatically activated /de-activated w.r.t SP1 & HYS.	Auto
		on		OP 2 will be permanently Activated (ON).	
		off		OP 2 will be permanently De-Activated (OFF).	
Purge Set Point	sp	0	LSPL ~ HSPL 2 to 99 °C	This parameter is prompted if AL.SP is Enable & output 2 is configured as (1) Alarm (High/Low) mode. (3) As a band alarm.	0 °C
Purge OFF Set Point	purge-oFF sp	0	LSPL ~ HSPL -99 to +99 °C 2 to 99 °C	This parameter is prompted if AL.SP is Enable & output 2 is configured as (1) Alarm (High/Low) mode. (2) As a deviation alarm mode. (3) As a band alarm.	0 °C
Exhaust Set Point	Exhaust set point	0	LSPL ~ HSPL -99 to +99 °C 2 to 99 °C	This parameter is prompted if AL.SP is Enable & output 2 is configured as (1) Alarm (High/Low) mode. (2) As a deviation alarm mode. (3) As a band alarm.	0 °C
Soak Time	Soak Time Value	0001	1 Sec to 9999 Hrs.	This parameter is prompted only if output 3 is configured as soak timer. Controller starts the execution of soak time as per the mode selected. Soak timer can be programmed using four different time base in Config. List.	1 min.
Minute Elapsed	Remaining Time	0030	-----	This parameter is prompted only if HOUR mode is selected in the Soak timer mode of OP3. (This is a View Only Parameter). During down counting of soak time it will display the remaining time & during up counting of soak time the elapsed time will be displayed.	-----

CONTROL LIST : To enter in this mode press SET & DOWN key simultaneously for 3 sec.

Para Meter	Upper Display	Lower Display	Range	Description	Default
Lock Code	Lock code	0	1 ~ 9999	Set this parameter to 15 (Default LOCK CODE) to access Control List. User has a choice to set different Lock Code via USER LOCK CODE in Config. List.	15
Proportional Band	Proportional band	5.0	to 0.5 99.9 °C	This parameter will be prompted only if selected control action is PID. It the error (SV-PV). The value of this parameter is automatically set by Auto tune function.	5.0 °C

Para Meter	Upper Display	Lower Display	Range	Description	Default
Integral Time	Integral time	240	0 to 999 Sec.	This parameter will be prompted only if selected control action is PID. It sets the time taken by PID algorithm to remove steady state error. Value of this parameter is automatically set by Auto Tune function. If set to '0', this function will be disabled.	240
Derivative Time	derivative time	60	0 to 300 Sec.	This parameter will be prompted only if selected control action is PID. It defines how strongly the Controller will react to the rate of change of PV. Value of this parameter is automatically set by Auto Tune function. If set to '0', this function will be disabled.	60
Cycle Time	cycle time	16.0	0.5 to 99.9 Sec.	This parameter will be prompted only if selected control action is PID. User can set this value based on process being controlled & type of Output being selected. For Relay O/P, cycle time should be more 12sec & for SSR O/P, cycle time should be less than 10sec.	16.0 Sec.
Output Power Limit	o/p power limit	100	0 % TO 100 %	This parameter will be prompted only if selected control action is PID. This parameter will decide the maximum output power in % applied to the load	100 %
SV Offset	Sv offset	dsbl	1 to 10	This parameter will be prompted only if selected control action is PID. With this parameter control O/P will be Completely OFF after the Set Point + Offset Value. If Disable, O/P will act Depending upon the PID Value after Set Point achieved.	Disable
Tune Offset	Tune offset	100	50 % to 100 %	This parameter will be prompted only if selected control action is PID. This parameter allows the User to carry out Auto Tuning function below the set point. (If Tune offset is 50 % tuning will be carried out at 50 % of the set point and if 100 % tuning will be carried out at 100% of the set point.)	100 %
O/P 1 Hys.	o/p 1 hysteresis	2	1 to 25 °C	This parameter will be prompted only if selected control action is ON-OFF. It sets the dead band between ON & OFF switching of the Output. Larger value of hysteresis minimize the number of ON-OFF operation of load. This increases life of actuators like contactors but also produces large errors (between PV & SV).	2°C
O/P 1 Delay	o/p 1 delay	0	0 to 500 Sec.	This parameter will be prompted only if selected control action is ON-OFF. It sets the main output restart time where O/P once turned OFF will turn ON only after restart time, regardless difference between PV & SP in Heat or Cool mode. If set to '0', O/P will be switched without delay. Also, Delay will be applicable in case of every power ON.	0 Sec.
O/P 2 Hys.	o/p 2 hysteresis	2	1 to 25 °C	This parameter will be prompted only it selected control mode for output2 is auxiliary control or an alarm. The value of this parameter sets the dead band between on and off switching of output load.	2°C
O/P 2 Delay	O/p 2 delay	0	0 to 500 Sec.	This parameter will be prompted only if output 2 is configured as an Auxiliary control output. In this mode, O/P once turned OFF will restart only after set time regardless of the difference between PV and SP2. Time delay is settable up to 500 seconds. If time delay is set to 0, there is no delay between output switching.	0 Sec.
O/P 3 Hys.	o/p 3 hysteresis	2	1 to 25 °C	This parameter will be prompted only it selected control mode for output3 is auxiliary control or an alarm. The value of this parameter sets the dead band between on and off switching of output load.	2°C
O/P 3 Delay	O/p 3 delay	0	0 to 500 Sec.	This parameter will be prompted only if output 3 is configured as an Auxiliary control output. In this mode, O/P once turned OFF will restart only after set time regardless of the difference between PV and SP3. Time delay is settable up to 500 seconds. If time delay is set to 0, there is no delay between output switching.	0 Sec.
O/P 4 Hys.	o/p 4 hysteresis	2	1 to 25 °C	This parameter is available STRICTLY for Fan output. The value of this parameter sets the dead band between on and off switching of output load.	2°C
O/P 4 Delay	O/p 4 delay	0	0 to 500 Sec.	This parameter is available STRICTLY for Fan output. In this mode, O/P once turned OFF will restart only after set time regardless of the difference between PV and SP. Time delay is settable up to 500 seconds. If time delay is set to 0, there is no delay between output switching.	0 Sec.
Gap 1	gap 1	0.0	-9.9 to 9.9°C	This parameter will be prompted only if Control Logic for Output1 is configured for Heat-Cool. SP (set point) will be consider as (SP1 - Gap1) for heating.	0 °C
Gap 2	gap 2	0.0	-9.9 to 9.9°C	This parameter will be prompted only if Control Logic for Output1 is configured for Heat-Cool. SP (set point) will be consider as (SP1 + Gap2) for cooling.	0 °C



Para Meter	Upper Display	Lower Display	Range	Description	Default
Soak Band	soak time band	0.0	0.0 to 99°C	This parameter defines the permissible deviation of PV from SP during soak time cycle. If PV falls outside the Soak band during soak cycle, Timer halts. Timer will start only when PV falls within the soak band. This parameter is ignored if set to '0'.	0.0
Soak Time Delay	soak time delay	10	0 to 99 Sec.	This parameter will be prompted only if selected control mode for Output2 is Soak timer. Depending on end of soak strategy, the value of this parameter sets the activation time for OP2 when Soak timer is over. Setting this parameter to '0' will make OP2 continuously ON at the end of Soak time till User starts the next cycle.	10 Sec.

CONFIGURATION LIST :

- (1) To enter in this mode, Press and hold SET & UP key simultaneously for 3 sec.
- (2) Press UP or DOWN key to scroll between parameter options.
- (3) Press SET key to store the current parameter & move on to the next parameter.

Para Meter	Upper Display	Lower Display	Description	Default																		
Lock Code	lock code	0	Set this parameter to 15 (Default LOCK CODE) to access Config. List. User has a choice to set different Lock Code between 1 to 9999 via USER LOCK CODE in Config. List.	15																		
Input Type	input type	tc - j tc - k rtd rtd . 1 0 - 10 volt 0-20 Mampere 4-20 Mampere	<p>This parameter value is set according to the type of sensor (Thermocouple or RTD input) connected to the controller's input terminals.</p> <table border="1"> <thead> <tr> <th>Sensor Type</th> <th>Range</th> <th>Resolution</th> <th>Accuracy</th> </tr> </thead> <tbody> <tr> <td>Fe-k(J) T/C</td> <td>0 ~ 760°C</td> <td>1 °C</td> <td rowspan="2">} ± 1°C</td> </tr> <tr> <td>Cr-AL(K) T/C</td> <td>-99 ~ 1300°C</td> <td>1 °C</td> </tr> <tr> <td>Pt-100(RTD)</td> <td>-100 ~ 450°C</td> <td>1 °C</td> <td rowspan="2">} ± 0.3 °C</td> </tr> <tr> <td>Pt-100(RTD 0.1)</td> <td>-100.0 ~ 450.0°C</td> <td>0.1 °C</td> </tr> </tbody> </table>	Sensor Type	Range	Resolution	Accuracy	Fe-k(J) T/C	0 ~ 760°C	1 °C	} ± 1°C	Cr-AL(K) T/C	-99 ~ 1300°C	1 °C	Pt-100(RTD)	-100 ~ 450°C	1 °C	} ± 0.3 °C	Pt-100(RTD 0.1)	-100.0 ~ 450.0°C	0.1 °C	J
Sensor Type	Range	Resolution	Accuracy																			
Fe-k(J) T/C	0 ~ 760°C	1 °C	} ± 1°C																			
Cr-AL(K) T/C	-99 ~ 1300°C	1 °C																				
Pt-100(RTD)	-100 ~ 450°C	1 °C	} ± 0.3 °C																			
Pt-100(RTD 0.1)	-100.0 ~ 450.0°C	0.1 °C																				
Resolution	resolution	0 0.0 0.00 0.000	<p>This parameter will NOT be prompted when input type is selected as Thermocouple (TC-J,K,R & S).</p> <p>When input type selected is RTD then only "0 & 0.0" resolution format will be available.</p> <p>By this parameter user can select four format of resolution only for analog input, i.e. "0.000, 0.00, 0.0, 0".</p> <p>For range limit as per resolution selected Ref. Table No.2 (Page No. 7).</p>	0																		
ANALOG INPUT LOW VALUE	analog i/p low	0	By this parameter user can define Low scale for input signal. Which can be in between '-1999 to Ai.Hi'. For range limit as per resolution selected Ref. Table No.2 (Page No. 7).	0																		
ANALOG INPUT HIGH VALUE	analog i/p high	1200	By this parameter user can define HIGH scale for input signal. Which can be in between 'Ai.Lo to 9999'. For range limit as per resolution selected Ref. Table No.2 (Page No. 7).	1200																		
Lower SP Limit	lower sp limit	0	Sets the minimum limit for set point adjustment. It can be set from minimum specified range of selected sensor to HSPL value.	0 °C																		
Higher SP Limit	Higher sp limit	400	Sets the maximum limit for set point adjustment. It can be set from LSPL value to maximum specified range of selected sensor.	400 °C																		

Para Meter	Upper Display	Lower Display	Description	Default
Process Value Offset	pv offset	0	Function of this parameter is to add/subtract a constant value to the measured PV to obtain final PV for control applications. This parameter value can be altered : (i) To compensate for known thermal gradient. (ii) To match the display values with another recorder or indicator measuring the same PV.	0 °C
Input Filter	filter	01	The controller is equipped with an adaptive digital filter which is used to filter out any extraneous pulses on the PV. The filtered PV Value is used for all PV dependent functions. If the PV signal is fluctuating due to noise, increase the filter time constant value.	1
Control Mode	o/p 1 mode	pid on - off	User can select between PID or ON-OFF action algorithm to be adopted for output. If Factory set Control output is "mA" then Control mode as PID Selected & this parameter will be Skipped.	PID
Control Logic for OP 1	output 1 logic	heat	User can select heating logic in which OP1 will remain ON till PV < SP. (PV increases when output is ON.)	Heat
		cool	User can select cooling logic in which OP1 will remain ON till PV > SP. (PV decreases when output is ON.)	
		heat - cool	This parameter will be prompted only if selected input is RTD or RTD.1 and is used for BOD application. Here OP1 acts as Heating control & OP2 as Cooling control.	
O/P 1 Type	o/p 1 type	relay vssr	User can select between PID or ON-OFF action algorithm to be adopted for output. If Factory set Control output is "mA" then Control mode as PID Selected & this parameter will be Skipped.	Relay
Overshoot Control	overshot	disable	This parameter will be prompted only if selected control action is PID. Setting this parameter on higher side will proportionally slows down the rate of rise of PV to minimize overshoot (this may cause delay to reach SP). Disabling or Setting this may cause overshoot. Disable this option if delay is not required to reach SP. (This may cause overshoot w.r.t. SP)	Disable
Ramp Rate	ramp rate	enable	User can set the desired RAMP rate in USER list.	Disable
		disable	The RATE parameter will not be prompted in USER list.	
Auto Tune	auto - tune	enable	This parameter will be prompted only if selected control action is PID. If Enabled, this parameter will be prompted if user press Shift key for 3Sec.	Enable
		disable	If Disabled, this parameter will not be prompted if user press Shift key for 3Sec.	
Control SP	control SP	enable	If Enabled, User can View & edit the Set point (SP1) in USER list.	Enable
		disable	If disabled, User can not View or edit Set Point (SP1) in USER list.	
Output 2 Function	output 2 mode	none	This parameter the OP2 will be continuously OFF.	Auxiliary
		auxillary	This parameter allows the user to select output 2 as an 'Auxiliary' control. <small>For options refer Table 3.</small>	
		alarm	This parameter allows the user to select output 2 as an 'Alarm' control. For options refer Table 4.	
		purging	This parameter allows the user to use the controller for autoclave application.	

PARA METER	UPPER DISPLAY	LOWER DISPLAY	DESCRIPTION	DEFAULT
Output 3 Function	output 3 mode	auxilliary	<p>This parameter allows the user to select output 3 as an 'Auxiliary' control. For options refer Table 3.</p> <p>↓ ↑ AL SP</p> <p>This parameter allows the user to select output 3 as an 'Alarm' control. For options refer Table 4.</p> <p>↓ ↑ SOAK</p> <p>This parameter allows the user to select output 3 as a 'Soak' mode. For options refer Table 5.</p> <p>↓ ↑ AL,SE</p> <p>This parameter allows the user to select output 3 to function as both 'Alarm' & 'Soak'. For options refer Table 4 & 5.</p> <p>↓ ↑ NONE</p> <p>This parameter the OP3 will be continuously OFF.</p>	Auxiliary
Lower Display Message	L DSP	LOG	<p>By pressing DOWN key, Lower display will Toggle between SP1-value, SP2-value, Alarm SP-Value(AL.SP) & Timer-value(SOAK).</p> <p>↓ ↑ SP1</p> <p>By this parameter Lower display will only show the SP1-value.</p> <p>↓ ↑ SP1</p> <p>By this parameter Lower display will only show the Timer value(SOAK TIME).</p>	Toggle
User Lock Code	U LOC	En 15	<p>Default USER LOCK CODE is 15 to access Control & Configuration List.</p> <p>User has a choice to set its own USER LOCK CODE between 1 to 9999, this is to prevent unauthorized access of Control & Configuration List.</p>	15

TABLE 3 : Below listed options will appear only if OP2 and / or OP3 is selected as an Auxiliary control mode.

Parameter	Lower Display	Upper Display	Description	Default
OP 2 and/or OP 3 Mode	and/c SP2	SP2	This parameter will be prompted only if Output 2 is selected as an Auxiliary control output. In this mode, User can set SP2 value independently. The instrument works as Set point Controller.	Abs
		DEVI	This parameter will be prompted only if Output 2 is selected as an Auxiliary control output. In this mode, User can set SP2 value which is always related to SP. User can set SP2 value with the deviation of ± 99°C w.r.t SP.	
OP 2 and/or OP 3 Logic	and/c OP2L	HEAT	User can select heating logic in which OP2 will remain ON till PV < SP2. (PV increases when output 2 is ON.)	Heat
		COOL	User can select cooling logic in which OP2 will remain OFF till PV < SP2. (PV decreases when output 2 is ON.)	
Set Point 2 and/or Set Point 3	and/c SP2	En 15	If Enabled, User can View & edit the Set point (SP2) in USER list.	Enable
		DISBL	If disabled, User can not View or edit Set Point (SP2) in USER list.	

TABLE 4 : Below listed parameters will appear only if OUTPUT 2 and / or OUTPUT 3 is selected as ALARM mode. In ALARM mode, Controller continuously compares PV with either SP (for Deviation or Band alarm) or an independent ALARM SP2 and /or SP3 (for process high and process low Alarm).

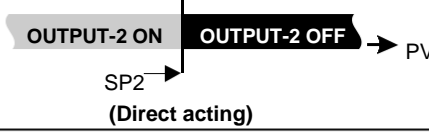
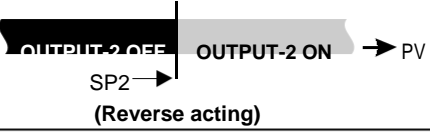
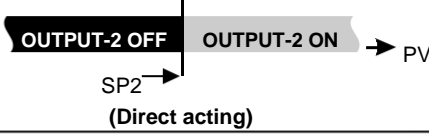
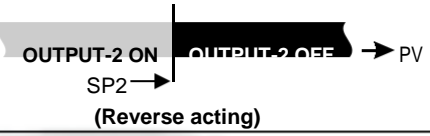
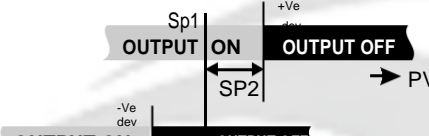
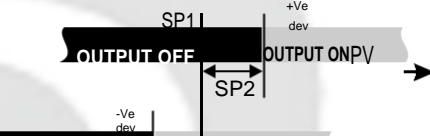
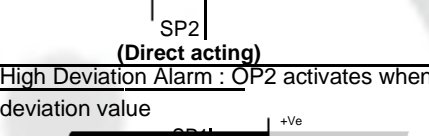
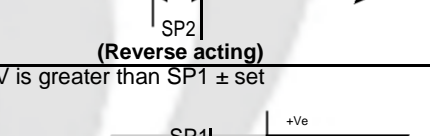
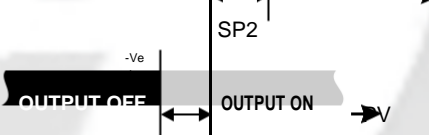
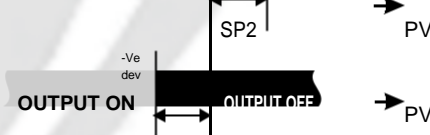
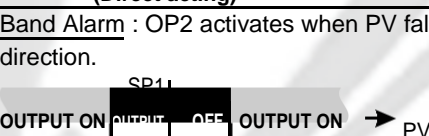
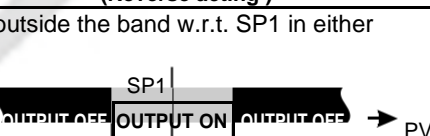
Parameter	Lower	Upper	Description	Default
Alarm Type 1 and/or Alarm Type 2	Display	Display	<p>Low Alarm : OP2 activates when $PV < SP2$.</p>  <p>(Direct acting)</p>  <p>(Reverse acting)</p>	High Dev.
	and/or	<p>▼ ▲</p> <p>High Alarm : OP2 activates when $PV > SP2$.</p>  <p>(Direct acting)</p>  <p>(Reverse acting)</p>		
	and/or	<p>▼ ▲</p> <p>Low Deviation Alarm : OP2 activates when PV is less than $SP1 \pm$ set deviation value</p>  <p>(Direct acting)</p>  <p>(Reverse acting)</p>		
	and/or	<p>▼ ▲</p> <p>High Deviation Alarm : OP2 activates when PV is greater than $SP1 \pm$ set deviation value</p>  <p>(Direct acting)</p>  <p>(Reverse acting)</p>		
	and/or	<p>▼ ▲</p> <p>Band Alarm : OP2 activates when PV falls outside the band w.r.t. SP1 in either direction.</p>  <p>(Direct acting)</p>  <p>(Reverse acting)</p>		
	and/or	<p>▼ ▲</p> <p>Band Alarm : OP2 activates when PV falls outside the band w.r.t. SP1 in either direction.</p>  <p>(Direct acting)</p>  <p>(Reverse acting)</p>		
Alarm 1 and/or Alarm 2 Logic	<p>A1LO</p> <p>and/or</p> <p>A2LO</p>	<p>dIr</p> <p>▼ ▲</p> <p>rEu</p>	<p>If this parameter is set as 'Direct', Relay/SSR energizes under Alarm condition & remains De-energized otherwise. 'Direct' setting is generally used for Audio/Visual Alarm Output.</p> <p>If this parameter is set as 'Reverse', Relay/SSR De-energizes under Alarm condition & remains energized otherwise. 'Reverse' setting is generally used for tripping the process under Alarm condition.</p>	Direct
Alarm 1 and/or Alarm 2 Inhibit	<p>A1IH</p> <p>and/or</p> <p>A2IH</p>	<p>YES</p> <p>▼ ▲</p> <p>nO</p>	<p>This parameter can be used to inhibit (suppress) the Alarm activation upon power-up conditions by setting the parameter value to 'YES'. From Power-up, the Alarm system remains disabled until PV is found with in the limits.</p> <p>If Alarm activation is desired even under Power-up condition, Set this parameter value to 'NO'.</p>	No
Alarm 1 and/or Alarm 2 Ack.	<p>A1AP</p> <p>and/or</p> <p>A2AP</p>	<p>AUTO</p> <p>▼ ▲</p> <p>RAUL</p> <p>▼ ▲</p> <p>BOtH</p>	<p>Once Alarm is activated, user has following three options to de-activate it. When PV falls within the programmed limits, Alarm will be de-activated automatically.</p> <p>Once Alarm is activated, it remains activated until manually acknowledged by UP key.</p> <p>Once Alarm is activated, it can be de-activated either by pressing UP key or when PV falls within the alarm limits.</p>	Auto
Alarm 1 and/or Alarm 2 Set Point	<p>A1SP</p> <p>and/or</p> <p>A2SP</p>	<p>EnbL</p> <p>▼ ▲</p> <p>dSbL</p>	<p>If Enabled, User can View & edit the Alarm Set point in USER list.</p> <p>If disabled, User can not View or edit Alarm Set Point in USER list.</p>	Enable

TABLE 5 : Below listed option will appear only if OP3 is selected as a soak timer.

Parameter	Lower Display	Upper Display	Description	Default
END OF SOAK STRATEGY	SPES	none	It defines the behaviour of the controller at the end of soak timer cycle . Options are as below. If selected, the controller maintain PV at SP indefinitely irrespective of start or end of a soak timer.	BOTH
		HOFF	The controller de-energizes OP1 as soon as the soak time is over. Here upper display will continue to show PV & lower display will show message "start".Next cycle will start only when user press START key for 3 sec.	
		ALON	The controller energizes OP2 for a time period programmed via (StdL) parameter at the end of a soak time cycle. User can utilise OP2 for audio/visual indication.	
		both	The controller executes both, the Heater OFF and Alarm ON function as described above.	
TIME BASE SOAK TIMER	SPtb	mmss	User can select the timer base of soak time among the four options as shown. Minutes & Seconds (Range 99 minutes, 59 seconds).	MMMM
		nnnn	Minutes (Range 9999 minutes).	
		HHmm	Hours & Minutes (Range 99 Hours , 59 minutes).	
		HHHH	Hours (Range 9999 Hours).	
DIRECTION FOR SOAK TIME	StdT	UP	If selected, soak timer will increment (from 0 to set value) (Note:- User can alter the new time value which should be > elapsed time even if soak timer is running. If user sets new time value < elapsed time, running timer will be terminated & End of soak Strategy will be executed.	DN
		dn	If selected ,soak timer will decrement (from set value to 0). (Note:- User can alter the new time value even when soak timer is running. In this case, balance time of previous set value will be ignored & new cycle will be executed.	
RESET OF RUNNING SOAK TIME	SPrS	YES	If set as 'YES', soak time value will not be stored at the time of power failure.	NO
		no	If set as 'NO' at power ON, soak time will continue from stored value. (Note: Seconds will not be stored.)	
TIMER START MODE	SPsd	mod1	User can define 4 different modes to start the soak timer as follows : - In this mode, Timer will start after pressing START key for 3 sec., irrespective of PV.	MOD 2
		mod2	In this Mode, after power ON Timer starts when PV >= SV. To continue with next cycle, user has to either switch Power on & off OR press START key for 3 sec when STRT message is displayed on the lower display.	
		mod3	In this Mode, Timer will start only after pressing START key for 3 sec & PV>=SV for any of the following conditions. (1) At every Power ON. (2) Completion of current soak time cycle. (3) Power failure during soak time is in progress.	
		mod4	In this Mode, Timer will start only after pressing START key for 3 sec & PV>=SV for any of the following conditions. (1) At every Power ON. (2) Completion of current soak time cycle. After executing start command, if cycle doesn't complete due to power failure, cycle will continue whenever PV >= SV after restore of power. No need to press START key.	

AUTO TUNING MODE : To enter in this mode, Press & hold SHIFT key for minimum 3 sec in the Run Mode.

Parameter	Lower Display	Upper Display	Description	Default
Auto Tuning Mode	At	YES ▼ ▲ n0	This function will be executed only if selected control action is PID. Auto-tuning function is enabled by setting this parameter to 'YES'. The AT led continuously flashes till Auto tuning function is in progress. During Auto-tuning, Controller learns the process characteristics by itself & calculates required P, I & D values. User can cancel or abort this feature by setting this parameter to 'NO'.	No

Table 2 :- Range as per Resolution.

Resolution	Re-Tx Low Output	Re-Tx High Output	Process Value Offset	Alarm 1 Band	Alarm 2 Band	ALARM 1 Hysterisis	ALARM 2 Hysterisis
0000	-1999 to 9999	-1999 to 9999	-25 to 25	-50 to 50	-50 to 50	1 to 25	1 to 25
000.0	-199.9 to 999.9	-199.9 to 999.9	-25.0 to 25.0	-50.0 to 50.0	-50.0 to 50.0	0.1 to 25.0	0.1 to 25.0

Error Message:-

Display Message	Selected Input	Descriptions
"OPEN"	TC-J,K,R,S or RTD	Open Circuit of Control Sensor
"HHHH"	TC-J,K,R,S or RTD	If input is above HSPL it will display "HHHH" message.
"LLLL"	TC - J,K,R,S or RTD	If input is below LSPL it will display "LLLL" message.
"C.E.R.R."	Any Input Selected	The device is out of calibration and need to be sent to factory for re-calibration.