


how to measure | WALL-MOUNTED DRAPERY

1 getting started

Use a metal tape measure for accurate measurements. Measure to the nearest 1/4" and consider each window separately even if they appear to be the same size.

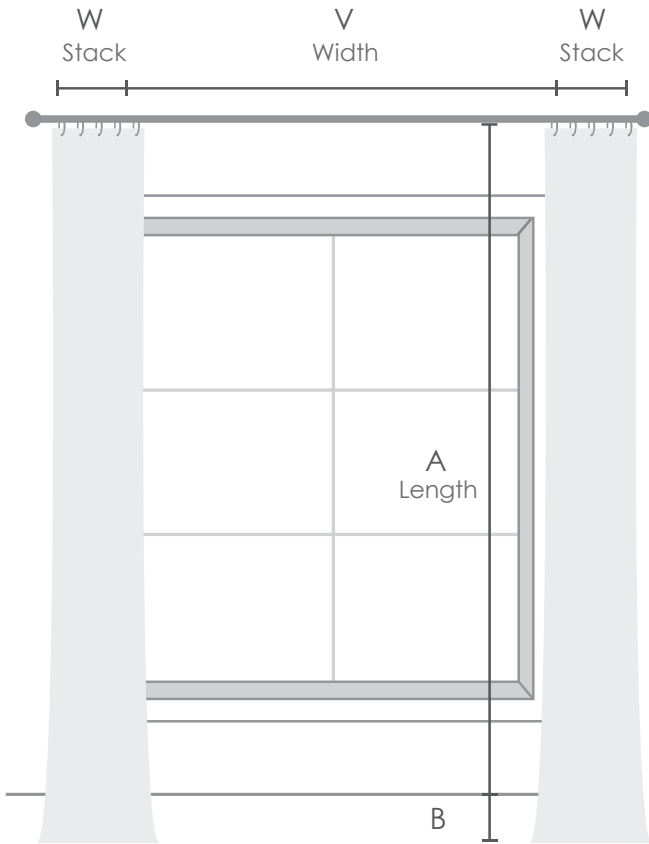

HOW HIGH SHOULD I MOUNT MY DRAPERY?

We recommend mounting your rod 8" to 10" above your window frame to maximize the feeling of height in your room.

BONUS TIP - If you have more space available, feel free to mount your drapery rod either halfway or 3/4" of the way between the top of the window frame and the ceiling.

HOW WIDE SHOULD I HANG MY DRAPERY?

We recommend extending your rod at least 8" to 12" past the window frame on the left and right sides to expose more of your window and allow your window to appear larger.

BONUS TIP - If you have more space available, feel free to do a stack of 15"- 20".

SHOULD MY DRAPERY HIT THE FLOOR, BREAK, OR PUDDLE?

Just hitting or above the floor is best for drapery used often, while breaks and puddles can enhance style and hide uneven floors.

2 measure & calculate size

LENGTH	INCHES
A Bottom of Rod to Floor (enter smallest of 3 measurements)	_____
B Extra Length for Break or Puddle (see chart below)	+ _____
C Adjust for Drapery Style (see chart below)	+ _____
D Total Length (A+ B+ C)	= _____

WIDTH	INCHES
V Width of Window including Frame	_____
W Space Beyond Window for Your Rod to Extend (W x2) (we recommend doing 8"- 12" on the left and right side)	+ _____
X Total Coverage (V + W) (this is the figure you'll enter on the site as your Width)	= _____

length adjustments

LENGTH FOR BREAK OR PUDDLE

- Touching: enter 0" or -1/4" to ensure no dragging and no styling needed
- Break: enter +1" to 2"
- Sweep: enter +2" to 4"
- Puddle: enter +6" to 8"

ADJUSTMENT FOR DRAPERY STYLE

- Ring Top / Pleated: subtract length from ring eyelet to bottom of rod when hanging
- Grommet Top: enter +1/2"
- Ripplefold: enter -1 1/4"
- Rod Pocket / Back Tab: enter diameter of rod

3 *order your size*

Ordering Width: Enter your Total Coverage (X) online. No need to factor in for "fullness" as we account for that automatically.

For your ordering length: Enter your Total Length (D) online.

NEED ADDITIONAL HELP ORDERING THE CORRECT SIZE?

Send the measurements above to hello@loomdecor.com and a photo of your windows in question. We'll help answer any questions, offer our best recommendations, and even assist in the ordering process.

Need help measuring? Contact a pro, for free!

Contact us at hello@loomdecor.com or visit our "Free Stylist Support" page to schedule a free Design Consultation with us. On the Design Consultation, we can go over measuring, design, fabrics, and help with the ordering process.

[CONTACT A STYLIST >](#)