

Adapt[®] 600 easiSpec

Seating Assessment / Specification Form

User Weight

Min: 45 Kg
Max: 150 Kg

User Height

Min: 1510mm
Max: 2250mm

Chair Action

Asynchronous Knee Tilt

Adapt

	Min:	Max:
1. Seat to Shoulder (Back Height)	350mm	670mm
2. Back of Buttock to Back of Knee (Seat Depth)	340mm	660mm
3. Hip Width at widest point (Seat Width)	410mm	610mm
4. Floor to underside of Knee (Seat Height)	430mm	630mm*

** Higher gas columns available for use in specific environments*

Client..... Company

Assessor Date


Adapt[®] 600 Seating Assessment / Specification

BACK REST

NB: If using a Neck support - Subtract 150mm from Nape of Neck measurement in order to calculate correct back height



Please select option and state required dimensions if different

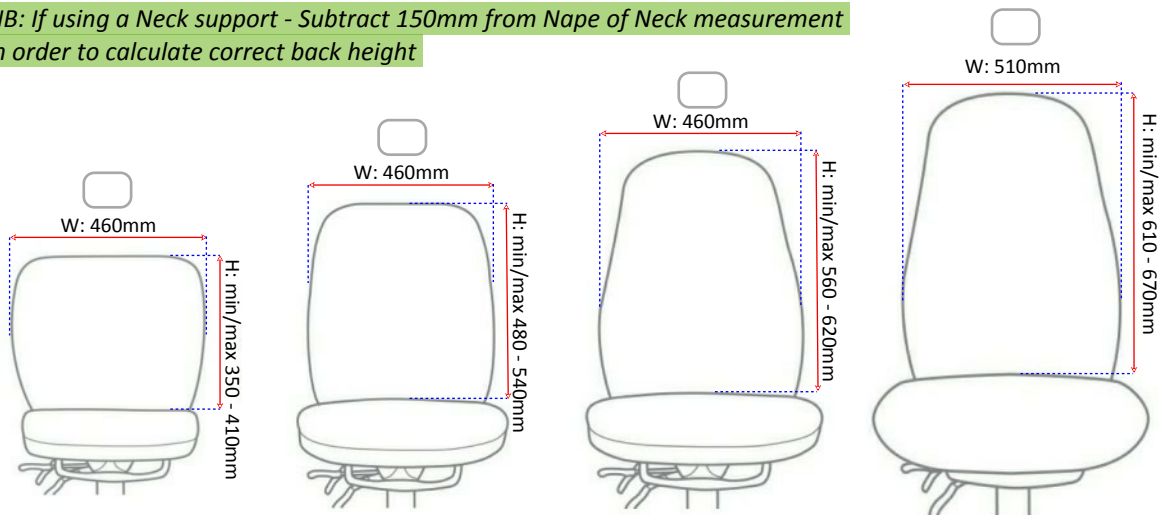

Chair CODE

610/640

620/650

630/660

680

Width Reduction

REDB: to mm

REDB: to mm

REDB: to mm

REDB: to mm

Height Reduction

REDH: to mm

REDH: to mm

REDH: to mm

REDH: to mm

NB: Back heights may be increased by +75mm by using the EXTD Extended Back Bar option - please contact for more details


SEAT

NB: Use Back of Buttock to Back of Knee measurement and SUBTRACT - 30mm to calculate the optimum seat depth

NB: Use Hip to Hip measurement and ADD + 50mm to calculate the optimum seat width



Please select option and state required dimensions if different

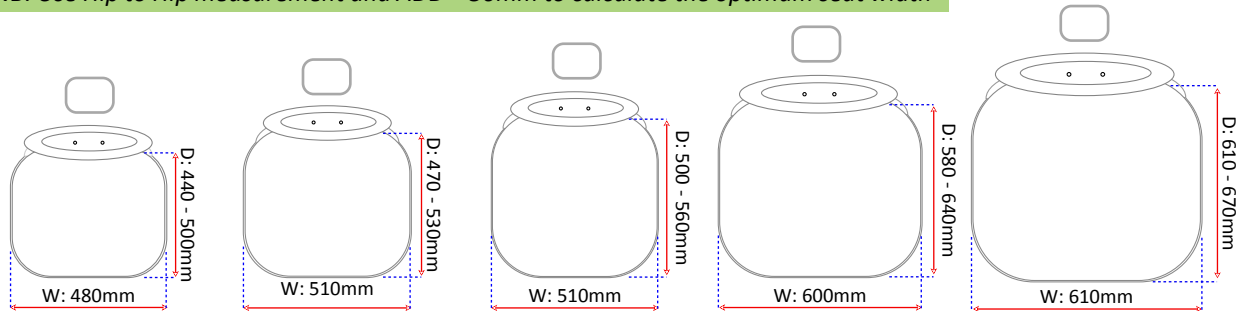

Chair CODE

610/620/630

640/650/660

XL

680

XXL (Max)

Width Reduction

REDW: to mm

REDW: to mm

REDW: to mm

REDW: to mm

REDW: to mm

Depth Reduction

REDD: to mm

REDD: to mm

REDD: to mm



REDD: to mm

REDD: to mm

NOTE: MINIMUM SEAT WIDTH 410mm MINIMUM SEAT DEPTH 340mm (with seat slide)

Seat Height

Please tick required option



GAS CODE

GAS1

*GAS2

GAS3

7"

9"

9"

Gas Lift Type

STANDARD GAS COLUMN

** NON SWIVEL GAS COLUMN

MANUAL LIFT

BASE

Please tick required option



*Standard Black Base
GAS2 fitted as Standard



Polished Aluminium Base



**Pneumatic Movement Lock
Non Swivel Gas fitted as Standard
Please Specify Height Required
(Above)


Adapt[®] 600 Seating Assessment / Specification

*MSA Arm is designed to support arm weight only
DO NOT USE TO ASSIST WHEN SITTING OR STANDING

LEVEL ONE ADAPTATIONS

ARM OPTIONS

Please tick required option

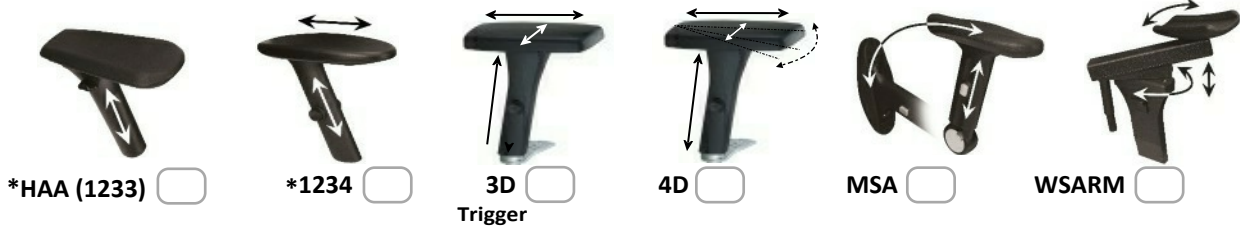

ARM PAD ENHANCEMENTS



*ADARM: Will add or subtract 50mm from arm height (measured from seat surface to top of arm pad).

Applies only to arm options marked with asterisk.

*ADARM + 50mm
*ADARM - 50mm

***NOTE: Standard seat surface to underside of arm Arm Height is 150 - 240mm - if not suitable use ADARM option**

HEAD SUPPORT



Please tick required option



LEVEL TWO ADAPTATIONS

SEAT ENHANCEMENT

Please tick required option

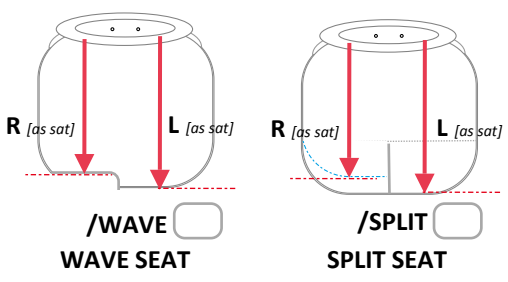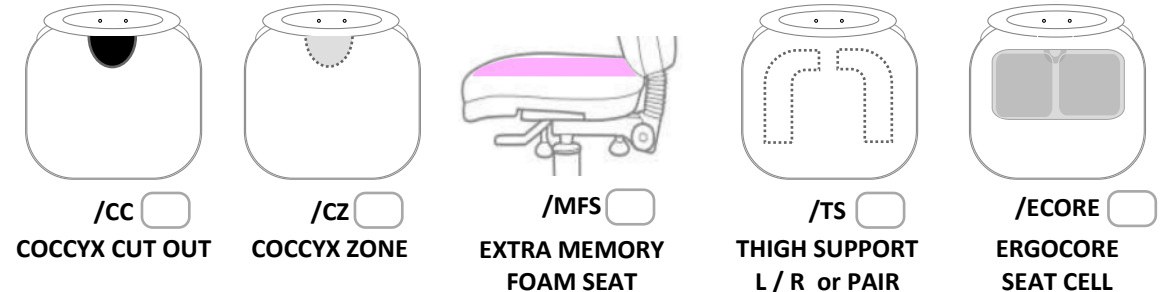

Please specify required Seat Depth
(i.e. Back Buttock to Back of Knee L & R -30mm)

R (as sat) mm (allow for 30mm clearance behind knee)
L (as sat) mm (allow for 30mm clearance behind knee)


BACK ENHANCEMENT

(Standard)



please state required position

LUMBAR CELL (STD)

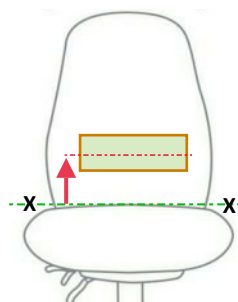

Measure distance from seat surface to centre of Air cell & enter as X+



STD LUMBAR CELL

LOCATE CENTRE OF AIR CELL @
X + mm

NB: Unless stated otherwise lumbar cell position will be set at approx 180mm above seat surface as standard

Adapt[®] 600 Seating Assessment / Specification

LEVEL TWO ADAPTATIONS (Cont'd)


NB: Unless stated otherwise sacral cells will be positioned directly below the lumbar cell

BACK ENHANCEMENTS (OPTIONAL)



Please select option and state the required position

SACRAL CELL

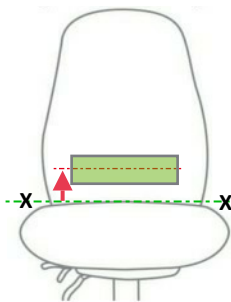


Measure distance from seat surface to centre of Air cell & enter as X+




SACRAL CELL

LOCATE CENTRE OF AIR CELL @
X+ mm

/3LUM REACTIVE LUMBAR CELL

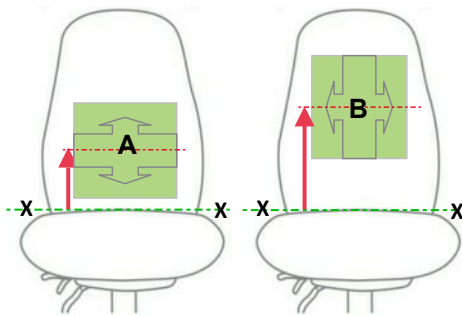


Select A or B
Measure distance from seat surface to centre of Air cell & enter as X+

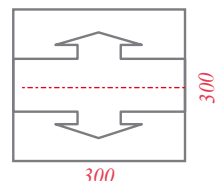


/3LUM REACTIVE LUMBAR CELL

SELECT PROFILE A or B
LOCATE CENTRE OF AIR CELL @
X+ mm

/VSL /VSR VERTICAL CELL

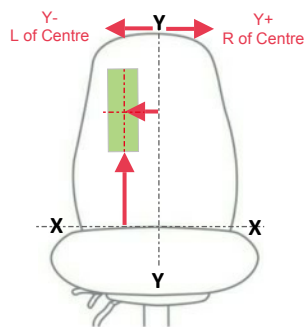


Measure distance from seat surface to centre of Air cell & enter as (X+)
Measure distance from centre of back rest to centre of Air cell & enter as (Y+/-)




/VSL /VSR VERTICAL CELL

LOCATE @
X+ mm
Y+ mm or
Y- mm

/THOR THORACIC CELL

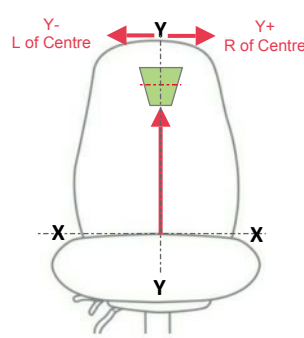

Measure distance from seat surface to centre of Air cell & enter as (X+)
If not using centrally measure distance from centre of back rest to centre of Air cell & enter as (Y+/-)

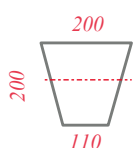

THORACIC CELL

LOCATE @
X+ mm
& [if not central]
Y+ mm or
Y- mm

Please tick Required options




MFB MEMORY FOAM



SCULP

Sculpted Back Foam & Bespoke Seat Shaping

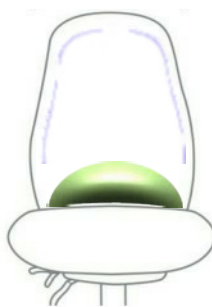

NB: Please provide separate detailed information



- SWC Soft Wheel (Semi Braked) castors
- BUC Brake UNLOADED castors
- BLC Brake LOADED castors