


## Replacement Springs Instructions (2 people recommended)

1. Remove silver "spring clip" from the spring and place it on the angle bracket inside the Equicizer. The spring lever mechanism of the spring clip should be facing to the inside of the Equicizer, towards the spring or bottom of the Equicizer.
2. Place the open end of the spring onto the horses bottom base (that rests on the floor). The hook should be facing in towards the inside of the Equicizer as illustrated.
3. The closed ended loop of the spring will attach to the spring clip.
4. Using two people, one person can use their weight to help lower the Equicizer, bringing the spring and the spring clip close together and hooking the spring onto the spring clip.
5. If you are doing this alone, the Equicizer can be rested on its back, using a wall to keep it secure. I recommend using a 2 x 4, approximately 5 feet in length, to wedge into the base frame and use as a lever to bring the spring and the spring clip together to be attached.
6. Done!

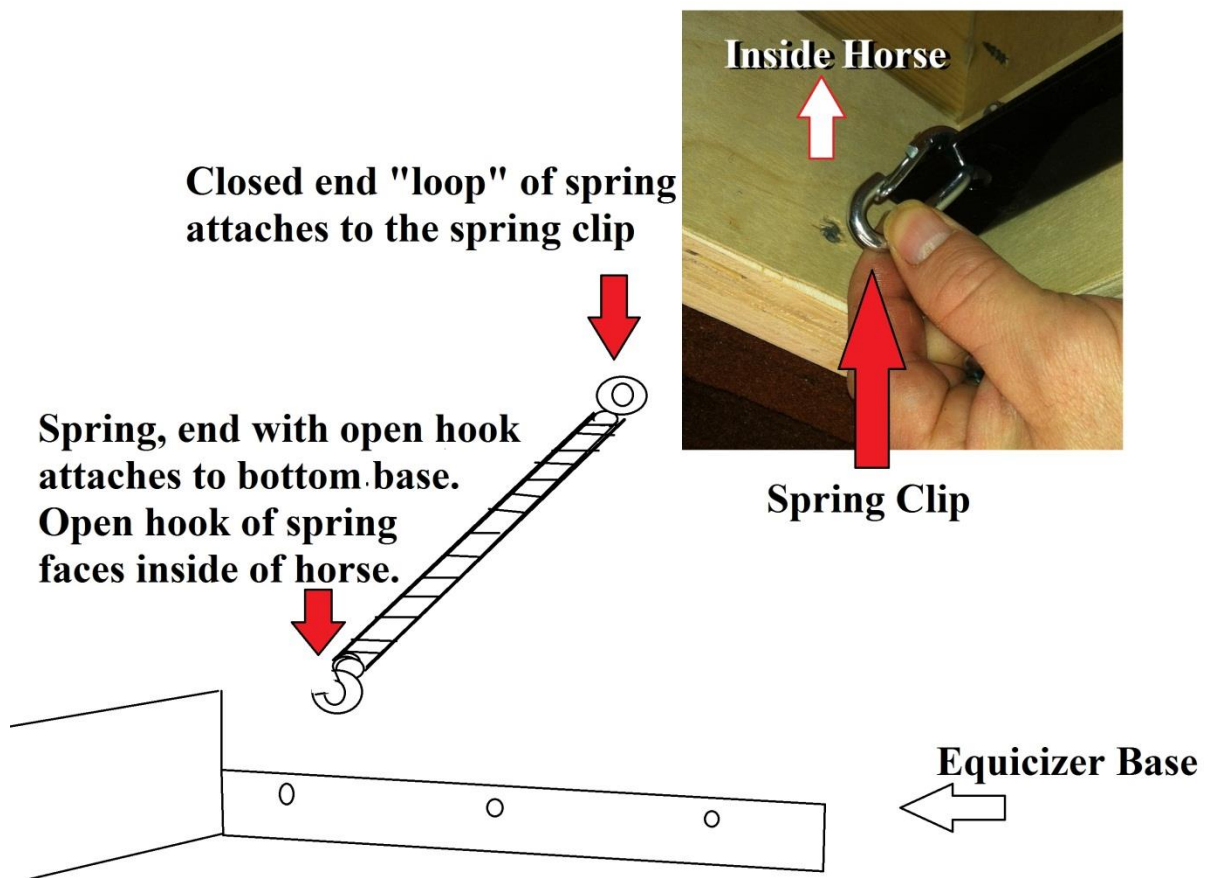

For further help or assistance, please call 419-663-1472 or email us at [info@equicizer.com](mailto:info@equicizer.com)